

Intel(R) Firmware Support Package (FSP) Integration Guide

Fri Feb 28 2020 01:25:36

By using this document, in addition to any agreements you have with Intel, you accept the terms set forth below. You may not use or facilitate the use of this document in connection with any infringement or other legal analysis concerning Intel products described herein. You agree to grant Intel a non-exclusive, royalty-free license to any patent claim thereafter drafted which includes subject matter disclosed herein.

INFORMATION IN THIS DOCUMENT IS PROVIDED IN CONNECTION WITH INTEL PRODUCTS. NO LICENSE, EXPRESS OR IMPLIED, BY ESTOPPEL OR OTHERWISE, TO ANY INTELLECTUAL PROPERTY RIGHTS IS GRANTED BY THIS DOCUMENT.

Intel may make changes to specifications and product descriptions at any time, without notice. Designers must not rely on the absence or characteristics of any features or instructions marked "reserved" or "undefined." Do not finalize a design with this information.

The products described in this document may contain design defects or errors known as errata which may cause the product to deviate from published specifications. Current characterized errata are available on request.

Contact your local Intel sales office or your distributor to obtain the latest specifications and before placing your product order.

Copies of documents which have an order number and are referenced in this document, or other Intel literature, may be obtained by calling 1-800-548-4725, or go to: <http://www.intel.com/design/literature.htm>

Any software source code reprinted in this document is furnished for informational purposes only and may only be used or copied and no license, express or implied, by estoppel or otherwise, to any of the reprinted source code is granted by this document.

[When the doc contains software source code for a special or limited purpose (such as informational purposes only), use the conditionalized Software Disclaimer tag. Otherwise, use the generic software source code disclaimer from the Legal page and include a copy of the software license or a hyperlink to its permanent location.]

This document contains information on products in the design phase of development. Intel processor numbers are not a measure of performance. Processor numbers differentiate features within each processor family, not across different processor families. Go to: http://www.intel.com/products/processor_number/

Code Names are only for use by Intel to identify products, platforms, programs, services, etc. ("products") in development by Intel that have not been made commercially available to the public, i.e., announced, launched or shipped. They are never to be used as "commercial" names for products. Also, they are not intended to function as trademarks.

Intel, Intel Atom, [include any Intel trademarks which are used in this document] and the Intel logo are trademarks of Intel Corporation in the U.S. and/or other countries.

*Other names and brands may be claimed as the property of others.

Copyright ©Intel Corporation. All rights reserved.

Contents

1	INTRODUCTION	1
2	FSP OVERVIEW	3
3	FSP INTEGRATION	5
4	FSP PORTING RECOMMENDATION	11
5	UPD PORTING GUIDE	13
6	FSP OUTPUT	15
7	FSP POSTCODE	19
8	FSP DISPATCH MODE	27
9	Todo List	29
10	Deprecated List	31
11	Class Index	33
11.1	Class List	33
12	File Index	37
12.1	File List	37
13	Class Documentation	41
13.1	_EFI_LEGACY_BIOS_PROTOCOL Struct Reference	41
13.1.1	Detailed Description	42
13.1.2	Member Data Documentation	42
13.1.2.1	Int86	42
13.1.2.2	PrepareToBootEfi	42
13.2	_EFI_SMM_VARIABLE_PROTOCOL Struct Reference	42
13.2.1	Detailed Description	43
13.3	_FSP_TEMP_RAM_EXIT_PPI Struct Reference	43
13.3.1	Detailed Description	43

13.4	_PEI_PREMEM_SI_DEFAULT_POLICY_INIT_PPI Struct Reference	43
13.4.1	Detailed Description	43
13.5	_PEI_SI_DEFAULT_POLICY_INIT_PPI Struct Reference	43
13.5.1	Detailed Description	43
13.6	_PEI_SMM_ACCESS_PPI Struct Reference	44
13.6.1	Detailed Description	44
13.7	_PEI_SMM_CONTROL_PPI Struct Reference	44
13.7.1	Detailed Description	44
13.8	_SI_POLICY_STRUCT Struct Reference	45
13.8.1	Detailed Description	45
13.9	_SI_PREMEM_POLICY_STRUCT Struct Reference	45
13.9.1	Detailed Description	45
13.10	ATAPI_IDENTIFY Struct Reference	46
13.10.1	Detailed Description	46
13.11	AUDIO_AZALIA_VERB_TABLE Struct Reference	46
13.11.1	Detailed Description	47
13.12	AZALIA_HEADER Struct Reference	47
13.12.1	Detailed Description	47
13.13	BBS_STATUS_FLAGS Struct Reference	47
13.13.1	Detailed Description	48
13.13.2	Member Data Documentation	48
13.13.2.1	Failed	48
13.13.2.2	MediaPresent	48
13.14	BBS_TABLE Struct Reference	48
13.14.1	Detailed Description	50
13.14.2	Member Data Documentation	50
13.14.2.1	AdditionalIrq13Handler	50
13.14.2.2	AdditionalIrq18Handler	50
13.14.2.3	AdditionalIrq19Handler	50
13.14.2.4	AdditionalIrq40Handler	50
13.14.2.5	BootPriority	51
13.14.2.6	DeviceType	51
13.14.2.7	StatusFlags	51
13.15	CHIPSET_INIT_INFO Struct Reference	51
13.15.1	Detailed Description	52
13.16	DEVICE_PRODUCER_DATA_HEADER Struct Reference	52
13.16.1	Detailed Description	52
13.17	DEVICE_PRODUCER_FLOPPY Struct Reference	53
13.17.1	Detailed Description	53
13.18	DEVICE_PRODUCER_PARALLEL Struct Reference	53

13.18.1 Detailed Description	53
13.19 DEVICE_PRODUCER_SERIAL Struct Reference	54
13.19.1 Detailed Description	54
13.20 DXE_SI_POLICY_PROTOCOL Struct Reference	54
13.20.1 Detailed Description	54
13.20.2 Member Data Documentation	55
13.20.2.1 Hsti	55
13.20.2.2 Revision	55
13.20.2.3 SmbiosOemTypeFirmwareVersionInfo	55
13.21 EFI_BYTE_REGS Struct Reference	56
13.21.1 Detailed Description	56
13.22 EFI_COMPATIBILITY16_TABLE Struct Reference	56
13.22.1 Detailed Description	58
13.22.2 Member Data Documentation	58
13.22.2.1 AcpiRsdPtrPointer	58
13.22.2.2 E820Pointer	58
13.22.2.3 EfiSystemTable	58
13.22.2.4 HiPermanentMemoryAddress	58
13.22.2.5 HiPermanentMemorySize	59
13.22.2.6 IrqRoutingTablePointer	59
13.22.2.7 MpTablePtr	59
13.22.2.8 OemIdStringPointer	59
13.22.2.9 OemRevision	59
13.22.2.10 PciExpressBase	59
13.22.2.11 Signature	60
13.22.2.12 UmaAddress	60
13.22.2.13 UmaSize	60
13.23 EFI_DISPATCH_OPMODE_TABLE Struct Reference	60
13.23.1 Detailed Description	61
13.23.2 Member Data Documentation	61
13.23.2.1 NumberBbsEntries	61
13.23.2.2 RuntimeSegment	61
13.24 EFI_DWORD_REGS Struct Reference	61
13.24.1 Detailed Description	62
13.25 EFI_EFLAGS_REG Struct Reference	62
13.25.1 Detailed Description	62
13.26 EFI_FLAGS_REG Struct Reference	62
13.26.1 Detailed Description	62
13.27 EFI_IA32_REGISTER_SET Union Reference	63
13.27.1 Detailed Description	63

13.28	EFI_LEGACY_INSTALL_PCI_HANDLER Struct Reference	63
13.28.1	Detailed Description	64
13.29	EFI_TO_COMPATIBILITY16_BOOT_TABLE Struct Reference	64
13.29.1	Detailed Description	65
13.29.2	Member Data Documentation	65
13.29.2.1	NumberE820Entries	65
13.29.2.2	OsMemoryAbove1Mb	66
13.29.2.3	UnconventionalDeviceTable	66
13.30	EFI_TO_COMPATIBILITY16_INIT_TABLE Struct Reference	66
13.30.1	Detailed Description	67
13.30.2	Member Data Documentation	67
13.30.2.1	BiosLessThan1MB	67
13.30.2.2	ThunkStart	67
13.31	EFI_WORD_REGS Struct Reference	67
13.31.1	Detailed Description	68
13.32	FSP_ERROR_INFO_HOB Struct Reference	68
13.32.1	Detailed Description	68
13.33	FSP_M_CONFIG Struct Reference	68
13.33.1	Detailed Description	88
13.33.2	Member Data Documentation	88
13.33.2.1	ActiveCoreCount	88
13.33.2.2	ApertureSize	88
13.33.2.3	ApStartupBase	88
13.33.2.4	AutoEasyOverclock	89
13.33.2.5	Avx2RatioOffset	89
13.33.2.6	Avx3RatioOffset	89
13.33.2.7	BclkAdaptiveVoltage	89
13.33.2.8	BiosAcmBase	89
13.33.2.9	BiosAcmSize	90
13.33.2.10	BiosGuard	90
13.33.2.11	BistOnReset	90
13.33.2.12	BootFrequency	90
13.33.2.13	ChHashEnable	90
13.33.2.14	ChHashInterleaveBit	91
13.33.2.15	ChHashMask	91
13.33.2.16	CkeRankMapping	91
13.33.2.17	CleanMemory	91
13.33.2.18	CmdRanksTerminated	91
13.33.2.19	CoreMaxOcRatio	92
13.33.2.20	CorePIIVoltageOffset	92

13.33.2.21CoreVfPointOffset	92
13.33.2.22CoreVfPointOffsetMode	92
13.33.2.23CoreVfPointOffsetPrefix	92
13.33.2.24CoreVoltageAdaptive	93
13.33.2.25CoreVoltageMode	93
13.33.2.26CoreVoltageOverride	93
13.33.2.27CpuRatio	93
13.33.2.28CpuTraceHubMemReg0Size	93
13.33.2.29CpuTraceHubMemReg1Size	94
13.33.2.30CpuTraceHubMode	94
13.33.2.31DciUsb3TypecUfpDbg	94
13.33.2.32Ddr4Mixed2DpcLimit	94
13.33.2.33Ddr4SkipRefreshEn	94
13.33.2.34DdrFreqLimit	95
13.33.2.35DisableDimmChannel0	95
13.33.2.36DisableDimmChannel1	95
13.33.2.37DisableMtrrProgram	95
13.33.2.38DmiDeEmphasis	95
13.33.2.39DmiGen3EndPointHint	96
13.33.2.40DmiGen3EndPointPreset	96
13.33.2.41DmiGen3ProgramStaticEq	96
13.33.2.42DmiGen3RootPortPreset	96
13.33.2.43DualDimmPerChannelBoardType	96
13.33.2.44EnableC6Dram	97
13.33.2.45EnableSgx	97
13.33.2.46EnBER	97
13.33.2.47EnCmdRate	97
13.33.2.48EpgEnable	97
13.33.2.49FastBootRmt	98
13.33.2.50FCIkFrequency	98
13.33.2.51FivrEfficiency	98
13.33.2.52FivrFaults	98
13.33.2.53ForceOltmOrRefresh2x	98
13.33.2.54FreqSaGvLow	98
13.33.2.55GdxcEnable	99
13.33.2.56GmAdr	99
13.33.2.57GtPIIVoltageOffset	99
13.33.2.58GtPsmiSupport	99
13.33.2.59GttMmAdr	99
13.33.2.60HobBufferSize	100

13.33.2.61HotThresholdCh0Dimm0	100
13.33.2.62HotThresholdCh0Dimm1	100
13.33.2.63HotThresholdCh1Dimm0	100
13.33.2.64HotThresholdCh1Dimm1	100
13.33.2.65dd3n	101
13.33.2.66dd3p	101
13.33.2.67gdDvmt50PreAlloc	101
13.33.2.68mrRpSelection	101
13.33.2.69nitPcieAspmAfterOprom	101
13.33.2.70InternalGfx	102
13.33.2.71IsvtloPort	102
13.33.2.72JtagC10PowerGateDisable	102
13.33.2.73LpddrDramOdt	102
13.33.2.74MarginLimitCheck	102
13.33.2.75McPllVoltageOffset	103
13.33.2.76MemoryTrace	103
13.33.2.77MmioSize	103
13.33.2.78OcLock	103
13.33.2.79PcdDebugInterfaceFlags	103
13.33.2.80PcdIsaSerialUartBase	103
13.33.2.81PcdSerialDebugBaudRate	104
13.33.2.82PcdSerialDebugLevel	104
13.33.2.83PchHdaAudioLinkDmic0	104
13.33.2.84PchHdaAudioLinkDmic1	104
13.33.2.85PchHdaAudioLinkHda	104
13.33.2.86PchHdaAudioLinkSndw1	105
13.33.2.87PchHdaAudioLinkSndw2	105
13.33.2.88PchHdaAudioLinkSndw3	105
13.33.2.89PchHdaAudioLinkSndw4	105
13.33.2.90PchHdaAudioLinkSsp0	105
13.33.2.91PchHdaAudioLinkSsp1	106
13.33.2.92PchHdaAudioLinkSsp2	106
13.33.2.93PchHdaDspEnable	106
13.33.2.94PchHdaDspUaaCompliance	106
13.33.2.95PchHdaSndwBufferRcomp	106
13.33.2.96PchHdaVcType	106
13.33.2.97PchLpcEnhancePort8xhDecoding	107
13.33.2.98PchNumRsvdSmbusAddresses	107
13.33.2.99PchPort80Route	107
13.33.2.100PchSmbAlertEnable	107

13.33.2.101	ArchTraceHubMemReg0Size	107
13.33.2.102	ArchTraceHubMemReg1Size	108
13.33.2.103	ArchTraceHubMode	108
13.33.2.104	CieImrSize	108
13.33.2.105	CieRpEnableMask	108
13.33.2.106	CeciC10Reset	108
13.33.2.107	CeciSxReset	109
13.33.2.108	RegDataPtr	109
13.33.2.109	RegDisableSpreadSpectrumClocking	109
13.33.2.110	PerCoreHtDisable	109
13.33.2.111	PlatformDebugConsent	109
13.33.2.112	ProbelessTrace	110
13.33.2.113	BwdwnIdleCounter	110
13.33.2.114	RankInterleave	110
13.33.2.115	Ratio	110
13.33.2.116	CompResistor	110
13.33.2.117	CompTarget	111
13.33.2.118	RealtimeMemoryTiming	111
13.33.2.119	RefClk	111
13.33.2.120	ThSolution	111
13.33.2.121	ThingDownBin	111
13.33.2.122	ThingMaxOcRatio	112
13.33.2.123	ThingPIIVoltageOffset	112
13.33.2.124	ThingVoltageAdaptive	112
13.33.2.125	ThingVoltageMode	112
13.33.2.126	ThingVoltageOffset	112
13.33.2.127	ThingVoltageOverride	113
13.33.2.128	MT	113
13.33.2.129	MTLoopCount	113
13.33.2.130	mtPerTask	113
13.33.2.131	SafeMode	113
13.33.2.132	PaGv	114
13.33.2.133	PaPIIVoltageOffset	114
13.33.2.134	ScramblerSupport	114
13.33.2.135	SerialDebugMrcLevel	114
13.33.2.136	SerialIoUartDebugAutoFlow	114
13.33.2.137	SerialIoUartDebugBaudRate	115
13.33.2.138	SerialIoUartDebugControllerNumber	115
13.33.2.139	SerialIoUartDebugDataBits	115
13.33.2.140	SerialIoUartDebugParity	115

13.33.2.143	SerialIoUartDebugStopBits	115
13.33.2.144	InitMemorySize	115
13.33.2.145	SkipMplnit	116
13.33.2.146	SmbusArpEnable	116
13.33.2.147	SmbusEnable	116
13.33.2.148	SpdAddressTable	116
13.33.2.149	SpdProfileSelected	116
13.33.2.150	BgaSize	117
13.33.2.151	HrtCkeMinTmr	117
13.33.2.152	HrtCkeMinTmrLpddr	117
13.33.2.153	TjMaxOffset	117
13.33.2.154	TrainTrace	117
13.33.2.155	RTP	118
13.33.2.156	SegSize	118
13.33.2.157	SodAlarmwindowLockBit	118
13.33.2.158	SodCriticalEventOnly	118
13.33.2.159	SodCriticaltripLockBit	118
13.33.2.160	SodEventMode	119
13.33.2.161	SodEventOutputControl	119
13.33.2.162	SodEventPolarity	119
13.33.2.163	SodManualEnable	119
13.33.2.164	SodShutdownMode	119
13.33.2.165	SodTcritMax	120
13.33.2.166	VbRatioClipping	120
13.33.2.167	VbVoltageOptimization	120
13.33.2.168	Bxt	120
13.33.2.169	BxtDprMemoryBase	120
13.33.2.170	BxtDprMemorySize	121
13.33.2.171	BxtHeapMemorySize	121
13.33.2.172	BxtImplemented	121
13.33.2.173	BxtLcpPdBase	121
13.33.2.174	BxtLcpPdSize	121
13.33.2.175	UserBudgetEnable	121
13.33.2.176	UserThresholdEnable	122
13.33.2.177	VddVoltage	122
13.33.2.178	VmxEnable	122
13.33.2.179	WarmThresholdCh0Dimm0	122
13.33.2.180	WarmThresholdCh0Dimm1	122
13.33.2.181	WarmThresholdCh1Dimm0	123
13.33.2.182	WarmThresholdCh1Dimm1	123

13.34FSP_M_RESTRICTED_CONFIG Struct Reference	123
13.34.1 Detailed Description	129
13.34.2 Member Data Documentation	129
13.34.2.1 HeciCommunication	130
13.34.2.2 HeciCommunication3	130
13.34.2.3 LowMemChannel	130
13.34.2.4 MsegSize	130
13.34.2.5 PchHdaTestPowerClockGating	130
13.34.2.6 PchTestDmiMeUmaRootSpaceCheck	131
13.34.2.7 PpvBtrEnable	131
13.34.2.8 SrefCfgIdleTmr	131
13.34.2.9 StrongWkLeaker	131
13.34.2.10TestMenuDprLock	131
13.35FSP_M_TEST_CONFIG Struct Reference	132
13.35.1 Detailed Description	135
13.35.2 Member Data Documentation	135
13.35.2.1 BdatEnable	135
13.35.2.2 BdatTestType	136
13.35.2.3 BiosSize	136
13.35.2.4 DeltaT12PowerCycleDelayPreMem	136
13.35.2.5 DisableMessageCheck	136
13.35.2.6 DmiGen3EqPh2Enable	136
13.35.2.7 DmiGen3EqPh3Method	136
13.35.2.8 Gen3SwEqAlwaysAttempt	137
13.35.2.9 Gen3SwEqEnableVocTest	137
13.35.2.10Gen3SwEqJitterDwellTime	137
13.35.2.11Gen3SwEqJitterErrorTarget	137
13.35.2.12Gen3SwEqNumberOfPresets	138
13.35.2.13Gen3SwEqVocDwellTime	138
13.35.2.14Gen3SwEqVocErrorTarget	138
13.35.2.15HeciCommunication2	138
13.35.2.16KtDeviceEnable	138
13.35.2.17LockPTMregs	139
13.35.2.18OemT12DelayOverride	139
13.35.2.19PanelPowerEnable	139
13.35.2.20Peg0Gen3EqPh2Enable	139
13.35.2.21Peg0Gen3EqPh3Method	139
13.35.2.22Peg1Gen3EqPh2Enable	140
13.35.2.23Peg1Gen3EqPh3Method	140
13.35.2.24Peg2Gen3EqPh2Enable	140

13.35.2.25Peg2Gen3EqPh3Method	140
13.35.2.26Peg3Gen3EqPh2Enable	140
13.35.2.27Peg3Gen3EqPh3Method	141
13.35.2.28PegGen3EndPointHint	141
13.35.2.29PegGen3EndPointPreset	141
13.35.2.30PegGen3ProgramStaticEq	141
13.35.2.31PegGen3RootPortPreset	142
13.35.2.32PegGenerateBdatMarginTable	142
13.35.2.33PegRxCemLoopbackLane	142
13.35.2.34PegRxCemNonProtocolAwareness	142
13.35.2.35ScanExtGfxForLegacyOpRom	142
13.35.2.36SkipMbpHob	143
13.35.2.37SmbusDynamicPowerGating	143
13.35.2.38SmbusSpdWriteDisable	143
13.35.2.39TotalFlashSize	143
13.35.2.40Rd2RdDD	143
13.35.2.41Rd2RdDG	143
13.35.2.42Rd2RdDR	144
13.35.2.43Rd2RdSG	144
13.35.2.44Rd2WrDD	144
13.35.2.45Rd2WrDG	144
13.35.2.46Rd2WrDR	144
13.35.2.47Rd2WrSG	145
13.35.2.48RRD_L	145
13.35.2.49RRD_S	145
13.35.2.50Wr2RdDD	145
13.35.2.51Wr2RdDG	145
13.35.2.52Wr2RdDR	145
13.35.2.53Wr2RdSG	146
13.35.2.54Wr2WrDD	146
13.35.2.55Wr2WrDG	146
13.35.2.56Wr2WrDR	146
13.35.2.57Wr2WrSG	146
13.35.2.58WTR_L	147
13.35.2.59WTR_S	147
13.35.2.60TxtAcheckRequest	147
13.35.2.61WdtDisableAndLock	147
13.36FSP_S_CONFIG Struct Reference	147
13.36.1 Detailed Description	166
13.36.2 Member Data Documentation	166

13.36.2.1 AcLoadline	167
13.36.2.2 AcousticNoiseMitigation	167
13.36.2.3 AmtEnabled	167
13.36.2.4 AmtKvmEnabled	167
13.36.2.5 AmtSolEnabled	167
13.36.2.6 CnviBtAudioOffload	167
13.36.2.7 CnviBtCore	168
13.36.2.8 CnviMode	168
13.36.2.9 CpuMpHob	168
13.36.2.10DcLoadline	168
13.36.2.11DevIntConfigPtr	168
13.36.2.12DmiSuggestedSetting	169
13.36.2.13DmiTS0TW	169
13.36.2.14DmiTS1TW	169
13.36.2.15DmiTS2TW	169
13.36.2.16DmiTS3TW	169
13.36.2.17EcCmdLock	170
13.36.2.18EcCmdProvisionEav	170
13.36.2.19Enable8254ClockGating	170
13.36.2.20Enable8254ClockGatingOnS3	170
13.36.2.21EnableTcoTimer	170
13.36.2.22EsataSpeedLimit	171
13.36.2.23FastPkgCRampDisableFivr	171
13.36.2.24FastPkgCRampDisableGt	171
13.36.2.25FastPkgCRampDisableIa	171
13.36.2.26FastPkgCRampDisableSa	171
13.36.2.27FivrRfiFrequency	172
13.36.2.28FivrSpreadSpectrum	172
13.36.2.29ForcMebxSyncUp	172
13.36.2.30FwProgress	172
13.36.2.31GpioIrqRoute	172
13.36.2.32Heci1Disabled	173
13.36.2.33Heci3Enabled	173
13.36.2.34IccMax	173
13.36.2.35monOffset1	173
13.36.2.36monSlope	173
13.36.2.37monSlope1	173
13.36.2.38slVrCmd	174
13.36.2.39ManageabilityMode	174
13.36.2.40McvrRfiFrequencyAdjust	174

13.36.2.41MciVrRfiFrequencyPrefix	174
13.36.2.42MciVrSpreadSpectrum	174
13.36.2.43MeUnconfigOnRtcClear	175
13.36.2.44NumOfDevIntConfig	175
13.36.2.45PchCrid	175
13.36.2.46PchDmiAspmCtrl	175
13.36.2.47PchDmiTsawEn	175
13.36.2.48PchEnableComplianceMode	176
13.36.2.49PchEnableDbcObs	176
13.36.2.50PchHdaAudioLinkDmic0	176
13.36.2.51PchHdaAudioLinkDmic1	176
13.36.2.52PchHdaAudioLinkHda	176
13.36.2.53PchHdaAudioLinkSndw1	176
13.36.2.54PchHdaAudioLinkSndw2	177
13.36.2.55PchHdaAudioLinkSndw3	177
13.36.2.56PchHdaAudioLinkSndw4	177
13.36.2.57PchHdaAudioLinkSsp0	177
13.36.2.58PchHdaAudioLinkSsp1	177
13.36.2.59PchHdaAudioLinkSsp2	178
13.36.2.60PchHdaDspEnable	178
13.36.2.61PchHdaDspUaaCompliance	178
13.36.2.62PchHdaDispCodecDisconnect	178
13.36.2.63PchHdaDispLinkFrequency	178
13.36.2.64PchHdaDispLinkTmode	179
13.36.2.65PchHdaLinkFrequency	179
13.36.2.66PchHdaPme	179
13.36.2.67PchHdaSndwBufferRcomp	179
13.36.2.68PchHdaSndwLinkIoControlEnabled	179
13.36.2.69PchHdaVcType	179
13.36.2.70PchHotEnable	180
13.36.2.71PchIoApicEntry24_119	180
13.36.2.72PchIoApicId	180
13.36.2.73PchIshGp0GpioAssign	180
13.36.2.74PchIshGp1GpioAssign	180
13.36.2.75PchIshGp2GpioAssign	181
13.36.2.76PchIshGp3GpioAssign	181
13.36.2.77PchIshGp4GpioAssign	181
13.36.2.78PchIshGp5GpioAssign	181
13.36.2.79PchIshGp6GpioAssign	181
13.36.2.80PchIshGp7GpioAssign	181

13.36.2.81PchIshI2c0GpioAssign	182
13.36.2.82PchIshI2c1GpioAssign	182
13.36.2.83PchIshI2c2GpioAssign	182
13.36.2.84PchIshPdtUnlock	182
13.36.2.85PchIshSpiGpioAssign	182
13.36.2.86PchIshUart0GpioAssign	183
13.36.2.87PchIshUart1GpioAssign	183
13.36.2.88PchLanEnable	183
13.36.2.89PchLanLtrEnable	183
13.36.2.90PchLegacyIoLowLatency	183
13.36.2.91PchLockDownBiosLock	183
13.36.2.92PchLockDownRtcMemoryLock	184
13.36.2.93PchMemoryThrottlingEnable	184
13.36.2.94PchPcieDeviceOverrideTablePtr	184
13.36.2.95PchPmDeepSxPol	184
13.36.2.96PchPmDisableDsxAcPresentPulldown	184
13.36.2.97PchPmDisableNativePowerButton	185
13.36.2.98PchPmLanWakeFromDeepSx	185
13.36.2.99PchPmLpcClockRun	185
13.36.2.100PchPmMeWakeSts	185
13.36.2.101PchPmPciePllSsc	185
13.36.2.102PchPmPcieWakeFromDeepSx	186
13.36.2.103PchPmPmeB0S5Dis	186
13.36.2.104PchPmPwrBtnOverridePeriod	186
13.36.2.105PchPmPwrCycDur	186
13.36.2.106PchPmSlpAMinAssert	186
13.36.2.107PchPmSlpLanLowDc	187
13.36.2.108PchPmSlpS0Enable	187
13.36.2.109PchPmSlpS0Vm070VSupport	187
13.36.2.110PchPmSlpS0Vm075VSupport	187
13.36.2.111PchPmSlpS0VmRuntimeControl	187
13.36.2.112PchPmSlpS3MinAssert	187
13.36.2.113PchPmSlpS4MinAssert	188
13.36.2.114PchPmSlpStrchSusUp	188
13.36.2.115PchPmSlpSusMinAssert	188
13.36.2.116PchPmVrAlert	188
13.36.2.117PchPmWoLanEnableOverride	188
13.36.2.118PchPmWoLanOvrWkSts	189
13.36.2.119PchPmWoLanDeepSxEnable	189
13.36.2.120PchPmWoLanEnable	189

13.36.2.121	chPwrOptEnable	189
13.36.2.122	chScsEmmcHs400TuningRequired	189
13.36.2.123	chSerialIoI2cPadsTermination	190
13.36.2.124	chSirqEnable	190
13.36.2.125	chSirqMode	190
13.36.2.126	chStartFramePulse	190
13.36.2.127	chTsmicLock	190
13.36.2.128	chTTEnable	191
13.36.2.129	chTTLock	191
13.36.2.130	chTTState13Enable	191
13.36.2.131	chUsbHsioFilterSel	191
13.36.2.132	chUsbHsioRxTuningEnable	191
13.36.2.133	cieComplianceTestMode	191
13.36.2.134	cieDisableRootPortClockGating	192
13.36.2.135	cieEnablePeerMemoryWrite	192
13.36.2.136	cieEqPh3LaneParamCm	192
13.36.2.137	cieEqPh3LaneParamCp	192
13.36.2.138	cieRpAspm	192
13.36.2.139	cieRpCompletionTimeout	193
13.36.2.140	cieRpDpcExtensionsMask	193
13.36.2.141	cieRpDpcMask	193
13.36.2.142	cieRpFunctionSwap	193
13.36.2.143	cieRpGen3EqPh3Method	193
13.36.2.144	cieRpImrEnabled	194
13.36.2.145	cieRpL1Substates	194
13.36.2.146	cieRpPcieSpeed	194
13.36.2.147	cieRpPhysicalSlotNumber	194
13.36.2.148	cieRpPtmMask	194
13.36.2.149	cieSwEqCoeffListCm	195
13.36.2.150	cieSwEqCoeffListCp	195
13.36.2.151	mcCpuC10GatePinEnable	195
13.36.2.152	mcDbgMsgEn	195
13.36.2.153	mcModPhySusPgEnable	195
13.36.2.154	mcPowerButtonDebounce	196
13.36.2.155	ortUsb20Enable	196
13.36.2.156	ortUsb30Enable	196
13.36.2.157	reWake	196
13.36.2.158	si1Threshold	196
13.36.2.159	si2Threshold	197
13.36.2.160	si3Enable	197

13.36.2.161	Psi3Threshold	197
13.36.2.162	PsOnEnable	197
13.36.2.163	PsSysOffset	197
13.36.2.164	PsSysSlope	198
13.36.2.165	PxRcConfig	198
13.36.2.166	RemoteAssistance	198
13.36.2.167	SataEnable	198
13.36.2.168	SataLedEnable	198
13.36.2.169	SataMode	198
13.36.2.170	SataP0TDispFinit	199
13.36.2.171	SataP1TDispFinit	199
13.36.2.172	SataPortsDevSlp	199
13.36.2.173	SataPortsDevSlpResetConfig	199
13.36.2.174	SataPortsDmVal	199
13.36.2.175	SataPortsEnable	200
13.36.2.176	SataPwrOptEnable	200
13.36.2.177	SataRstHddUnlock	200
13.36.2.178	SataRstInterrupt	200
13.36.2.179	SataRstIrrt	200
13.36.2.180	SataRstIrrtOnly	201
13.36.2.181	SataRstLedLocate	201
13.36.2.182	SataRstOromUiBanner	201
13.36.2.183	SataRstPcieDeviceResetDelay	201
13.36.2.184	SataRstRaid0	201
13.36.2.185	SataRstRaid1	201
13.36.2.186	SataRstRaid10	202
13.36.2.187	SataRstRaid5	202
13.36.2.188	SataRstRaidDeviceld	202
13.36.2.189	SataRstSmartStorage	202
13.36.2.190	SataSalpSupport	202
13.36.2.191	SataThermalSuggestedSetting	203
13.36.2.192	SdCilrqSelect	203
13.36.2.193	SdcsEmmcEnabled	203
13.36.2.194	SdcsEmmcHs400Enabled	203
13.36.2.195	SdcsSdCardEnabled	203
13.36.2.196	SdcsSdCardWpPinEnabled	203
13.36.2.197	SdcsUfsEnabled	204
13.36.2.198	SendEcCmd	204
13.36.2.199	SendVrMbxCmd	204
13.36.2.200	SerialIoDebugUartNumber	204

13.36.2.203	SerialIoI2cMode	204
13.36.2.202	SerialIoSpi0CsEnable	205
13.36.2.203	SerialIoSpi0CsPolarity	205
13.36.2.203	SerialIoSpi1CsEnable	205
13.36.2.205	SerialIoSpi1CsPolarity	205
13.36.2.206	SerialIoSpi2CsEnable	205
13.36.2.207	SerialIoSpi2CsPolarity	206
13.36.2.208	SerialIoSpiDefaultCsOutput	206
13.36.2.209	SerialIoSpiMode	206
13.36.2.210	SerialIoUartDataBits	206
13.36.2.213	SerialIoUartDmaEnable	206
13.36.2.213	SerialIoUartMode	207
13.36.2.213	SerialIoUartParity	207
13.36.2.213	SerialIoUartPowerGating	207
13.36.2.215	SerialIoUartStopBits	207
13.36.2.216	ShowSpiController	207
13.36.2.217	SiCsmFlag	207
13.36.2.218	SiNumberOfSsidTableEntry	208
13.36.2.219	SiSsidTablePtr	208
13.36.2.220	SkipMplnitDeprecated	208
13.36.2.223	SlowSlewRateForFivr	208
13.36.2.223	SlowSlewRateForGt	208
13.36.2.223	SlowSlewRateForIa	209
13.36.2.223	SlowSlewRateForSa	209
13.36.2.225	SipS0DisQForDebug	209
13.36.2.226	SipS0Override	209
13.36.2.227	SipS0WithGbeSupport	210
13.36.2.228	SpiFlashCfgLockDown	210
13.36.2.229	TcolrqSelect	210
13.36.2.230	TdcPowerLimit	210
13.36.2.230	TdcTimeWindow	210
13.36.2.231	TetonGlacierCR	210
13.36.2.231	TetonGlacierMode	211
13.36.2.231	TTSuggestedSetting	211
13.36.2.235	TurboMode	211
13.36.2.236	TxtEnable	211
13.36.2.237	usb2AfePehalfbit	211
13.36.2.238	usb2AfePetxiset	212
13.36.2.239	usb2AfePredeemp	212
13.36.2.240	usb2AfeTxiset	212

13.36.2.241	usb3HsioTxDeEmph	212
13.36.2.242	usb3HsioTxDeEmphEnable	212
13.36.2.243	usb3HsioTxDownscaleAmp	213
13.36.2.244	usb3HsioTxDownscaleAmpEnable	213
13.36.2.245	usb3HsioTxRate0UniqTran	213
13.36.2.246	usb3HsioTxRate0UniqTranEnable	213
13.36.2.247	usb3HsioTxRate1UniqTran	213
13.36.2.248	usb3HsioTxRate1UniqTranEnable	214
13.36.2.249	usb3HsioTxRate2UniqTran	214
13.36.2.250	usb3HsioTxRate2UniqTranEnable	214
13.36.2.251	usb3HsioTxRate3UniqTran	214
13.36.2.252	usb3HsioTxRate3UniqTranEnable	214
13.36.2.253	usbPdoProgramming	215
13.36.2.254	usbPowerDeliveryDesign	215
13.36.2.255	usbVoltageLimit	215
13.36.2.256	usbWatchDogEnabled	215
13.36.2.257	usbWatchDogTimerBios	215
13.36.2.258	usbWatchDogTimerOs	216
13.36.2.259	usbUciEnable	216
13.37	FSP_S_RESTRICTED_CONFIG Struct Reference	216
13.37.1	Detailed Description	223
13.37.2	Member Data Documentation	223
13.37.2.1	PchDmiTestClientObffEn	223
13.37.2.2	PchDmiTestDelayEnDmiAspm	223
13.37.2.3	PchDmiTestDmiSecureRegLock	223
13.37.2.4	PchDmiTestExternalObffEn	223
13.37.2.5	PchDmiTestInternalObffEn	223
13.37.2.6	PchDmiTestMemCloseStateEn	224
13.37.2.7	PchDmiTestOpiPIIPowerGating	224
13.37.2.8	PchDmiTestPchTcLockDown	224
13.37.2.9	PchHdaTestConfigLockdown	224
13.37.2.10	PchHdaTestLowFreqLinkClkSrc	224
13.37.2.11	PchHdaTestPowerClockGating	225
13.37.2.12	PchLanTestPchWOLFastSupport	225
13.37.2.13	PchLockDownTestSmiUnlock	225
13.37.2.14	PchPmTestPchClearPowerSts	225
13.37.2.15	PchTestClkGatingXhci	225
13.37.2.16	PchTestPhlcLock	226
13.37.2.17	PchTestTscLock	226
13.37.2.18	PchTestTselLock	226

13.37.2.19PchTestUnlockUsbForSvNoa	226
13.37.2.20SataTestRstPcieStorageDeviceInterface	226
13.37.2.21SiSvPolicyEnable	227
13.37.2.22TestCnviLteCoex	227
13.37.2.23TestCnviSharedXtalClocking	227
13.37.2.24TestCnviWifiLtrEn	227
13.37.2.25TestPchPmErDebugMode	227
13.37.2.26TestPchPmLatchEventsC10Exit	227
13.37.2.27TestPcieMpcSecureRegisterLock	228
13.37.2.28TestSkipPostBootSai	228
13.38FSP_S_TEST_CONFIG Struct Reference	228
13.38.1 Detailed Description	237
13.38.2 Member Data Documentation	237
13.38.2.1 ApIdleManner	238
13.38.2.2 AutoThermalReporting	238
13.38.2.3 C1e	238
13.38.2.4 C1StateAutoDemotion	238
13.38.2.5 C1StateUnDemotion	238
13.38.2.6 C3StateAutoDemotion	238
13.38.2.7 C3StateUnDemotion	239
13.38.2.8 ConfigTdpBios	239
13.38.2.9 CpuWakeUpTimer	239
13.38.2.10CStatePreWake	239
13.38.2.11CstCfgCtrlIoMwaitRedirection	239
13.38.2.12Custom1ConfigTdpControl	240
13.38.2.13Custom1PowerLimit1	240
13.38.2.14Custom1PowerLimit1Time	240
13.38.2.15Custom1PowerLimit2	240
13.38.2.16Custom1TurboActivationRatio	240
13.38.2.17Custom2ConfigTdpControl	241
13.38.2.18Custom2PowerLimit1	241
13.38.2.19Custom2PowerLimit1Time	241
13.38.2.20Custom2PowerLimit2	241
13.38.2.21Custom2TurboActivationRatio	241
13.38.2.22Custom3ConfigTdpControl	242
13.38.2.23Custom3PowerLimit1	242
13.38.2.24Custom3PowerLimit1Time	242
13.38.2.25Custom3PowerLimit2	242
13.38.2.26Custom3TurboActivationRatio	242
13.38.2.27Cx	243

13.38.2.28	DebugInterfaceEnable	243
13.38.2.29	DebugInterfaceLockEnable	243
13.38.2.30	DisableProcHotOut	243
13.38.2.31	DisableVrThermalAlert	243
13.38.2.32	DualTauBoost	244
13.38.2.33	EightCoreRatioLimit	244
13.38.2.34	Eist	244
13.38.2.35	EnableIbm	244
13.38.2.36	EnableIbmDriver	244
13.38.2.37	EndOfPostMessage	244
13.38.2.38	EnergyEfficientPState	245
13.38.2.39	EnergyEfficientTurbo	245
13.38.2.40	EnforceEDebugMode	245
13.38.2.41	FiveCoreRatioLimit	245
13.38.2.42	FourCoreRatioLimit	245
13.38.2.43	HdcControl	246
13.38.2.44	Hwp	246
13.38.2.45	HwpInterruptControl	246
13.38.2.46	IbmPeriodicSmmTimer	246
13.38.2.47	MachineCheckEnable	246
13.38.2.48	MaxRingRatioLimit	247
13.38.2.49	MctpBroadcastCycle	247
13.38.2.50	MinRingRatioLimit	247
13.38.2.51	MlcStreamerPrefetcher	247
13.38.2.52	MonitorMwaitEnable	247
13.38.2.53	NumberOfEntries	248
13.38.2.54	OneCoreRatioLimit	248
13.38.2.55	PchHdaResetWaitTimer	248
13.38.2.56	PchLockDownBiosInterface	248
13.38.2.57	PchLockDownGlobalSmi	248
13.38.2.58	PchPmDisableEnergyReport	249
13.38.2.59	PchSbAccessUnlock	249
13.38.2.60	PchUnlockGpioPads	249
13.38.2.61	PchXhciOcLock	249
13.38.2.62	PcieEnablePort8xhDecode	249
13.38.2.63	PcieRpDptp	250
13.38.2.64	PcieRpSlotPowerLimitScale	250
13.38.2.65	PcieRpSlotPowerLimitValue	250
13.38.2.66	PcieRpUtp	250
13.38.2.67	PkgCStateDemotion	250

13.38.2.68PkgCStateLimit	250
13.38.2.69PkgCStateUnDemotion	251
13.38.2.70PmgCstCfgCtrlLock	251
13.38.2.71PowerLimit1	251
13.38.2.72PowerLimit1Time	251
13.38.2.73PowerLimit2	251
13.38.2.74PowerLimit2Power	252
13.38.2.75PowerLimit3	252
13.38.2.76PowerLimit4	252
13.38.2.77ProcessorTraceEnable	252
13.38.2.78ProcessorTraceMemBase	252
13.38.2.79ProcessorTraceMemLength	253
13.38.2.80ProcessorTraceOutputScheme	253
13.38.2.81ProcHotResponse	253
13.38.2.82PsysPmax	253
13.38.2.83PsysPowerLimit1	253
13.38.2.84PsysPowerLimit1Power	254
13.38.2.85PsysPowerLimit1Time	254
13.38.2.86PsysPowerLimit2	254
13.38.2.87PsysPowerLimit2Power	254
13.38.2.88RaceToHalt	254
13.38.2.89SataTestMode	254
13.38.2.90SevenCoreRatioLimit	255
13.38.2.91SixCoreRatioLimit	255
13.38.2.92StateRatio	255
13.38.2.93StateRatioMax16	255
13.38.2.94TccActivationOffset	255
13.38.2.95TccOffsetClamp	256
13.38.2.96TccOffsetLock	256
13.38.2.97TccOffsetTimeWindowForRatl	256
13.38.2.98ThreeCoreRatioLimit	256
13.38.2.99ThreeStrikeCounterDisable	256
13.38.2.100TimedMwait	257
13.38.2.101TStates	257
13.38.2.102TwoCoreRatioLimit	257
13.39FSP_T_CONFIG Struct Reference	257
13.39.1 Detailed Description	258
13.39.2 Member Data Documentation	258
13.39.2.1 PcdDebugInterfaceFlags	258
13.39.2.2 PcdIsaSerialUartBase	259

13.39.2.3 PcdLpcUartDebugEnable	259
13.39.2.4 PcdSerialDebugLevel	259
13.39.2.5 PcdSerialloUartAutoFlow	259
13.39.2.6 PcdSerialloUartDataBits	259
13.39.2.7 PcdSerialloUartDebugEnable	259
13.39.2.8 PcdSerialloUartNumber	260
13.39.2.9 PcdSerialloUartParity	260
13.39.2.10PcdSerialloUartStopBits	260
13.40FSP_T_RESTRICTED_CONFIG Struct Reference	260
13.40.1 Detailed Description	261
13.41FSP_T_TEST_CONFIG Struct Reference	261
13.41.1 Detailed Description	261
13.42FSPM_ARCH_CONFIG_PPI Struct Reference	261
13.42.1 Detailed Description	261
13.43FSPM_UPD Struct Reference	261
13.43.1 Detailed Description	262
13.44FSPS_UPD Struct Reference	262
13.44.1 Detailed Description	263
13.45FSPT_CORE_UPD Struct Reference	263
13.45.1 Detailed Description	264
13.46FSPT_UPD Struct Reference	264
13.46.1 Detailed Description	265
13.47FVI_DATA Struct Reference	265
13.47.1 Detailed Description	265
13.48GPIO_CONFIG Struct Reference	265
13.48.1 Detailed Description	266
13.48.2 Member Data Documentation	266
13.48.2.1 Direction	266
13.48.2.2 ElectricalConfig	266
13.48.2.3 HostSoftPadOwn	267
13.48.2.4 InterruptConfig	267
13.48.2.5 LockConfig	267
13.48.2.6 OutputState	267
13.48.2.7 PadMode	267
13.48.2.8 PowerConfig	268
13.49HDD_INFO Struct Reference	268
13.49.1 Detailed Description	269
13.49.2 Member Data Documentation	269
13.49.2.1 Status	269
13.50LEGACY_DEVICE_FLAGS Struct Reference	269

13.50.1 Detailed Description	269
13.51 PCIE_PORT_EQS Struct Reference	269
13.51.1 Detailed Description	270
13.52 PCIE_PORT_SWEQ_DATA Struct Reference	270
13.52.1 Detailed Description	270
13.53 PCIE_SWEQ_GPIO_CONFIG Struct Reference	270
13.53.1 Detailed Description	270
13.54 PCIE_SWEQ_PRESET_SCORE Struct Reference	270
13.54.1 Detailed Description	270
13.55 RC_VERSION Struct Reference	271
13.55.1 Detailed Description	271
13.56 SI_CONFIG Struct Reference	271
13.56.1 Detailed Description	271
13.56.2 Member Data Documentation	271
13.56.2.1 SkipPostBootSai	272
13.56.2.2 TraceHubMemBase	272
13.57 SI_PCH_DEVICE_INTERRUPT_CONFIG Struct Reference	272
13.57.1 Detailed Description	272
13.58 SMM_ATTRIBUTES Struct Reference	273
13.58.1 Detailed Description	273
13.58.2 Member Data Documentation	273
13.58.2.1 DataGranularity	273
13.58.2.2 PortGranularity	273
13.58.2.3 Type	273
13.59 SMM_ENTRY Struct Reference	274
13.59.1 Detailed Description	274
13.59.2 Member Data Documentation	274
13.59.2.1 SmmAttributes	275
13.59.2.2 SmmFunction	275
13.60 SMM_FUNCTION Struct Reference	275
13.60.1 Detailed Description	275
13.61 SMM_TABLE Struct Reference	275
13.61.1 Detailed Description	276
13.62 SOCKET_LGA_775_SMM_CPU_STATE Union Reference	276
13.62.1 Detailed Description	277
13.63 SOCKET_LGA_775_SMM_CPU_STATE32 Struct Reference	277
13.63.1 Detailed Description	277
13.64 SOCKET_LGA_775_SMM_CPU_STATE64 Struct Reference	277
13.64.1 Detailed Description	277
13.65 SVID_SID_VALUE Struct Reference	278

13.65.1 Detailed Description	278
13.66UD_TABLE Struct Reference	278
13.66.1 Detailed Description	279
13.66.2 Member Data Documentation	279
13.66.2.1 Attributes	279
13.66.2.2 BbsTableEntryNumberForParentDevice	279
13.66.2.3 DeviceNumber	279
13.67UDC_ATTRIBUTES Struct Reference	280
13.67.1 Detailed Description	280
13.67.2 Member Data Documentation	280
13.67.2.1 Reserved	280
13.68USB20_AFE Struct Reference	280
13.68.1 Detailed Description	281
13.69USB20_PORT_CONFIG Struct Reference	281
13.69.1 Detailed Description	282
13.69.2 Member Data Documentation	282
13.69.2.1 Afe	282
13.69.2.2 OverCurrentPin	282
13.70USB30_PORT_CONFIG Struct Reference	282
13.70.1 Detailed Description	283
13.70.2 Member Data Documentation	283
13.70.2.1 OverCurrentPin	283
13.71USB_CONFIG Struct Reference	283
13.71.1 Detailed Description	284
13.71.2 Member Data Documentation	284
13.71.2.1 EnableComplianceMode	285
13.71.2.2 LtrOverrideEnable	285
13.71.2.3 OverCurrentEnable	285
13.71.2.4 PdoProgramming	285
13.71.2.5 Usb2PhySusPgEnable	285
13.71.2.6 XhciOcLock	286
13.72XDCI_CONFIG Struct Reference	286
13.72.1 Detailed Description	286
13.72.2 Member Data Documentation	286
13.72.2.1 Enable	286
14 File Documentation	287
14.1 AcpiS3Context.h File Reference	287
14.1.1 Detailed Description	287
14.2 AslUpdateLib.h File Reference	287

14.2.1	Detailed Description	288
14.2.2	Function Documentation	289
14.2.2.1	AcpiChecksum()	289
14.2.2.2	InitializeAslUpdateLib()	289
14.2.2.3	LocateAcpiTableByOemTableId()	289
14.2.2.4	LocateAcpiTableBySignature()	290
14.2.2.5	UpdateMethodAslCode()	291
14.2.2.6	UpdateNameAslCode()	291
14.3	CacheAsRamLib.h File Reference	291
14.3.1	Detailed Description	292
14.3.2	Function Documentation	292
14.3.2.1	DisableCacheAsRam()	292
14.4	ConsoleOutDevice.h File Reference	292
14.4.1	Detailed Description	292
14.5	DxeHdaNhl.h File Reference	292
14.5.1	Detailed Description	293
14.6	DxeHdaNhlLib.h File Reference	294
14.6.1	Detailed Description	295
14.6.2	Function Documentation	295
14.6.2.1	GetNhlEndpoint()	295
14.6.2.2	GetNhlEndpointDeviceCapabilities()	296
14.6.2.3	GetNhlEndpointDeviceInfo()	296
14.6.2.4	GetNhlEndpointDevicesInfo()	296
14.6.2.5	GetNhlEndpointFormat()	297
14.6.2.6	GetNhlEndpointFormatsConfig()	297
14.6.2.7	GetNhlOedConfig()	297
14.6.2.8	NhlAcpiTableDump()	298
14.6.2.9	NhlEndpointDump()	298
14.6.2.10	NhlFormatDump()	298
14.6.2.11	NhlOedConfigDump()	299
14.7	FspErrorInfo.h File Reference	299
14.7.1	Detailed Description	299
14.8	FspErrorInfoLib.h File Reference	300
14.8.1	Detailed Description	300
14.8.2	Function Documentation	301
14.8.2.1	DumpFspErrorInfo()	301
14.8.2.2	FspErrorStatusCodeReportWorker()	301
14.8.2.3	SendFspErrorInfo()	301
14.8.2.4	SendFspErrorInfoStatusCode()	302
14.9	FspFixedPcds.h File Reference	302

14.9.1 Detailed Description	303
14.10FspInfoHob.h File Reference	303
14.10.1 Detailed Description	303
14.11FspmArchConfigPpi.h File Reference	303
14.11.1 Detailed Description	304
14.12FspmUpd.h File Reference	304
14.12.1 Detailed Description	305
14.13FspsUpd.h File Reference	306
14.13.1 Detailed Description	307
14.13.2 Enumeration Type Documentation	307
14.13.2.1 SI_PCH_INT_PIN	307
14.14FsptUpd.h File Reference	308
14.14.1 Detailed Description	309
14.15FspUpd.h File Reference	309
14.15.1 Detailed Description	310
14.16GetFsptApiParameter.h File Reference	310
14.16.1 Detailed Description	311
14.16.2 Function Documentation	311
14.16.2.1 SecGetFsptApiParameter()	311
14.17GpioConfig.h File Reference	311
14.17.1 Detailed Description	313
14.17.2 Enumeration Type Documentation	313
14.17.2.1 GPIO_DIRECTION	313
14.17.2.2 GPIO_ELECTRICAL_CONFIG	313
14.17.2.3 GPIO_HARDWARE_DEFAULT	314
14.17.2.4 GPIO_HOSTSW_OWN	314
14.17.2.5 GPIO_INT_CONFIG	315
14.17.2.6 GPIO_LOCK_CONFIG	315
14.17.2.7 GPIO_OTHER_CONFIG	316
14.17.2.8 GPIO_OUTPUT_STATE	316
14.17.2.9 GPIO_PAD_MODE	316
14.17.2.10GPIO_RESET_CONFIG	317
14.18GpioSampleDef.h File Reference	318
14.18.1 Detailed Description	318
14.19LegacyBios.h File Reference	318
14.19.1 Detailed Description	322
14.19.2 Macro Definition Documentation	322
14.19.2.1 EFI_SEGMENT	322
14.19.3 Typedef Documentation	322
14.19.3.1 EFI_LEGACY_BIOS_BOOT	322

14.19.3.2	EFI_LEGACY_BIOS_BOOT_UNCONVENTIONAL_DEVICE	323
14.19.3.3	EFI_LEGACY_BIOS_CHECK_ROM	324
14.19.3.4	EFI_LEGACY_BIOS_COPY_LEGACY_REGION	324
14.19.3.5	EFI_LEGACY_BIOS_FARCALL86	325
14.19.3.6	EFI_LEGACY_BIOS_GET_BBS_INFO	325
14.19.3.7	EFI_LEGACY_BIOS_GET_LEGACY_REGION	326
14.19.3.8	EFI_LEGACY_BIOS_INSTALL_ROM	326
14.19.3.9	EFI_LEGACY_BIOS_INT86	327
14.19.3.10	EFI_LEGACY_BIOS_PREPARE_TO_BOOT_EFI	328
14.19.3.11	EFI_LEGACY_BIOS_SHADOW_ALL_LEGACY_OPROMS	328
14.19.3.12	EFI_LEGACY_BIOS_UPDATE_KEYBOARD_LED_STATUS	328
14.19.4	Enumeration Type Documentation	329
14.19.4.1	EFI_COMPATIBILITY_FUNCTIONS	329
14.20	LegacyInterrupt.h File Reference	330
14.20.1	Detailed Description	330
14.20.2	Typedef Documentation	331
14.20.2.1	EFI_LEGACY_INTERRUPT_GET_LOCATION	331
14.20.2.2	EFI_LEGACY_INTERRUPT_GET_NUMBER_PIRQS	331
14.20.2.3	EFI_LEGACY_INTERRUPT_READ_PIRQ	332
14.20.2.4	EFI_LEGACY_INTERRUPT_WRITE_PIRQ	332
14.21	MemoryTypeInfo.h File Reference	332
14.21.1	Detailed Description	333
14.22	MmPciLib.h File Reference	333
14.22.1	Detailed Description	333
14.22.2	Function Documentation	333
14.22.2.1	MmPciBase()	334
14.23	PciInitLib.h File Reference	334
14.23.1	Detailed Description	337
14.23.2	Typedef Documentation	337
14.23.2.1	PCIE_CLEAR_ERROR_COUNT	337
14.23.2.2	PCIE_CLOSE_MONITOR	338
14.23.2.3	PCIE_DATA_LINK_LAYER_LINK_ACTIVE	338
14.23.2.4	PCIE_DETECT_ENDPOINT_PRESENCE	338
14.23.2.5	PCIE_ENSURE_LINK_IS_HEALTHY	339
14.23.2.6	PCIE_EXISTS	339
14.23.2.7	PCIE_GET_CURRENT_LINK_SPEED	340
14.23.2.8	PCIE_GET_ERROR_COUNT	340
14.23.2.9	PCIE_GET_NEGOTIATED_WIDTH	340
14.23.2.10	PCIE_GET_PCIE_CAP_OFFSET	341
14.23.2.11	PCIE_GET_ROOT_PORTS	341

14.23.2.12	PCIE_GET_SLOT_PRESENCE_DETECT	341
14.23.2.13	PCIE_GET_TARGET_LINK_SPEED	342
14.23.2.14	PCIE_OPEN_MONITOR	342
14.23.2.15	PCIE_POLLING_COMPLIANCE_MODE	342
14.23.2.16	PCIE_PROGRAM_PORT_PHASE3_TXEQ	343
14.23.2.17	PCIE_PROGRAM_STATIC_GEN3_EQ	343
14.23.2.18	PCIE_PROGRAM_UNIFORM_PORT_PHASE3_TXEQ	343
14.23.2.19	PCIE_RECOVER_LINK_WIDTH	344
14.23.2.20	PCIE_REPORT_LINK_STATUS	344
14.23.2.21	PCIE_RESET_ENDPOINT_PERST	344
14.23.2.22	PCIE_RETRAIN_LINK	345
14.23.2.23	PCIE_RUN_MARGIN_TEST	345
14.23.2.24	PCIE_SET_GEN3_PHASE2_BYPASS	346
14.23.2.25	PCIE_SET_LINK_DISABLE	346
14.23.2.26	PCIE_SET_PCH_GPIO	347
14.23.2.27	PCIE_SET_PERST	347
14.23.2.28	PCIE_SET_TARGET_LINK_SPEED	347
14.23.2.29	PCIE_WAIT_FOR_L0	348
14.23.3	Function Documentation	348
14.23.3.1	GetCoefficientsFromPreset()	348
14.23.3.2	GetGenericPcieLowLevelFunctionCalls()	349
14.23.3.3	LinkIsDowngraded()	349
14.23.3.4	PcieGen3SoftwareEqualization()	349
14.23.3.5	PcieLibFindCapId()	350
14.23.3.6	WaitForDataLinkLayerLinkActive()	350
14.23.3.7	WaitForDataLinkLayerLinkActiveOnAllPorts()	351
14.24	PcieRegs.h File Reference	351
14.24.1	Detailed Description	358
14.25	PeiCpuAndPchTraceHubLib.h File Reference	359
14.25.1	Detailed Description	359
14.25.2	Function Documentation	359
14.25.2.1	ConfigureMscForCpuAndPchTraceHub()	360
14.25.2.2	ConfigureMscForTraceHub()	360
14.25.2.3	GetTraceHubMtbBar()	360
14.25.2.4	GetTraceHubPciBase()	361
14.25.2.5	IsDebuggerInUse()	361
14.26	PeiPreMemSiDefaultPolicy.h File Reference	361
14.26.1	Detailed Description	361
14.27	PeiSiDefaultPolicy.h File Reference	362
14.27.1	Detailed Description	362

14.28PeiSiPolicyUpdateLib.h File Reference	363
14.28.1 Detailed Description	364
14.28.2 Function Documentation	364
14.28.2.1 UpdatePeiAmtPolicy()	364
14.28.2.2 UpdatePeiCpuPolicy()	365
14.28.2.3 UpdatePeiMePolicy()	365
14.28.2.4 UpdatePeiMePolicyPreMem()	365
14.28.2.5 UpdatePeiPchPolicy()	366
14.28.2.6 UpdatePeiPchPolicyPreMem()	366
14.28.2.7 UpdatePeiSaPolicy()	366
14.28.2.8 UpdatePeiSaPolicyPreMem()	367
14.28.2.9 UpdatePeiSiPolicy()	367
14.29PlatformSpecificResetHandler.h File Reference	367
14.29.1 Detailed Description	368
14.30PlatformSpecificResetHandler.h File Reference	368
14.30.1 Detailed Description	369
14.31PlatformSpecificResetNotification.h File Reference	369
14.31.1 Detailed Description	369
14.32ProcessorTraceMemoryAllocationLib.h File Reference	369
14.32.1 Detailed Description	370
14.32.2 Function Documentation	371
14.32.2.1 ProcessorTraceAllocateMemory()	371
14.33PttPTPInstanceGuid.h File Reference	371
14.33.1 Detailed Description	371
14.34RegsUsb.h File Reference	372
14.34.1 Detailed Description	379
14.35ResetSystemLib.h File Reference	379
14.35.1 Detailed Description	380
14.35.2 Function Documentation	380
14.35.2.1 EnterS3WithImmediateWake()	380
14.35.2.2 ResetCold()	380
14.35.2.3 ResetPlatformSpecific()	380
14.35.2.4 ResetShutdown()	381
14.35.2.5 ResetWarm()	381
14.36SecPlatformLib.h File Reference	381
14.36.1 Detailed Description	382
14.36.2 Function Documentation	382
14.36.2.1 SecGetPerformance()	382
14.36.2.2 SecPlatformInformation()	383
14.36.2.3 SecPlatformMain()	383

14.37SiConfig.h File Reference	384
14.37.1 Detailed Description	384
14.38SiConfigBlockLib.h File Reference	385
14.38.1 Detailed Description	385
14.38.2 Function Documentation	386
14.38.2.1 AddComponentConfigBlocks()	386
14.38.2.2 GetComponentConfigBlockTotalSize()	386
14.39SiConfigHob.h File Reference	386
14.39.1 Detailed Description	387
14.40SiFvi.h File Reference	387
14.40.1 Detailed Description	388
14.40.2 Macro Definition Documentation	389
14.40.2.1 DEFAULT_FVI_DATA	389
14.40.2.2 NO_STRING_AVAILABLE	389
14.40.3 Enumeration Type Documentation	389
14.40.3.1 ME_FVI_INDEX	389
14.40.4 Function Documentation	390
14.40.4.1 BuildFviInfoHob()	390
14.40.4.2 UpdateFviInfo()	390
14.41SiFviLib.h File Reference	390
14.41.1 Detailed Description	391
14.41.2 Macro Definition Documentation	391
14.41.2.1 NO_STRING_AVAILABLE	392
14.41.3 Function Documentation	392
14.41.3.1 AddFviEntry()	392
14.42SiMtrrLib.h File Reference	392
14.42.1 Detailed Description	393
14.42.2 Function Documentation	393
14.42.2.1 MtrrTransfer2DefaultWB()	393
14.43SiPolicy.h File Reference	393
14.43.1 Detailed Description	394
14.44SiPolicyLib.h File Reference	395
14.44.1 Detailed Description	395
14.44.2 Function Documentation	396
14.44.2.1 DumpSiPolicy()	396
14.44.2.2 SiCreateConfigBlocks()	396
14.44.2.3 SiCreatePreMemConfigBlocks()	397
14.44.2.4 SiInstallPolicyPpi()	397
14.44.2.5 SiInstallPolicyReadyPpi()	398
14.44.2.6 SiPreMemInstallPolicyPpi()	398

14.44.2.7 SiPreMemInstallPolicyReadyPpi()	398
14.44.2.8 SiPreMemPrintPolicyPpi()	399
14.44.2.9 SiPrintPolicyPpi()	399
14.44.2.10TraceHubCalculateTotalBufferSize()	399
14.45SiPolicyProtocol.h File Reference	399
14.45.1 Detailed Description	400
14.46SiPolicyStruct.h File Reference	400
14.46.1 Detailed Description	402
14.46.2 Macro Definition Documentation	402
14.46.2.1 SI_POLICY_REVISION	402
14.46.2.2 SI_PREMEM_POLICY_REVISION	402
14.47SmmAccess.h File Reference	403
14.47.1 Detailed Description	403
14.47.2 Typedef Documentation	404
14.47.2.1 PEI_SMM_CAPABILITIES	404
14.47.2.2 PEI_SMM_CLOSE	404
14.47.2.3 PEI_SMM_LOCK	405
14.47.2.4 PEI_SMM_OPEN	405
14.48SmmControl.h File Reference	406
14.48.1 Detailed Description	406
14.48.2 Typedef Documentation	406
14.48.2.1 PEI_SMM_ACTIVATE	406
14.48.2.2 PEI_SMM_DEACTIVATE	407
14.49SmmVariable.h File Reference	407
14.49.1 Detailed Description	408
14.50SocketLga775Lib.h File Reference	408
14.50.1 Detailed Description	408
14.51StallPpiLib.h File Reference	409
14.51.1 Detailed Description	409
14.51.2 Function Documentation	409
14.51.2.1 InstallStallPpi()	409
14.52TempRamExitPpi.h File Reference	410
14.52.1 Detailed Description	410
14.53TpmInitialized.h File Reference	411
14.53.1 Detailed Description	411
14.54TraceHubCommonConfig.h File Reference	411
14.54.1 Detailed Description	412
14.54.2 Enumeration Type Documentation	412
14.54.2.1 TRACE_HUB_ENABLE_MODE	412
14.55UsbConfig.h File Reference	412

14.55.1 Detailed Description	413
14.56UsbInitLib.h File Reference	414
14.56.1 Detailed Description	414
14.56.2 Function Documentation	415
14.56.2.1 Usb2AfeProgramming()	415
14.56.2.2 XdciConfigure()	415
14.56.2.3 XhciConfigure()	415
14.56.2.4 XhciConfigureAfterInit()	416
14.56.2.5 XhciLockConfiguration()	416
14.57UsbLib.h File Reference	416
14.57.1 Detailed Description	417
Index	419

Chapter 1

INTRODUCTION

1 Introduction

1.1 Purpose

The purpose of this document is to describe the steps required to integrate the Intel® Firmware Support Package (FSP) into a boot loader solution. It supports CometLake platforms.

1.2 Intended Audience

This document is targeted at all platform and system developers who need to consume FSP binaries in their boot loader solutions. This includes, but is not limited to: system BIOS developers, boot loader developers, system integrators, as well as end users.

1.3 Related Documents

- *Platform Initialization (PI) Specification v1.4* located at <http://www.uefi.org/specifications>
- *Intel® Firmware Support Package: External Architecture Specification (EAS) v2.0* located at <http://www.intel.com/content/dam/www/public/us/en/documents/technical-specifications/fsp.pdf>
- *Boot Setting File Specification (BSF) v1.0* https://firmware.intel.com/sites/default/files/BSF_1_0.pdf
- *Binary Configuration Tool for Intel® Firmware Support Package* available at <http://www.intel.com/fsp>

1.4 Acronyms and Terminology

Acronym	Definition
BCT	Binary Configuration Tool
BSF	Boot Setting File
BSP	Boot Strap Processor
BWG	BIOS Writer's Guide
CAR	Cache As Ram
CRB	Customer Reference Board
FIT	Firmware Interface Table
FSP	Firmware Support Package

Acronym	Definition
FSP API	Firmware Support Package Interface
FW	Firmware
PCH	Platform Controller Hub
PMC	Power Management Controller
SBSP	System BSP
SMI	System Management Interrupt
SMM	System Management Mode
SPI	Serial Peripheral Interface
TSEG	Memory Reserved at the Top of Memory to be used as SMRAM
UPD	Updatable Product Data
IED	Intel Enhanced Debug
GTT	Graphics Translation Table
BDSM	Base Data Of Stolen Memory
PMRR	Protected Memory Range Reporting
IOT	Internal Observation Trace
MOT	Memory Observation Trace
DPR	DMA Protected Range
REMAP	Remapped Memory Area
TOLUD	Top of Low Usable Memory
TOUUD	Top of Upper Usable Memory

Chapter 2

FSP OVERVIEW

FSP Overview

2.1 Technical Overview

The *Intel® Firmware Support Package (FSP)* provides chipset and processor initialization in a format that can easily be incorporated into many existing boot loaders.

The FSP will perform the necessary initialization steps as documented in the BWG including initialization of the CPU, memory controller, chipset and certain bus interfaces, if necessary.

FSP is not a stand-alone boot loader; therefore it needs to be integrated into a host boot loader to carry out other boot loader functions, such as: initializing non-Intel components, conducting bus enumeration, and discovering devices in the system and all industry standard initialization.

The FSP binary can be integrated easily into many different boot loaders, such as Coreboot, EDKII etc. and also into the embedded OS directly.

Below are some required steps for the integration:

- **Customizing** The static FSP configuration parameters are part of the FSP binary and can be customized by external tools that will be provided by Intel.
- **Rebasing** The FSP is not Position Independent Code (PIC) and the whole FSP has to be rebased if it is placed at a location which is different from the preferred address during build process.
- **Placing** Once the FSP binary is ready for integration, the boot loader build process needs to be modified to place this FSP binary at the specific rebasing location identified above.
- **Interfacing** The boot loader needs to add code to setup the operating environment for the FSP, call the FSP with correct parameters and parse the FSP output to retrieve the necessary information returned by the FSP.

2.2 FSP Distribution Package

- The FSP distribution package contains the following:
 - FSP Binary
 - FSP Integration Guide
 - BSF Configuration File
 - Data Structure Header File
- The FSP configuration utility called BCT is available as a separate package. It can be downloaded from link mentioned in Section 1.3.

2.2.1 Package Layout

- **Docs (Auto generated)**
 - FSP_Integration_Guide.pdf
 - FSP_Integration_Guide.chm
 - **Include**
 - [FsptUpd.h](#), [FspmUpd.h](#) and [FspsUpd.h](#) (FSP UPD structure and related definitions)
 - [GpioSampleDef.h](#) (Sample enum definitions for Gpio table)
 - *FspBinPkg.dec (EDKII declaration file for package)
 - Fsp.bsf (BSF file for configuring the data using BCT tool)
 - Fsp.fd (FSP Binary)
-

Chapter 3

FSP INTEGRATION

3 FSP Integration

3.1 Assumptions Used in this Document

The FSP for this platform is built with a preferred base address given by [PcdFspAreaBaseAddress](#) and so the reference code provided in the document assumes that the FSP is placed at this base address during the final boot loader build. Users may rebase the FSP binary at a different location with Intel's Binary Configuration Tool (BCT) before integrating to the boot loader.

For other assumptions and conventions, please refer section 8 in the FSP External Architecture Specification version 2.0.

3.2 Boot Flow

Please refer Chapter 7 in the FSP External Architecture Specification version 2.0 for Boot flow chart.

3.3 FSP INFO Header

The FSP has an Information Header that provides critical information that is required by the bootloader to successfully interface with the FSP. The structure of the FSP Information Header is documented in the FSP External Architecture Specification version 2.0 with a HeaderRevision of 3.

3.4 FSP Image ID and Revision

FSP information header contains an Image ID field and an Image Revision field that provide the identification and revision information of the FSP binary. It is important to verify these fields while integrating the FSP as API parameters could change over different FSP IDs and revisions. All the FSP FV segments(FSP-T, FSP-M and FS↔P-S) must have same FSP Image ID and revision number, using FV segments with different revision numbers in a single FSP image is not valid. The FSP API parameters documented in this integration guide are applicable for the Image ID and Revision specified as below.

The FSP ImageId string in the FSP information header is given by [PcdFspImageIdString](#) and the ImageRevision field is given by [SiliconInitVersionMajor|Minor|FspVersionRevision|FspVersionBuild](#) (Ex:0x07020110).

3.5 FSP Global Data

FSP uses some amount of TempRam area to store FSP global data which contains some critical data like pointers to FSP information headers and UPD configuration regions, FSP/Bootloader stack pointers required for stack switching

etc. HPET Timer register(2) [PcdGlobalDataPointerAddress](#) is reserved to store address of this global data, and hence boot loader should not use this register for any other purpose. If TempRAM initialization is done by boot loader, then HPET has to be initialized to the base so that access to the register will work fine.

3.6 FSP APIs

This release of the FSP supports the all APIs required by the FSP External Architecture Specification version 2.0. The FSP information header contains the address offset for these APIs. Register usage is described in the FSP External Architecture Specification version 2.0. Any usage not described by the specification is described in the individual sections below.

The below sections will highlight any changes that are specific to this FSP release.

3.6.1 TempRamInit API

Please refer Chapter 8.5 in the FSP External Architecture Specification version 2.0 for complete details including the prototype, parameters and return value details for this API.

TempRamInit does basic early initialization primarily setting up temporary RAM using cache. It returns ECX pointing to beginning of temporary memory and EDX pointing to end of temporary memory + 1. The total temporary ram currently available is given by [PcdTemporaryRamSize](#) starting from the base address of [PcdTemporaryRamBase](#). Out of total temporary memory available, last [PcdFspReservedBufferSize](#) bytes of space reserved by FSP for TempRamInit if temporary RAM initialization is done by FSP and remaining space from **TemporaryRamBase**(ECX) to **TemporaryRamBase+TemporaryRamSize-FspReservedBufferSize** (EDX) is available for both bootloader and FSP binary.

TempRamInit** also sets up the code caching of the region passed CodeCacheBase and CodeCacheLength, which are input parameters to TempRamInitApi. if 0 is passed in for CodeCacheBase, the base used will be 4 GB - 1 - length to be code cached instead of starting from CodeCacheBase.

Note

: when programming MTRR CodeCacheLength will be reduced, if SKU LLC size is smaller than the requested.

It is a requirement for Firmware to have Firmware Interface Table (FIT), which contains pointers to each microcode update. The microcode update is loaded for all logical processors before reset vector. If more than microcode update for the CPU is present, the microcode update with the latest revision is loaded.

FSPT_UPD.MicrocodeRegionBase** and **FSPT_UPD.MicrocodeRegionLength** are input parameters to TempRamInit API. If these values are 0, FSP will not attempt to update microcode. If a region is passed, then if a newer microcode update revision is in the region, it will be loaded by the FSP.

MTRRs are programmed to the default values to have the following memory map:

Memory range	Cache Attribute
0xFE000000 - 0x00040000	Write back
CodeCacheBase - CodeCacheLength	Write protect

3.6.2 FspMemoryInit API

Please refer to Chapter 8.6 in the FSP external Architecture Specification version 2.0 for the prototype, parameters and return value details for this API.

The **FspmUpdPtr** is pointer to **FSPM_UPD** structure which is described in header file [FspmUpd.h](#).

Boot Loader must pass valid CAR region for FSP through **FSPM_UPD.FspmArchUpd.StackBase** and **FSPM_UPD.FspmArchUpd.StackSize** UPDs.

Starting with v2.1 specification FSP will run on top of the stack provided by the bootloader instead of establishing a

separate stack.

Below are the heap and stack requirement for FSP v2.1:

HOB Heap requirement:

HOB Heap	UPD	Setting
Base	FSPM_UPD.FspmArchUpd.StackBase	Any non-conflict CAR region (0xFE17F00 as default)
Size	FSPM_UPD.FspmArchUpd.StackSize	at least 64KB

Stack requirement: FSP would start stack usage from current stack pointer. The minimum stack size requirement for FSP-M is 128kb. Bootloader needs to ensure the stack size allocated meets its requirement and also accommodate FSP-M minimum stack size requirement.

The base address of HECI device (Bus 0, Device 22, Function 0) is required to be initialized prior to perform FspMemoryInit flow. The default address is programmed to 0xFED1A000.

Calculate memory map determining memory regions TSEG, IED, GTT, BDSM, ME stolen, Uncore PMRR, IOT, MOT, DPR, REMAP, TOLUD, TOUUD. Programming will be done at a different time.

3.6.3 TempRamExit API

Please refer to Chapter 8.7 in the FSP external Architecture Specification version 2.0 for the prototype, parameters and return value details for this API.

If Boot Loader initializes the Temporary RAM (CAR) and skip calling **TempRamInit API**, it is expected that boot-loader must skip calling this API and boot-loader will tear down the temporary memory area setup in the cache and bring the cache to normal mode of operation.

This revision of FSP doesn't have any fields/structure to pass as parameter for this API. Pass Null for *TempRamExitParamPtr*.

At the end of *TempRamExit* the original code and data caching are disabled. FSP will reconfigure all MTRRs as described in the table below for performance optimization. If the boot loader wish to reconfigure the MTRRs differently, it can be overridden immediately after this API call.

Memory range	Cache Attribute
0xFF000000 - 0xFFFFFFFF (Flash region)	Write protect
0x00000000 - 0x0009FFFF	Write back
0x000C0000 - Top of Low Memory	Write back
xxxx - xxxx	x *Note1
0x10000000 - Top of High Memory	Write back *Note2

Note1: Certain silicon feature required specific cache type of its own memory and will be configured by FSP accordingly when feature enabled.

Note2: In some cases MTRR might not be enough to cover all desired regions, in this case memory regions need to be adjusted for better alignment (e.g., adjust MmioSize or MmioSizeAdjustment UPD) Covering flash region and above 4GB memory is another case which may consume more MTRRs, when there is no enough MTRR available FSP will only cover above 4GB memory partially. In this case boot loader should optimize MTRR in late phase without flash coverage before booting OS.

3.6.4 FspSiliconInit API

Please refer to Chapter 8.8 in the FSP external Architecture Specification version 2.0 for the prototype, parameters and return value details for this API.

The *FspUpdPtr* is pointer to **FSPS_UPD** structure which is described in header file **FspUpd.h**.

It is expected that boot loader will program MTRRs for SBSP as needed after **TempRamExit** but before entering **FspSiliconInit**. If MTRRs are not programmed properly, the boot performance might be impacted.

The region of 0x5_8000 - 0x5_8FFF is used by FspSiliconInit for starting APs. If this data is important to boot loader, then boot loader needs to preserve it before calling FspSiliconInit.

It is a requirement for boot loader to have Firmware Interface Table (FIT), which contains pointers to each microcode. The microcode is loaded for all cores before reset vector. If more than one microcode update for the CPU is present, the latest revision is loaded.

MicrocodeRegionBase and MicrocodeRegionLength are both input parameters to TempRamInit and UPD for SiliconInit API. UPD has priority and will be searched for a later revision than TempRamInit. If MicrocodeRegionBase and MicrocodeRegionLength values are 0, FSP will not attempt to update the microcode. If a microcode region is passed, and if a later revision of microcode is present in this region, FSP will load it.

FSP initializes PCH audio including selecting HD Audio verb table and initializes Codec.

PCH required initialization is done for the following HECI, USB, HSIO, Integrated Sensor Hub, Camera, PCI Express, Vt-d.

FSP initializes CPU features: XD, VMX, AES, IED, HDC, x(2)Apic, Intel® Processor Trace, Three strike counter, Machine check, Cache pre-fetchers, Core PMRR, Power management.

Initializes HECI, DMI, Internal Graphics. Publish EFI_PEI_GRAPHICS_INFO_HOB during normal boot but this HOB will not be published during S3 resume as FSP will not launch the PEI Graphics PEIM during S3 resume.

Programs SA Bars: MchBar, DmiBar, EpBar, GdxcBar, EDRAM (if supported). Please refer to section 2.8 (MemoryMap) for the corresponding Bar values. GttMmadr (0xDF000000) and GmAdr(0xC0000000) are temporarily programmed and cleared after use in FSP.

3.6.5 NotifyPhase API

Please refer Chapter 8.9 in the FSP External Architecture Specification version 2.0 for the prototype, parameters and return value details for this API.

3.6.5.1 PostPciEnumeration Notification

This phase *EnumInitPhaseAfterPciEnumeration* is to be called after PCI enumeration but before execution of third party code such as option ROMs. Currently, nothing is done in this phase, but in the future updates, programming may be done in this phase.

3.6.5.2 ReadyToBoot Notification

This phase *EnumInitPhaseReadyToBoot* is to be called before giving control to boot. It includes some final initialization steps recommended by the BWG, including power management settings, Send ME Message EOP (End of Post).

3.6.5.3 EndOfFirmware Notification

This phase *EnumInitEndOfFirmware* is to be called before the firmware/preboot environment transfers management of all system resources to the OS or next level execution environment. It includes final locking of chipset registers

3.7 Memory Map

Below diagram represents the memory map allocated by FSP including the FSP specific regions.

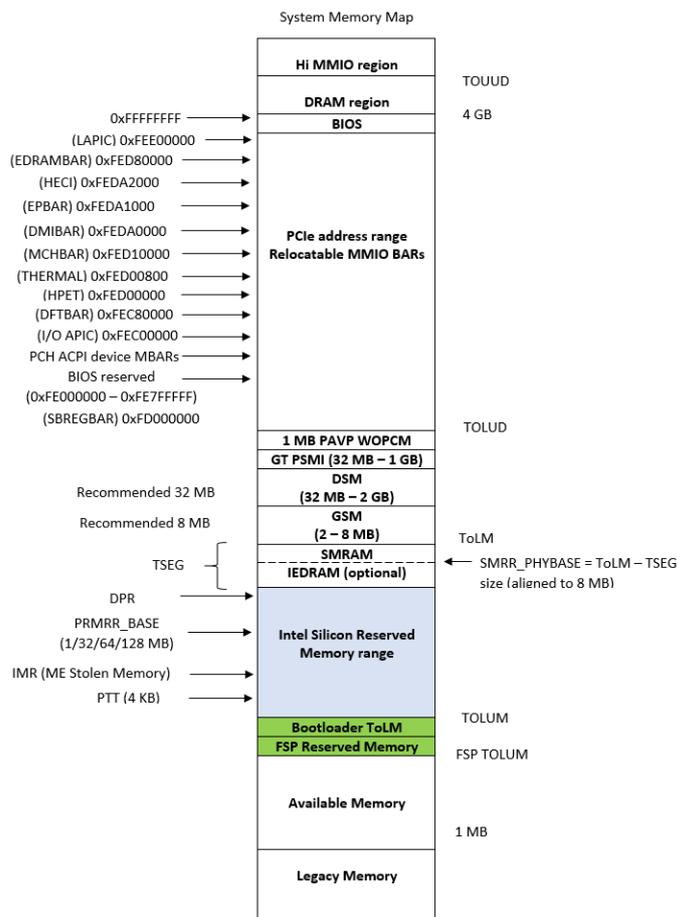


Figure 3.1: System Memory Map

/**

Chapter 4

FSP PORTING RECOMMENDATION

4 FSP Porting Recommendation

Here listed some notes or recommendation when porting with FSP.

4.1 Locking PAM register

FSP 2.0 introduced EndOfFirmware Notify phase callback which is a recommended place for locking PAM registers so FSP by default implemented this way. If it is still too early to lock PAM registers then the PAM locking code inside FSP can be disabled by UPD -> [FSP_S_TEST_CONFIG](#) -> SkipPamLock or SA policy -> [_SI_PREMEM_POLICY_STRUCT](#) -> SA_MISC_PEI_CONFIG -> SkipPamLock, and platform or wrapper code should do the PAM locking right before booting OS (so do it outside FSP instead) by programming one PCI config space register as below.

This PAM locking step has to been applied in all boot paths including S3 resume. To lock PAM regsiter:

```
MmioOr32 (B0: D0: F0: Register 0x80, BIT0)
```

4.2 Locking SMRAM register

Since SMRAM locking is recommended to be locked before any 3rd party OpROM execution and highly depending on platform code implementation, the FSP code by default will not lock it. The platform or FSP Wrapper code should lock SMRAM by below programming step before any 3rd party OpRom execution (and should be locked in S3 resume right before OS waking vector).

```
PciOr8 (B0: D0: F0: Register 0x88, BIT4); Note: it must be programmed by CF8/CFC Standard PCI access mechanism. (MMIO access will not work)
```

4.3 Locking SMI register

Global SMI bit is recommended to be locked before any 3rd party OpROM execution and highly depending on platform code implementation after SMM configuration. FSP by default will not lock it. Boot loader is responsible for locking below regsiters after SMM configuration. Set AcpiBase + 0x30[0] to 1b to enable global SMI. Set PMC PCI offset A0h[4] = 1b to lock SMI.

4.4 Verify below settings are correct for your platforms

PMC PciCfgSpace is not PCI compliant.FSP will hide the PMC controller to avoid external software or OS from corrupting the BAR addresses. FSP will program the PMC controller IO and MMIO BAR's with below addresses. Please use this addresss in the wrapper code instead of reading from PMC controller.

Register	Values
ABASE	0x1800
PWRMBASE	0xFE000000
PCIEXBAR_BASE_ADDRESS	0xE0000000

Note

:

- Boot Loader can use different value for PCIEXBAR_BASE_ADDRESS either by modifying the UPD (under FSP-T) or by overriding the PCIEXBAR (B0:D0:F0:R60h) before calling FspMemoryInit Api.
- Boot Loader should avoid using conflicting address when reprogramming PCIEXBAR_BASE_ADDRESS than the recommended one.

4.5 FSP_STATUS_RESET_REQUIRED

As per FSP External Architecture Specification version 2.0, Any reset required in the FSP flow will be reported as return status FSP_STATUS_RESET_REQUIREDx by the API. It is the bootloader responsibility to reset the system according to the reset type requested.

Below table specifies the return status returned by FSP API and the requested reset type.

FSP_STATUS_RESET_REQUIRED Code	Reset Type requested
0x40000001	Cold Reset
0x40000002	Warm Reset
0x40000003	Global Reset - Puts the system to Global reset through Heci or Full Reset through PCH
0x40000004	Reserved
0x40000005	Reserved
0x40000006	Reserved
0x40000007	Reserved
0x40000008	Reserved

Chapter 5

UPD PORTING GUIDE

5 UPD porting guide

UPD porting guide for recommendation values:

UPD	Dependency	Description	Value
CstateLatencyControl1Irtl	Server platform	Server platform should has different setting	0x6B
PchPcieHsioRxSetCtleEnable	Board design	Different board requires different value	tune
PchPcieHsioRxSetCtle	Board design	Different board requires different value	tune
PchSataHsioRxGen3EqBoostMag↔ Enable	Board design	Different board requires different value	tune
PchSataHsioRxGen3EqBoostMag	Board design	Different board requires different value	tune
PchSataHsioTxGen1DownscaleAmp↔ Enable	Board design	Different board requires different value	tune
PchSataHsioTxGen1DownscaleAmp	Board design	Different board requires different value	tune
PchSataHsioTxGen2DownscaleAmp↔ Enable	Board design	Different board requires different value	tune
PchSataHsioTxGen2DownscaleAmp	Board design	Different board requires different value	tune
PchNumRsvdSmbusAddresses	Board design	Different board requires different value	tune
RsvdSmbusAddressTablePtr	Board design	Different board requires different value	tune
BiosSize	Board design	Different board requires different value	tune

Chapter 6

FSP OUTPUT

6 FSP Output

The FSP builds a series of data structures called the Hand-Off-Blocks (HOBs) as it progresses through initializing the silicon.

Please refer to the Platform Initialization (PI) Specification - Volume 3: Shared Architectural Elements specification for PI Architectural HOBs. Please refer Chapter 9 in the FSP External Architecture Specification version 2.0 for details about FSP Architectural HOBs.

Below section describe the HOBs not covered in the above two specifications.

6.1 SMRAM Resource Descriptor HOB

The FSP will report the system SMRAM T-SEG range through a generic resource HOB if T-SEG is enabled. The owner field of the HOB identifies the owner as T-SEG.

```
#define FSP_HOB_RESOURCE_OWNER_TSEG_GUID \
{ 0xd038747c, 0xd00c, 0x4980, { 0xb3, 0x19, 0x49, 0x01, 0x99, 0xa4, 0x7d, 0x55 } }
```

6.2 SMBIOS INFO HOB

The FSP will report the SMBIOS through a HOB with below GUID. This information can be consumed by the bootloader to produce the SMBIOS tables. These structures are included as part of MemInfoHob.h , SmbiosCacheInfoHob.h, SmbiosProcessorInfoHob.h & FirmwareVersionInfoHob.h

```
#define SI_MEMORY_INFO_DATA_HOB_GUID \
{ 0x9b2071d4, 0xb054, 0x4e0c, { 0x8d, 0x09, 0x11, 0xcf, 0x8b, 0x9f, 0x03, 0x23 } };

typedef struct {
    MrcDimmStatus Status;           ///< See MrcDimmStatus for the definition of this field.
    UINT8 DimmId;
    UINT32 DimmCapacity;           ///< DIMM size in MBytes.
    UINT16 MfgId;
    UINT8 ModulePartNum[20];       ///< Module part number for DDR3 is 18 bytes however for DDR4
    20 bytes as per JEDEC Spec, so reserving 20 bytes
    UINT8 RankInDimm;              ///< The number of ranks in this DIMM.
    UINT8 SpdDramDeviceType;       ///< Save SPD DramDeviceType information needed for SMBIOS
    structure creation.
    UINT8 SpdModuleType;           ///< Save SPD ModuleType information needed for SMBIOS
    structure creation.
    UINT8 SpdModuleMemoryBusWidth; ///< Save SPD ModuleMemoryBusWidth information needed for
    SMBIOS structure creation.
    UINT8 SpdSave[MAX_SPD_SAVE_DATA]; ///< Save SPD Manufacturing information needed for SMBIOS
    structure creation.
} DIMM_INFO;

typedef struct {
    UINT8 Status;                  ///< Indicates whether this channel should be used.
    UINT8 ChannelId;
```

```

    UINT8          DimmCount;                ///< Number of valid DIMMs that exist in the channel.
    MRC_CH_TIMING Timing[MAX_PROFILE];      ///< The channel timing values.
    DIMM_INFO      Dimm[MAX_DIMM];          ///< Save the DIMM output characteristics.
} CHANNEL_INFO;

typedef struct {
    UINT8          Status;                   ///< Indicates whether this controller should be used.
    UINT16         DeviceId;                 ///< The PCI device id of this memory controller.
    UINT8          RevisionId;               ///< The PCI revision id of this memory controller.
    UINT8          ChannelCount;             ///< Number of valid channels that exist on the controller.
    CHANNEL_INFO   Channel[MAX_CH];         ///< The following are channel level definitions.
} CONTROLLER_INFO;

typedef struct {
    EFI_HOB_GUID_TYPE EfiHobGuidType;
    UINT8             Revision;
    UINT16            DataWidth;
    ///< As defined in SMBIOS 3.0 spec
    ///< Section 7.18.2 and Table 75
    UINT8             DdrType;               ///< DDR type: DDR3, DDR4, or LPDDR3
    UINT32            Frequency;            ///< The system's common memory controller frequency in MT/s.
    ///< As defined in SMBIOS 3.0 spec
    ///< Section 7.17.3 and Table 72
    UINT8             ErrorCorrectionType;

    SiMrcVersion     Version;
    UINT32            FreqMax;
    BOOLEAN           EccSupport;
    UINT8             MemoryProfile;
    UINT32            TotalPhysicalMemorySize;
    BOOLEAN           XmpProfileEnable;
    UINT8             Ratio;
    UINT8             RefClk;
    UINT32            VddVoltage[MAX_PROFILE];
    CONTROLLER_INFO   Controller[MAX_NODE];
} MEMORY_INFO_DATA_HOB;

#define SI_MEMORY_PLATFORM_DATA_HOB \
    { 0x6210d62f, 0x418d, 0x4999, { 0xa2, 0x45, 0x22, 0x10, 0x0a, 0x5d, 0xea, 0x44 } }

typedef struct {
    UINT8             Revision;
    UINT8             Reserved[3];
    UINT32            BootMode;
    UINT32            TsegSize;
    UINT32            TsegBase;
    UINT32            PrmrrSize;
    UINT32            PrmrrBase;
    UINT32            GttBase;
    UINT32            MmioSize;
    UINT32            PciEBaseAddress;
} MEMORY_PLATFORM_DATA;

typedef struct {
    EFI_HOB_GUID_TYPE EfiHobGuidType;
    MEMORY_PLATFORM_DATA Data;
    UINT8             *Buffer;
} MEMORY_PLATFORM_DATA_HOB;

#define SMBIOS_CACHE_INFO_HOB_GUID \
    { 0xd805b74e, 0x1460, 0x4755, {0xbb, 0x36, 0x1e, 0x8c, 0x8a, 0xd6, 0x78, 0xd7} }

///<
///< SMBIOS Cache Info HOB Structure
///<
typedef struct {
    UINT16           ProcessorSocketNumber;
    UINT16           NumberOfCacheLevels;    ///< Based on Number of Cache Types L1/L2/L3
    UINT8            SocketDesignationStrIndex; ///< String Index in the string Buffer. Example "L1-CACHE"
    UINT16           CacheConfiguration;    ///< Format defined in SMBIOS Spec v3.0 Section7.8 Table36
    UINT16           MaxCacheSize;          ///< Format defined in SMBIOS Spec v3.0 Section7.8.1
    UINT16           InstalledSize;          ///< Format defined in SMBIOS Spec v3.0 Section7.8.1
    UINT16           SupportedSramType;      ///< Format defined in SMBIOS Spec v3.0 Section7.8.2
    UINT16           CurrentSramType;        ///< Format defined in SMBIOS Spec v3.0 Section7.8.2
    UINT8            CacheSpeed;             ///< Cache Speed in nanoseconds. 0 if speed is unknown.
    UINT8            ErrorCorrectionType;    ///< ENUM Format defined in SMBIOS Spec v3.0 Section 7.8.3
    UINT8            SystemCacheType;       ///< ENUM Format defined in SMBIOS Spec v3.0 Section 7.8.4
    UINT8            Associativity;         ///< ENUM Format defined in SMBIOS Spec v3.0 Section 7.8.5
    ///

```

```

///
typedef struct {
    UINT16    TotalNumberOfSockets;
    UINT16    CurrentSocketNumber;
    UINT8     ProcessorType;          ///< ENUM defined in SMBIOS Spec v3.0 Section 7.5.1
    ///< This info is used for both ProcessorFamily and ProcessorFamily2 fields
    ///< See ENUM defined in SMBIOS Spec v3.0 Section 7.5.2
    UINT16    ProcessorFamily;
    UINT8     ProcessorManufacturerStrIndex; ///< Index of the String in the String Buffer
    UINT64    ProcessorId;                ///< ENUM defined in SMBIOS Spec v3.0 Section 7.5.3
    UINT8     ProcessorVersionStrIndex;   ///< Index of the String in the String Buffer
    UINT8     Voltage;                    ///< Format defined in SMBIOS Spec v3.0 Section 7.5.4
    UINT16    ExternalClockInMHz;        ///< External Clock Frequency. Set to 0 if unknown.
    UINT16    CurrentSpeedInMHz;         ///< Snapshot of current processor speed during boot
    UINT8     Status;                    ///< Format defined in the SMBIOS Spec v3.0 Table 21
    UINT8     ProcessorUpgrade;          ///< ENUM defined in SMBIOS Spec v3.0 Section 7.5.5
    ///< This info is used for both CoreCount & CoreCount2 fields
    ///< See detailed description in SMBIOS Spec v3.0 Section 7.5.6
    UINT16    CoreCount;
    ///< This info is used for both CoreEnabled & CoreEnabled2 fields
    ///< See detailed description in SMBIOS Spec v3.0 Section 7.5.7
    UINT16    EnabledCoreCount;
    ///< This info is used for both ThreadCount & ThreadCount2 fields
    ///< See detailed description in SMBIOS Spec v3.0 Section 7.5.8
    UINT16    ThreadCount;
    UINT16    ProcessorCharacteristics;   ///< Format defined in SMBIOS Spec v3.0 Section 7.5.9
    ///< String Buffer - each string terminated by NULL "0x00"
    ///< String buffer terminated by double NULL "0x0000"
} SMBIOS_PROCESSOR_INFO;

#define SMBIOS_FIRMWARE_VERSION_INFO_HOB_GUID \
    { 0x798e722e, 0x15b2, 0x4e13, { 0x8a, 0xe9, 0x6b, 0xa3, 0x0f, 0xf7, 0xf1, 0x67 } }

///
/// Firmware Version Structure
///
typedef struct {
    UINT8     MajorVersion;
    UINT8     MinorVersion;
    UINT8     Revision;
    UINT16    BuildNumber;
} FIRMWARE_VERSION;

///
/// Firmware Version Information Structure
///
typedef struct {
    UINT8     ComponentNameIndex;        ///< Offset 0   Index of Component Name
    UINT8     VersionStringIndex;        ///< Offset 1   Index of Version String
    FIRMWARE_VERSION Version;            ///< Offset 2-6 Firmware version
} FIRMWARE_VERSION_INFO;

///
/// The Smbios structure header.
///
typedef struct {
    UINT8     Type;
    UINT8     Length;
    UINT16    Handle;
} SMBIOS_STRUCTURE;

///
/// Firmware Version Information HOB Structure
///
typedef struct {
    EFI_HOB_GUID_TYPE    Header;          ///< Offset 0-23 The header of FVI HOB
    SMBIOS_STRUCTURE     SmbiosData;      ///< Offset 24-27 The SMBIOS header of FVI HOB
    UINT8                Count;           ///< Offset 28   Number of FVI elements
    included.
} FIRMWARE_VERSION_INFO_HOB;

///
/// FIRMWARE_VERSION_INFO structures followed by the null terminated string buffer
///
} FIRMWARE_VERSION_INFO_HOB;

```

6.3 CHIPSETINIT INFO HOB

The FSP will report the ChipsetInit CRC through a HOB with below GUID. This information can be consumed by the bootloader to check if ChipsetInit CRC is matched between BIOS and ME. These structures are included as part of [FspUpd.h](#)

```

#define CHIPSETINIT_INFO_HOB_GUID \
    { 0xc1392859, 0x1f65, 0x446e, { 0xb3, 0xf5, 0x84, 0x35, 0xfc, 0xc7, 0xd1, 0xc4 } }

```

```

///
/// The ChipsetInit Info structure provides the information of ME ChipsetInit CRC and BIOS ChipsetInit CRC.
///
typedef struct {
    UINT8          Revision;
    UINT8          Rsvd[3];
    UINT16         MeChipInitCrc;
    UINT16         BiosChipInitCrc;
} CHIPSET_INIT_INFO;

```

6.4 HOB USAGE INFO HOB

The FSP will report the Hob memory usage through a HOB with below GUID. This information can be consumed by the bootloader to check how many the temporary ram left.

```

#define HOB_USAGE_DATA_HOB_GUID \
{0xc764a821, 0xec41, 0x450d, { 0x9c, 0x99, 0x27, 0x20, 0xfc, 0x7c, 0xe1, 0xf6 }}

typedef struct {
    EFI_PHYSICAL_ADDRESS EfiMemoryTop;
    EFI_PHYSICAL_ADDRESS EfiMemoryBottom;
    EFI_PHYSICAL_ADDRESS EfiFreeMemoryTop;
    EFI_PHYSICAL_ADDRESS EfiFreeMemoryBottom;
    UINTN                 FreeMemory;
} HOB_USAGE_DATA_HOB;

```

6.5 FSP_ERROR_INFO_HOB

In the case of an error occurring during the execution of the FSP, the FSP may produce this HOB which describes the error in more detail.

```

#define FSP_ERROR_INFO_HOB_GUID \
{0x611e6a88, 0xad7, 0x4301, { 0x93, 0xff, 0xe4, 0x73, 0x04, 0xb4, 0x3d, 0xa6 }}

typedef struct {
    EFI_HOB_GUID_TYPE      GuidHob;
    EFI_STATUS_CODE_TYPE   Type;
    EFI_STATUS_CODE_VALUE  Value;
    UINT32                 Instance;
    EFI_GUID               CallerId;
    EFI_GUID               ErrorType;
    UINT32                 Status;
} FSP_ERROR_INFO_HOB;

```

Implemented CallerId	Description
{0x1f4dc7e9, 0x26ca, 0x4336, {0x8c, 0xe3, 0x39, 0x31, 0x03, 0xb5, 0xf3, 0xd7}}	ME
{0x98230916, 0xe632, 0x49ff, {0x81, 0x81, 0x55, 0xce, 0xe5, 0x10, 0x36, 0x89}}	System Agent
{0x5a47c211, 0x642f, 0x4f92, {0x9c, 0xb3, 0x7f, 0xeb, 0x93, 0xda, 0xdd, 0xba}}	MRC

Implemented ErrorType	Description
{0x948585c4, 0x76a4, 0x45bb, {0xbe, 0x6c, 0x39, 0x61, 0xc3, 0xab, 0xde, 0x15}}	ME EOP failure
{0x8106a5cc, 0x30ba, 0x41cf, {0xa1, 0x78, 0x63, 0x38, 0x91, 0x11, 0xae, 0xb2}}	SA PEI GOP Init failure
{0x348cc7fe, 0x1e9a, 0x4c7a, {0x86, 0x28, 0xae, 0x48, 0x5b, 0x42, 0x10, 0xf0}}	SA PEI GOP GetMode failure
{0x5de1c071, 0x2c9c, 0x4a53, {0x80, 0x21, 0x4e, 0x80, 0xd2, 0x5d, 0x44, 0xa8}}	MRC training failure

Chapter 7

FSP POSTCODE


7 FSP PostCode

The FSP outputs 16 bit postcode to indicate which API and in which module the execution is happening.

Bit Range	Description
Bit15 - Bit12 (X)	used to indicate the phase/api under which the code is executing
Bit11 - Bit8 (Y)	used to indicate the module
Bit7 (ZZ bit 7)	reserved for error
Bit6 - Bit0 (ZZ)	individual codes

7.1 PostCode Info

Below diagram represents the 16 bit PostCode usage in FSP.

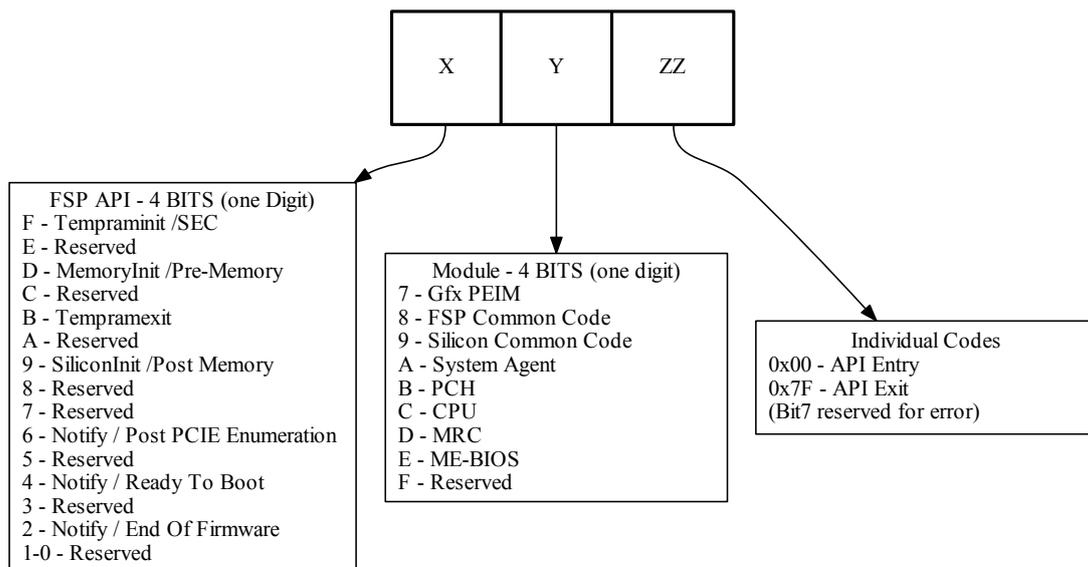

7.1.1 TempRamInit API Status Codes (0xFxxx)

PostCode	Module	Description
0x0000	FSP	TempRamInit API Entry (The change in upper byte is due to not enabling of the Port81 early in the boot)
0x007F	FSP	TempRamInit API Exit

7.1.2 FspMemoryInit API Status Codes (0xDxxx)

PostCode	Module	Description
0xD800	FSP	FspMemoryInit API Entry
0xD87F	FSP	FSpMemoryInit API Exit
0xDA00	SA	Pre-Mem Salnit Entry
0xDA02	SA	OverrideDev0Did Start
0xDA04	SA	OverrideDev2Did Start
0xDA06	SA	Programming SA Bars
0xDA08	SA	Install SA HOBs
0xDA0A	SA	Reporting SA PCIe code version
0xDA0C	SA	SaSvInit Start
0xDA10	SA	Initializing DMI
0xDA15	SA	Initialize TCSS PreMem
0xDA1F	SA	Initializing DMI/OPI Max Payload Size
0xDA20	SA	Initializing SwitchableGraphics
0xDA30	SA	Initializing SA PCIe
0xDA3F	SA	Programming PEG credit values Start
0xDA40	SA	Initializing DMI Tc/Vc mapping
0xDA42	SA	CheckOffboardPcieVga
0xDA44	SA	CheckAndInitializePegVga
0xDA50	SA	Initializing Graphics
0xDA52	SA	Initializing System Agent Overclocking
0xDA7F	SA	Pre-Mem Salnit Exit
0xDB00	PCH	Pre-Mem PchInit Entry
0xDB02	PCH	Pre-Mem Disable PCH fused controllers
0xDB15	PCH	Pre-Mem SMBUS configuration
0xDB48	PCH	Pre-Mem PchOnPolicyInstalled Entry
0xDB49	PCH	Pre-Mem Program HSIO
0xDB4A	PCH	Pre-Mem DCI configuration
0xDB4C	PCH	Pre-Mem Host DCI enabled
0xDB4D	PCH	Pre-Mem Trace Hub - Early configuration
0xDB4E	PCH	Pre-Mem Trace Hub - Device disabled
0xDB4F	PCH	Pre-Mem TraceHub - Programming MSR
0xDB50	PCH	Pre-Mem Trace Hub - Power gating configuration
0xDB51	PCH	Pre-Mem Trace Hub - Power gating Trace Hub device and locking HSWPGCR1 register
0xDB52	PCH	Pre-Mem Initialize HPET timer
0xDB55	PCH	Pre-Mem PchOnPolicyInstalled Exit
0xDB7F	PCH	Pre-Mem PchInit Exit
0xDC00	CPU	CPU Pre-Mem Entry
0xDC0F	CPU	CpuAddPreMemConfigBlocks Done
0xDC20	CPU	CpuOnPolicyInstalled Start
0xDC2F	CPU	XmmInit Start
0xDC3F	CPU	TxtInit Start
0xDC4F	CPU	Init CPU Straps

PostCode	Module	Description
0xDC5F	CPU	Init Overclocking
0xDC6F	CPU	CPU Pre-Mem Exit
0x**55	SA	MRC_MEM_INIT_DONE
0x**D5	SA	MRC_MEM_INIT_DONE_WITH_ERRORS
0xDD00	SA	MRC_INITIALIZATION_START
0xDD10	SA	MRC_CMD_PLOT_2D
0xDD1B	SA	MRC_FAST_BOOT_PERMITTED
0xDD1C	SA	MRC_RESTORE_NON_TRAINING
0xDD1D	SA	MRC_PRINT_INPUT_PARAMS
0xDD1E	SA	MRC_SET_OVERRIDES_PSPD
0xDD20	SA	MRC_SPD_PROCESSING
0xDD21	SA	MRC_SET_OVERRIDES
0xDD22	SA	MRC_MC_CAPABILITY
0xDD23	SA	MRC_MC_CONFIG
0xDD24	SA	MRC_MC_MEMORY_MAP
0xDD25	SA	MRC_JEDEC_INIT_LPDDR3
0xDD26	SA	MRC_RESET_SEQUENCE
0xDD27	SA	MRC_PRE_TRAINING
0xDD28	SA	MRC_EARLY_COMMAND
0xDD29	SA	MRC_SENSE_AMP_OFFSET
0xDD2A	SA	MRC_READ_MPR
0xDD2B	SA	MRC_RECEIVE_ENABLE
0xDD2C	SA	MRC_JEDEC_WRITE_LEVELING
0xDD2D	SA	MRC_LPDDR_LATENCY_SET_B
0xDD2E	SA	MRC_WRITE_TIMING_1D
0xDD2F	SA	MRC_READ_TIMING_1D
0xDD30	SA	MRC_DIMM_ODT
0xDD31	SA	MRC_EARLY_WRITE_TIMING_2D
0xDD32	SA	MRC_WRITE_DS
0xDD33	SA	MRC_WRITE_EQ
0xDD34	SA	MRC_EARLY_READ_TIMING_2D
0xDD35	SA	MRC_READ_ODT
0xDD36	SA	MRC_READ_EQ
0xDD37	SA	MRC_READ_AMP_POWER
0xDD38	SA	MRC_WRITE_TIMING_2D
0xDD39	SA	MRC_READ_TIMING_2D
0xDD3A	SA	MRC_CMD_VREF
0xDD3B	SA	MRC_WRITE_VREF_2D
0xDD3C	SA	MRC_READ_VREF_2D
0xDD3D	SA	MRC_POST_TRAINING
0xDD3E	SA	MRC_LATE_COMMAND
0xDD3F	SA	MRC_ROUND_TRIP_LAT
0xDD40	SA	MRC_TURN_AROUND
0xDD41	SA	MRC_CMP_OPT
0xDD42	SA	MRC_SAVE_MC_VALUES
0xDD43	SA	MRC_RESTORE_TRAINING
0xDD44	SA	MRC_RMT_TOOL
0xDD45	SA	MRC_WRITE_SR
0xDD46	SA	MRC_DIMM_RON
0xDD47	SA	MRC_RCVEN_TIMING_1D
0xDD48	SA	MRC_MR_FILL

PostCode	Module	Description
0xDD49	SA	MRC_PWR_MTR
0xDD4A	SA	MRC_DDR4_MAPPING
0xDD4B	SA	MRC_WRITE_VOLTAGE_1D
0xDD4C	SA	MRC_EARLY_RDMPR_TIMING_2D
0xDD4D	SA	MRC_FORCE_OLTM
0xDD50	SA	MRC_MC_ACTIVATE
0xDD51	SA	MRC_RH_PREVENTION
0xDD52	SA	MRC_GET_MRC_DATA
0xDD53	SA	Reserved
0xDD58	SA	MRC_RETRAIN_CHECK
0xDD5A	SA	MRC_SA_GV_SWITCH
0xDD5B	SA	MRC_ALIAS_CHECK
0xDD5C	SA	MRC_ECC_CLEAN_START
0xDD5D	SA	MRC_DONE
0xDD5F	SA	MRC_CPGC_MEMORY_TEST
0xDD60	SA	MRC_TXT_ALIAS_CHECK
0xDD61	SA	MRC_ENG_PERF_GAIN
0xDD68	SA	MRC_MEMORY_TEST
0xDD69	SA	MRC_FILL_RMT_STRUCTURE
0xDD70	SA	MRC_SELF_REFRESH_EXIT
0xDD71	SA	MRC_NORMAL_MODE
0xDD7D	SA	MRC_SSA_PRE_STOP_POINT
0xDD7F	SA	MRC_SSA_STOP_POINT, MRC_INITIALIZATION_END
0xDD90	SA	MRC_CMD_PLOT_2D_ERROR
0xDD9B	SA	MRC_FAST_BOOT_PERMITTED_ERROR
0xDD9C	SA	MRC_RESTORE_NON_TRAINING_ERROR
0xDD9D	SA	MRC_PRINT_INPUT_PARAMS_ERROR
0xDD9E	SA	MRC_SET_OVERRIDES_PSPD_ERROR
0xDDA0	SA	MRC_SPD_PROCESSING_ERROR
0xDDA1	SA	MRC_SET_OVERRIDES_ERROR
0xDDA2	SA	MRC_MC_CAPABILITY_ERROR
0xDDA3	SA	MRC_MC_CONFIG_ERROR
0xDDA4	SA	MRC_MC_MEMORY_MAP_ERROR
0xDDA5	SA	MRC_JEDEC_INIT_LPDDR3_ERROR
0xDDA6	SA	MRC_RESET_ERROR
0xDDA7	SA	MRC_PRE_TRAINING_ERROR
0xDDA8	SA	MRC_EARLY_COMMAND_ERROR
0xDDA9	SA	MRC_SENSE_AMP_OFFSET_ERROR
0xDDAA	SA	MRC_READ_MPR_ERROR
0xDDAB	SA	MRC_RECEIVE_ENABLE_ERROR
0xDDAC	SA	MRC_JEDEC_WRITE_LEVELING_ERROR
0xDDAD	SA	MRC_LPDDR_LATENCY_SET_B_ERROR
0xDDAE	SA	MRC_WRITE_TIMING_1D_ERROR
0xDDAF	SA	MRC_READ_TIMING_1D_ERROR
0xDDB0	SA	MRC_DIMM_ODT_ERROR
0xDDB1	SA	MRC_EARLY_WRITE_TIMING_ERROR
0xDDB2	SA	MRC_WRITE_DS_ERROR
0xDDB3	SA	MRC_WRITE_EQ_ERROR
0xDDB4	SA	MRC_EARLY_READ_TIMING_ERROR
0xDDB5	SA	MRC_READ_ODT_ERROR
0xDDB6	SA	MRC_READ_EQ_ERROR

PostCode	Module	Description
0xDDB7	SA	MRC_READ_AMP_POWER_ERROR
0xDDB8	SA	MRC_WRITE_TIMING_2D_ERROR
0xDDB9	SA	MRC_READ_TIMING_2D_ERROR
0xDDBA	SA	MRC_CMD_VREF_ERROR
0xDDBB	SA	MRC_WRITE_VREF_2D_ERROR
0xDDBC	SA	MRC_READ_VREF_2D_ERROR
0xDDBD	SA	MRC_POST_TRAINING_ERROR
0xDDBE	SA	MRC_LATE_COMMAND_ERROR
0xDDBF	SA	MRC_ROUND_TRIP_LAT_ERROR
0xDDC0	SA	MRC_TURN_AROUND_ERROR
0xDDC1	SA	MRC_CMP_OPT_ERROR
0xDDC2	SA	MRC_SAVE_MC_VALUES_ERROR
0xDDC3	SA	MRC_RESTORE_TRAINING_ERROR
0xDDC4	SA	MRC_RMT_TOOL_ERROR
0xDDC5	SA	MRC_WRITE_SR_ERROR
0xDDC6	SA	MRC_DIMM_RON_ERROR
0xDDC7	SA	MRC_RCVEN_TIMING_1D_ERROR
0xDDC8	SA	MRC_MR_FILL_ERROR
0xDDC9	SA	MRC_PWR_MTR_ERROR
0xDDCA	SA	MRC_DDR4_MAPPING_ERROR
0xDDCB	SA	MRC_WRITE_VOLTAGE_1D_ERROR
0xDDCC	SA	MRC_EARLY_RDMPR_TIMING_2D_ERROR
0xDDCD	SA	MRC_FORCE_OLTM_ERROR
0xDDD0	SA	MRC_MC_ACTIVATE_ERROR
0xDDD1	SA	MRC_RH_PREVENTION_ERROR
0xDDD2	SA	MRC_GET_MRC_DATA_ERROR
0xDDD3	SA	Reserved
0xDDD8	SA	MRC_RETRAIN_CHECK_ERROR
0xDDDA	SA	MRC_SA_GV_SWITCH_ERROR
0xDDDB	SA	MRC_ALIAS_CHECK_ERROR
0xDDDC	SA	MRC_ECC_CLEAN_ERROR
0xDDDD	SA	MRC_DONE_WITH_ERROR
0xDDDF	SA	MRC_CPGC_MEMORY_TEST_ERROR
0xDDE0	SA	MRC_TXT_ALIAS_CHECK_ERROR
0xDDE1	SA	MRC_ENG_PERF_GAIN_ERROR
0xDDE8	SA	MRC_MEMORY_TEST_ERROR
0xDDE9	SA	MRC_FILL_RMT_STRUCTURE_ERROR
0xDDF0	SA	MRC_SELF_REFRESH_EXIT_ERROR
0xDDF1	SA	MRC_MRC_NORMAL_MODE_ERROR
0xDDFD	SA	MRC_SSA_PRE_STOP_POINT_ERROR
0xDDFE	SA	MRC_NO_MEMORY_DETECTED

7.1.3 TempRamExit API Status Codes (0xBxxx)

PostCode	Module	Description
0xB800	FSP	TempRamExit API Entry
0xB87F	FSP	TempRamExit API Exit

7.1.4 FspSiliconInit API Status Codes (0x9xxx)

PostCode	Module	Description
0x9800	FSP	FspSiliconInit API Entry
0x987F	FSP	FspSiliconInit API Exit
0x9A00	SA	PostMem Salnit Entry
0x9A01	SA	DeviceConfigure Start
0x9A02	SA	UpdateSaHobPostMem Start
0x9A03	SA	Initializing Pei Display
0x9A04	SA	PeiGraphicsNotifyCallback Entry
0x9A05	SA	CallPpiAndFillFrameBuffer
0x9A06	SA	GraphicsPpiInit
0x9A07	SA	GraphicsPpiGetMode
0x9A08	SA	FillFrameBufferAndShowLogo
0x9A0F	SA	PeiGraphicsNotifyCallback Exit
0x9A14	SA	Initializing SA IPU device
0x9A16	SA	Initializing SA GNA device
0x9A1A	SA	SaProgramLlcWays Start
0x9A20	SA	Initializing PciExpressInitPostMem
0x9A22	SA	Initializing ConfigureNorthIntelTraceHub
0x9A30	SA	Initializing Vtd
0x9A31	SA	Initializing TCSS
0x9A32	SA	Initializing Ppvp
0x9A34	SA	PeiInstallSmmAccessPpi Start
0x9A36	SA	EdramWa Start
0x9A4F	SA	Post-Mem Salnit Exit
0x9A50	SA	SaSecurityLock Start
0x9A5F	SA	SaSecurityLock End
0x9A60	SA	SaSResetComplete Entry
0x9A61	SA	Set BIOS_RESET_CPL to indicate all configurations complete
0x9A62	SA	SaSvInit2 Start
0x9A63	SA	GraphicsPmInit Start
0x9A64	SA	SaPciPrint Start
0x9A6F	SA	SaSResetComplete Exit
0x9A70	SA	SaS3ResumeAtEndOfPei Callback Entry
0x9A7F	SA	SaS3ResumeAtEndOfPei Callback Exit
0x9B00	PCH	Post-Mem PchInit Entry
0x9B03	PCH	Post-Mem Tune the USB 2.0 high-speed signals quality
0x9B04	PCH	Post-Mem Tune the USB 3.0 signals quality
0x9B05	PCH	Post-Mem Configure PCH xHCI
0x9B06	PCH	Post-Mem Performs configuration of PCH xHCI SSIC
0x9B07	PCH	Post-Mem Configure PCH xHCI after init
0x9B08	PCH	Post-Mem Configures PCH USB device (xDCI)
0x9B0A	PCH	Post-Mem DMI/OP-DMI configuration
0x9B0B	PCH	Post-Mem Initialize P2SB controller
0x9B0C	PCH	Post-Mem IOAPIC initialization
0x9B0D	PCH	Post-Mem PCH devices interrupt configuration
0x9B0E	PCH	Post-Mem HD Audio initialization
0x9B0F	PCH	Post-Mem HD Audio Codec enumeration
0x9B10	PCH	Post-Mem HD Audio Codec not detected
0x9B13	PCH	Post-Mem SCS initialization
0x9B14	PCH	Post-Mem ISH initialization

PostCode	Module	Description
0x9B15	PCH	Post-Mem Configure SMBUS power management
0x9B16	PCH	Post-Mem Reserved
0x9B17	PCH	Post-Mem Performing global reset
0x9B18	PCH	Post-Mem Reserved
0x9B19	PCH	Post-Mem Reserved
0x9B40	PCH	Post-Mem OnEndOfPEI Entry
0x9B41	PCH	Post-Mem Initialize Thermal controller
0x9B42	PCH	Post-Mem Configure Memory Throttling
0x9B47	PCH	Post-Mem OnEndOfPEI Exit
0x9B4D	PCH	Post-Mem Trace Hub - Memory configuration
0x9B4E	PCH	Post-Mem Trace Hub - MSC0 configured
0x9B4F	PCH	Post-Mem Trace Hub - MSC1 configured
0x9B7F	PCH	Post-Mem PchInit Exit
0x9C00	CPU	CPU Post-Mem Entry
0x9C09	CPU	CpuAddConfigBlocks Done
0x9C0A	CPU	SetCpuStrapAndEarlyPowerOnConfig Start
0x9C13	CPU	SetCpuStrapAndEarlyPowerOnConfig Reset
0x9C14	CPU	SetCpuStrapAndEarlyPowerOnConfig Done
0x9C15	CPU	Cpulnit Start
0x9C16	CPU	SgxInitializationPrePatchLoad Start
0x9C17	CPU	CollectProcessorFeature Start
0x9C18	CPU	ProgramProcessorFeature Start
0x9C19	CPU	ProgramProcessorFeature Done
0x9C20	CPU	CpulnitPreResetCpl Start
0x9C21	CPU	ProcessorsPrefetcherInitialization Start
0x9C22	CPU	InitRatl Start
0x9C23	CPU	ConfigureSvidVrs Start
0x9C24	CPU	ConfigurePidSettings Start
0x9C25	CPU	SetBootFrequency Start
0x9C26	CPU	CpuOclnitPreMem Start
0x9C27	CPU	CpuOclnit Reset
0x9C28	CPU	BiosGuardInit Start
0x9C29	CPU	BiosGuardInit Reset
0x9C3F	CPU	CpulnitPreResetCpl Done
0x9C42	CPU	SgxActivation Start
0x9C43	CPU	InitializeCpuDataHob Start
0x9C44	CPU	InitializeCpuDataHob Done
0x9C4F	CPU	Cpulnit Done
0x9C50	CPU	S3InitializeCpu Start
0x9C55	CPU	MpRendezvousProcedure Start
0x9C56	CPU	MpRendezvousProcedure Done
0x9C69	CPU	S3InitializeCpu Done
0x9C6A	CPU	CpuPowerMgmtInit Start
0x9C71	CPU	InitPpm
0x9C7F	CPU	CPU Post-Mem Exit
0x9C80	CPU	ReloadMicrocodePatch Start
0x9C81	CPU	ReloadMicrocodePatch Done
0x9C82	CPU	ApSafePostMicrocodePatchInit Start
0x9C83	CPU	ApSafePostMicrocodePatchInit Done

7.1.5 NotifyPhase API Status Codes (0x6xxx)

PostCode	Module	Description
0x6800	FSP	NotifyPhase API Entry
0x687F	FSP	NotifyPhase API Exit

Chapter 8

FSP DISPATCH MODE

8 FSP Dispatch mode support

8.1 Integration notes

The FSP Dispatch mode is supported by this platform FSP. The capability can be checked by `FSP_INFO_HEAD->ImageAttribute[1] = 1` (FSP Binary supports Dispatch mode) In Dispatch mode FSP Binary will be dispatched as standard FV and shares same PPIs, HOBs, and DynamicEx PCDs from UEFI boot loader.

Below are some integration notes:

1. Since FSP Binary can be integrated into anywhere in flash, boot loader has to report FSP FV to PEI and DXE dispatcher following standard way so those PEIMs and DXE drivers inside FSP Binary can be dispatched.
2. FSP binary package will include a DSC file which contains all DynamicEx PCDs consumed by FSP binary. Boot loader should incorporate the DSC and build those PCD into PCD database so same PCDs can be shared between boot loader and FSP.
3. In Dispatch mode, boot loader should not make FSP API calls. TempRamInit API is supported in both API mode and Dispatch mode, but rest of the APIs (MemoryInitApi, TempRamExitApi and SiliconInitApi) should not be invoked.
4. Dispatch mode FSP contains x64 DXE drivers for NotifyPhase callbacks. No thunkcall from 32bits to 64bits anymore and boot loader should remove S3EndOfPeiNotify and FspWrapperNotifyDxe as they are not used.
5. `EFI_PEI_CORE_FV_LOCATION_PPI` should be installed by boot loader SEC core and pointed to FSP-M FV location so the PeiCore inside FSP can be invoked. If this PPI was not installed or no PeiCore can be found by the pointer, the PeiCore from BFV will be invoked.
6. Some EDK2 overrides may be required for Dispatch mode support, please refer to override folders in reference code or the override EDK2 github repo for detail.
7. `FSPM_ARCH_CONFIG_PPI->NvsBufferPtr` now is a cross build type (FSP Dispatch mode and EDK2 builds) policy for MRC S3 data pointer, boot loader or platform code has to install this PPI to report MRC S3 data (`SA_MISC_PEI_PREMEM_CONFIG->S3DataPtr` is obsolete).
8. Policy initialization Flow Changes:
 - PEIMs from FSP-M/FSP-S should be dispatched earlier to produce the *DefaultPolicyInit* PPIs. -> Bootloader consumes the *DefaultPolicyInit* PPIs produced by the FSP binary to create the policy PPIs with default settings. -> Bootloader then locates and updates the policy PPIs as needed. -> Bootloader installs the *PolicyReadyPpi* after policy updates are completed. This signals to the FSP that silicon initialization may proceed.
 - Bootloader shall consume two PPIs produced by FSP binary to create policy PPIs with default settings. These PPIs are:

- `_PEI_PREMEM_SI_DEFAULT_POLICY_INIT_PPI`
- `_PEI_SI_DEFAULT_POLICY_INIT_PPI`
- The bootloader shall call the two functions below after the bootloader has completed any needed policy updates:
 - `SiPreMemInstallPolicyReadyPpi()`
 - `SiInstallPolicyReadyPpi()`

9. Debug message handling in dispatch mode:

- Before the ReportStatusCode service is ready, a debug built FSP will send debug messages using the FSP-T UPD configuration (passed as FSP-T API input parameter). FSP-T is recommended to be used regardless FSP API mode or Dispatch mode.
- Once the ReportStatusCode service is ready, a debug built FSP will send debug messages using the ReportStatusCode service.
- It is recommended that bootloader register a StatusCode listener immediately after the ReportStatusCode service is ready. It is important to register this listener as soon as possible so that all debug messages sent by the FSP are captured.
- Please refer to section 9.4.7 in the Intel(R) Firmware Support Package External Architecture Specification v2.1 for details about the ReportStatusCode debug message format.

Chapter 9

Todo List

Member [FSP_S_RESTRICTED_CONFIG::PchPmTestPchClearPowerSts](#)
ADD DESCRIPTION.

Chapter 10

Deprecated List

Member [FSP_S_CONFIG::SkipMplnitDeprecated](#)

SkipMplnit has been moved to FspmUpd \$EN_DIS

Member [FSP_S_TEST_CONFIG::DebugInterfaceEnable](#)

Enable or Disable processor debug features; **0: Disabled**; 1: Enable.

Member [FSP_S_TEST_CONFIG::EnableItbmDriver](#)

Intel Turbo Boost Max Technology 3.0 Driver **0: Disabled**; 1: Enabled \$EN_DIS

Member [SI_CONFIG::SkipPostBootSai](#)

since revision 3

Chapter 11

Class Index

11.1 Class List

Here are the classes, structs, unions and interfaces with brief descriptions:

_EFI_LEGACY_BIOS_PROTOCOL	Abstracts the traditional BIOS from the rest of EFI	41
_EFI_SMM_VARIABLE_PROTOCOL	EFI SMM Variable Protocol is intended for use as a means to store data in the EFI SMM environment	42
_FSP_TEMP_RAM_EXIT_PPI	This PPI provides function to program MTRR values	43
_PEI_PREMEM_SI_DEFAULT_POLICY_INIT_PPI	This PPI provides function to install default silicon policy	43
_PEI_SI_DEFAULT_POLICY_INIT_PPI	This PPI provides function to install default silicon policy	43
_PEI_SMM_ACCESS_PPI	EFI SMM Access PPI is used to control the visibility of the SMRAM on the platform	44
_PEI_SMM_CONTROL_PPI	PEI SMM Control PPI is used to initiate SMI/PMI activations	44
_SI_POLICY_STRUCT	SI Policy PPI All SI config block change history will be listed here 45	
_SI_PREMEM_POLICY_STRUCT	SI Policy PPI in Pre-Mem All SI config block change history will be listed here 45	
ATAPI_IDENTIFY	ATAPI_IDENTIFY	46
AUDIO_AZALIA_VERB_TABLE	Audio Azalia Verb Table structure	46
AZALIA_HEADER	Azalia Header structure	47
BBS_STATUS_FLAGS	BBS_STATUS_FLAGS ; \	47
BBS_TABLE	BBS_TABLE , device type values & boot priority values	48
CHIPSET_INIT_INFO	The ChipsetInit Info structure provides the information of ME ChipsetInit CRC and BIOS ChipsetInit CRC	51

DEVICE_PRODUCER_DATA_HEADER	
DEVICE_PRODUCER_DATA_HEADER	52
DEVICE_PRODUCER_FLOPPY	
DEVICE_PRODUCER_FLOPPY	53
DEVICE_PRODUCER_PARALLEL	
@)	53
DEVICE_PRODUCER_SERIAL	
DEVICE_PRODUCER_SERIAL	54
DXE_SI_POLICY_PROTOCOL	
The protocol allows the platform code to publish a set of configuration information that the Silicon drivers will use to configure the processor in the DXE phase	54
EFI_BYTE_REGS	
EFI_BYTE_REGS	56
EFI_COMPATIBILITY16_TABLE	
There is a table located within the traditional BIOS in either the 0xF000:xxxx or 0xE000:xxxx physical address range	56
EFI_DISPATCH_OPROM_TABLE	
EFI_DISPATCH_OPROM_TABLE	60
EFI_DWORD_REGS	
EFI_DWORD_REGS	61
EFI_EFLAGS_REG	
EFI_EFLAGS_REG	62
EFI_FLAGS_REG	
EFI_FLAGS_REG	62
EFI_IA32_REGISTER_SET	
EFI_IA32_REGISTER_SET	63
EFI_LEGACY_INSTALL_PCI_HANDLER	
EFI_LEGACY_INSTALL_PCI_HANDLER	63
EFI_TO_COMPATIBILITY16_BOOT_TABLE	
EFI_TO_COMPATIBILITY16_BOOT_TABLE	64
EFI_TO_COMPATIBILITY16_INIT_TABLE	
EFI_TO_COMPATIBILITY16_INIT_TABLE	66
EFI_WORD_REGS	
EFI_WORD_REGS	67
FSP_ERROR_INFO_HOB	
FSP Error Information Block	68
FSP_M_CONFIG	
Fsp M Configuration	68
FSP_M_RESTRICTED_CONFIG	
Fsp M Restricted Configuration	123
FSP_M_TEST_CONFIG	
Fsp M Test Configuration	132
FSP_S_CONFIG	
Fsp S Configuration	147
FSP_S_RESTRICTED_CONFIG	
Fsp S Restricted Configuration	216
FSP_S_TEST_CONFIG	
Fsp S Test Configuration	228
FSP_T_CONFIG	
Fsp T Configuration	257
FSP_T_RESTRICTED_CONFIG	
Fsp T Restricted Configuration	260
FSP_T_TEST_CONFIG	
Fsp T Test Configuration	261
FSPM_ARCH_CONFIG_PPI	
This PPI provides FSP-M Arch Config PPI	261
FSPM_UPD	
Fsp M UPD Configuration	261

FSPS_UPD	
Fsp S UPD Configuration	262
FSPT_CORE_UPD	
Fsp T Core UPD	263
FSPT_UPD	
Fsp T UPD Configuration	264
FVI_DATA	
The string number for ComponentName and VersionString is always calculated dynamically	265
GPIO_CONFIG	
GPIO configuration structure used for pin programming	265
HDD_INFO	
HDD_INFO	268
LEGACY_DEVICE_FLAGS	
LEGACY_DEVICE_FLAGS	269
PCIE_PORT_EQS	
Data structure for passing static equalization data for programming	269
PCIE_PORT_SWEQ_DATA	
PCIe Root Port description data structure, used as the interface between low level and high level	270
PCIE_SWEQ_GPIO_CONFIG	
Input Configuration Parameters for Software Equalization Support	270
PCIE_SWEQ_PRESET_SCORE	
Data Output from Software Equalization	270
RC_VERSION	
This structure contains the RC version details for FVI SMBIOS records	271
SI_CONFIG	
The Silicon Policy allows the platform code to publish a set of configuration information that the RC drivers will use to configure the silicon hardware	271
SI_PCH_DEVICE_INTERRUPT_CONFIG	
The PCH_DEVICE_INTERRUPT_CONFIG block describes interrupt pin, IRQ and interrupt mode for PCH device	272
SMM_ATTRIBUTES	
SMM_ATTRIBUTES	273
SMM_ENTRY	
This structure assumes both port and data sizes are 1	274
SMM_FUNCTION	
SMM_FUNCTION & relating constants	275
SMM_TABLE	
SMM_TABLE	275
SOCKET_LGA_775_SMM_CPU_STATE	
Union of CPU save-state structures for IA32 and X64	276
SOCKET_LGA_775_SMM_CPU_STATE32	
CPU save-state structure for IA32	277
SOCKET_LGA_775_SMM_CPU_STATE64	
CPU save-state structure for X64	277
SVID_SID_VALUE	
Subsystem Vendor ID / Subsystem ID	278
UD_TABLE	
UD_TABLE	278
UDC_ATTRIBUTES	
UDC_ATTRIBUTES	280
USB20_AFE	
This structure configures per USB2 AFE settings	280
USB20_PORT_CONFIG	
This structure configures per USB2 port physical settings	281
USB30_PORT_CONFIG	
This structure describes whether the USB3 Port N is enabled by platform modules	282

USB_CONFIG

This member describes the expected configuration of the USB controller, Platform modules may need to refer Setup options, schematic, BIOS specification to update this field 283

XDCI_CONFIG

The **XDCI_CONFIG** block describes the configurations of the xDCI Usb Device controller . . . 286

Chapter 12

File Index

12.1 File List

Here is a list of all documented files with brief descriptions:

AcpiS3Context.h	Definitions for data structures used in S3 resume	287
AslUpdateLib.h	ASL dynamic update library definitions	287
CacheAsRamLib.h	Copyright (c) 2014, Intel Corporation	291
ConsoleOutDevice.h	This GUID can be installed to the device handle to specify that the device is the console-out device	292
DxeHdaNHLT.h	Header file for DxePchHdaNHLTLib - NHLT structure definitions	292
DxeHdaNHLTLib.h	Prototype of the DxePchHdaNHLTLib library	294
FspErrorInfo.h	FSP Error Information HOB to describe errors inside FSP that bootloader may take some actions to handle those error scenarios	299
FspErrorInfoLib.h	Library to provide service for sending FSP error information to bootloader	300
FspFixedPcds.h	This file lists all FixedAtBuild PCDs referenced in FSP integration guide	302
FspInfoHob.h	Header file for FSP Information HOB	303
FspmArchConfigPpi.h	Header file for FSP-M Arch Config PPI	303
FspmUpd.h	Copyright (c) 2020, Intel Corporation	304
FspSUpd.h	Copyright (c) 2020, Intel Corporation	306
FspTUpd.h	Copyright (c) 2020, Intel Corporation	308
FspUpd.h	Copyright (c) 2020, Intel Corporation	309
GetFspTApiParameter.h	Library to get FSP-T API parameter	310
GpioConfig.h	Header file for GpioConfig structure used by GPIO library	311
GpioSampleDef.h	Sample enum definitions for GPIO table	318

LegacyBios.h	The EFI Legacy BIOS Protocol is used to abstract legacy Option ROM usage under EFI and Legacy OS boot	318
LegacyInterrupt.h	This protocol abstracts the PIRQ programming from the generic EFI Compatibility Support Modules (CSMs)	330
MemoryTypeInfoInformation.h	This file defines: Memory Type Information GUID for HOB and Variable	332
MmPciLib.h	Get Pci Express address library implementation	333
PciInitLib.h	PCIe Initialization Library header file	334
PcieRegs.h	Register names for PCIe standard register	351
PeiCpuAndPchTraceHubLib.h	Header file for CPU and PCH TraceHub Lib	359
PeiPreMemSiDefaultPolicy.h	This file defines the function to initialize default silicon policy PPI	361
PeiSiDefaultPolicy.h	This file defines the function to initialize default silicon policy PPI	362
PeiSiPolicyUpdateLib.h	Header file for PEI SiPolicyUpdate Library	363
Ppi/PlatformSpecificResetHandler.h	This PPI provides services to register a platform specific handler for ResetSystem()	367
Protocol/PlatformSpecificResetHandler.h	This protocol provides services to register a platform specific handler for ResetSystem()	368
PlatformSpecificResetNotification.h	This PPI provides services to register a platform specific notification callback for ResetSystem()	369
ProcessorTraceMemoryAllocationLib.h	Prototype of Intel Processor Trace memory allocation library	369
PttPTPInstanceGuid.h	GUID definition for the PTT device instance	371
RegsUsb.h	Register names for USB Host and device controller	372
ResetSystemLib.h	System reset Library Services	379
SecPlatformLib.h	Prototype of SEC Platform hook library	381
SiConfig.h	Si Config Block	384
SiConfigBlockLib.h	Prototype of the SiConfigBlockLib library	385
SiConfigHob.h	Silicon Config HOB is used for gathering platform related Intel silicon information and config setting	386
SiFvi.h	Header file for Reference code Firmware Version Info Init Lib implementation	387
SiFviLib.h	Header file for Reference code Firmware Version Info Interface Lib implementation	390
SiMtrrLib.h	Header file for Silicon code Mtrr Lib implementation	392
SiPolicy.h	Silicon Policy PPI is used for specifying platform related Intel silicon information and policy setting	393
SiPolicyLib.h	Prototype of the SiPolicyLib library	395
SiPolicyProtocol.h	Protocol used for specifying platform related Silicon information and policy setting	399

SiPolicyStruct.h	Intel reference code configuration policies	400
SmmAccess.h	EFI SMM Access PPI definition	403
SmmControl.h	EFI SMM Control PPI definition	406
SmmVariable.h	EFI SMM Variable Protocol is related to EDK II-specific implementation of variables and intended for use as a means to store data in the EFI SMM environment	407
SocketLga775Lib.h	Public include file for CPU definitions and CPU library functions that apply to CPUs that fit into an LGA775 spocket	408
StallPpiLib.h	Header file for a library to install StallPpi	409
TempRamExitPpi.h	This file defines the Silicon Temp Ram Exit PPI which implements the MTRR values initialization	410
TpmInitialized.h	Tag GUID that must be installed by the TPM PEIM after the TPM hardware is initialized	411
TraceHubCommonConfig.h	Common configurations for CPU and PCH trace hub	411
UsbConfig.h	Common USB policy shared between PCH and CPU Contains general features settings for xHCI and xDCI	412
UsbInitLib.h	Header file for USB initialization library	414
UsbLib.h	Header file of available functions in general USB Library	416

Chapter 13


Class Documentation

13.1 `_EFI_LEGACY_BIOS_PROTOCOL` Struct Reference

Abstracts the traditional BIOS from the rest of EFI.

```
#include <LegacyBios.h>
```

Collaboration diagram for `_EFI_LEGACY_BIOS_PROTOCOL`:

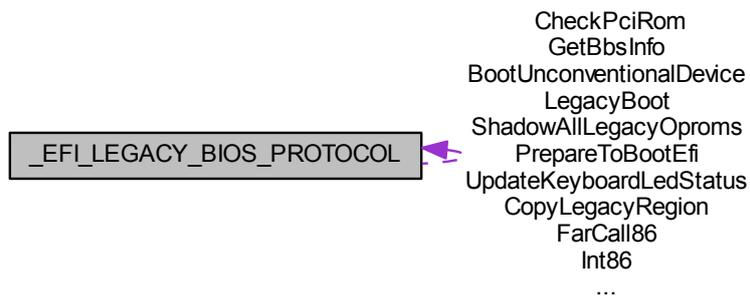

Public Attributes

- [EFI_LEGACY_BIOS_INT86](#) `Int86`
Performs traditional software INT.
- [EFI_LEGACY_BIOS_FARCALL86](#) `FarCall86`
Performs a far call into Compatibility16 or traditional OpROM code.
- [EFI_LEGACY_BIOS_CHECK_ROM](#) `CheckPciRom`
Checks if a traditional OpROM exists for this device.
- [EFI_LEGACY_BIOS_INSTALL_ROM](#) `InstallPciRom`
Loads a traditional OpROM in traditional OpROM address space.
- [EFI_LEGACY_BIOS_BOOT](#) `LegacyBoot`
Boots a traditional OS.
- [EFI_LEGACY_BIOS_UPDATE_KEYBOARD_LED_STATUS](#) `UpdateKeyboardLedStatus`
Updates BDA to reflect the current EFI keyboard LED status.

- [EFI_LEGACY_BIOS_GET_BBS_INFO](#) `GetBbsInfo`
Allows an external agent, such as BIOS Setup, to get the BBS data.
- [EFI_LEGACY_BIOS_SHADOW_ALL_LEGACY_OPROMS](#) `ShadowAllLegacyOproms`
Causes all legacy OpROMs to be shadowed.
- [EFI_LEGACY_BIOS_PREPARE_TO_BOOT_EFI](#) `PrepareToBootEfi`
Performs all actions prior to boot.
- [EFI_LEGACY_BIOS_GET_LEGACY_REGION](#) `GetLegacyRegion`
Allows EFI to reserve an area in the 0xE0000 or 0xF0000 block.
- [EFI_LEGACY_BIOS_COPY_LEGACY_REGION](#) `CopyLegacyRegion`
Allows EFI to copy data to the area specified by `GetLegacyRegion`.
- [EFI_LEGACY_BIOS_BOOT_UNCONVENTIONAL_DEVICE](#) `BootUnconventionalDevice`
Allows the user to boot off an unconventional device such as a PARTIES partition.

13.1.1 Detailed Description

Abstracts the traditional BIOS from the rest of EFI.

The `LegacyBoot()` member function allows the BDS to support booting a traditional OS. EFI thunks drivers that make EFI bindings for BIOS INT services use all the other member functions.

Definition at line 1458 of file `LegacyBios.h`.

13.1.2 Member Data Documentation

13.1.2.1 `Int86`

`EFI_LEGACY_BIOS_INT86` `_EFI_LEGACY_BIOS_PROTOCOL::Int86`

Performs traditional software INT.

See the `Int86()` function description.

Definition at line 1462 of file `LegacyBios.h`.

13.1.2.2 `PrepareToBootEfi`

`EFI_LEGACY_BIOS_PREPARE_TO_BOOT_EFI` `_EFI_LEGACY_BIOS_PROTOCOL::PrepareToBootEfi`

Performs all actions prior to boot.

Used when booting an EFI-aware OS rather than a legacy OS.

Definition at line 1503 of file `LegacyBios.h`.

The documentation for this struct was generated from the following file:

- [LegacyBios.h](#)

13.2 `_EFI_SMM_VARIABLE_PROTOCOL` Struct Reference

EFI SMM Variable Protocol is intended for use as a means to store data in the EFI SMM environment.

```
#include <SmmVariable.h>
```

13.2.1 Detailed Description

EFI SMM Variable Protocol is intended for use as a means to store data in the EFI SMM environment.

Definition at line 30 of file SmmVariable.h.

The documentation for this struct was generated from the following file:

- [SmmVariable.h](#)

13.3 _FSP_TEMP_RAM_EXIT_PPI Struct Reference

This PPI provides function to program MTRR values.

```
#include <TempRamExitPpi.h>
```

13.3.1 Detailed Description

This PPI provides function to program MTRR values.

Definition at line 63 of file TempRamExitPpi.h.

The documentation for this struct was generated from the following file:

- [TempRamExitPpi.h](#)

13.4 _PEI_PREMEM_SI_DEFAULT_POLICY_INIT_PPI Struct Reference

This PPI provides function to install default silicon policy.

```
#include <PeiPreMemSiDefaultPolicy.h>
```

13.4.1 Detailed Description

This PPI provides function to install default silicon policy.

Definition at line 55 of file PeiPreMemSiDefaultPolicy.h.

The documentation for this struct was generated from the following file:

- [PeiPreMemSiDefaultPolicy.h](#)

13.5 _PEI_SI_DEFAULT_POLICY_INIT_PPI Struct Reference

This PPI provides function to install default silicon policy.

```
#include <PeiSiDefaultPolicy.h>
```

13.5.1 Detailed Description

This PPI provides function to install default silicon policy.

Definition at line 55 of file PeiSiDefaultPolicy.h.

The documentation for this struct was generated from the following file:

- [PeiSiDefaultPolicy.h](#)
-

13.6 `_PEI_SMM_ACCESS_PPI` Struct Reference

EFI SMM Access PPI is used to control the visibility of the SMRAM on the platform.

```
#include <SmmAccess.h>
```

Collaboration diagram for `_PEI_SMM_ACCESS_PPI`:



13.6.1 Detailed Description

EFI SMM Access PPI is used to control the visibility of the SMRAM on the platform.

It abstracts the location and characteristics of SMRAM. The expectation is that the north bridge or memory controller would publish this PPI.

Definition at line 134 of file `SmmAccess.h`.

The documentation for this struct was generated from the following file:

- [SmmAccess.h](#)

13.7 `_PEI_SMM_CONTROL_PPI` Struct Reference

PEI SMM Control PPI is used to initiate SMI/PMI activations.

```
#include <SmmControl.h>
```

Collaboration diagram for `_PEI_SMM_CONTROL_PPI`:



13.7.1 Detailed Description

PEI SMM Control PPI is used to initiate SMI/PMI activations.

This protocol could be published by either:

- A processor driver to abstract the SMI/PMI IPI

- The driver that abstracts the ASIC that is supporting the APM port, such as the ICH in an Intel chipset

Definition at line 89 of file `SmmControl.h`.

The documentation for this struct was generated from the following file:

- [SmmControl.h](#)

13.8 `_SI_POLICY_STRUCT` Struct Reference

SI Policy PPI

All SI config block change history will be listed here

.

```
#include <SiPolicyStruct.h>
```

13.8.1 Detailed Description

SI Policy PPI

All SI config block change history will be listed here

.

- **Revision 1:**

- Initial version.

Definition at line 84 of file `SiPolicyStruct.h`.

The documentation for this struct was generated from the following file:

- [SiPolicyStruct.h](#)

13.9 `_SI_PREMEM_POLICY_STRUCT` Struct Reference

SI Policy PPI in Pre-Mem

All SI config block change history will be listed here

.

```
#include <SiPolicyStruct.h>
```

13.9.1 Detailed Description

SI Policy PPI in Pre-Mem

All SI config block change history will be listed here

.

- **Revision 1:**

- Initial version.
-

Definition at line 70 of file SiPolicyStruct.h.

The documentation for this struct was generated from the following file:

- [SiPolicyStruct.h](#)

13.10 ATAPI_IDENTIFY Struct Reference

[ATAPI_IDENTIFY](#).

```
#include <LegacyBios.h>
```

Public Attributes

- UINT16 [Raw](#) [256]
Raw data from the IDE IdentifyDrive command.

13.10.1 Detailed Description

[ATAPI_IDENTIFY](#).

Definition at line 525 of file LegacyBios.h.

The documentation for this struct was generated from the following file:


- [LegacyBios.h](#)

13.11 AUDIO_AZALIA_VERB_TABLE Struct Reference

Audio Azalia Verb Table structure.

```
#include <FspsUpd.h>
```

Collaboration diagram for AUDIO_AZALIA_VERB_TABLE:

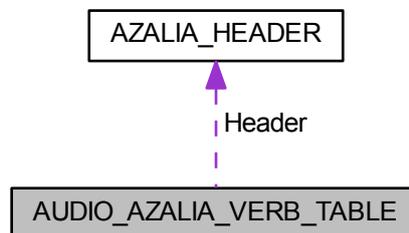

Public Attributes

- [AZALIA_HEADER](#) Header
AZALIA PCH header.

- [UINT32 * Data](#)

Pointer to the data buffer. Its length is specified in the header.

13.11.1 Detailed Description

Audio Azalia Verb Table structure.

Definition at line 56 of file FspUpd.h.

The documentation for this struct was generated from the following file:

- [FspUpd.h](#)

13.12 AZALIA_HEADER Struct Reference

Azalia Header structure.

```
#include <FspUpd.h>
```

Public Attributes

- [UINT16 VendorId](#)
Codec Vendor ID.
- [UINT16 DeviceId](#)
Codec Device ID.
- [UINT8 RevisionId](#)
Revision ID of the codec. 0xFF matches any revision.
- [UINT8 SdiNum](#)
SDI number, 0xFF matches any SDI.
- [UINT16 DataDwords](#)
Number of data DWORDs pointed by the codec data buffer.
- [UINT32 Reserved](#)
Reserved for future use. Must be set to 0.

13.12.1 Detailed Description

Azalia Header structure.

Definition at line 44 of file FspUpd.h.

The documentation for this struct was generated from the following file:

- [FspUpd.h](#)

13.13 BBS_STATUS_FLAGS Struct Reference

[BBS_STATUS_FLAGS](#);

```
#include <LegacyBios.h>
```

Public Attributes

- UINT16 [OldPosition](#): 4
Prior priority.
- UINT16 [Reserved1](#): 4
Reserved for future use.
- UINT16 [Enabled](#): 1
If 0, ignore this entry.
- UINT16 [Failed](#): 1
0 = Not known if boot failure occurred.
- UINT16 [MediaPresent](#): 2
State of media present.
- UINT16 [Reserved2](#): 4
Reserved for future use.

13.13.1 Detailed Description

[BBS_STATUS_FLAGS](#);

Definition at line 593 of file LegacyBios.h.

13.13.2 Member Data Documentation

13.13.2.1 Failed

```
UINT16 BBS_STATUS_FLAGS::Failed
```

0 = Not known if boot failure occurred.

1 = Boot attempted failed.

Definition at line 597 of file LegacyBios.h.

13.13.2.2 MediaPresent

```
UINT16 BBS_STATUS_FLAGS::MediaPresent
```

State of media present.

00 = No bootable media is present in the device. 01 = Unknown if a bootable media present. 10 = Media is present and appears bootable. 11 = Reserved.

Definition at line 607 of file LegacyBios.h.

The documentation for this struct was generated from the following file:


- [LegacyBios.h](#)

13.14 BBS_TABLE Struct Reference

[BBS_TABLE](#), device type values & boot priority values.

```
#include <LegacyBios.h>
```

Collaboration diagram for BBS_TABLE:

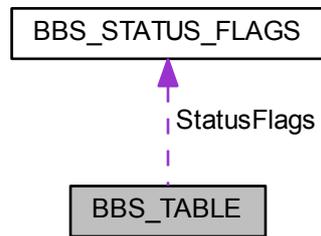

Public Attributes

- UINT16 [BootPriority](#)
The boot priority for this boot device.
- UINT32 [Bus](#)
The PCI bus for this boot device.
- UINT32 [Device](#)
The PCI device for this boot device.
- UINT32 [Function](#)
The PCI function for the boot device.
- UINT8 [Class](#)
The PCI class for this boot device.
- UINT8 [SubClass](#)
The PCI Subclass for this boot device.
- UINT16 [MfgStringOffset](#)
Segment:offset address of an ASCIIZ description string describing the manufacturer.
- UINT16 [MfgStringSegment](#)
Segment:offset address of an ASCIIZ description string describing the manufacturer.
- UINT16 [DeviceType](#)
BBS device type.
- [BBS_STATUS_FLAGS StatusFlags](#)
Status of this boot device.
- UINT16 [BootHandlerOffset](#)
Segment:Offset address of boot loader for IPL devices or install INT13 handler for BCV devices.
- UINT16 [BootHandlerSegment](#)
Segment:Offset address of boot loader for IPL devices or install INT13 handler for BCV devices.
- UINT16 [DescStringOffset](#)
Segment:offset address of an ASCIIZ description string describing this device.
- UINT16 [DescStringSegment](#)
Segment:offset address of an ASCIIZ description string describing this device.
- UINT32 [InitPerReserved](#)
Reserved.
- UINT32 [AdditionalIrq13Handler](#)
The use of these fields is IBV dependent.
- UINT32 [AdditionalIrq18Handler](#)

The use of these fields is IBV dependent.

- UIN32 [AdditionalIrq19Handler](#)

The use of these fields is IBV dependent.

- UIN32 [AdditionalIrq40Handler](#)

The use of these fields is IBV dependent.

13.14.1 Detailed Description

[BBS_TABLE](#), device type values & boot priority values.

Definition at line 614 of file LegacyBios.h.

13.14.2 Member Data Documentation

13.14.2.1 AdditionalIrq13Handler

```
UIN32 BBS_TABLE::AdditionalIrq13Handler
```

The use of these fields is IBV dependent.

They can be used to flag that an OpROM has hooked the specified IRQ. The OpROM may be BBS compliant as some SCSI BBS-compliant OpROMs also hook IRQ vectors in order to run their BIOS Setup

Definition at line 697 of file LegacyBios.h.

13.14.2.2 AdditionalIrq18Handler

```
UIN32 BBS_TABLE::AdditionalIrq18Handler
```

The use of these fields is IBV dependent.

They can be used to flag that an OpROM has hooked the specified IRQ. The OpROM may be BBS compliant as some SCSI BBS-compliant OpROMs also hook IRQ vectors in order to run their BIOS Setup

Definition at line 704 of file LegacyBios.h.

13.14.2.3 AdditionalIrq19Handler

```
UIN32 BBS_TABLE::AdditionalIrq19Handler
```

The use of these fields is IBV dependent.

They can be used to flag that an OpROM has hooked the specified IRQ. The OpROM may be BBS compliant as some SCSI BBS-compliant OpROMs also hook IRQ vectors in order to run their BIOS Setup

Definition at line 711 of file LegacyBios.h.

13.14.2.4 AdditionalIrq40Handler

```
UIN32 BBS_TABLE::AdditionalIrq40Handler
```

The use of these fields is IBV dependent.

They can be used to flag that an OpROM has hooked the specified IRQ. The OpROM may be BBS compliant as some SCSI BBS-compliant OpROMs also hook IRQ vectors in order to run their BIOS Setup

Definition at line 718 of file LegacyBios.h.

13.14.2.5 BootPriority

```
UINT16 BBS_TABLE::BootPriority
```

The boot priority for this boot device.

Values are defined below.

Definition at line 618 of file LegacyBios.h.

13.14.2.6 DeviceType

```
UINT16 BBS_TABLE::DeviceType
```

BBS device type.

BBS device types are defined below.

Definition at line 658 of file LegacyBios.h.

13.14.2.7 StatusFlags

```
BBS_STATUS_FLAGS BBS_TABLE::StatusFlags
```

Status of this boot device.

Type [BBS_STATUS_FLAGS](#) is defined below.

Definition at line 663 of file LegacyBios.h.

The documentation for this struct was generated from the following file:

- [LegacyBios.h](#)

13.15 CHIPSET_INIT_INFO Struct Reference

The ChipsetInit Info structure provides the information of ME ChipsetInit CRC and BIOS ChipsetInit CRC.

```
#include <FspmUpd.h>
```

Public Attributes

- [UINT8 Revision](#)
Chipset Init Info Revision.
 - [UINT8 Rsvd](#) [3]
Reserved.
 - [UINT16 MeChipInitCrc](#)
16 bit CRC value of MeChipInit Table
 - [UINT16 BiosChipInitCrc](#)
16 bit CRC value of PchChipInit Table
-

13.15.1 Detailed Description

The ChipsetInit Info structure provides the information of ME ChipsetInit CRC and BIOS ChipsetInit CRC.

Definition at line 46 of file FspmUpd.h.

The documentation for this struct was generated from the following file:


- [FspmUpd.h](#)

13.16 DEVICE_PRODUCER_DATA_HEADER Struct Reference

[DEVICE_PRODUCER_DATA_HEADER](#).

```
#include <LegacyBios.h>
```

Collaboration diagram for `DEVICE_PRODUCER_DATA_HEADER`:

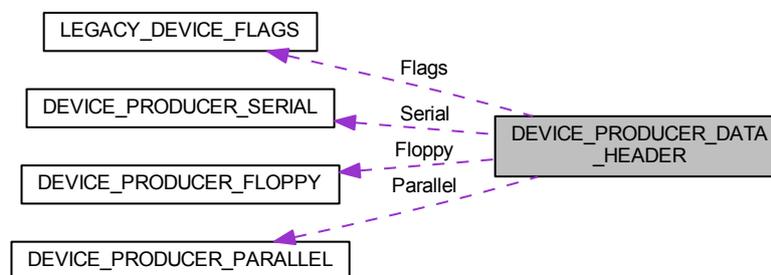

Public Attributes

- [DEVICE_PRODUCER_SERIAL](#) Serial [4]
Data for serial port x. Type [DEVICE_PRODUCER_SERIAL](#) is defined below.
- [DEVICE_PRODUCER_PARALLEL](#) Parallel [3]
Data for parallel port x. Type [DEVICE_PRODUCER_PARALLEL](#) is defined below.
- [DEVICE_PRODUCER_FLOPPY](#) Floppy
Data for floppy. Type [DEVICE_PRODUCER_FLOPPY](#) is defined below.
- UINT8 [MousePresent](#)
Flag to indicate if mouse is present.
- [LEGACY_DEVICE_FLAGS](#) Flags
Miscellaneous Boolean state information passed to CSM.

13.16.1 Detailed Description

[DEVICE_PRODUCER_DATA_HEADER](#).

Definition at line 514 of file LegacyBios.h.

The documentation for this struct was generated from the following file:

- [LegacyBios.h](#)

13.17 DEVICE_PRODUCER_FLOPPY Struct Reference

[DEVICE_PRODUCER_FLOPPY](#).

```
#include <LegacyBios.h>
```

Public Attributes

- UINT16 [Address](#)
I/O address assigned to the floppy.
- UINT8 [Irq](#)
IRQ assigned to the floppy.
- UINT8 [Dma](#)
DMA assigned to the floppy.
- UINT8 [NumberOfFloppy](#)
Number of floppies in the system.

13.17.1 Detailed Description

[DEVICE_PRODUCER_FLOPPY](#).

Definition at line 495 of file LegacyBios.h.

The documentation for this struct was generated from the following file:

- [LegacyBios.h](#)

13.18 DEVICE_PRODUCER_PARALLEL Struct Reference

@)

```
#include <LegacyBios.h>
```

Public Attributes

- UINT16 [Address](#)
I/O address assigned to the parallel port.
- UINT8 [Irq](#)
IRQ assigned to the parallel port.
- UINT8 [Dma](#)
DMA assigned to the parallel port.
- PARALLEL_MODE [Mode](#)
Mode of the parallel port. Values are defined below.

13.18.1 Detailed Description

@)

[DEVICE_PRODUCER_PARALLEL](#).

Definition at line 476 of file LegacyBios.h.

The documentation for this struct was generated from the following file:

- [LegacyBios.h](#)
-

13.19 DEVICE_PRODUCER_SERIAL Struct Reference

DEVICE_PRODUCER_SERIAL.

```
#include <LegacyBios.h>
```

Public Attributes

- UUINT16 [Address](#)
I/O address assigned to the serial port.
- UUINT8 [Irq](#)
IRQ assigned to the serial port.
- SERIAL_MODE [Mode](#)
Mode of serial port. Values are defined below.

13.19.1 Detailed Description

DEVICE_PRODUCER_SERIAL.

Definition at line 457 of file LegacyBios.h.

The documentation for this struct was generated from the following file:

- [LegacyBios.h](#)

13.20 DXE_SI_POLICY_PROTOCOL Struct Reference

The protocol allows the platform code to publish a set of configuration information that the Silicon drivers will use to configure the processor in the DXE phase.

```
#include <SiPolicyProtocol.h>
```

Public Attributes

- UUINT8 [Revision](#)
This member specifies the revision of the Si Policy protocol.
- UUINT8 [SmbiosOemTypeFirmwareVersionInfo](#)
SmbiosOemTypeFirmwareVersionInfo determines the SMBIOS OEM type (0x80 to 0xFF) defined in SMBIOS, values 0-0x7F will be treated as disable FVI reporting.
- UUINT8 [ReservedByte](#) [6]
Reserved bytes, align to multiple 8.
- ADAPTER_INFO_PLATFORM_SECURITY * [Hsti](#)
This member describes a pointer to Hsti results from previous boot.
- UUINTN [HstiSize](#)
Size of results, if setting Hsti policy to point to previous results.

13.20.1 Detailed Description

The protocol allows the platform code to publish a set of configuration information that the Silicon drivers will use to configure the processor in the DXE phase.

This Policy Protocol needs to be initialized for Silicon configuration.

Note

The Protocol has to be published before processor DXE drivers are dispatched.

Definition at line 55 of file SiPolicyProtocol.h.

13.20.2 Member Data Documentation**13.20.2.1 Hsti**

```
ADAPTER_INFO_PLATFORM_SECURITY* DXE_SI_POLICY_PROTOCOL::Hsti
```

This member describes a pointer to Hsti results from previous boot.

In order to mitigate the large performance cost of performing all of the platform security tests on each boot, we can save the results across boots and retrieve and point this policy to them prior to the launch of HstiSiliconDxe. Logic should be implemented to not populate this upon major platform changes (i.e changes to setup option or platform hw)to ensure that results accurately reflect the configuration of the platform.This is a pointer to Hsti results from previous boot

Definition at line 80 of file SiPolicyProtocol.h.

13.20.2.2 Revision

```
UINT8 DXE_SI_POLICY_PROTOCOL::Revision
```

This member specifies the revision of the Si Policy protocol.

This field is used to indicate backward compatible changes to the protocol. Any such changes to this protocol will result in an update in the revision number.

Revision 1:

- Initial version **Revision 2:**
- Added SmbiosOemTypeFirmwareVersionInfo to determines the SMBIOS OEM type

Definition at line 65 of file SiPolicyProtocol.h.

13.20.2.3 SmbiosOemTypeFirmwareVersionInfo

```
UINT8 DXE_SI_POLICY_PROTOCOL::SmbiosOemTypeFirmwareVersionInfo
```

SmbiosOemTypeFirmwareVersionInfo determines the SMBIOS OEM type (0x80 to 0xFF) defined in SMBIOS, values 0-0x7F will be treated as disable FVI reporting.

FVI structure uses it as SMBIOS OEM type to provide version information.

Definition at line 71 of file SiPolicyProtocol.h.

The documentation for this struct was generated from the following file:

- [SiPolicyProtocol.h](#)
-

13.21 EFI_BYTE_REGS Struct Reference

[EFI_BYTE_REGS](#).

```
#include <LegacyBios.h>
```

13.21.1 Detailed Description

[EFI_BYTE_REGS](#).

Definition at line 1120 of file LegacyBios.h.

The documentation for this struct was generated from the following file:

- [LegacyBios.h](#)

13.22 EFI_COMPATIBILITY16_TABLE Struct Reference

There is a table located within the traditional BIOS in either the 0xF000:xxxx or 0xE000:xxxx physical address range.

```
#include <LegacyBios.h>
```

Public Attributes

- [UINT32 Signature](#)
The string "\$EFI" denotes the start of the EfiCompatibility table.
 - [UINT8 TableChecksum](#)
The value required such that byte checksum of TableLength equals zero.
 - [UINT8 TableLength](#)
The length of this table.
 - [UINT8 EfiMajorRevision](#)
The major EFI revision for which this table was generated.
 - [UINT8 EfiMinorRevision](#)
The minor EFI revision for which this table was generated.
 - [UINT8 TableMajorRevision](#)
The major revision of this table.
 - [UINT8 TableMinorRevision](#)
The minor revision of this table.
 - [UINT16 Reserved](#)
Reserved for future usage.
 - [UINT16 Compatibility16CallSegment](#)
The segment of the entry point within the traditional BIOS for Compatibility16 functions.
 - [UINT16 Compatibility16CallOffset](#)
The offset of the entry point within the traditional BIOS for Compatibility16 functions.
 - [UINT16 PnPInstallationCheckSegment](#)
The segment of the entry point within the traditional BIOS for EfiCompatibility to invoke the PnP installation check.
 - [UINT16 PnPInstallationCheckOffset](#)
The Offset of the entry point within the traditional BIOS for EfiCompatibility to invoke the PnP installation check.
 - [UINT32 EfiSystemTable](#)
EFI system resources table.
 - [UINT32 OemIdStringPointer](#)
The address of an OEM-provided identifier string.
-

- UUINT32 [AcpiRsdPtrPointer](#)
The 32-bit physical address where ACPI RSD PTR is stored within the traditional BIOS.
 - UUINT16 [OemRevision](#)
The OEM revision number.
 - UUINT32 [E820Pointer](#)
The 32-bit physical address where INT15 E820 data is stored within the traditional BIOS.
 - UUINT32 [E820Length](#)
The length of the E820 data and is filled in by the EfiCompatibility code.
 - UUINT32 [IrqRoutingTablePointer](#)
The 32-bit physical address where the \$PIR table is stored in the traditional BIOS.
 - UUINT32 [IrqRoutingTableLength](#)
The length of the \$PIR table and is filled in by the EfiCompatibility code.
 - UUINT32 [MpTablePtr](#)
The 32-bit physical address where the MP table is stored in the traditional BIOS.
 - UUINT32 [MpTableLength](#)
The length of the MP table and is filled in by the EfiCompatibility code.
 - UUINT16 [OemIntSegment](#)
The segment of the OEM-specific INT table/code.
 - UUINT16 [OemIntOffset](#)
The offset of the OEM-specific INT table/code.
 - UUINT16 [Oem32Segment](#)
The segment of the OEM-specific 32-bit table/code.
 - UUINT16 [Oem32Offset](#)
The offset of the OEM-specific 32-bit table/code.
 - UUINT16 [Oem16Segment](#)
The segment of the OEM-specific 16-bit table/code.
 - UUINT16 [Oem16Offset](#)
The offset of the OEM-specific 16-bit table/code.
 - UUINT16 [TpmSegment](#)
The segment of the TPM binary passed to 16-bit CSM.
 - UUINT16 [TpmOffset](#)
The offset of the TPM binary passed to 16-bit CSM.
 - UUINT32 [IbvPointer](#)
A pointer to a string identifying the independent BIOS vendor.
 - UUINT32 [PciExpressBase](#)
This field is NULL for all systems not supporting PCI Express.
 - UUINT8 [LastPciBus](#)
Maximum PCI bus number assigned.
 - UUINT32 [UmaAddress](#)
Start Address of Upper Memory Area (UMA) to be set as Read/Write.
 - UUINT32 [UmaSize](#)
Upper Memory Area size in bytes to be set as Read/Write.
 - UUINT32 [HiPermanentMemoryAddress](#)
Start Address of high memory that can be used for permanent allocation.
 - UUINT32 [HiPermanentMemorySize](#)
Size of high memory that can be used for permanent allocation in bytes.
-

13.22.1 Detailed Description

There is a table located within the traditional BIOS in either the 0xF000:xxxx or 0xE000:xxxx physical address range. It is located on a 16-byte boundary and provides the physical address of the entry point for the Compatibility16 functions. These functions provide the platform-specific information that is required by the generic EfiCompatibility code. The functions are invoked via thunking by using [EFI_LEGACY_BIOS_PROTOCOL.FarCall86\(\)](#) with the 32-bit physical entry point.

Definition at line 48 of file LegacyBios.h.

13.22.2 Member Data Documentation

13.22.2.1 AcpiRsdPtrPointer

```
UINT32 EFI_COMPATIBILITY16_TABLE::AcpiRsdPtrPointer
```

The 32-bit physical address where ACPI RSD PTR is stored within the traditional BIOS.

The remainder of the ACPI tables are located at their EFI addresses. The size reserved is the maximum for ACPI 2.0. The EfiCompatibility will fill in the ACPI RSD PTR with either the ACPI 1.0b or 2.0 values.

Definition at line 129 of file LegacyBios.h.

13.22.2.2 E820Pointer

```
UINT32 EFI_COMPATIBILITY16_TABLE::E820Pointer
```

The 32-bit physical address where INT15 E820 data is stored within the traditional BIOS.

The EfiCompatibility code will fill in the E820Pointer value and copy the data to the indicated area.

Definition at line 141 of file LegacyBios.h.

13.22.2.3 EfiSystemTable

```
UINT32 EFI_COMPATIBILITY16_TABLE::EfiSystemTable
```

EFI system resources table.

Type `EFI_SYSTEM_TABLE` is defined in the IntelPlatform Innovation Framework for EFI Driver Execution Environment Core Interface Specification (DXE CIS).

Definition at line 116 of file LegacyBios.h.

13.22.2.4 HiPermanentMemoryAddress

```
UINT32 EFI_COMPATIBILITY16_TABLE::HiPermanentMemoryAddress
```

Start Address of high memory that can be used for permanent allocation.

If zero, high memory is not available for permanent allocation.

Definition at line 249 of file LegacyBios.h.

13.22.2.5 HiPermanentMemorySize

```
UINT32 EFI_COMPATIBILITY16_TABLE::HiPermanentMemorySize
```

Size of high memory that can be used for permanent allocation in bytes.

If zero, high memory is not available for permanent allocation.

Definition at line 255 of file LegacyBios.h.

13.22.2.6 IrqRoutingTablePointer

```
UINT32 EFI_COMPATIBILITY16_TABLE::IrqRoutingTablePointer
```

The 32-bit physical address where the \$PIR table is stored in the traditional BIOS.

The EfiCompatibility code will fill in the IrqRoutingTablePointer value and copy the data to the indicated area.

Definition at line 153 of file LegacyBios.h.

13.22.2.7 MpTablePtr

```
UINT32 EFI_COMPATIBILITY16_TABLE::MpTablePtr
```

The 32-bit physical address where the MP table is stored in the traditional BIOS.

The EfiCompatibility code will fill in the MpTablePtr value and copy the data to the indicated area.

Definition at line 165 of file LegacyBios.h.

13.22.2.8 OemIdStringPointer

```
UINT32 EFI_COMPATIBILITY16_TABLE::OemIdStringPointer
```

The address of an OEM-provided identifier string.

The string is null terminated.

Definition at line 121 of file LegacyBios.h.

13.22.2.9 OemRevision

```
UINT16 EFI_COMPATIBILITY16_TABLE::OemRevision
```

The OEM revision number.

Usage is undefined but provided for OEM module usage.

Definition at line 134 of file LegacyBios.h.

13.22.2.10 PciExpressBase

```
UINT32 EFI_COMPATIBILITY16_TABLE::PciExpressBase
```

This field is NULL for all systems not supporting PCI Express.

This field is the base value of the start of the PCI Express memory-mapped configuration registers and must be filled in prior to EfiCompatibility code issuing the Compatibility16 function `Compatibility16InitializeYourself()`. `Compatibility16InitializeYourself()` is defined in `Compatibility16 Functions`.

Definition at line 225 of file `LegacyBios.h`.

13.22.2.11 Signature

```
UINT32 EFI_COMPATIBILITY16_TABLE::Signature
```

The string "\$EFI" denotes the start of the EfiCompatibility table.

Byte 0 is "I," byte 1 is "F," byte 2 is "E," and byte 3 is "\$" and is normally accessed as a DWORD or UINT32.

Definition at line 53 of file `LegacyBios.h`.

13.22.2.12 UmaAddress

```
UINT32 EFI_COMPATIBILITY16_TABLE::UmaAddress
```

Start Address of Upper Memory Area (UMA) to be set as Read/Write.

If `UmaAddress` is a valid address in the shadow RAM, it also indicates that the region from `0xC0000` to `(UmaAddress - 1)` can be used for Option ROM.

Definition at line 237 of file `LegacyBios.h`.

13.22.2.13 UmaSize

```
UINT32 EFI_COMPATIBILITY16_TABLE::UmaSize
```

Upper Memory Area size in bytes to be set as Read/Write.

If zero, no UMA region will be set as Read/Write (i.e. all Shadow RAM is set as Read-Only).

Definition at line 243 of file `LegacyBios.h`.

The documentation for this struct was generated from the following file:

- [LegacyBios.h](#)

13.23 EFI_DISPATCH_OPROM_TABLE Struct Reference

[EFI_DISPATCH_OPROM_TABLE](#).

```
#include <LegacyBios.h>
```

Public Attributes

- `UINT16` [PnPInstallationCheckSegment](#)
A pointer to the `PnPInstallationCheck` data structure.
- `UINT16` [PnPInstallationCheckOffset](#)
A pointer to the `PnPInstallationCheck` data structure.
- `UINT16` [OpromSegment](#)

- The segment where the OpROM was placed. Offset is assumed to be 3.*

 - [UINT8 PciBus](#)
 - The PCI bus.*
 - [UINT8 PciDeviceFunction](#)
 - The PCI device * 0x08 | PCI function.*
 - [UINT8 NumberBbsEntries](#)
 - The number of valid BBS table entries upon entry and exit.*
 - [UINT32 BbsTablePointer](#)
 - A pointer to the BBS table.*
 - [UINT16 RuntimeSegment](#)
 - The segment where the OpROM can be relocated to.*

13.23.1 Detailed Description

[EFI_DISPATCH_OPROM_TABLE](#).

Definition at line 376 of file LegacyBios.h.

13.23.2 Member Data Documentation

13.23.2.1 NumberBbsEntries

```
UINT8 EFI_DISPATCH_OPROM_TABLE::NumberBbsEntries
```

The number of valid BBS table entries upon entry and exit.

The IBV code may increase this number, if BBS-compliant devices also hook INTs in order to force the OpROM BIOS Setup to be executed.

Definition at line 382 of file LegacyBios.h.

13.23.2.2 RuntimeSegment

```
UINT16 EFI_DISPATCH_OPROM_TABLE::RuntimeSegment
```

The segment where the OpROM can be relocated to.

If this value is 0x0000, this means that the relocation of this run time code is not supported. Inconsistent with specification here: The member's name "OpromDestinationSegment" [defined in Intel Framework Compatibility Support Module Specification / 0.97 version] has been changed to "RuntimeSegment" since keeping backward compatible.

Definition at line 386 of file LegacyBios.h.

The documentation for this struct was generated from the following file:


- [LegacyBios.h](#)

13.24 EFI_DWORD_REGS Struct Reference

[EFI_DWORD_REGS](#).

```
#include <LegacyBios.h>
```

Collaboration diagram for EFI_DWORD_REGS:

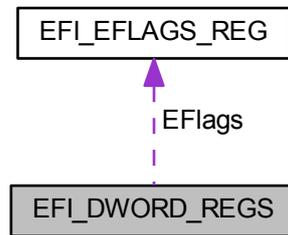

13.24.1 Detailed Description

[EFI_DWORD_REGS](#).

Definition at line 1048 of file LegacyBios.h.

The documentation for this struct was generated from the following file:

- [LegacyBios.h](#)

13.25 EFI_EFLAGS_REG Struct Reference

[EFI_EFLAGS_REG](#).

```
#include <LegacyBios.h>
```

13.25.1 Detailed Description

[EFI_EFLAGS_REG](#).

Definition at line 1025 of file LegacyBios.h.

The documentation for this struct was generated from the following file:

- [LegacyBios.h](#)

13.26 EFI_FLAGS_REG Struct Reference

[EFI_FLAGS_REG](#).

```
#include <LegacyBios.h>
```

13.26.1 Detailed Description

[EFI_FLAGS_REG](#).

Definition at line 1069 of file LegacyBios.h.

The documentation for this struct was generated from the following file:


- [LegacyBios.h](#)

13.27 EFI_IA32_REGISTER_SET Union Reference

[EFI_IA32_REGISTER_SET](#).

```
#include <LegacyBios.h>
```

Collaboration diagram for `EFI_IA32_REGISTER_SET`:

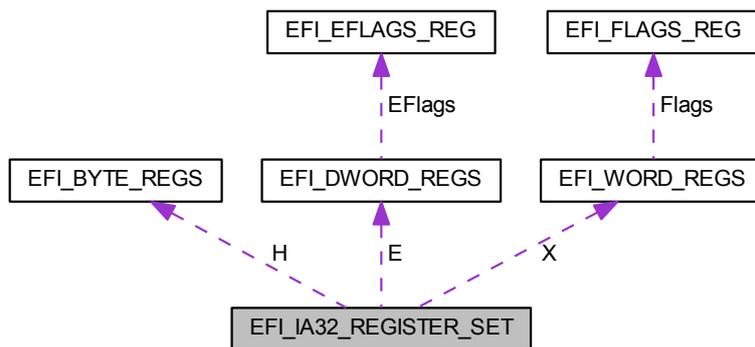

13.27.1 Detailed Description

[EFI_IA32_REGISTER_SET](#).

Definition at line 1134 of file `LegacyBios.h`.

The documentation for this union was generated from the following file:

- [LegacyBios.h](#)

13.28 EFI_LEGACY_INSTALL_PCI_HANDLER Struct Reference

[EFI_LEGACY_INSTALL_PCI_HANDLER](#).

```
#include <LegacyBios.h>
```

Public Attributes

- `UINT8` [PciBus](#)
The PCI bus of the device.
- `UINT8` [PciDeviceFun](#)
The PCI device in bits 7:3 and function in bits 2:0.
- `UINT8` [PciSegment](#)
The PCI segment of the device.
- `UINT8` [PciClass](#)
The PCI class code of the device.

- UINT8 [PciSubclass](#)
The PCI subclass code of the device.
- UINT8 [PciInterface](#)
The PCI interface code of the device.
- UINT8 [PrimaryIrq](#)
The primary device IRQ.
- UINT8 [PrimaryReserved](#)
Reserved.
- UINT16 [PrimaryControl](#)
The primary device control I/O base.
- UINT16 [PrimaryBase](#)
The primary device I/O base.
- UINT16 [PrimaryBusMaster](#)
The primary device bus master I/O base.
- UINT8 [SecondaryIrq](#)
The secondary device IRQ.
- UINT8 [SecondaryReserved](#)
Reserved.
- UINT16 [SecondaryControl](#)
The secondary device control I/O base.
- UINT16 [SecondaryBase](#)
The secondary device I/O base.
- UINT16 [SecondaryBusMaster](#)
The secondary device bus master I/O base.

13.28.1 Detailed Description

[EFI_LEGACY_INSTALL_PCI_HANDLER.](#)

Definition at line 965 of file LegacyBios.h.

The documentation for this struct was generated from the following file:


- [LegacyBios.h](#)

13.29 EFI_TO_COMPATIBILITY16_BOOT_TABLE Struct Reference

[EFI_TO_COMPATIBILITY16_BOOT_TABLE.](#)

```
#include <LegacyBios.h>
```

Collaboration diagram for `EFI_TO_COMPATIBILITY16_BOOT_TABLE`:

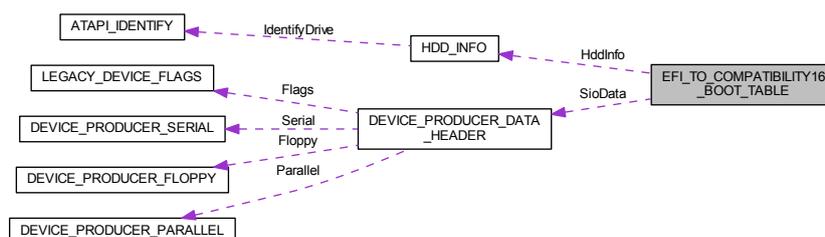

Public Attributes

- UUINT16 [MajorVersion](#)
The EfiCompatibility major version number.
- UUINT16 [MinorVersion](#)
The EfiCompatibility minor version number.
- UUINT32 [AcpiTable](#)
The location of the RSDT ACPI table. < 4G range.
- UUINT32 [SmbiosTable](#)
The location of the SMBIOS table in EFI memory. < 4G range.
- [DEVICE_PRODUCER_DATA_HEADER SioData](#)
Standard traditional device information.
- UUINT16 [DevicePathType](#)
The default boot type.
- UUINT16 [PciIrqMask](#)
Mask of which IRQs have been assigned to PCI.
- UUINT32 [NumberE820Entries](#)
Number of E820 entries.
- [HDD_INFO HddInfo](#) [MAX_IDE_CONTROLLER]
Hard disk drive information, including raw Identify Drive data.
- UUINT32 [NumberBbsEntries](#)
Number of entries in the BBS table.
- UUINT32 [BbsTable](#)
A pointer to the BBS table. Type [BBS_TABLE](#) is defined below.
- UUINT32 [SmmTable](#)
A pointer to the SMM table. Type [SMM_TABLE](#) is defined below.
- UUINT32 [OsMemoryAbove1Mb](#)
The amount of usable memory above 1 MB, i.e.
- UUINT32 [UnconventionalDeviceTable](#)
Information to boot off an unconventional device like a PARTIES partition.

13.29.1 Detailed Description

[EFI_TO_COMPATIBILITY16_BOOT_TABLE](#).

Definition at line 934 of file LegacyBios.h.

13.29.2 Member Data Documentation

13.29.2.1 NumberE820Entries

```
UUINT32 EFI_TO_COMPATIBILITY16_BOOT_TABLE::NumberE820Entries
```

Number of E820 entries.

The number can change from the Compatibility16InitializeYourself() function.

Definition at line 946 of file LegacyBios.h.

13.29.2.2 OsMemoryAbove1Mb

UINT32 EFI_TO_COMPATIBILITY16_BOOT_TABLE::OsMemoryAbove1Mb

The amount of usable memory above 1 MB, i.e.

E820 type 1 memory. This value can differ from the value in [EFI_TO_COMPATIBILITY16_INIT_TABLE](#) as more memory may have been discovered.

Definition at line 955 of file LegacyBios.h.

13.29.2.3 UnconventionalDeviceTable

UINT32 EFI_TO_COMPATIBILITY16_BOOT_TABLE::UnconventionalDeviceTable

Information to boot off an unconventional device like a PARTIES partition.

Type [UD_TABLE](#) is defined below.

Definition at line 958 of file LegacyBios.h.

The documentation for this struct was generated from the following file:

- [LegacyBios.h](#)

13.30 EFI_TO_COMPATIBILITY16_INIT_TABLE Struct Reference

[EFI_TO_COMPATIBILITY16_INIT_TABLE](#).

```
#include <LegacyBios.h>
```

Public Attributes

- [UINT32 BiosLessThan1MB](#)
Starting address of memory under 1 MB.
- [UINT32 HiPmmMemory](#)
The starting address of the high memory block.
- [UINT32 HiPmmMemorySizeInBytes](#)
The length of high memory block.
- [UINT16 ReverseThunkCallSegment](#)
The segment of the reverse thunk call code.
- [UINT16 ReverseThunkCallOffset](#)
The offset of the reverse thunk call code.
- [UINT32 NumberE820Entries](#)
The number of E820 entries copied to the Compatibility16 BIOS.
- [UINT32 OsMemoryAbove1Mb](#)
The amount of usable memory above 1 MB, e.g., E820 type 1 memory.
- [UINT32 ThunkStart](#)
The start of thunk code in main memory.
- [UINT32 ThunkSizeInBytes](#)
The size of the thunk code.
- [UINT32 LowPmmMemory](#)
Starting address of memory under 1 MB.
- [UINT32 LowPmmMemorySizeInBytes](#)
The length of low Memory block.

13.30.1 Detailed Description

[EFI_TO_COMPATIBILITY16_INIT_TABLE](#).

Definition at line 397 of file LegacyBios.h.

13.30.2 Member Data Documentation

13.30.2.1 BiosLessThan1MB

```
UINT32 EFI_TO_COMPATIBILITY16_INIT_TABLE::BiosLessThan1MB
```

Starting address of memory under 1 MB.

The ending address is assumed to be 640 KB or 0x9FFFF.

Definition at line 401 of file LegacyBios.h.

13.30.2.2 ThunkStart

```
UINT32 EFI_TO_COMPATIBILITY16_INIT_TABLE::ThunkStart
```

The start of thunk code in main memory.

Memory cannot be used by BIOS or PMM.

Definition at line 436 of file LegacyBios.h.

The documentation for this struct was generated from the following file:


- [LegacyBios.h](#)

13.31 EFI_WORD_REGS Struct Reference

[EFI_WORD_REGS](#).

```
#include <LegacyBios.h>
```

Collaboration diagram for EFI_WORD_REGS:

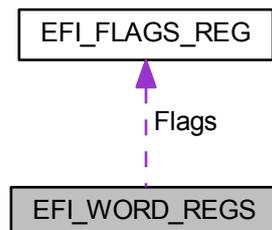

13.31.1 Detailed Description

[EFI_WORD_REGS](#).

Definition at line 1090 of file LegacyBios.h.

The documentation for this struct was generated from the following file:

- [LegacyBios.h](#)

13.32 FSP_ERROR_INFO_HOB Struct Reference

FSP Error Information Block.

```
#include <FspErrorInfo.h>
```

Public Attributes

- [EFI_HOB_GUID_TYPE](#) [GuidHob](#)
GUID HOB header.
- [EFI_STATUS_CODE_TYPE](#) [Type](#)
ReportStatusCode () type identifier.
- [EFI_STATUS_CODE_VALUE](#) [Value](#)
ReportStatusCode () value.
- [UINT32](#) [Instance](#)
ReportStatusCode () Instance number.
- [EFI_GUID](#) [CallerId](#)
Optional GUID which may be used to identify which internal component of the FSP was executing at the time of the error.
- [EFI_GUID](#) [ErrorType](#)
GUID identifying the nature of the fatal error.
- [UINT32](#) [Status](#)
EFI_STATUS code describing the error encountered.

13.32.1 Detailed Description

FSP Error Information Block.

Definition at line 60 of file FspErrorInfo.h.

The documentation for this struct was generated from the following file:

- [FspErrorInfo.h](#)

13.33 FSP_M_CONFIG Struct Reference

Fsp M Configuration.

```
#include <FspmUpd.h>
```

Public Attributes

- UUINT64 [PlatformMemorySize](#)
Offset 0x0040 - Platform Reserved Memory Size The minimum platform memory size required to pass control into DXE.
- UUINT32 [MemorySpdPtr00](#)
Offset 0x0048 - Memory SPD Pointer Channel 0 Dimm 0 Pointer to SPD data, will be used only when SpdAddress↔ Table SPD Address are marked as 00.
- UUINT32 [MemorySpdPtr01](#)
Offset 0x004C - Memory SPD Pointer Channel 0 Dimm 1 Pointer to SPD data, will be used only when SpdAddress↔ Table SPD Address are marked as 00.
- UUINT32 [MemorySpdPtr10](#)
Offset 0x0050 - Memory SPD Pointer Channel 1 Dimm 0 Pointer to SPD data, will be used only when SpdAddress↔ Table SPD Address are marked as 00.
- UUINT32 [MemorySpdPtr11](#)
Offset 0x0054 - Memory SPD Pointer Channel 1 Dimm 1 Pointer to SPD data, will be used only when SpdAddress↔ Table SPD Address are marked as 00.
- UUINT16 [MemorySpdDataLen](#)
Offset 0x0058 - SPD Data Length Length of SPD Data 0x100:256 Bytes, 0x200:512 Bytes.
- UUINT8 [DqByteMapCh0](#) [12]
Offset 0x005A - Dq Byte Map CH0 Dq byte mapping between CPU and DRAM, Channel 0: board-dependent.
- UUINT8 [DqByteMapCh1](#) [12]
Offset 0x0066 - Dq Byte Map CH1 Dq byte mapping between CPU and DRAM, Channel 1: board-dependent.
- UUINT8 [DqsMapCpu2DramCh0](#) [8]
Offset 0x0072 - Dqs Map CPU to DRAM CH 0 Set Dqs mapping relationship between CPU and DRAM, Channel 0: board-dependent.
- UUINT8 [DqsMapCpu2DramCh1](#) [8]
Offset 0x007A - Dqs Map CPU to DRAM CH 1 Set Dqs mapping relationship between CPU and DRAM, Channel 1: board-dependent.
- UUINT16 [RcompResistor](#) [3]
Offset 0x0082 - RcompResistor settings Indicates RcompResistor settings: CML - 0's means MRC auto configured based on Design Guidelines, otherwise input an Ohmic value per segment.
- UUINT16 [RcompTarget](#) [5]
Offset 0x0088 - RcompTarget settings RcompTarget settings: CML - 0's mean MRC auto configured based on Design Guidelines, otherwise input an Ohmic value per segment.
- UUINT8 [DqPinsInterleaved](#)
Offset 0x0092 - Dqs Pins Interleaved Setting Indicates DqPinsInterleaved setting: board-dependent \$EN_DIS.
- UUINT8 [CaVrefConfig](#)
Offset 0x0093 - VREF_CA CA Vref routing: board-dependent 0:VREF_CA goes to both CH_A and CH_B, 1: VRE↔ F_CA to CH_A and VREF_DQ_A to CH_B, 2:VREF_CA to CH_A and VREF_DQ_B to CH_B.
- UUINT8 [SmramMask](#)
Offset 0x0094 - Smram Mask The SMM Regions AB-SEG and/or H-SEG reserved 0: Neither, 1:AB-SEG, 2:H-SEG, 3: Both.
- UUINT8 [MrcTimeMeasure](#)
Offset 0x0095 - Time Measure Time Measure: 0(Default)=Disable, 1=Enable \$EN_DIS.
- UUINT8 [MrcFastBoot](#)
Offset 0x0096 - MRC Fast Boot Enables/Disable the MRC fast path thru the MRC \$EN_DIS.
- UUINT8 [RmtPerTask](#)
Offset 0x0097 - Rank Margin Tool per Task This option enables the user to execute Rank Margin Tool per major training step in the MRC.
- UUINT8 [TrainTrace](#)
Offset 0x0098 - Training Trace This option enables the trained state tracing feature in MRC.
- UUINT8 [UnusedUpdSpace0](#) [3]

- Offset 0x0099.*

 - UINT32 **ledSize**

*Offset 0x009C - Intel Enhanced Debug Intel Enhanced Debug (IED): 0=Disabled, 0x400000=Enabled and 4MB S←
MRAM occupied 0 : Disable, 0x400000 : Enable.*
 - UINT32 **TsegSize**

Offset 0x00A0 - Tseg Size Size of SMRAM memory reserved.
 - UINT16 **MmioSize**

Offset 0x00A4 - MMIO Size Size of MMIO space reserved for devices.
 - UINT8 **ProbelessTrace**

Offset 0x00A6 - Probeless Trace Probeless Trace: 0=Disabled, 1=Enable.
 - UINT8 **GdxcIotSize**

Offset 0x00A7 - GDXC IOT SIZE Size of IOT and MOT is in 8 MB chunks.
 - UINT8 **GdxcMotSize**

Offset 0x00A8 - GDXC MOT SIZE Size of IOT and MOT is in 8 MB chunks.
 - UINT8 **SpdAddressTable** [4]

Offset 0x00A9 - Spd Address Tabl Specify SPD Address table for CH0D0/CH0D1/CH1D0&CH1D1.
 - UINT8 **IgdVmt50PreAlloc**

Offset 0x00AD - Internal Graphics Pre-allocated Memory Size of memory preallocated for internal graphics.
 - UINT8 **InternalGfx**

Offset 0x00AE - Internal Graphics Enable/disable internal graphics.
 - UINT8 **ApertureSize**

Offset 0x00AF - Aperture Size Select the Aperture Size.
 - UINT8 **UserBd**

*Offset 0x00B0 - Board Type MrcBoardType, Options are 0=Mobile/Mobile Halo, 1=Desktop/DT Halo, 5=ULT/ULX/←
Mobile Halo, 7=UP Server 0:Mobile/Mobile Halo, 1:Desktop/DT Halo, 5:ULT/ULX/Mobile Halo, 7:UP Server.*
 - UINT8 **SaGv**

*Offset 0x00B1 - SA GV System Agent dynamic frequency support and when enabled memory will be training at two
different frequencies.*
 - UINT16 **DdrFreqLimit**

Offset 0x00B2 - DDR Frequency Limit Maximum Memory Frequency Selections in Mhz.
 - UINT16 **FreqSaGvLow**

Offset 0x00B4 - Low Frequency SAGV Low Frequency Selections in Mhz.
 - UINT8 **RMT**

Offset 0x00B6 - Rank Margin Tool Enable/disable Rank Margin Tool.
 - UINT8 **DisableDimmChannel0**

*Offset 0x00B7 - Channel A DIMM Control Channel A DIMM Control Support - Enable or Disable Dimms on Channel
A.*
 - UINT8 **DisableDimmChannel1**

*Offset 0x00B8 - Channel B DIMM Control Channel B DIMM Control Support - Enable or Disable Dimms on Channel
B.*
 - UINT8 **ScramblerSupport**

Offset 0x00B9 - Scrambler Support This option enables data scrambling in memory.
 - UINT8 **SkipMplnit**

*Offset 0x00BA - Skip Multi-Processor Initialization When this is skipped, boot loader must initialize processors before
SilicionInit API.*
 - UINT8 **SpdProfileSelected**

Offset 0x00BB - SPD Profile Selected Select DIMM timing profile.
 - UINT8 **RefClk**

Offset 0x00BC - Memory Reference Clock 100MHz, 133MHz.
 - UINT8 **UnusedUpdSpace1**

Offset 0x00BD.
 - UINT16 **VddVoltage**
-

- Offset 0x00BE - Memory Voltage Memory Voltage Override (Vddq).
- UINT8 [Ratio](#)
 - Offset 0x00C0 - Memory Ratio Automatic or the frequency will equal ratio times reference clock.
- UINT8 [OddRatioMode](#)
 - Offset 0x00C1 - QCLK Odd Ratio Adds 133 or 100 MHz to QCLK frequency, depending on RefClk \$EN_DIS.
- UINT8 [tCL](#)
 - Offset 0x00C2 - tCL CAS Latency, 0: AUTO, max: 31.
- UINT8 [tCWL](#)
 - Offset 0x00C3 - tCWL Min CAS Write Latency Delay Time, 0: AUTO, max: 34.
- UINT8 [tRCDtRP](#)
 - Offset 0x00C4 - tRCD/tRP RAS to CAS delay time and Row Precharge delay time, 0: AUTO, max: 63.
- UINT8 [tRRD](#)
 - Offset 0x00C5 - tRRD Min Row Active to Row Active Delay Time, 0: AUTO, max: 15.
- UINT16 [tFAW](#)
 - Offset 0x00C6 - tFAW Min Four Activate Window Delay Time, 0: AUTO, max: 63.
- UINT16 [tRAS](#)
 - Offset 0x00C8 - tRAS RAS Active Time, 0: AUTO, max: 64.
- UINT16 [tREFI](#)
 - Offset 0x00CA - tREFI Refresh Interval, 0: AUTO, max: 65535.
- UINT16 [tRFC](#)
 - Offset 0x00CC - tRFC Min Refresh Recovery Delay Time, 0: AUTO, max: 1023.
- UINT8 [tRTP](#)
 - Offset 0x00CE - tRTP Min Internal Read to Precharge Command Delay Time, 0: AUTO, max: 15.
- UINT8 [tWR](#)
 - Offset 0x00CF - tWR Min Write Recovery Time, 0: AUTO, legal values: 5, 6, 7, 8, 10, 12, 14, 16, 18, 20, 24, 30, 34, 40 0:Auto, 5:5, 6:6, 7:7, 8:8, 10:10, 12:12, 14:14, 16:16, 18:18, 20:20, 24:24, 30:30, 34:34, 40:40.
- UINT8 [tWTR](#)
 - Offset 0x00D0 - tWTR Min Internal Write to Read Command Delay Time, 0: AUTO, max: 28.
- UINT8 [NModeSupport](#)
 - Offset 0x00D1 - NMode System command rate, range 0-2, 0 means auto, 1 = 1N, 2 = 2N.
- UINT8 [DIIbWEn0](#)
 - Offset 0x00D2 - DIIbWEn[0] DIIbWEn[0], for 1067 (0..7)
- UINT8 [DIIbWEn1](#)
 - Offset 0x00D3 - DIIbWEn[1] DIIbWEn[1], for 1333 (0..7)
- UINT8 [DIIbWEn2](#)
 - Offset 0x00D4 - DIIbWEn[2] DIIbWEn[2], for 1600 (0..7)
- UINT8 [DIIbWEn3](#)
 - Offset 0x00D5 - DIIbWEn[3] DIIbWEn[3], for 1867 and up (0..7)
- UINT8 [IsvtIoPort](#)
 - Offset 0x00D6 - ISVT IO Port Address ISVT IO Port Address.
- UINT8 [MarginLimitCheck](#)
 - Offset 0x00D7 - Margin Limit Check Margin Limit Check.
- UINT16 [MarginLimitL2](#)
 - Offset 0x00D8 - Margin Limit L2 % of L1 check for margin limit check.
- UINT8 [CpuTraceHubMode](#)
 - Offset 0x00DA - CPU Trace Hub Mode Select 'Target Debugger' if Trace Hub is used by target debugger software or 'Disable' trace hub functionality.
- UINT8 [CpuTraceHubMemReg0Size](#)
 - Offset 0x00DB - CPU Trace Hub Memory Region 0 CPU Trace Hub Memory Region 0, The available memory size is : 0MB, 1MB, 8MB, 64MB, 128MB, 256MB, 512MB.
- UINT8 [CpuTraceHubMemReg1Size](#)

- Offset 0x00DC - CPU Trace Hub Memory Region 1 CPU Trace Hub Memory Region 1.*
 - UINT8 [PeciC10Reset](#)

Offset 0x00DD - Enable or Disable Peci C10 Reset command Enable or Disable Peci C10 Reset command.
 - UINT8 [PeciSxReset](#)

*Offset 0x00DE - Enable or Disable Peci Sx Reset command Enable or Disable Peci Sx Reset command; **0: Disable;** 1: Enable.*
 - UINT8 [HeciTimeouts](#)

Offset 0x00DF - HECI Timeouts 0: Disable, 1: Enable (Default) timeout check for HECI \$EN_DIS.
 - UINT32 [Heci1BarAddress](#)

Offset 0x00E0 - HECI1 BAR address BAR address of HECI1.
 - UINT32 [Heci2BarAddress](#)

Offset 0x00E4 - HECI2 BAR address BAR address of HECI2.
 - UINT32 [Heci3BarAddress](#)

Offset 0x00E8 - HECI3 BAR address BAR address of HECI3.
 - UINT16 [SgDelayAfterPwrEn](#)

Offset 0x00EC - SG dGPU Power Delay SG dGPU delay interval after power enabling: 0=Minimal, 1000=Maximum, default is 300=300 microseconds.
 - UINT16 [SgDelayAfterHoldReset](#)

Offset 0x00EE - SG dGPU Reset Delay SG dGPU delay interval for Reset complete: 0=Minimal, 1000=Maximum, default is 100=100 microseconds.
 - UINT16 [MmioSizeAdjustment](#)

Offset 0x00F0 - MMIO size adjustment for AUTO mode Positive number means increasing MMIO size, Negative value means decreasing MMIO size: 0 (Default)=no change to AUTO mode MMIO size.
 - UINT8 [DmiGen3ProgramStaticEq](#)

Offset 0x00F2 - Enable/Disable DMI GEN3 Static EQ Phase1 programming Program DMI Gen3 EQ Phase1 Static Presets.
 - UINT8 [Peg0Enable](#)

Offset 0x00F3 - Enable/Disable PEG 0 Disabled(0x0): Disable PEG Port, Enabled(0x1): Enable PEG Port (If Silicon SKU permits it), Auto(0x2)(Default): If an endpoint is present, enable the PEG Port, Disable otherwise 0:Disable, 1:Enable, 2:AUTO.
 - UINT8 [Peg1Enable](#)

Offset 0x00F4 - Enable/Disable PEG 1 Disabled(0x0): Disable PEG Port, Enabled(0x1): Enable PEG Port (If Silicon SKU permits it), Auto(0x2)(Default): If an endpoint is present, enable the PEG Port, Disable otherwise 0:Disable, 1:Enable, 2:AUTO.
 - UINT8 [Peg2Enable](#)

Offset 0x00F5 - Enable/Disable PEG 2 Disabled(0x0): Disable PEG Port, Enabled(0x1): Enable PEG Port (If Silicon SKU permits it), Auto(0x2)(Default): If an endpoint is present, enable the PEG Port, Disable otherwise 0:Disable, 1:Enable, 2:AUTO.
 - UINT8 [Peg3Enable](#)

Offset 0x00F6 - Enable/Disable PEG 3 Disabled(0x0): Disable PEG Port, Enabled(0x1): Enable PEG Port (If Silicon SKU permits it), Auto(0x2)(Default): If an endpoint is present, enable the PEG Port, Disable otherwise 0:Disable, 1:Enable, 2:AUTO.
 - UINT8 [Peg0MaxLinkSpeed](#)

Offset 0x00F7 - PEG 0 Max Link Speed Auto (Default)(0x0): Maximum possible link speed, Gen1(0x1): Limit Link to Gen1 Speed, Gen2(0x2): Limit Link to Gen2 Speed, Gen3(0x3):Limit Link to Gen3 Speed 0:Auto, 1:Gen1, 2:Gen2, 3:Gen3.
 - UINT8 [Peg1MaxLinkSpeed](#)

Offset 0x00F8 - PEG 1 Max Link Speed Auto (Default)(0x0): Maximum possible link speed, Gen1(0x1): Limit Link to Gen1 Speed, Gen2(0x2): Limit Link to Gen2 Speed, Gen3(0x3):Limit Link to Gen3 Speed 0:Auto, 1:Gen1, 2:Gen2, 3:Gen3.
 - UINT8 [Peg2MaxLinkSpeed](#)

Offset 0x00F9 - PEG 2 Max Link Speed Auto (Default)(0x0): Maximum possible link speed, Gen1(0x1): Limit Link to Gen1 Speed, Gen2(0x2): Limit Link to Gen2 Speed, Gen3(0x3):Limit Link to Gen3 Speed 0:Auto, 1:Gen1, 2:Gen2, 3:Gen3.
 - UINT8 [Peg3MaxLinkSpeed](#)
-

- Offset 0x00FA - PEG 3 Max Link Speed Auto (Default)(0x0): Maximum possible link speed, Gen1(0x1): Limit Link to Gen1 Speed, Gen2(0x2): Limit Link to Gen2 Speed, Gen3(0x3):Limit Link to Gen3 Speed 0:Auto, 1:Gen1, 2:Gen2, 3:Gen3.
- UINT8 [Peg0MaxLinkWidth](#)
Offset 0x00FB - PEG 0 Max Link Width Auto (Default)(0x0): Maximum possible link width, (0x1): Limit Link to x1, (0x2): Limit Link to x2, (0x3):Limit Link to x4, (0x4): Limit Link to x8 0:Auto, 1:x1, 2:x2, 3:x4, 4:x8.
 - UINT8 [Peg1MaxLinkWidth](#)
Offset 0x00FC - PEG 1 Max Link Width Auto (Default)(0x0): Maximum possible link width, (0x1): Limit Link to x1, (0x2): Limit Link to x2, (0x3):Limit Link to x4 0:Auto, 1:x1, 2:x2, 3:x4.
 - UINT8 [Peg2MaxLinkWidth](#)
Offset 0x00FD - PEG 2 Max Link Width Auto (Default)(0x0): Maximum possible link width, (0x1): Limit Link to x1, (0x2): Limit Link to x2 0:Auto, 1:x1, 2:x2.
 - UINT8 [Peg3MaxLinkWidth](#)
Offset 0x00FE - PEG 3 Max Link Width Auto (Default)(0x0): Maximum possible link width, (0x1): Limit Link to x1, (0x2): Limit Link to x2 0:Auto, 1:x1, 2:x2.
 - UINT8 [Peg0PowerDownUnusedLanes](#)
Offset 0x00FF - Power down unused lanes on PEG 0 (0x0): Do not power down any lane, (0x1): Bios will power down unused lanes based on the max possible link width 0:No power saving, 1:Auto.
 - UINT8 [Peg1PowerDownUnusedLanes](#)
Offset 0x0100 - Power down unused lanes on PEG 1 (0x0): Do not power down any lane, (0x1): Bios will power down unused lanes based on the max possible link width 0:No power saving, 1:Auto.
 - UINT8 [Peg2PowerDownUnusedLanes](#)
Offset 0x0101 - Power down unused lanes on PEG 2 (0x0): Do not power down any lane, (0x1): Bios will power down unused lanes based on the max possible link width 0:No power saving, 1:Auto.
 - UINT8 [Peg3PowerDownUnusedLanes](#)
Offset 0x0102 - Power down unused lanes on PEG 3 (0x0): Do not power down any lane, (0x1): Bios will power down unused lanes based on the max possible link width 0:No power saving, 1:Auto.
 - UINT8 [InitPcieAspmAfterOprom](#)
Offset 0x0103 - PCIe ASPM programming will happen in relation to the Oprom Select when PCIe ASPM programming will happen in relation to the Oprom.
 - UINT8 [PegDisableSpreadSpectrumClocking](#)
Offset 0x0104 - PCIe Disable Spread Spectrum Clocking PCIe Disable Spread Spectrum Clocking.
 - UINT8 [DmiGen3RootPortPreset](#) [8]
Offset 0x0105 - DMI Gen3 Root port preset values per lane Used for programming DMI Gen3 preset values per lane.
 - UINT8 [DmiGen3EndPointPreset](#) [8]
Offset 0x010D - DMI Gen3 End port preset values per lane Used for programming DMI Gen3 preset values per lane.
 - UINT8 [DmiGen3EndPointHint](#) [8]
Offset 0x0115 - DMI Gen3 End port Hint values per lane Used for programming DMI Gen3 Hint values per lane.
 - UINT8 [DmiGen3RxCtlePeaking](#) [4]
Offset 0x011D - DMI Gen3 RxCTLEp per-Bundle control Range: 0-15, 0 is default for each bundle, must be specified based upon platform design.
 - UINT8 [TvbRatioClipping](#)
Offset 0x0121 - Thermal Velocity Boost Ratio clipping 0(Default): Disabled, 1: Enabled.
 - UINT8 [TvbVoltageOptimization](#)
Offset 0x0122 - Thermal Velocity Boost voltage optimization 0: Disabled, 1: Enabled(Default).
 - UINT8 [PegGen3RxCtlePeaking](#) [10]
Offset 0x0123 - PEG Gen3 RxCTLEp per-Bundle control Range: 0-15, 12 is default for each bundle, must be specified based upon platform design.
 - UINT8 [UnusedUpdSpace2](#) [3]
Offset 0x012D.
 - UINT32 [PegDataPtr](#)
Offset 0x0130 - Memory data pointer for saved preset search results The reference code will store the Gen3 Preset Search results in the SaDataHob's PegData structure (SA_PEG_DATA) and platform code can save/restore this data to skip preset search in the following boots.

- UINT8 [PegGpioData](#) [28]

Offset 0x0134 - PEG PERST# GPIO information The reference code will use the information in this structure in order to reset PCIe Gen3 devices during equalization, if necessary.
 - UINT8 [PegRootPortHPE](#) [4]

Offset 0x0150 - PCIe Hot Plug Enable/Disable per port 0(Default): Disable, 1: Enable.
 - UINT8 [DmiDeEmphasis](#)

Offset 0x0154 - DeEmphasis control for DMI DeEmphasis control for DMI.
 - UINT8 [PrimaryDisplay](#)

Offset 0x0155 - Selection of the primary display device 0=iGFX, 1=PEG, 2=PCIe Graphics on PCH, 3(Default)=AUTO, 4=Switchable Graphics 0:iGFX, 1:PEG, 2:PCIe Graphics on PCH, 3:AUTO, 4:Switchable Graphics.
 - UINT16 [GttSize](#)

Offset 0x0156 - Selection of iGFX GTT Memory size 1=2MB, 2=4MB, 3=8MB, Default is 3 1:2MB, 2:4MB, 3:8MB.
 - UINT32 [GmAdr](#)

Offset 0x0158 - Temporary MMIO address for GMADR The reference code will use this as Temporary MMIO address space to access GMADR Registers.Platform should provide conflict free Temporary MMIO Range: GmAdr to (GmAdr + ApertureSize).
 - UINT32 [GttMmAdr](#)

Offset 0x015C - Temporary MMIO address for GTTMMADR The reference code will use this as Temporary MMIO address space to access GTTMMADR Registers.Platform should provide conflict free Temporary MMIO Range: GttMmAdr to (GttMmAdr + 2MB MMIO + 6MB Reserved + GttSize).
 - UINT8 [PsmiRegionSize](#)

Offset 0x0160 - Selection of PSMI Region size 0=32MB, 1=288MB, 2=544MB, 3=800MB, 4=1024MB Default is 0 0:32MB, 1:288MB, 2:544MB, 3:800MB, 4:1024MB.
 - UINT8 [SaRtd3Pcie0Gpio](#) [24]

Offset 0x0161 - Switchable Graphics GPIO information for PEG 0 Switchable Graphics GPIO information for PEG 0, for Reset, power and wake GPIOs.
 - UINT8 [SaRtd3Pcie1Gpio](#) [24]

Offset 0x0179 - Switchable Graphics GPIO information for PEG 1 Switchable Graphics GPIO information for PEG 1, for Reset, power and wake GPIOs.
 - UINT8 [SaRtd3Pcie2Gpio](#) [24]

Offset 0x0191 - Switchable Graphics GPIO information for PEG 2 Switchable Graphics GPIO information for PEG 2, for Reset, power and wake GPIOs.
 - UINT8 [SaRtd3Pcie3Gpio](#) [24]

Offset 0x01A9 - Switchable Graphics GPIO information for PEG 3 Switchable Graphics GPIO information for PEG 3, for Reset, power and wake GPIOs.
 - UINT8 [TxtImplemented](#)

Offset 0x01C1 - Enable/Disable MRC TXT dependency When enabled MRC execution will wait for TXT initialization to be done first.
 - UINT8 [SaOcSupport](#)

Offset 0x01C2 - Enable/Disable SA OcSupport Enable: Enable SA OcSupport, Disable(Default): Disable SA OcSupport \$EN_DIS.
 - UINT8 [GtVoltageMode](#)

Offset 0x01C3 - GT slice Voltage Mode 0(Default): Adaptive, 1: Override 0: Adaptive, 1: Override.
 - UINT8 [GtMaxOcRatio](#)

Offset 0x01C4 - Maximum GTs turbo ratio override 0(Default)=Minimal/Auto, 60=Maximum.
 - UINT8 [UnusedUpdSpace3](#)

Offset 0x01C5.
 - UINT16 [GtVoltageOffset](#)

Offset 0x01C6 - The voltage offset applied to GT slice 0(Default)=Minimal, 1000=Maximum.
 - UINT16 [GtVoltageOverride](#)

Offset 0x01C8 - The GT slice voltage override which is applied to the entire range of GT frequencies 0(Default)=Minimal, 2000=Maximum.
 - UINT16 [GtExtraTurboVoltage](#)
-

- Offset 0x01CA - adaptive voltage applied during turbo frequencies 0(Default)=Minimal, 2000=Maximum.*

 - UINT16 [SaVoltageOffset](#)
 - Offset 0x01CC - voltage offset applied to the SA 0(Default)=Minimal, 1000=Maximum.*

 - UINT8 [RootPortIndex](#)
 - Offset 0x01CE - PCIe root port Function number for Switchable Graphics dGPU Root port Index number to indicate which PCIe root port has dGPU.*

 - UINT8 [RealtimeMemoryTiming](#)
 - Offset 0x01CF - Realtime Memory Timing 0(Default): Disabled, 1: Enabled.*

 - UINT8 [SalpuEnable](#)
 - Offset 0x01D0 - Enable/Disable SA IPU Enable(Default): Enable SA IPU, Disable: Disable SA IPU \$EN_DIS.*

 - UINT8 [SalpulmrConfiguration](#)
 - Offset 0x01D1 - IPU IMR Configuration 0:IPU Camera, 1:IPU Gen Default is 0 0:IPU Camera, 1:IPU Gen.*

 - UINT8 [GtPsmiSupport](#)
 - Offset 0x01D2 - Selection of PSMI Support On/Off 0(Default) = FALSE, 1 = TRUE.*

 - UINT8 [GtusVoltageMode](#)
 - Offset 0x01D3 - GT unslice Voltage Mode 0(Default): Adaptive, 1: Override 0: Adaptive, 1: Override.*

 - UINT16 [GtusVoltageOffset](#)
 - Offset 0x01D4 - voltage offset applied to GT unslice 0(Default)=Minimal, 2000=Maximum.*

 - UINT16 [GtusVoltageOverride](#)
 - Offset 0x01D6 - GT unslice voltage override which is applied to the entire range of GT frequencies 0(Default)=Minimal, 2000=Maximum.*

 - UINT16 [GtusExtraTurboVoltage](#)
 - Offset 0x01D8 - adaptive voltage applied during turbo frequencies 0(Default)=Minimal, 2000=Maximum.*

 - UINT8 [GtusMaxOcRatio](#)
 - Offset 0x01DA - Maximum GTus turbo ratio override 0(Default)=Minimal, 60=Maximum.*

 - UINT8 [SaPreMemProductionRsvd](#) [1]
 - Offset 0x01DB - SaPreMemProductionRsvd Reserved for SA Pre-Mem Production \$EN_DIS.*

 - UINT16 [PerCoreHtDisable](#)
 - Offset 0x01DC - Per-core HT Disable Defines the per-core HT disable mask where: 1 - Disable selected logical core HT, 0 - is ignored.*

 - UINT8 [BistOnReset](#)
 - Offset 0x01DE - BIST on Reset Enable or Disable BIST on Reset; **0: Disable**; 1: Enable.*

 - UINT8 [SkipStopPbet](#)
 - Offset 0x01DF - Skip Stop PBET Timer Enable/Disable Skip Stop PBET Timer; **0: Disable**; 1: Enable \$EN_DIS.*

 - UINT8 [EnableC6Dram](#)
 - Offset 0x01E0 - C6DRAM power gating feature This policy indicates whether or not BIOS should allocate PRMRR memory for C6DRAM power gating feature.*

 - UINT8 [OcSupport](#)
 - Offset 0x01E1 - Over clocking support Over clocking support; **0: Disable**; 1: Enable \$EN_DIS.*

 - UINT8 [OcLock](#)
 - Offset 0x01E2 - Over clocking Lock Over clocking Lock Enable/Disable; 0: Disable; **1: Enable**.*

 - UINT8 [CoreMaxOcRatio](#)
 - Offset 0x01E3 - Maximum Core Turbo Ratio Override Maximum core turbo ratio override allows to increase CPU core frequency beyond the fused max turbo ratio limit.*

 - UINT8 [CoreVoltageMode](#)
 - Offset 0x01E4 - Core voltage mode Core voltage mode; **0: Adaptive**; 1: Override.*

 - UINT8 [DisableMtrrProgram](#)
 - Offset 0x01E5 - Program Cache Attributes Program Cache Attributes; **0: Program**; 1: Disable Program.*

 - UINT8 [RingMaxOcRatio](#)
 - Offset 0x01E6 - Maximum clr turbo ratio override Maximum clr turbo ratio override allows to increase CPU clr frequency beyond the fused max turbo ratio limit.*

 - UINT8 [HyperThreading](#)
-

- Offset 0x01E7 - Hyper Threading Enable/Disable Enable or Disable Hyper Threading; 0: Disable; 1: **Enable** \$EN_↔
DIS.
- UINT8 [CpuRatio](#)
Offset 0x01E8 - CPU ratio value CPU ratio value.
 - UINT8 [BootFrequency](#)
Offset 0x01E9 - Boot frequency Sets the boot frequency starting from reset vector.
 - UINT8 [ActiveCoreCount](#)
Offset 0x01EA - Number of active cores Number of active cores(Depends on Number of cores).
 - UINT8 [FClkFrequency](#)
Offset 0x01EB - Processor Early Power On Configuration FCLK setting **0: 800 MHz (ULT/ULX)**.
 - UINT8 [JtagC10PowerGateDisable](#)
Offset 0x01EC - Set JTAG power in C10 and deeper power states False: JTAG is power gated in C10 state.
 - UINT8 [VmxEnable](#)
Offset 0x01ED - Enable or Disable VMX Enable or Disable VMX; 0: Disable; 1: **Enable**.
 - UINT8 [Avx2RatioOffset](#)
Offset 0x01EE - AVX2 Ratio Offset 0(Default)= No Offset.
 - UINT8 [Avx3RatioOffset](#)
Offset 0x01EF - AVX3 Ratio Offset 0(Default)= No Offset.
 - UINT8 [BclkAdaptiveVoltage](#)
Offset 0x01F0 - BCLK Adaptive Voltage Enable When enabled, the CPU V/F curves are aware of BCLK frequency when calculated.
 - UINT8 [CorePllVoltageOffset](#)
Offset 0x01F1 - Core PLL voltage offset Core PLL voltage offset.
 - UINT16 [CoreVoltageOverride](#)
Offset 0x01F2 - core voltage override The core voltage override which is applied to the entire range of cpu core frequencies.
 - UINT16 [CoreVoltageAdaptive](#)
Offset 0x01F4 - Core Turbo voltage Adaptive Extra Turbo voltage applied to the cpu core when the cpu is operating in turbo mode.
 - UINT16 [CoreVoltageOffset](#)
Offset 0x01F6 - Core Turbo voltage Offset The voltage offset applied to the core while operating in turbo mode. Valid Range 0 to 1000.
 - UINT8 [RingDownBin](#)
Offset 0x01F8 - Ring Downbin Ring Downbin enable/disable.
 - UINT8 [RingVoltageMode](#)
Offset 0x01F9 - Ring voltage mode Ring voltage mode; **0: Adaptive**; 1: Override.
 - UINT16 [RingVoltageOverride](#)
Offset 0x01FA - Ring voltage override The ring voltage override which is applied to the entire range of cpu ring frequencies.
 - UINT16 [RingVoltageAdaptive](#)
Offset 0x01FC - Ring Turbo voltage Adaptive Extra Turbo voltage applied to the cpu ring when the cpu is operating in turbo mode.
 - UINT16 [RingVoltageOffset](#)
Offset 0x01FE - Ring Turbo voltage Offset The voltage offset applied to the ring while operating in turbo mode.
 - UINT8 [TjMaxOffset](#)
Offset 0x0200 - TjMax Offset TjMax offset. Specified value here is clipped by pCode (125 - TjMax Offset) to support TjMax in the range of 62 to 115 deg Celsius.
 - UINT8 [BiosGuard](#)
Offset 0x0201 - BiosGuard Enable/Disable.
 - UINT8 [BiosGuardToolsInterface](#)
Offset 0x0202.
 - UINT8 [EnableSgx](#)
-

- Offset 0x0203 - EnableSgx Enable/Disable.
- UINT8 [Txt](#)
 - Offset 0x0204 - Txt Enable/Disable.
- UINT8 [UnusedUpdSpace4](#) [3]
 - Offset 0x0205.
- UINT32 [PrmrrSize](#)
 - Offset 0x0208 - PrmrrSize 0=Invalid, 32MB=0x2000000, 64MB=0x4000000, 128MB=0x8000000, 256MB=0x10000000.
- UINT32 [SinitMemorySize](#)
 - Offset 0x020C - SinitMemorySize Enable/Disable.
- UINT32 [TxtHeapMemorySize](#)
 - Offset 0x0210 - TxtHeapMemorySize Enable/Disable.
- UINT32 [TxtDprMemorySize](#)
 - Offset 0x0214 - TxtDprMemorySize Enable/Disable.
- UINT64 [TxtDprMemoryBase](#)
 - Offset 0x0218 - TxtDprMemoryBase Enable/Disable.
- UINT32 [BiosAcmBase](#)
 - Offset 0x0220 - BiosAcmBase Enable/Disable.
- UINT32 [BiosAcmSize](#)
 - Offset 0x0224 - BiosAcmSize Enable/Disable.
- UINT32 [ApStartupBase](#)
 - Offset 0x0228 - ApStartupBase Enable/Disable.
- UINT32 [TgaSize](#)
 - Offset 0x022C - TgaSize Enable/Disable.
- UINT64 [TxtLcpPdBase](#)
 - Offset 0x0230 - TxtLcpPdBase Enable/Disable.
- UINT64 [TxtLcpPdSize](#)
 - Offset 0x0238 - TxtLcpPdSize Enable/Disable.
- UINT8 [IsTPMPresence](#)
 - Offset 0x0240 - IsTPMPresence IsTPMPresence default values.
- UINT8 [AutoEasyOverclock](#)
 - Offset 0x0241 - Intel Speed Optimizer Enable When enabled this feature automatically overclocks your processor.
- UINT8 [ReservedSecurityPreMem](#) [2]
 - Offset 0x0242 - ReservedSecurityPreMem Reserved for Security Pre-Mem \$EN_DIS.
- UINT32 [VtdBaseAddress](#) [3]
 - Offset 0x0244 - Base addresses for VT-d function MMIO access Base addresses for VT-d MMIO access per VT-d engine.
- UINT8 [SmbusEnable](#)
 - Offset 0x0250 - Enable SMBus Enable/disable SMBus controller.
- UINT8 [PlatformDebugConsent](#)
 - Offset 0x0251 - Platform Debug Consent To 'opt-in' for debug, please select 'Enabled' with the desired debug probe type.
- UINT8 [DciUsb3TypecUfpDbg](#)
 - Offset 0x0252 - USB3 Type-C UFP2DFP Kernel/Platform Debug Support This BIOS option enables kernel and platform debug for USB3 interface over a UFP Type-C receptacle, select 'No Change' will do nothing to UFP2DFP setting.
- UINT8 [PchTraceHubMode](#)
 - Offset 0x0253 - PCH Trace Hub Mode Select 'Host Debugger' if Trace Hub is used with host debugger tool or 'Target Debugger' if Trace Hub is used by target debugger software or 'Disable' trace hub functionality.
- UINT8 [PchTraceHubMemReg0Size](#)
 - Offset 0x0254 - PCH Trace Hub Memory Region 0 buffer Size Specify size of Pch trace memory region 0 buffer, the size can be 0, 1MB, 8MB, 64MB, 128MB, 256MB, 512MB.
- UINT8 [PchTraceHubMemReg1Size](#)

Offset 0x0255 - PCH Trace Hub Memory Region 1 buffer Size Specify size of Pch trace memory region 1 buffer, the size can be 0, 1MB, 8MB, 64MB, 128MB, 256MB, 512MB.

- UINTE8 [PchHdaEnable](#)
Offset 0x0256 - Enable Intel HD Audio (Azalia) 0: Disable, 1: Enable (Default) Azalia controller \$EN_DIS.
- UINTE8 [PchIshEnable](#)
Offset 0x0257 - Enable PCH ISH Controller 0: Disable, 1: Enable (Default) ISH Controller \$EN_DIS.
- UINTE8 [PchPcieHsioRxSetCtleEnable](#) [24]
Offset 0x0258 - Enable PCH HSIO PCIE Rx Set Ctle Enable PCH PCIe Gen 3 Set CTLE Value.
- UINTE8 [PchPcieHsioRxSetCtle](#) [24]
Offset 0x0270 - PCH HSIO PCIE Rx Set Ctle Value PCH PCIe Gen 3 Set CTLE Value.
- UINTE8 [PchPcieHsioTxGen1DownscaleAmpEnable](#) [24]
Offset 0x0288 - Enable PCH HSIO PCIE TX Gen 1 Downscale Amplitude Adjustment value override 0: Disable; 1: Enable.
- UINTE8 [PchPcieHsioTxGen1DownscaleAmp](#) [24]
Offset 0x02A0 - PCH HSIO PCIE Gen 2 TX Output Downscale Amplitude Adjustment value PCH PCIe Gen 2 TX Output Downscale Amplitude Adjustment value.
- UINTE8 [PchPcieHsioTxGen2DownscaleAmpEnable](#) [24]
Offset 0x02B8 - Enable PCH HSIO PCIE TX Gen 2 Downscale Amplitude Adjustment value override 0: Disable; 1: Enable.
- UINTE8 [PchPcieHsioTxGen2DownscaleAmp](#) [24]
Offset 0x02D0 - PCH HSIO PCIE Gen 2 TX Output Downscale Amplitude Adjustment value PCH PCIe Gen 2 TX Output Downscale Amplitude Adjustment value.
- UINTE8 [PchPcieHsioTxGen3DownscaleAmpEnable](#) [24]
Offset 0x02E8 - Enable PCH HSIO PCIE TX Gen 3 Downscale Amplitude Adjustment value override 0: Disable; 1: Enable.
- UINTE8 [PchPcieHsioTxGen3DownscaleAmp](#) [24]
Offset 0x0300 - PCH HSIO PCIE Gen 3 TX Output Downscale Amplitude Adjustment value PCH PCIe Gen 3 TX Output Downscale Amplitude Adjustment value.
- UINTE8 [PchPcieHsioTxGen1DeEmphEnable](#) [24]
Offset 0x0318 - Enable PCH HSIO PCIE Gen 1 TX Output De-Emphasis Adjustment Setting value override 0: Disable; 1: Enable.
- UINTE8 [PchPcieHsioTxGen1DeEmph](#) [24]
Offset 0x0330 - PCH HSIO PCIE Gen 1 TX Output De-Emphasis Adjustment value PCH PCIe Gen 1 TX Output De-Emphasis Adjustment Setting.
- UINTE8 [PchPcieHsioTxGen2DeEmph3p5Enable](#) [24]
Offset 0x0348 - Enable PCH HSIO PCIE Gen 2 TX Output -3.5dB De-Emphasis Adjustment Setting value override 0: Disable; 1: Enable.
- UINTE8 [PchPcieHsioTxGen2DeEmph3p5](#) [24]
Offset 0x0360 - PCH HSIO PCIE Gen 2 TX Output -3.5dB De-Emphasis Adjustment value PCH PCIe Gen 2 TX Output -3.5dB De-Emphasis Adjustment Setting.
- UINTE8 [PchPcieHsioTxGen2DeEmph6p0Enable](#) [24]
Offset 0x0378 - Enable PCH HSIO PCIE Gen 2 TX Output -6.0dB De-Emphasis Adjustment Setting value override 0: Disable; 1: Enable.
- UINTE8 [PchPcieHsioTxGen2DeEmph6p0](#) [24]
Offset 0x0390 - PCH HSIO PCIE Gen 2 TX Output -6.0dB De-Emphasis Adjustment value PCH PCIe Gen 2 TX Output -6.0dB De-Emphasis Adjustment Setting.
- UINTE8 [PchSataHsioRxGen1EqBoostMagEnable](#) [8]
Offset 0x03A8 - Enable PCH HSIO SATA Receiver Equalization Boost Magnitude Adjustment Value override 0: Disable; 1: Enable.
- UINTE8 [PchSataHsioRxGen1EqBoostMag](#) [8]
Offset 0x03B0 - PCH HSIO SATA 1.5 Gb/s Receiver Equalization Boost Magnitude Adjustment value PCH HSIO SATA 1.5 Gb/s Receiver Equalization Boost Magnitude Adjustment value.
- UINTE8 [PchSataHsioRxGen2EqBoostMagEnable](#) [8]

- Offset 0x03B8 - Enable PCH HSIO SATA Receiver Equalization Boost Magnitude Adjustment Value override 0↔ : Disable; 1: Enable.
- UINT8 [PchSataHsioRxGen2EqBoostMag](#) [8]

Offset 0x03C0 - PCH HSIO SATA 3.0 Gb/s Receiver Equalization Boost Magnitude Adjustment value PCH HSIO SATA 3.0 Gb/s Receiver Equalization Boost Magnitude Adjustment value.
 - UINT8 [PchSataHsioRxGen3EqBoostMagEnable](#) [8]

Offset 0x03C8 - Enable PCH HSIO SATA Receiver Equalization Boost Magnitude Adjustment Value override 0↔ : Disable; 1: Enable.
 - UINT8 [PchSataHsioRxGen3EqBoostMag](#) [8]

Offset 0x03D0 - PCH HSIO SATA 6.0 Gb/s Receiver Equalization Boost Magnitude Adjustment value PCH HSIO SATA 6.0 Gb/s Receiver Equalization Boost Magnitude Adjustment value.
 - UINT8 [PchSataHsioTxGen1DownscaleAmpEnable](#) [8]

Offset 0x03D8 - Enable PCH HSIO SATA 1.5 Gb/s TX Output Downscale Amplitude Adjustment value override 0: Disable; 1: Enable.
 - UINT8 [PchSataHsioTxGen1DownscaleAmp](#) [8]

Offset 0x03E0 - PCH HSIO SATA 1.5 Gb/s TX Output Downscale Amplitude Adjustment value PCH HSIO SATA 1.5 Gb/s TX Output Downscale Amplitude Adjustment value.
 - UINT8 [PchSataHsioTxGen2DownscaleAmpEnable](#) [8]

Offset 0x03E8 - Enable PCH HSIO SATA 3.0 Gb/s TX Output Downscale Amplitude Adjustment value override 0: Disable; 1: Enable.
 - UINT8 [PchSataHsioTxGen2DownscaleAmp](#) [8]

Offset 0x03F0 - PCH HSIO SATA 3.0 Gb/s TX Output Downscale Amplitude Adjustment value PCH HSIO SATA 3.0 Gb/s TX Output Downscale Amplitude Adjustment value.
 - UINT8 [PchSataHsioTxGen3DownscaleAmpEnable](#) [8]

Offset 0x03F8 - Enable PCH HSIO SATA 6.0 Gb/s TX Output Downscale Amplitude Adjustment value override 0: Disable; 1: Enable.
 - UINT8 [PchSataHsioTxGen3DownscaleAmp](#) [8]

Offset 0x0400 - PCH HSIO SATA 6.0 Gb/s TX Output Downscale Amplitude Adjustment value PCH HSIO SATA 6.0 Gb/s TX Output Downscale Amplitude Adjustment value.
 - UINT8 [PchSataHsioTxGen1DeEmphEnable](#) [8]

Offset 0x0408 - Enable PCH HSIO SATA 1.5 Gb/s TX Output De-Emphasis Adjustment Setting value override 0: Disable; 1: Enable.
 - UINT8 [PchSataHsioTxGen1DeEmph](#) [8]

Offset 0x0410 - PCH HSIO SATA 1.5 Gb/s TX Output De-Emphasis Adjustment Setting PCH HSIO SATA 1.5 Gb/s TX Output De-Emphasis Adjustment Setting.
 - UINT8 [PchSataHsioTxGen2DeEmphEnable](#) [8]

Offset 0x0418 - Enable PCH HSIO SATA 3.0 Gb/s TX Output De-Emphasis Adjustment Setting value override 0: Disable; 1: Enable.
 - UINT8 [PchSataHsioTxGen2DeEmph](#) [8]

Offset 0x0420 - PCH HSIO SATA 3.0 Gb/s TX Output De-Emphasis Adjustment Setting PCH HSIO SATA 3.0 Gb/s TX Output De-Emphasis Adjustment Setting.
 - UINT8 [PchSataHsioTxGen3DeEmphEnable](#) [8]

Offset 0x0428 - Enable PCH HSIO SATA 6.0 Gb/s TX Output De-Emphasis Adjustment Setting value override 0: Disable; 1: Enable.
 - UINT8 [PchSataHsioTxGen3DeEmph](#) [8]

Offset 0x0430 - PCH HSIO SATA 6.0 Gb/s TX Output De-Emphasis Adjustment Setting PCH HSIO SATA 6.0 Gb/s TX Output De-Emphasis Adjustment Setting.
 - UINT8 [PchLpcEnhancePort8xhDecoding](#)

Offset 0x0438 - PCH LPC Enhance the port 8xh decoding Original LPC only decodes one byte of port 80h.
 - UINT8 [PchPort80Route](#)

Offset 0x0439 - PCH Port80 Route Control where the Port 80h cycles are sent, 0: LPC; 1: PCI.
 - UINT8 [SmbusArpEnable](#)

Offset 0x043A - Enable SMBus ARP support Enable SMBus ARP support.
 - UINT8 [PchNumRsvdSmbusAddresses](#)
-

- Offset 0x043B - Number of RsvdSmbusAddressTable.*

 - UINT16 [PchSmbusIoBase](#)

Offset 0x043C - SMBUS Base Address SMBUS Base Address (IO space).
 - UINT16 [PciImrSize](#)

Offset 0x043E - Size of PCIe IMR.
 - UINT32 [RsvdSmbusAddressTablePtr](#)

Offset 0x0440 - Point of RsvdSmbusAddressTable Array of addresses reserved for non-ARP-capable SMBus devices.
 - UINT32 [PcieRpEnableMask](#)

Offset 0x0444 - Enable PCIe RP Mask Enable/disable PCIe Root Ports.
 - UINT8 [PciImrEnabled](#)

Offset 0x0448 - Enable PCIe IMR 0:Disable, 1:Enable \$EN_DIS.
 - UINT8 [ImrRpSelection](#)

Offset 0x0449 - Root port number for IMR.
 - UINT8 [PchSmbAlertEnable](#)

Offset 0x044A - Enable SMBus Alert Pin Enable SMBus Alert Pin.
 - UINT8 [PcdDebugInterfaceFlags](#)

Offset 0x044B - Debug Interfaces Debug Interfaces.
 - UINT8 [SerialIoUartDebugControllerNumber](#)

Offset 0x044C - Serial Io Uart Debug Controller Number Select SerialIo Uart Controller for debug.
 - UINT8 [SerialIoUartDebugAutoFlow](#)

Offset 0x044D - Serial Io Uart Debug Auto Flow Enables UART hardware flow control, CTS and RTS lines.
 - UINT8 [UnusedUpdSpace5](#) [2]

Offset 0x044E.
 - UINT32 [SerialIoUartDebugBaudRate](#)

Offset 0x0450 - Serial Io Uart Debug BaudRate Set default BaudRate Supported from 0 - default to 6000000.
 - UINT8 [SerialIoUartDebugParity](#)

Offset 0x0454 - Serial Io Uart Debug Parity Set default Parity.
 - UINT8 [SerialIoUartDebugStopBits](#)

Offset 0x0455 - Serial Io Uart Debug Stop Bits Set default stop bits.
 - UINT8 [SerialIoUartDebugDataBits](#)

Offset 0x0456 - Serial Io Uart Debug Data Bits Set default word length.
 - UINT8 [PchHdaDspEnable](#)

Offset 0x0457 - Enable HD Audio DSP Enable/disable HD Audio DSP feature.
 - UINT8 [PchHdaVcType](#)

Offset 0x0458 - VC Type Virtual Channel Type Select: 0: VC0, 1: VC1.
 - UINT8 [PchHdaDspUaaCompliance](#)

Offset 0x0459 - Universal Audio Architecture compliance for DSP enabled system 0: Not-UAA Compliant (Intel SST driver supported only), 1: UAA Compliant (HDA Inbox driver or SST driver supported).
 - UINT8 [PchHdaAudioLinkHda](#)

Offset 0x045A - Enable HD Audio Link Enable/disable HD Audio Link.
 - UINT8 [PchHdaAudioLinkDmic0](#)

Offset 0x045B - Enable HD Audio DMIC0 Link Deprecated.
 - UINT8 [PchHdaAudioLinkDmic1](#)

Offset 0x045C - Enable HD Audio DMIC1 Link Deprecated.
 - UINT8 [PchHdaAudioLinkSsp0](#)

Offset 0x045D - Enable HD Audio SSP0 Link Enable/disable HD Audio SSP0/I2S link.
 - UINT8 [PchHdaAudioLinkSsp1](#)

Offset 0x045E - Enable HD Audio SSP1 Link Enable/disable HD Audio SSP1/I2S link.
 - UINT8 [PchHdaAudioLinkSsp2](#)

Offset 0x045F - Enable HD Audio SSP2 Link Enable/disable HD Audio SSP2/I2S link.
 - UINT8 [PchHdaAudioLinkSndw1](#)

- Offset 0x0460 - Enable HD Audio SoundWire#1 Link Enable/disable HD Audio SNDW1 link.*

 - UINT8 [PchHdaAudioLinkSndw2](#)
 - Offset 0x0461 - Enable HD Audio SoundWire#2 Link Enable/disable HD Audio SNDW2 link.*

 - UINT8 [PchHdaAudioLinkSndw3](#)
 - Offset 0x0462 - Enable HD Audio SoundWire#3 Link Enable/disable HD Audio SNDW3 link.*

 - UINT8 [PchHdaAudioLinkSndw4](#)
 - Offset 0x0463 - Enable HD Audio SoundWire#4 Link Enable/disable HD Audio SNDW4 link.*

 - UINT8 [PchHdaSndwBufferRcomp](#)
 - Offset 0x0464 - Soundwire Clock Buffer GPIO RCOMP Setting 0: non-ACT - 50 Ohm driver impedance, 1: ACT - 8 Ohm driver impedance.*

 - UINT8 [ReservedPchPreMem](#) [2]
 - Offset 0x0465 - ReservedPchPreMem Reserved for Pch Pre-Mem \$EN_DIS.*

 - UINT8 [PcdIsaSerialUartBase](#)
 - Offset 0x0467 - ISA Serial Base selection Select ISA Serial Base address.*

 - UINT8 [GtPllVoltageOffset](#)
 - Offset 0x0468 - GT PLL voltage offset Core PLL voltage offset.*

 - UINT8 [RingPllVoltageOffset](#)
 - Offset 0x0469 - Ring PLL voltage offset Core PLL voltage offset.*

 - UINT8 [SaPllVoltageOffset](#)
 - Offset 0x046A - System Agent PLL voltage offset Core PLL voltage offset.*

 - UINT8 [McPllVoltageOffset](#)
 - Offset 0x046B - Memory Controller PLL voltage offset Core PLL voltage offset.*

 - UINT8 [MrcSafeConfig](#)
 - Offset 0x046C - MRC Safe Config Enables/Disable MRC Safe Config \$EN_DIS.*

 - UINT8 [PcdSerialDebugBaudRate](#)
 - Offset 0x046D - PcdSerialDebugBaudRate Baud Rate for Serial Debug Messages.*

 - UINT8 [HobBufferSize](#)
 - Offset 0x046E - HobBufferSize Size to set HOB Buffer.*

 - UINT8 [ECT](#)
 - Offset 0x046F - Early Command Training Enables/Disable Early Command Training \$EN_DIS.*

 - UINT8 [SOT](#)
 - Offset 0x0470 - SenseAmp Offset Training Enables/Disable SenseAmp Offset Training \$EN_DIS.*

 - UINT8 [ERDMPRTC2D](#)
 - Offset 0x0471 - Early ReadMPR Timing Centering 2D Enables/Disable Early ReadMPR Timing Centering 2D \$EN←_DIS.*

 - UINT8 [RDMPRT](#)
 - Offset 0x0472 - Read MPR Training Enables/Disable Read MPR Training \$EN_DIS.*

 - UINT8 [RCVET](#)
 - Offset 0x0473 - Receive Enable Training Enables/Disable Receive Enable Training \$EN_DIS.*

 - UINT8 [JWRL](#)
 - Offset 0x0474 - Jedec Write Leveling Enables/Disable Jedec Write Leveling \$EN_DIS.*

 - UINT8 [EWRTC2D](#)
 - Offset 0x0475 - Early Write Time Centering 2D Enables/Disable Early Write Time Centering 2D \$EN_DIS.*

 - UINT8 [ERDTC2D](#)
 - Offset 0x0476 - Early Read Time Centering 2D Enables/Disable Early Read Time Centering 2D \$EN_DIS.*

 - UINT8 [WRTC1D](#)
 - Offset 0x0477 - Write Timing Centering 1D Enables/Disable Write Timing Centering 1D \$EN_DIS.*

 - UINT8 [WRVC1D](#)
 - Offset 0x0478 - Write Voltage Centering 1D Enables/Disable Write Voltage Centering 1D \$EN_DIS.*

 - UINT8 [RDTC1D](#)
 - Offset 0x0479 - Read Timing Centering 1D Enables/Disable Read Timing Centering 1D \$EN_DIS.*
-

- UINT8 [DIMMODTT](#)
Offset 0x047A - Dimm ODT Training Enables/Disable Dimm ODT Training \$EN_DIS.
 - UINT8 [DIMMFRONT](#)
Offset 0x047B - DIMM RON Training Enables/Disable DIMM RON Training \$EN_DIS.
 - UINT8 [WRDSEQT](#)
Offset 0x047C - Write Drive Strength/Equalization 2D Enables/Disable Write Drive Strength/Equalization 2D \$EN_↔DIS.
 - UINT8 [WRSRT](#)
Offset 0x047D - Write Slew Rate Training Enables/Disable Write Slew Rate Training \$EN_DIS.
 - UINT8 [RDODTT](#)
Offset 0x047E - Read ODT Training Enables/Disable Read ODT Training \$EN_DIS.
 - UINT8 [RDEQT](#)
Offset 0x047F - Read Equalization Training Enables/Disable Read Equalization Training \$EN_DIS.
 - UINT8 [RDAPT](#)
Offset 0x0480 - Read Amplifier Training Enables/Disable Read Amplifier Training \$EN_DIS.
 - UINT8 [WRTC2D](#)
Offset 0x0481 - Write Timing Centering 2D Enables/Disable Write Timing Centering 2D \$EN_DIS.
 - UINT8 [RDTC2D](#)
Offset 0x0482 - Read Timing Centering 2D Enables/Disable Read Timing Centering 2D \$EN_DIS.
 - UINT8 [WRVC2D](#)
Offset 0x0483 - Write Voltage Centering 2D Enables/Disable Write Voltage Centering 2D \$EN_DIS.
 - UINT8 [RDVC2D](#)
Offset 0x0484 - Read Voltage Centering 2D Enables/Disable Read Voltage Centering 2D \$EN_DIS.
 - UINT8 [CMDVC](#)
Offset 0x0485 - Command Voltage Centering Enables/Disable Command Voltage Centering \$EN_DIS.
 - UINT8 [LCT](#)
Offset 0x0486 - Late Command Training Enables/Disable Late Command Training \$EN_DIS.
 - UINT8 [RTL](#)
Offset 0x0487 - Round Trip Latency Training Enables/Disable Round Trip Latency Training \$EN_DIS.
 - UINT8 [TAT](#)
Offset 0x0488 - Turn Around Timing Training Enables/Disable Turn Around Timing Training \$EN_DIS.
 - UINT8 [MEMTST](#)
Offset 0x0489 - Memory Test Enables/Disable Memory Test \$EN_DIS.
 - UINT8 [ALIASCHK](#)
Offset 0x048A - DIMM SPD Alias Test Enables/Disable DIMM SPD Alias Test \$EN_DIS.
 - UINT8 [RCVENC1D](#)
Offset 0x048B - Receive Enable Centering 1D Enables/Disable Receive Enable Centering 1D \$EN_DIS.
 - UINT8 [RMC](#)
Offset 0x048C - Retrain Margin Check Enables/Disable Retrain Margin Check \$EN_DIS.
 - UINT8 [WRDSUDT](#)
Offset 0x048D - Write Drive Strength Up/Dn independently Enables/Disable Write Drive Strength Up/Dn independently \$EN_DIS.
 - UINT8 [EccSupport](#)
Offset 0x048E - ECC Support Enables/Disable ECC Support \$EN_DIS.
 - UINT8 [RemapEnable](#)
Offset 0x048F - Memory Remap Enables/Disable Memory Remap \$EN_DIS.
 - UINT8 [RankInterleave](#)
Offset 0x0490 - Rank Interleave support Enables/Disable Rank Interleave support.
 - UINT8 [EnhancedInterleave](#)
Offset 0x0491 - Enhanced Interleave support Enables/Disable Enhanced Interleave support \$EN_DIS.
 - UINT8 [MemoryTrace](#)
-

- Offset 0x0492 - Memory Trace Enable Memory Trace of Ch 0 to Ch 1 using Stacked Mode.*

 - UINT8 [ChHashEnable](#)
 - Offset 0x0493 - Ch Hash Support Enable/Disable Channel Hash Support.*

 - UINT8 [EnableExtts](#)
 - Offset 0x0494 - Extern Therm Status Enables/Disable Extern Therm Status \$EN_DIS.*

 - UINT8 [EnableCltm](#)
 - Offset 0x0495 - Closed Loop Therm Manage Enables/Disable Closed Loop Therm Manage \$EN_DIS.*

 - UINT8 [EnableOltm](#)
 - Offset 0x0496 - Open Loop Therm Manage Enables/Disable Open Loop Therm Manage \$EN_DIS.*

 - UINT8 [EnablePwrDn](#)
 - Offset 0x0497 - DDR PowerDown and idle counter Enables/Disable DDR PowerDown and idle counter \$EN_DIS.*

 - UINT8 [EnablePwrDnLpddr](#)
 - Offset 0x0498 - DDR PowerDown and idle counter - LPDDR Enables/Disable DDR PowerDown and idle counter(For LPDDR Only) \$EN_DIS.*

 - UINT8 [UserPowerWeightsEn](#)
 - Offset 0x0499 - Use user provided power weights, scale factor, and channel power floor values Enables/Disable Use user provided power weights, scale factor, and channel power floor values \$EN_DIS.*

 - UINT8 [RaplLim2Lock](#)
 - Offset 0x049A - RAPL PL Lock Enables/Disable RAPL PL Lock \$EN_DIS.*

 - UINT8 [RaplLim2Ena](#)
 - Offset 0x049B - RAPL PL 2 enable Enables/Disable RAPL PL 2 enable \$EN_DIS.*

 - UINT8 [RaplLim1Ena](#)
 - Offset 0x049C - RAPL PL 1 enable Enables/Disable RAPL PL 1 enable \$EN_DIS.*

 - UINT8 [SrefCfgEna](#)
 - Offset 0x049D - SelfRefresh Enable Enables/Disable SelfRefresh Enable \$EN_DIS.*

 - UINT8 [ThrtCkeMinDefeatLpddr](#)
 - Offset 0x049E - Throttler CKEMin Defeature - LPDDR Enables/Disable Throttler CKEMin Defeature(For LPDDR Only) \$EN_DIS.*

 - UINT8 [ThrtCkeMinDefeat](#)
 - Offset 0x049F - Throttler CKEMin Defeature Enables/Disable Throttler CKEMin Defeature \$EN_DIS.*

 - UINT8 [RhPrevention](#)
 - Offset 0x04A0 - Enable RH Prevention Enables/Disable RH Prevention \$EN_DIS.*

 - UINT8 [ExitOnFailure](#)
 - Offset 0x04A1 - Exit On Failure (MRC) Enables/Disable Exit On Failure (MRC) \$EN_DIS.*

 - UINT8 [DdrThermalSensor](#)
 - Offset 0x04A2 - LPDDR Thermal Sensor Enables/Disable LPDDR Thermal Sensor \$EN_DIS.*

 - UINT8 [Ddr4DdpSharedClock](#)
 - Offset 0x04A3 - Select if CLK0 is shared between Rank0 and Rank1 in DDR4 DDP Select if CLK0 is shared between Rank0 and Rank1 in DDR4 DDP \$EN_DIS.*

 - UINT8 [Ddr4DdpSharedZq](#)
 - Offset 0x04A4 - Select if ZQ pin is shared between Rank0 and Rank1 in DDR4 DDP ESelect if ZQ pin is shared between Rank0 and Rank1 in DDR4 DDP \$EN_DIS.*

 - UINT8 [UnusedUpdSpace6](#)
 - Offset 0x04A5.*

 - UINT16 [ChHashMask](#)
 - Offset 0x04A6 - Ch Hash Mask Set the BIT(s) to be included in the XOR function.*

 - UINT32 [BClkFrequency](#)
 - Offset 0x04A8 - Base reference clock value Base reference clock value, in Hertz(Default is 125Hz) 10000000:100Hz, 125000000:125Hz, 167000000:167Hz, 250000000:250Hz.*

 - UINT8 [ChHashInterleaveBit](#)
 - Offset 0x04AC - Ch Hash Interleaved Bit Select the BIT to be used for Channel Interleaved mode.*

 - UINT8 [EnergyScaleFact](#)
-

- Offset 0x04AD - Energy Scale Factor Energy Scale Factor, Default is 4.*
 - UINT16 [Idd3n](#)
 - Offset 0x04AE - EPG DIMM Idd3N Active standby current (Idd3N) in milliamps from datasheet.*
 - UINT16 [Idd3p](#)
 - Offset 0x04B0 - EPG DIMM Idd3P Active power-down current (Idd3P) in milliamps from datasheet.*
 - UINT8 [CMDSR](#)
 - Offset 0x04B2 - CMD Slew Rate Training Enable/Disable CMD Slew Rate Training \$EN_DIS.*
 - UINT8 [CMDSEQ](#)
 - Offset 0x04B3 - CMD Drive Strength and Tx Equalization Enable/Disable CMD Drive Strength and Tx Equalization \$EN_DIS.*
 - UINT8 [CMDNORM](#)
 - Offset 0x04B4 - CMD Normalization Enable/Disable CMD Normalization \$EN_DIS.*
 - UINT8 [EWRDSEQ](#)
 - Offset 0x04B5 - Early DQ Write Drive Strength and Equalization Training Enable/Disable Early DQ Write Drive Strength and Equalization Training \$EN_DIS.*
 - UINT8 [RhActProbability](#)
 - Offset 0x04B6 - RH Activation Probability RH Activation Probability, Probability value is $1/2^y$ (inputvalue)*
 - UINT8 [RaplLim2WindX](#)
 - Offset 0x04B7 - RAPL PL 2 WindowX Power PL 2 time window X value, $(1/1024) * (1+(x/4)) * (2^y)$ (1=Def)*
 - UINT8 [RaplLim2WindY](#)
 - Offset 0x04B8 - RAPL PL 2 WindowY Power PL 2 time window Y value, $(1/1024) * (1+(x/4)) * (2^y)$ (1=Def)*
 - UINT8 [RaplLim1WindX](#)
 - Offset 0x04B9 - RAPL PL 1 WindowX Power PL 1 time window X value, $(1/1024) * (1+(x/4)) * (2^y)$ (0=Def)*
 - UINT8 [RaplLim1WindY](#)
 - Offset 0x04BA - RAPL PL 1 WindowY Power PL 1 time window Y value, $(1/1024) * (1+(x/4)) * (2^y)$ (0=Def)*
 - UINT8 [UnusedUpdSpace7](#)
 - Offset 0x04BB.*
 - UINT16 [RaplLim2Pwr](#)
 - Offset 0x04BC - RAPL PL 2 Power range[0;2¹⁴-1]=[2047.875;0]in W, (222= Def)*
 - UINT16 [RaplLim1Pwr](#)
 - Offset 0x04BE - RAPL PL 1 Power range[0;2¹⁴-1]=[2047.875;0]in W, (0= Def)*
 - UINT8 [WarmThresholdCh0Dimm0](#)
 - Offset 0x04C0 - Warm Threshold Ch0 Dimm0 range[255;0]=[31.875;0] in W for OLTM, [127.5;0] in C for CLTM.*
 - UINT8 [WarmThresholdCh0Dimm1](#)
 - Offset 0x04C1 - Warm Threshold Ch0 Dimm1 range[255;0]=[31.875;0] in W for OLTM, [127.5;0] in C for CLTM.*
 - UINT8 [WarmThresholdCh1Dimm0](#)
 - Offset 0x04C2 - Warm Threshold Ch1 Dimm0 range[255;0]=[31.875;0] in W for OLTM, [127.5;0] in C for CLTM.*
 - UINT8 [WarmThresholdCh1Dimm1](#)
 - Offset 0x04C3 - Warm Threshold Ch1 Dimm1 range[255;0]=[31.875;0] in W for OLTM, [127.5;0] in C for CLTM.*
 - UINT8 [HotThresholdCh0Dimm0](#)
 - Offset 0x04C4 - Hot Threshold Ch0 Dimm0 range[255;0]=[31.875;0] in W for OLTM, [127.5;0] in C for CLTM.*
 - UINT8 [HotThresholdCh0Dimm1](#)
 - Offset 0x04C5 - Hot Threshold Ch0 Dimm1 range[255;0]=[31.875;0] in W for OLTM, [127.5;0] in C for CLTM.*
 - UINT8 [HotThresholdCh1Dimm0](#)
 - Offset 0x04C6 - Hot Threshold Ch1 Dimm0 range[255;0]=[31.875;0] in W for OLTM, [127.5;0] in C for CLTM.*
 - UINT8 [HotThresholdCh1Dimm1](#)
 - Offset 0x04C7 - Hot Threshold Ch1 Dimm1 range[255;0]=[31.875;0] in W for OLTM, [127.5;0] in C for CLTM.*
 - UINT8 [WarmBudgetCh0Dimm0](#)
 - Offset 0x04C8 - Warm Budget Ch0 Dimm0 range[255;0]=[31.875;0] in W for OLTM, [127.5;0] in C for CLTM.*
 - UINT8 [WarmBudgetCh0Dimm1](#)
 - Offset 0x04C9 - Warm Budget Ch0 Dimm1 range[255;0]=[31.875;0] in W for OLTM, [127.5;0] in C for CLTM.*
-

- UINT8 [WarmBudgetCh1Dimm0](#)
Offset 0x04CA - Warm Budget Ch1 Dimm0 range[255;0]=[31.875;0] in W for OLTM, [127.5;0] in C for CLTM.
 - UINT8 [WarmBudgetCh1Dimm1](#)
Offset 0x04CB - Warm Budget Ch1 Dimm1 range[255;0]=[31.875;0] in W for OLTM, [127.5;0] in C for CLTM.
 - UINT8 [HotBudgetCh0Dimm0](#)
Offset 0x04CC - Hot Budget Ch0 Dimm0 range[255;0]=[31.875;0] in W for OLTM, [127.5;0] in C for CLTM.
 - UINT8 [HotBudgetCh0Dimm1](#)
Offset 0x04CD - Hot Budget Ch0 Dimm1 range[255;0]=[31.875;0] in W for OLTM, [127.5;0] in C for CLTM.
 - UINT8 [HotBudgetCh1Dimm0](#)
Offset 0x04CE - Hot Budget Ch1 Dimm0 range[255;0]=[31.875;0] in W for OLTM, [127.5;0] in C for CLTM.
 - UINT8 [HotBudgetCh1Dimm1](#)
Offset 0x04CF - Hot Budget Ch1 Dimm1 range[255;0]=[31.875;0] in W for OLTM, [127.5;0] in C for CLTM.
 - UINT8 [IdleEnergyCh0Dimm0](#)
Offset 0x04D0 - Idle Energy Ch0Dimm0 Idle Energy Consumed for 1 clk w/dimm idle/cke on, range[63;0],(10= Def)
 - UINT8 [IdleEnergyCh0Dimm1](#)
Offset 0x04D1 - Idle Energy Ch0Dimm1 Idle Energy Consumed for 1 clk w/dimm idle/cke on, range[63;0],(10= Def)
 - UINT8 [IdleEnergyCh1Dimm0](#)
Offset 0x04D2 - Idle Energy Ch1Dimm0 Idle Energy Consumed for 1 clk w/dimm idle/cke on, range[63;0],(10= Def)
 - UINT8 [IdleEnergyCh1Dimm1](#)
Offset 0x04D3 - Idle Energy Ch1Dimm1 Idle Energy Consumed for 1 clk w/dimm idle/cke on, range[63;0],(10= Def)
 - UINT8 [PdEnergyCh0Dimm0](#)
Offset 0x04D4 - PowerDown Energy Ch0Dimm0 PowerDown Energy Consumed w/dimm idle/cke off, range[63;0],(5= Def)
 - UINT8 [PdEnergyCh0Dimm1](#)
Offset 0x04D5 - PowerDown Energy Ch0Dimm1 PowerDown Energy Consumed w/dimm idle/cke off, range[63;0],(5= Def)
 - UINT8 [PdEnergyCh1Dimm0](#)
Offset 0x04D6 - PowerDown Energy Ch1Dimm0 PowerDown Energy Consumed w/dimm idle/cke off, range[63;0],(5= Def)
 - UINT8 [PdEnergyCh1Dimm1](#)
Offset 0x04D7 - PowerDown Energy Ch1Dimm1 PowerDown Energy Consumed w/dimm idle/cke off, range[63;0],(5= Def)
 - UINT8 [ActEnergyCh0Dimm0](#)
Offset 0x04D8 - Activate Energy Ch0Dimm0 Activate Energy Contribution, range[255;0],(172= Def)
 - UINT8 [ActEnergyCh0Dimm1](#)
Offset 0x04D9 - Activate Energy Ch0Dimm1 Activate Energy Contribution, range[255;0],(172= Def)
 - UINT8 [ActEnergyCh1Dimm0](#)
Offset 0x04DA - Activate Energy Ch1Dimm0 Activate Energy Contribution, range[255;0],(172= Def)
 - UINT8 [ActEnergyCh1Dimm1](#)
Offset 0x04DB - Activate Energy Ch1Dimm1 Activate Energy Contribution, range[255;0],(172= Def)
 - UINT8 [RdEnergyCh0Dimm0](#)
Offset 0x04DC - Read Energy Ch0Dimm0 Read Energy Contribution, range[255;0],(212= Def)
 - UINT8 [RdEnergyCh0Dimm1](#)
Offset 0x04DD - Read Energy Ch0Dimm1 Read Energy Contribution, range[255;0],(212= Def)
 - UINT8 [RdEnergyCh1Dimm0](#)
Offset 0x04DE - Read Energy Ch1Dimm0 Read Energy Contribution, range[255;0],(212= Def)
 - UINT8 [RdEnergyCh1Dimm1](#)
Offset 0x04DF - Read Energy Ch1Dimm1 Read Energy Contribution, range[255;0],(212= Def)
 - UINT8 [WrEnergyCh0Dimm0](#)
Offset 0x04E0 - Write Energy Ch0Dimm0 Write Energy Contribution, range[255;0],(221= Def)
 - UINT8 [WrEnergyCh0Dimm1](#)
-

- Offset 0x04E1 - Write Energy Ch0Dimm1 Write Energy Contribution, range[255;0],(221= Def)*

 - UINT8 [WrEnergyCh1Dimm0](#)
 - Offset 0x04E2 - Write Energy Ch1Dimm0 Write Energy Contribution, range[255;0],(221= Def)*

 - UINT8 [WrEnergyCh1Dimm1](#)
 - Offset 0x04E3 - Write Energy Ch1Dimm1 Write Energy Contribution, range[255;0],(221= Def)*

 - UINT8 [ThrtCkeMinTmr](#)
 - Offset 0x04E4 - Throttler CKEMin Timer Timer value for CKEMin, range[255;0].*

 - UINT8 [CkeRankMapping](#)
 - Offset 0x04E5 - Cke Rank Mapping Bits [7:4] - Channel 1, bits [3:0] - Channel 0.*

 - UINT8 [RaplPwrFICH0](#)
 - Offset 0x04E6 - Rapl Power Floor Ch0 Power budget ,range[255;0],(0= 5.3W Def)*

 - UINT8 [RaplPwrFICH1](#)
 - Offset 0x04E7 - Rapl Power Floor Ch1 Power budget ,range[255;0],(0= 5.3W Def)*

 - UINT8 [EnCmdRate](#)
 - Offset 0x04E8 - Command Rate Support CMD Rate and Limit Support Option.*

 - UINT8 [Refresh2X](#)
 - Offset 0x04E9 - REFRESH_2X_MODE 0- (Default)Disabled 1-iMC enables 2xRef when Warm and Hot 2- iMC enables 2xRef when Hot 0:Disable, 1:Enabled for WARM or HOT, 2:Enabled HOT only.*

 - UINT8 [EpgEnable](#)
 - Offset 0x04EA - Energy Performance Gain Enable/disable(default) Energy Performance Gain.*

 - UINT8 [RhSolution](#)
 - Offset 0x04EB - Row Hammer Solution Type of method used to prevent Row Hammer.*

 - UINT8 [UserThresholdEnable](#)
 - Offset 0x04EC - User Manual Threshold Disabled: Predefined threshold will be used.*

 - UINT8 [UserBudgetEnable](#)
 - Offset 0x04ED - User Manual Budget Disabled: Configuration of memories will defined the Budget value.*

 - UINT8 [TsodTcritMax](#)
 - Offset 0x04EE - TcritMax Maximum Critical Temperature in Centigrade of the On-DIMM Thermal Sensor.*

 - UINT8 [TsodEventMode](#)
 - Offset 0x04EF - Event mode Disable:Comparator mode.*

 - UINT8 [TsodEventPolarity](#)
 - Offset 0x04F0 - EVENT polarity Disable:Active LOW.*

 - UINT8 [TsodCriticalEventOnly](#)
 - Offset 0x04F1 - Critical event only Disable:Trips on alarm or critical.*

 - UINT8 [TsodEventOutputControl](#)
 - Offset 0x04F2 - Event output control Disable:Event output disable.*

 - UINT8 [TsodAlarmwindowLockBit](#)
 - Offset 0x04F3 - Alarm window lock bit Disable:Alarm trips are not locked and can be changed.*

 - UINT8 [TsodCriticaltripLockBit](#)
 - Offset 0x04F4 - Critical trip lock bit Disable:Critical trip is not locked and can be changed.*

 - UINT8 [TsodShutdownMode](#)
 - Offset 0x04F5 - Shutdown mode Disable:Temperature sensor enable.*

 - UINT8 [TsodThigMax](#)
 - Offset 0x04F6 - ThighMax Thigh = ThighMax (Default is 93)*

 - UINT8 [TsodManualEnable](#)
 - Offset 0x04F7 - User Manual Thig and Tcrit Disabled(Default): Temperature will be given by the configuration of memories and 1x or 2xrefresh rate.*

 - UINT8 [ForceOltmOrRefresh2x](#)
 - Offset 0x04F8 - Force OLTM or 2X Refresh when needed Disabled(Default): = Force OLTM.*

 - UINT8 [PwdownIdleCounter](#)
 - Offset 0x04F9 - Pwr Down Idle Timer The minimum value should = to the worst case Roundtrip delay + Burst_Length.*
-

- UINT8 [CmdRanksTerminated](#)
Offset 0x04FA - Bitmask of ranks that have CA bus terminated Offset 225 LPDDR4: Bitmask of ranks that have CA bus terminated.
 - UINT8 [GdxcEnable](#)
Offset 0x04FB - GDXC MOT enable GDXC MOT enable.
 - UINT8 [PcdSerialDebugLevel](#)
Offset 0x04FC - PcdSerialDebugLevel Serial Debug Message Level.
 - UINT8 [FivrFaults](#)
*Offset 0x04FD - Fivr Faults Fivr Faults; 0: Disabled; 1: **Enabled**.*
 - UINT8 [FivrEfficiency](#)
*Offset 0x04FE - Fivr Efficiency Fivr Efficiency Management; 0: Disabled; 1: **Enabled**.*
 - UINT8 [SafeMode](#)
Offset 0x04FF - Safe Mode Support This option configures the various items in the IO and MC to be more conservative.
 - UINT8 [CleanMemory](#)
*Offset 0x0500 - Ask MRC to clear memory content Ask MRC to clear memory content 0: **Do not Clear Memory**; 1: Clear Memory.*
 - UINT8 [LpDdrDqDqsReTraining](#)
Offset 0x0501 - LpDdrDqDqsReTraining Enables/Disable LpDdrDqDqsReTraining \$EN_DIS.
 - UINT16 [PostCodeOutputPort](#)
Offset 0x0502 - Post Code Output Port This option configures Post Code Output Port.
 - UINT8 [RMTLoopCount](#)
Offset 0x0504 - RMTLoopCount Specifies the Loop Count to be used during Rank Margin Tool Testing.
 - UINT8 [EnBER](#)
Offset 0x0505 - BER Support Enable/Disable the Rank Margin Tool interpolation/extrapolation.
 - UINT8 [DualDimmPerChannelBoardType](#)
Offset 0x0506 - Dual Dimm Per-Channel Board Type Option to indicate if Board Layout includes One/Two DIMMs per channel.
 - UINT8 [Ddr4Mixed2Dpclimit](#)
Offset 0x0507 - DDR4 Mixed U-DIMM 2DPC Limitation Enable/Disable Frequency Limitation for DDR4 Mixed Dimm 2DPC Memory Configurations.
 - UINT8 [FastBootRmt](#)
Offset 0x0508 - RMT on Fast flow Enable/Disable RMT on Fast flow.
 - UINT8 [ReservedFspmUpdCfl](#)
Offset 0x0509 - CFL Reserved Reserved FspmConfig CFL \$EN_DIS.
 - UINT8 [MemTestOnWarmBoot](#)
Offset 0x050A - Memory Test on Warm Boot Run Base Memory Test on Warm Boot 0:Disable, 1:Enable.
 - UINT8 [ThrtCkeMinTmrLpddr](#)
Offset 0x050B - Throttler CKEMin Timer - LPDDR Timer value for CKEMin (For LPDDR Only), range[255;0].
 - UINT8 [X2ApicOptOut](#)
Offset 0x050C - State of X2APIC_OPT_OUT bit in the DMAR table 0=Disable/Clear, 1=Enable/Set \$EN_DIS.
 - UINT8 [MrcTrainOnWarm](#)
Offset 0x050D - MRC Force training on Warm Enables/Disable the MRC training on warm boot \$EN_DIS.
 - UINT8 [LpddrDramOdt](#)
Offset 0x050E - Lpddr Dram Odt Override Enable/Disable for the ODT logic for LPDDR3 memory.
 - UINT8 [Ddr4SkipRefreshEn](#)
Offset 0x050F - DDR4 Skip Refresh Enable Enable/Disable of DDR4 Temperature Controlled Refresh on DRAM.
 - UINT8 [SerialDebugMrcLevel](#)
Offset 0x0510 - SerialDebugMrcLevel MRC Serial Debug Message Level.
 - UINT8 [PchHdaSndwLinkIoControlEnabled](#) [4]
Offset 0x0511 - Enable HD Audio Sndw Link IO Control deprecated.
 - UINT8 [CoreVfPointOffsetMode](#)
-

Offset 0x0515 - Core VF Point Offset Mode Selects Core Voltage & Frequency Point Offset between Legacy and Selection modes; **0: Legacy**; 1: Selection.

- UINT16 [CoreVfPointOffset](#) [15]

Offset 0x0516 - Core VF Point Offset Array used to specifies the Offset Voltage applied to the each selected Core VF Point.

- UINT8 [CoreVfPointOffsetPrefix](#) [15]

Offset 0x0534 - Core VF Point Offset Prefix Sets the CoreVfPointOffset value as positive or negative for corresponding core VF Point; **0: Positive** ; 1: Negative.

- UINT8 [CoreVfPointRatio](#) [15]

Offset 0x0543 - Core VF Point Ratio Array for the each selected Core VF Point to display the ration.

- UINT8 [CoreVfPointCount](#)

Offset 0x0552 - Core VF Point Count Number of supported Core Voltage & Frequency Point Offset.

- UINT8 [UnusedUpdSpace8](#) [4]

Offset 0x0553.

- UINT8 [ReservedFspmUpd](#) [1]

Offset 0x0557.

13.33.1 Detailed Description

Fsp M Configuration.

Definition at line 56 of file FspmUpd.h.

13.33.2 Member Data Documentation

13.33.2.1 ActiveCoreCount

UINT8 FSP_M_CONFIG::ActiveCoreCount

Offset 0x01EA - Number of active cores Number of active cores(Depends on Number of cores).

0: All;1: 1 ;2: 2 ;3: 3 0:All, 1:1, 2:2, 3:3

Definition at line 955 of file FspmUpd.h.

13.33.2.2 ApertureSize

UINT8 FSP_M_CONFIG::ApertureSize

Offset 0x00AF - Aperture Size Select the Aperture Size.

0:128 MB, 1:256 MB, 3:512 MB, 7:1024 MB, 15: 2048 MB

Definition at line 227 of file FspmUpd.h.

13.33.2.3 ApStartupBase

UINT32 FSP_M_CONFIG::ApStartupBase

Offset 0x0228 - ApStartupBase Enable/Disable.

0: Disable, define default value of BiosAcmbase , 1: enable

Definition at line 1118 of file FspmUpd.h.

13.33.2.4 AutoEasyOverclock

UINT8 FSP_M_CONFIG::AutoEasyOverclock

Offset 0x0241 - Intel Speed Optimizer Enable When enabled this feature automatically overlocks your processor.

It changes the All Core Frequency along with PL1, PL2, and IccMax. 0: Disable;1: **Enable \$EN_DIS**

Definition at line 1145 of file FspmUpd.h.

13.33.2.5 Avx2RatioOffset

UINT8 FSP_M_CONFIG::Avx2RatioOffset

Offset 0x01EE - AVX2 Ratio Offset 0(Default)= No Offset.

Range 0 - 31. Specifies number of bins to decrease AVX ratio vs. Core Ratio. Uses Mailbox MSR 0x150, cmd 0x1B.

Definition at line 981 of file FspmUpd.h.

13.33.2.6 Avx3RatioOffset

UINT8 FSP_M_CONFIG::Avx3RatioOffset

Offset 0x01EF - AVX3 Ratio Offset 0(Default)= No Offset.

Range 0 - 31. Specifies number of bins to decrease AVX ratio vs. Core Ratio. Uses Mailbox MSR 0x150, cmd 0x1B.

Definition at line 987 of file FspmUpd.h.

13.33.2.7 BclkAdaptiveVoltage

UINT8 FSP_M_CONFIG::BclkAdaptiveVoltage

Offset 0x01F0 - BCLK Adaptive Voltage Enable When enabled, the CPU V/F curves are aware of BCLK frequency when calculated.

0: Disable;1: **Enable \$EN_DIS**

Definition at line 994 of file FspmUpd.h.

13.33.2.8 BiosAcmBase

UINT32 FSP_M_CONFIG::BiosAcmBase

Offset 0x0220 - BiosAcmBase Enable/Disable.

0: Disable, define default value of BiosAcmBase , 1: enable

Definition at line 1108 of file FspmUpd.h.

13.33.2.9 BiosAcmSize

UINT32 FSP_M_CONFIG::BiosAcmSize

Offset 0x0224 - BiosAcmSize Enable/Disable.

0: Disable, define default value of BiosAcmSize , 1: enable

Definition at line 1113 of file FspmUpd.h.

13.33.2.10 BiosGuard

UINT8 FSP_M_CONFIG::BiosGuard

Offset 0x0201 - BiosGuard Enable/Disable.

0: Disable, Enable/Disable BIOS Guard feature, 1: enable \$EN_DIS

Definition at line 1058 of file FspmUpd.h.

13.33.2.11 BistOnReset

UINT8 FSP_M_CONFIG::BistOnReset

Offset 0x01DE - BIST on Reset Enable or Disable BIST on Reset; **0: Disable**; 1: Enable.

\$EN_DIS

Definition at line 879 of file FspmUpd.h.

13.33.2.12 BootFrequency

UINT8 FSP_M_CONFIG::BootFrequency

Offset 0x01E9 - Boot frequency Sets the boot frequency starting from reset vector.

- 0: Maximum battery performance.- **1: Maximum non-turbo performance.**- 2: Turbo performance.

Note

If Turbo is selected BIOS will start in max non-turbo mode and switch to Turbo mode. 0:0, 1:1, 2:2

Definition at line 948 of file FspmUpd.h.

13.33.2.13 ChHashEnable

UINT8 FSP_M_CONFIG::ChHashEnable

Offset 0x0493 - Ch Hash Support Enable/Disable Channel Hash Support.

NOTE: ONLY if Memory interleaved Mode \$EN_DIS

Definition at line 1840 of file FspmUpd.h.

13.33.2.14 ChHashInterleaveBit

UINT8 FSP_M_CONFIG::ChHashInterleaveBit

Offset 0x04AC - Ch Hash Interleaved Bit Select the BIT to be used for Channel Interleaved mode.

NOTE: BIT7 will interlave the channels at a 2 cacheline granularity, BIT8 at 4 and BIT9 at 8. Default is BIT8 0:BIT6, 1:BIT7, 2:BIT8, 3:BIT9, 4:BIT10, 5:BIT11, 6:BIT12, 7:BIT13

Definition at line 1966 of file FspmUpd.h.

13.33.2.15 ChHashMask

UINT16 FSP_M_CONFIG::ChHashMask

Offset 0x04A6 - Ch Hash Mask Set the BIT(s) to be included in the XOR function.

NOTE BIT mask corresponds to BITS [19:6

Definition at line 1953 of file FspmUpd.h.

13.33.2.16 CkeRankMapping

UINT8 FSP_M_CONFIG::CkeRankMapping

Offset 0x04E5 - Cke Rank Mapping Bits [7:4] - Channel 1, bits [3:0] - Channel 0.

0xAA=Default Bit [i] specifies which rank CKE[i] goes to.

Definition at line 2238 of file FspmUpd.h.

13.33.2.17 CleanMemory

UINT8 FSP_M_CONFIG::CleanMemory

Offset 0x0500 - Ask MRC to clear memory content Ask MRC to clear memory content **0: Do not Clear Memory;**
1: Clear Memory.

\$EN_DIS

Definition at line 2413 of file FspmUpd.h.

13.33.2.18 CmdRanksTerminated

UINT8 FSP_M_CONFIG::CmdRanksTerminated

Offset 0x04FA - Bitmask of ranks that have CA bus terminated Offset 225 LPDDR4: Bitmask of ranks that have CA bus terminated.

0x01=Default, Rank0 is terminating and Rank1 is non-terminating

Definition at line 2374 of file FspmUpd.h.

13.33.2.19 CoreMaxOcRatio

UINT8 FSP_M_CONFIG::CoreMaxOcRatio

Offset 0x01E3 - Maximum Core Turbo Ratio Override Maximum core turbo ratio override allows to increase CPU core frequency beyond the fused max turbo ratio limit.

0: Hardware defaults. Range: 0-255

Definition at line 911 of file FspmUpd.h.

13.33.2.20 CorePllVoltageOffset

UINT8 FSP_M_CONFIG::CorePllVoltageOffset

Offset 0x01F1 - Core PLL voltage offset Core PLL voltage offset.

0: No offset. Range 0-63

Definition at line 999 of file FspmUpd.h.

13.33.2.21 CoreVfPointOffset

UINT16 FSP_M_CONFIG::CoreVfPointOffset[15]

Offset 0x0516 - Core VF Point Offset Array used to specifies the Offset Voltage applied to the each selected Core VF Point.

This voltage is specified in millivolts.

Definition at line 2524 of file FspmUpd.h.

13.33.2.22 CoreVfPointOffsetMode

UINT8 FSP_M_CONFIG::CoreVfPointOffsetMode

Offset 0x0515 - Core VF Point Offset Mode Selects Core Voltage & Frequency Point Offset between Legacy and Selection modes; **0: Legacy**; **1: Selection**.

0:Legacy, 1:Selection

Definition at line 2518 of file FspmUpd.h.

13.33.2.23 CoreVfPointOffsetPrefix

UINT8 FSP_M_CONFIG::CoreVfPointOffsetPrefix[15]

Offset 0x0534 - Core VF Point Offset Prefix Sets the CoreVfPointOffset value as positive or negative for corresponding core VF Point; **0: Positive** ; **1: Negative**.

0:Positive, 1:Negative

Definition at line 2531 of file FspmUpd.h.

13.33.2.24 CoreVoltageAdaptive

UINT16 FSP_M_CONFIG::CoreVoltageAdaptive

Offset 0x01F4 - Core Turbo voltage Adaptive Extra Turbo voltage applied to the cpu core when the cpu is operating in turbo mode.

Valid Range 0 to 2000

Definition at line 1011 of file FspmUpd.h.

13.33.2.25 CoreVoltageMode

UINT8 FSP_M_CONFIG::CoreVoltageMode

Offset 0x01E4 - Core voltage mode Core voltage mode; **0: Adaptive**; 1: Override.

\$EN_DIS

Definition at line 917 of file FspmUpd.h.

13.33.2.26 CoreVoltageOverride

UINT16 FSP_M_CONFIG::CoreVoltageOverride

Offset 0x01F2 - core voltage override The core voltage override which is applied to the entire range of cpu core frequencies.

Valid Range 0 to 2000

Definition at line 1005 of file FspmUpd.h.

13.33.2.27 CpuRatio

UINT8 FSP_M_CONFIG::CpuRatio

Offset 0x01E8 - CPU ratio value CPU ratio value.

Valid Range 0 to 63. CPU Ratio is 0 when disabled.

Definition at line 940 of file FspmUpd.h.

13.33.2.28 CpuTraceHubMemReg0Size

UINT8 FSP_M_CONFIG::CpuTraceHubMemReg0Size

Offset 0x00DB - CPU Trace Hub Memory Region 0 CPU Trace Hub Memory Region 0, The available memory size is : 0MB, 1MB, 8MB, 64MB, 128MB, 256MB, 512MB.

Note : Limitation of total buffer size (CPU + PCH) is 512MB. 0:0, 1:1MB, 2:8MB, 3:64MB, 4:128MB, 5:256MB, 6:512MB

Definition at line 439 of file FspmUpd.h.

13.33.2.29 CpuTraceHubMemReg1Size

UINT8 FSP_M_CONFIG::CpuTraceHubMemReg1Size

Offset 0x00DC - CPU Trace Hub Memory Region 1 CPU Trace Hub Memory Region 1.

The available memory size is : 0MB, 1MB, 8MB, 64MB, 128MB, 256MB, 512MB. Note : Limitation of total buffer size (CPU + PCH) is 512MB. 0:0, 1:1MB, 2:8MB, 3:64MB, 4:128MB, 5:256MB, 6:512MB

Definition at line 446 of file FspmUpd.h.

13.33.2.30 CpuTraceHubMode

UINT8 FSP_M_CONFIG::CpuTraceHubMode

Offset 0x00DA - CPU Trace Hub Mode Select 'Target Debugger' if Trace Hub is used by target debugger software or 'Disable' trace hub functionality.

0: Disable, 1:Target Debugger Mode

Definition at line 432 of file FspmUpd.h.

13.33.2.31 DciUsb3TypecUfpDbg

UINT8 FSP_M_CONFIG::DciUsb3TypecUfpDbg

Offset 0x0252 - USB3 Type-C UFP2DFP Kernel/Platform Debug Support This BIOS option enables kernel and platform debug for USB3 interface over a UFP Type-C receptacle, select 'No Change' will do nothing to UFP2DFP setting.

0:Disabled, 1:Enabled, 2:No Change

Definition at line 1179 of file FspmUpd.h.

13.33.2.32 Ddr4Mixed2DpcLimit

UINT8 FSP_M_CONFIG::Ddr4Mixed2DpcLimit

Offset 0x0507 - DDR4 Mixed U-DIMM 2DPC Limitation Enable/Disable Frequency Limitation for DDR4 Mixed Dimm 2DPC Memory Configurations.

Disable=0, Enable(Default)=1 \$EN_DIS

Definition at line 2449 of file FspmUpd.h.

13.33.2.33 Ddr4SkipRefreshEn

UINT8 FSP_M_CONFIG::Ddr4SkipRefreshEn

Offset 0x050F - DDR4 Skip Refresh Enable Enable/Disable of DDR4 Temperature Controlled Refresh on DRAM.

Default is 1 (Enabled) 0:Disable, 1:Enable

Definition at line 2497 of file FspmUpd.h.

13.33.2.34 DdrFreqLimit

UINT16 FSP_M_CONFIG::DdrFreqLimit

Offset 0x00B2 - DDR Frequency Limit Maximum Memory Frequency Selections in Mhz.

Valid values should match the refclk, i.e. divide by 133 or 100 1067:1067, 1333:1333, 1400:1400, 1600:1600, 1800:1800, 1867:1867, 2000:2000, 2133:2133, 2200:2200, 2400:2400, 2600:2600, 2667:2667, 2800:2800, 2933:2933, 3000:3000, 3200:3200, 0:Auto

Definition at line 250 of file FspmUpd.h.

13.33.2.35 DisableDimmChannel0

UINT8 FSP_M_CONFIG::DisableDimmChannel0

Offset 0x00B7 - Channel A DIMM Control Channel A DIMM Control Support - Enable or Disable Dimms on Channel A.

0:Enable both DIMMs, 1:Disable DIMM0, 2:Disable DIMM1, 3:Disable both DIMMs

Definition at line 269 of file FspmUpd.h.

13.33.2.36 DisableDimmChannel1

UINT8 FSP_M_CONFIG::DisableDimmChannel1

Offset 0x00B8 - Channel B DIMM Control Channel B DIMM Control Support - Enable or Disable Dimms on Channel B.

0:Enable both DIMMs, 1:Disable DIMM0, 2:Disable DIMM1, 3:Disable both DIMMs

Definition at line 275 of file FspmUpd.h.

13.33.2.37 DisableMtrrProgram

UINT8 FSP_M_CONFIG::DisableMtrrProgram

Offset 0x01E5 - Program Cache Attributes Program Cache Attributes; **0: Program**; 1: Disable Program.

\$EN_DIS

Definition at line 923 of file FspmUpd.h.

13.33.2.38 DmiDeEmphasis

UINT8 FSP_M_CONFIG::DmiDeEmphasis

Offset 0x0154 - DeEmphasis control for DMI DeEmphasis control for DMI.

0=-6dB, 1(Default)=-3.5 dB 0: -6dB, 1: -3.5dB

Definition at line 701 of file FspmUpd.h.

13.33.2.39 DmiGen3EndPointHint

UINT8 FSP_M_CONFIG::DmiGen3EndPointHint [8]

Offset 0x0115 - DMI Gen3 End port Hint values per lane Used for programming DMI Gen3 Hint values per lane.

Range: 0-6, 2 is default for each lane

Definition at line 648 of file FspmUpd.h.

13.33.2.40 DmiGen3EndPointPreset

UINT8 FSP_M_CONFIG::DmiGen3EndPointPreset [8]

Offset 0x010D - DMI Gen3 End port preset values per lane Used for programming DMI Gen3 preset values per lane.

Range: 0-9, 7 is default for each lane

Definition at line 643 of file FspmUpd.h.

13.33.2.41 DmiGen3ProgramStaticEq

UINT8 FSP_M_CONFIG::DmiGen3ProgramStaticEq

Offset 0x00F2 - Enable/Disable DMI GEN3 Static EQ Phase1 programming Program DMI Gen3 EQ Phase1 Static Presets.

Disabled(0x0): Disable EQ Phase1 Static Presets Programming, Enabled(0x1)(Default): Enable EQ Phase1 Static Presets Programming \$EN_DIS

Definition at line 506 of file FspmUpd.h.

13.33.2.42 DmiGen3RootPortPreset

UINT8 FSP_M_CONFIG::DmiGen3RootPortPreset [8]

Offset 0x0105 - DMI Gen3 Root port preset values per lane Used for programming DMI Gen3 preset values per lane.

Range: 0-9, 8 is default for each lane

Definition at line 638 of file FspmUpd.h.

13.33.2.43 DualDimmPerChannelBoardType

UINT8 FSP_M_CONFIG::DualDimmPerChannelBoardType

Offset 0x0506 - Dual Dimm Per-Channel Board Type Option to indicate if Board Layout includes One/Two DIMMs per channel.

This is used to limit maximum frequency for some SKUs. 0:1DPC, 1:2DPC

Definition at line 2442 of file FspmUpd.h.

13.33.2.44 EnableC6Dram

UINT8 FSP_M_CONFIG::EnableC6Dram

Offset 0x01E0 - C6DRAM power gating feature This policy indicates whether or not BIOS should allocate PRMRR memory for C6DRAM power gating feature.

- 0: Don't allocate any PRMRR memory for C6DRAM power gating feature.- **1: Allocate PRMRR memory for C6DRAM power gating feature.** \$EN_DIS

Definition at line 893 of file FspmUpd.h.

13.33.2.45 EnableSgx

UINT8 FSP_M_CONFIG::EnableSgx

Offset 0x0203 - EnableSgx Enable/Disable.

0: Disable, Enable/Disable SGX feature, 1: enable, 2: Software Control 0: Disable, 1: Enable, 2: Software Control

Definition at line 1068 of file FspmUpd.h.

13.33.2.46 EnBER

UINT8 FSP_M_CONFIG::EnBER

Offset 0x0505 - BER Support Enable/Disable the Rank Margin Tool interpolation/extrapolation.

0:Disable, 1:Enable

Definition at line 2435 of file FspmUpd.h.

13.33.2.47 EnCmdRate

UINT8 FSP_M_CONFIG::EnCmdRate

Offset 0x04E8 - Command Rate Support CMD Rate and Limit Support Option.

NOTE: ONLY supported in 1N Mode, Default is 3 CMDs 0:Disable, 1:1 CMD, 2:2 CMDS, 3:3 CMDS, 4:4 CMDS, 5:5 CMDS, 6:6 CMDS, 7:7 CMDS

Definition at line 2254 of file FspmUpd.h.

13.33.2.48 EpgEnable

UINT8 FSP_M_CONFIG::EpgEnable

Offset 0x04EA - Energy Performance Gain Enable/disable(default) Energy Performance Gain.

\$EN_DIS

Definition at line 2266 of file FspmUpd.h.

13.33.2.49 FastBootRmt

UINT8 FSP_M_CONFIG::FastBootRmt

Offset 0x0508 - RMT on Fast flow Enable/Disable RMT on Fast flow.

Default: Disabled \$EN_DIS

Definition at line 2455 of file FspmUpd.h.

13.33.2.50 FClkFrequency

UINT8 FSP_M_CONFIG::FClkFrequency

Offset 0x01EB - Processor Early Power On Configuration FCLK setting **0: 800 MHz (ULT/ULX).**

1: 1 GHz (DT/Halo). Not supported on ULT/ULX.- 2: 400 MHz. - 3: Reserved 0:800 MHz, 1: 1 GHz, 2: 400 MHz, 3: Reserved

Definition at line 962 of file FspmUpd.h.

13.33.2.51 FivrEfficiency

UINT8 FSP_M_CONFIG::FivrEfficiency

Offset 0x04FE - Fivr Efficiency Fivr Efficiency Management; 0: Disabled; **1: Enabled.**

\$EN_DIS

Definition at line 2401 of file FspmUpd.h.

13.33.2.52 FivrFaults

UINT8 FSP_M_CONFIG::FivrFaults

Offset 0x04FD - Fivr Faults Fivr Faults; 0: Disabled; **1: Enabled.**

\$EN_DIS

Definition at line 2395 of file FspmUpd.h.

13.33.2.53 ForceOltmOrRefresh2x

UINT8 FSP_M_CONFIG::ForceOltmOrRefresh2x

Offset 0x04F8 - Force OLTM or 2X Refresh when needed Disabled(Default): = Force OLTM.

Enabled: = Force 2x Refresh. \$EN_DIS

Definition at line 2362 of file FspmUpd.h.

13.33.2.54 FreqSaGvLow

UINT16 FSP_M_CONFIG::FreqSaGvLow

Offset 0x00B4 - Low Frequency SAGV Low Frequency Selections in Mhz.

Options are 1067, 1333, 1600, 1867, 2133, 2400, 2667, 2933 and 0 for Auto. 1067:1067, 1333:1333, 1600:1600, 1867:1867, 2133:2133, 2400:2400, 2667:2667, 2933:2933, 0:Auto

Definition at line 257 of file FspmUpd.h.

13.33.2.55 GdxcEnable

```
UINT8 FSP_M_CONFIG::GdxcEnable
```

Offset 0x04FB - GDXC MOT enable GDXC MOT enable.

\$EN_DIS

Definition at line 2380 of file FspmUpd.h.

13.33.2.56 GmAdr

```
UINT32 FSP_M_CONFIG::GmAdr
```

Offset 0x0158 - Temporary MMIO address for GMADR The reference code will use this as Temporary MMIO address space to access GMADR Registers. Platform should provide conflict free Temporary MMIO Range: GmAdr to (GmAdr + ApertureSize).

Default is (PciExpressBaseAddress - ApertureSize) to (PciExpressBaseAddress

- 0x1) (Where ApertureSize = 256MB)

Definition at line 721 of file FspmUpd.h.

13.33.2.57 GtPllVoltageOffset

```
UINT8 FSP_M_CONFIG::GtPllVoltageOffset
```

Offset 0x0468 - GT PLL voltage offset Core PLL voltage offset.

0: No offset. Range 0-63

Definition at line 1582 of file FspmUpd.h.

13.33.2.58 GtPsmiSupport

```
UINT8 FSP_M_CONFIG::GtPsmiSupport
```

Offset 0x01D2 - Selection of PSMI Support On/Off 0(Default) = FALSE, 1 = TRUE.

When TRUE, it will allow the PSMI Support \$EN_DIS

Definition at line 833 of file FspmUpd.h.

13.33.2.59 GttMmAdr

```
UINT32 FSP_M_CONFIG::GttMmAdr
```

Offset 0x015C - Temporary MMIO address for GTTMMADR The reference code will use this as Temporary MMIO address space to access GTTMMADR Registers. Platform should provide conflict free Temporary MMIO Range: GttMmAdr to (GttMmAdr + 2MB MMIO + 6MB Reserved + GttSize).

Default is (GmAdr - (2MB MMIO

- 6MB Reserved + GttSize)) to (GmAdr - 0x1) (Where GttSize = 8MB)

Definition at line 729 of file FspmUpd.h.

13.33.2.60 HobBufferSize

UINT8 FSP_M_CONFIG::HobBufferSize

Offset 0x046E - HobBufferSize Size to set HOB Buffer.

0:Default, 1: 1 Byte, 2: 1 KB, 3: Max value (assuming 63KB total HOB size). 0:Default, 1: 1 Byte, 2: 1 KB, 3: Max value

Definition at line 1616 of file FspmUpd.h.

13.33.2.61 HotThresholdCh0Dimm0

UINT8 FSP_M_CONFIG::HotThresholdCh0Dimm0

Offset 0x04C4 - Hot Threshold Ch0 Dimm0 range[255;0]=[31.875;0] in W for OLTM, [127.5;0] in C for CLTM.

Default is 255

Definition at line 2071 of file FspmUpd.h.

13.33.2.62 HotThresholdCh0Dimm1

UINT8 FSP_M_CONFIG::HotThresholdCh0Dimm1

Offset 0x04C5 - Hot Threshold Ch0 Dimm1 range[255;0]=[31.875;0] in W for OLTM, [127.5;0] in C for CLTM.

Default is 255

Definition at line 2076 of file FspmUpd.h.

13.33.2.63 HotThresholdCh1Dimm0

UINT8 FSP_M_CONFIG::HotThresholdCh1Dimm0

Offset 0x04C6 - Hot Threshold Ch1 Dimm0 range[255;0]=[31.875;0] in W for OLTM, [127.5;0] in C for CLTM.

Default is 255

Definition at line 2081 of file FspmUpd.h.

13.33.2.64 HotThresholdCh1Dimm1

UINT8 FSP_M_CONFIG::HotThresholdCh1Dimm1

Offset 0x04C7 - Hot Threshold Ch1 Dimm1 range[255;0]=[31.875;0] in W for OLTM, [127.5;0] in C for CLTM.

Default is 255

Definition at line 2086 of file FspmUpd.h.

13.33.2.65 Idd3n

UINT16 FSP_M_CONFIG::Idd3n

Offset 0x04AE - EPG DIMM Idd3N Active standby current (Idd3N) in milliamps from datasheet.

Must be calculated on a per DIMM basis. Default is 26

Definition at line 1977 of file FspmUpd.h.

13.33.2.66 Idd3p

UINT16 FSP_M_CONFIG::Idd3p

Offset 0x04B0 - EPG DIMM Idd3P Active power-down current (Idd3P) in milliamps from datasheet.

Must be calculated on a per DIMM basis. Default is 11

Definition at line 1983 of file FspmUpd.h.

13.33.2.67 IgdDvmt50PreAlloc

UINT8 FSP_M_CONFIG::IgdDvmt50PreAlloc

Offset 0x00AD - Internal Graphics Pre-allocated Memory Size of memory preallocated for internal graphics.

0x00:0 MB, 0x01:32 MB, 0x02:64 MB

Definition at line 215 of file FspmUpd.h.

13.33.2.68 ImrRpSelection

UINT8 FSP_M_CONFIG::ImrRpSelection

Offset 0x0449 - Root port number for IMR.

Root port number for IMR.

Definition at line 1427 of file FspmUpd.h.

13.33.2.69 InitPcieAspmAfterOprom

UINT8 FSP_M_CONFIG::InitPcieAspmAfterOprom

Offset 0x0103 - PCIe ASPM programming will happen in relation to the Oprom Select when PCIe ASPM programming will happen in relation to the Oprom.

Before(0x0)(Default): Do PCIe ASPM programming before Oprom, After(0x1): Do PCIe ASPM programming after Oprom, requires an SMI handler to save/restore ASPM settings during S3 resume 0:Before, 1:After

Definition at line 626 of file FspmUpd.h.

13.33.2.70 InternalGfx

UINT8 FSP_M_CONFIG::InternalGfx

Offset 0x00AE - Internal Graphics Enable/disable internal graphics.

\$EN_DIS

Definition at line 221 of file FspmUpd.h.

13.33.2.71 IsvtIoPort

UINT8 FSP_M_CONFIG::IsvtIoPort

Offset 0x00D6 - ISVT IO Port Address ISVT IO Port Address.

0=Minimal, 0xFF=Maximum, 0x99=Default

Definition at line 414 of file FspmUpd.h.

13.33.2.72 JtagC10PowerGateDisable

UINT8 FSP_M_CONFIG::JtagC10PowerGateDisable

Offset 0x01EC - Set JTAG power in C10 and deeper power states False: JTAG is power gated in C10 state.

True: keeps the JTAG power up during C10 and deeper power states for debug purpose. **0: False**; 1: True. 0: False, 1: True

Definition at line 969 of file FspmUpd.h.

13.33.2.73 LpddrDramOdt

UINT8 FSP_M_CONFIG::LpddrDramOdt

Offset 0x050E - Lpddr Dram Odt Override Enable/Disable for the ODT logic for LPDDR3 memory.

Default is 2 (AUTO) 0:Disable, 1:Enable, 2:AUTO

Definition at line 2491 of file FspmUpd.h.

13.33.2.74 MarginLimitCheck

UINT8 FSP_M_CONFIG::MarginLimitCheck

Offset 0x00D7 - Margin Limit Check Margin Limit Check.

Choose level of margin check 0:Disable, 1:L1, 2:L2, 3:Both

Definition at line 420 of file FspmUpd.h.

13.33.2.75 McPllVoltageOffset

UINT8 FSP_M_CONFIG::McPllVoltageOffset

Offset 0x046B - Memory Controller PLL voltage offset Core PLL voltage offset.

0: No offset. Range 0-63

Definition at line 1597 of file FspmUpd.h.

13.33.2.76 MemoryTrace

UINT8 FSP_M_CONFIG::MemoryTrace

Offset 0x0492 - Memory Trace Enable Memory Trace of Ch 0 to Ch 1 using Stacked Mode.

Both channels must be of equal size. This option may change TOLUD and REMAP values as needed. \$EN_DIS

Definition at line 1834 of file FspmUpd.h.

13.33.2.77 MmioSize

UINT16 FSP_M_CONFIG::MmioSize

Offset 0x00A4 - MMIO Size Size of MMIO space reserved for devices.

0(Default)=Auto, non-Zero=size in MB

Definition at line 186 of file FspmUpd.h.

13.33.2.78 OcLock

UINT8 FSP_M_CONFIG::OcLock

Offset 0x01E2 - Over clocking Lock Over clocking Lock Enable/Disable; 0: Disable; **1: Enable.**

\$EN_DIS

Definition at line 905 of file FspmUpd.h.

13.33.2.79 PcdDebugInterfaceFlags

UINT8 FSP_M_CONFIG::PcdDebugInterfaceFlags

Offset 0x044B - Debug Interfaces Debug Interfaces.

BIT0-RAM, BIT1-UART, BIT3-USB3, BIT4-Serial IO, BIT5-TraceHub, BIT2 - Not used.

Definition at line 1439 of file FspmUpd.h.

13.33.2.80 PcdIsaSerialUartBase

UINT8 FSP_M_CONFIG::PcdIsaSerialUartBase

Offset 0x0467 - ISA Serial Base selection Select ISA Serial Base address.

Default is 0x3F8. 0:0x3F8, 1:0x2F8

Definition at line 1577 of file FspmUpd.h.

13.33.2.81 PcdSerialDebugBaudRate

UINT8 FSP_M_CONFIG::PcdSerialDebugBaudRate

Offset 0x046D - PcdSerialDebugBaudRate Baud Rate for Serial Debug Messages.

3:9600, 4:19200, 6:56700, 7:115200. 3:9600, 4:19200, 6:56700, 7:115200

Definition at line 1609 of file FspmUpd.h.

13.33.2.82 PcdSerialDebugLevel

UINT8 FSP_M_CONFIG::PcdSerialDebugLevel

Offset 0x04FC - PcdSerialDebugLevel Serial Debug Message Level.

0:Disable, 1:Error Only, 2:Error & Warnings, 3:Load, Error, Warnings & Info, 4:Load, Error, Warnings, Info & Event, 5:Load, Error, Warnings, Info & Verbose. 0:Disable, 1:Error Only, 2:Error and Warnings, 3:Load Error Warnings and Info, 4:Load Error Warnings and Info & Event, 5:Load Error Warnings Info and Verbose

Definition at line 2389 of file FspmUpd.h.

13.33.2.83 PchHdaAudioLinkDmic0

UINT8 FSP_M_CONFIG::PchHdaAudioLinkDmic0

Offset 0x045B - Enable HD Audio DMIC0 Link Deprecated.

\$EN_DIS

Definition at line 1511 of file FspmUpd.h.

13.33.2.84 PchHdaAudioLinkDmic1

UINT8 FSP_M_CONFIG::PchHdaAudioLinkDmic1

Offset 0x045C - Enable HD Audio DMIC1 Link Deprecated.

\$EN_DIS

Definition at line 1517 of file FspmUpd.h.

13.33.2.85 PchHdaAudioLinkHda

UINT8 FSP_M_CONFIG::PchHdaAudioLinkHda

Offset 0x045A - Enable HD Audio Link Enable/disable HD Audio Link.

Muxed with SSP0/SSP1/SNDW1. \$EN_DIS

Definition at line 1505 of file FspmUpd.h.

13.33.2.86 PchHdaAudioLinkSndw1

UINT8 FSP_M_CONFIG::PchHdaAudioLinkSndw1

Offset 0x0460 - Enable HD Audio SoundWire#1 Link Enable/disable HD Audio SNDW1 link.

Muxed with HDA. \$EN_DIS

Definition at line 1541 of file FspmUpd.h.

13.33.2.87 PchHdaAudioLinkSndw2

UINT8 FSP_M_CONFIG::PchHdaAudioLinkSndw2

Offset 0x0461 - Enable HD Audio SoundWire#2 Link Enable/disable HD Audio SNDW2 link.

Muxed with SSP1. \$EN_DIS

Definition at line 1547 of file FspmUpd.h.

13.33.2.88 PchHdaAudioLinkSndw3

UINT8 FSP_M_CONFIG::PchHdaAudioLinkSndw3

Offset 0x0462 - Enable HD Audio SoundWire#3 Link Enable/disable HD Audio SNDW3 link.

Muxed with DMIC1. \$EN_DIS

Definition at line 1553 of file FspmUpd.h.

13.33.2.89 PchHdaAudioLinkSndw4

UINT8 FSP_M_CONFIG::PchHdaAudioLinkSndw4

Offset 0x0463 - Enable HD Audio SoundWire#4 Link Enable/disable HD Audio SNDW4 link.

Muxed with DMIC0. \$EN_DIS

Definition at line 1559 of file FspmUpd.h.

13.33.2.90 PchHdaAudioLinkSsp0

UINT8 FSP_M_CONFIG::PchHdaAudioLinkSsp0

Offset 0x045D - Enable HD Audio SSP0 Link Enable/disable HD Audio SSP0/I2S link.

Muxed with HDA. \$EN_DIS

Definition at line 1523 of file FspmUpd.h.

13.33.2.91 PchHdaAudioLinkSsp1

UINT8 FSP_M_CONFIG::PchHdaAudioLinkSsp1

Offset 0x045E - Enable HD Audio SSP1 Link Enable/disable HD Audio SSP1/I2S link.

Muxed with HDA/SNDW2. \$EN_DIS

Definition at line 1529 of file FspmUpd.h.

13.33.2.92 PchHdaAudioLinkSsp2

UINT8 FSP_M_CONFIG::PchHdaAudioLinkSsp2

Offset 0x045F - Enable HD Audio SSP2 Link Enable/disable HD Audio SSP2/I2S link.

\$EN_DIS

Definition at line 1535 of file FspmUpd.h.

13.33.2.93 PchHdaDspEnable

UINT8 FSP_M_CONFIG::PchHdaDspEnable

Offset 0x0457 - Enable HD Audio DSP Enable/disable HD Audio DSP feature.

\$EN_DIS

Definition at line 1486 of file FspmUpd.h.

13.33.2.94 PchHdaDspUaaCompliance

UINT8 FSP_M_CONFIG::PchHdaDspUaaCompliance

Offset 0x0459 - Universal Audio Architecture compliance for DSP enabled system 0: Not-UAA Compliant (Intel SST driver supported only), 1: UAA Compliant (HDA Inbox driver or SST driver supported).

\$EN_DIS

Definition at line 1499 of file FspmUpd.h.

13.33.2.95 PchHdaSndwBufferRcomp

UINT8 FSP_M_CONFIG::PchHdaSndwBufferRcomp

Offset 0x0464 - Soundwire Clock Buffer GPIO RCOMP Setting 0: non-ACT - 50 Ohm driver impedance, 1: ACT - 8 Ohm driver impedance.

\$EN_DIS

Definition at line 1565 of file FspmUpd.h.

13.33.2.96 PchHdaVcType

UINT8 FSP_M_CONFIG::PchHdaVcType

Offset 0x0458 - VC Type Virtual Channel Type Select: 0: VC0, 1: VC1.

0: VC0, 1: VC1

Definition at line 1492 of file FspmUpd.h.

13.33.2.97 PchLpcEnhancePort8xhDecoding

UINT8 FSP_M_CONFIG::PchLpcEnhancePort8xhDecoding

Offset 0x0438 - PCH LPC Enhance the port 8xh decoding Original LPC only decodes one byte of port 80h.

\$EN_DIS

Definition at line 1378 of file FspmUpd.h.

13.33.2.98 PchNumRsvdSmbusAddresses

UINT8 FSP_M_CONFIG::PchNumRsvdSmbusAddresses

Offset 0x043B - Number of RsvdSmbusAddressTable.

The number of elements in the RsvdSmbusAddressTable.

Definition at line 1395 of file FspmUpd.h.

13.33.2.99 PchPort80Route

UINT8 FSP_M_CONFIG::PchPort80Route

Offset 0x0439 - PCH Port80 Route Control where the Port 80h cycles are sent, 0: LPC; 1: PCI.

\$EN_DIS

Definition at line 1384 of file FspmUpd.h.

13.33.2.100 PchSmbAlertEnable

UINT8 FSP_M_CONFIG::PchSmbAlertEnable

Offset 0x044A - Enable SMBus Alert Pin Enable SMBus Alert Pin.

\$EN_DIS

Definition at line 1433 of file FspmUpd.h.

13.33.2.101 PchTraceHubMemReg0Size

UINT8 FSP_M_CONFIG::PchTraceHubMemReg0Size

Offset 0x0254 - PCH Trace Hub Memory Region 0 buffer Size Specify size of Pch trace memory region 0 buffer, the size can be 0, 1MB, 8MB, 64MB, 128MB, 256MB, 512MB.

Note : Limitation of total buffer size (PCH + CPU) is 512MB. 0:0, 1:1MB, 2:8MB, 3:64MB, 4:128MB, 5:256MB, 6:512MB

Definition at line 1193 of file FspmUpd.h.

13.33.2.102 PchTraceHubMemReg1Size

UINT8 FSP_M_CONFIG::PchTraceHubMemReg1Size

Offset 0x0255 - PCH Trace Hub Memory Region 1 buffer Size Specify size of Pch trace memory region 1 buffer, the size can be 0, 1MB, 8MB, 64MB, 128MB, 256MB, 512MB.

Note : Limitation of total buffer size (PCH + CPU) is 512MB. 0:0, 1:1MB, 2:8MB, 3:64MB, 4:128MB, 5:256MB, 6:512MB

Definition at line 1200 of file FspmUpd.h.

13.33.2.103 PchTraceHubMode

UINT8 FSP_M_CONFIG::PchTraceHubMode

Offset 0x0253 - PCH Trace Hub Mode Select 'Host Debugger' if Trace Hub is used with host debugger tool or 'Target Debugger' if Trace Hub is used by target debugger software or 'Disable' trace hub functionality.

0: Disable, 1: Target Debugger Mode, 2: Host Debugger Mode

Definition at line 1186 of file FspmUpd.h.

13.33.2.104 PciImrSize

UINT16 FSP_M_CONFIG::PcieImrSize

Offset 0x043E - Size of PCIe IMR.

Size of PCIe IMR in megabytes

Definition at line 1405 of file FspmUpd.h.

13.33.2.105 PcieRpEnableMask

UINT32 FSP_M_CONFIG::PcieRpEnableMask

Offset 0x0444 - Enable PCIE RP Mask Enable/disable PCIE Root Ports.

0: disable, 1: enable. One bit for each port, bit0 for port1, bit1 for port2, and so on.

Definition at line 1416 of file FspmUpd.h.

13.33.2.106 PeciC10Reset

UINT8 FSP_M_CONFIG::PeciC10Reset

Offset 0x00DD - Enable or Disable Peci C10 Reset command Enable or Disable Peci C10 Reset command.

If Enabled, BIOS will send the CPU message to disable peci reset on C10 exit. The default value is **0: Disable** for CNL, and **1: Enable** for all other CPU's \$EN_DIS

Definition at line 454 of file FspmUpd.h.

13.33.2.107 PeciSxReset

UINT8 FSP_M_CONFIG::PeciSxReset

Offset 0x00DE - Enable or Disable Peci Sx Reset command Enable or Disable Peci Sx Reset command; **0: Disable;**
1: Enable.

\$EN_DIS

Definition at line 460 of file FspmUpd.h.

13.33.2.108 PegDataPtr

UINT32 FSP_M_CONFIG::PegDataPtr

Offset 0x0130 - Memory data pointer for saved preset search results The reference code will store the Gen3 Preset Search results in the SaDataHob's PegData structure (SA_PEG_DATA) and platform code can save/restore this data to skip preset search in the following boots.

Range: 0-0xFFFFFFFF, default is 0

Definition at line 684 of file FspmUpd.h.

13.33.2.109 PegDisableSpreadSpectrumClocking

UINT8 FSP_M_CONFIG::PegDisableSpreadSpectrumClocking

Offset 0x0104 - PCIe Disable Spread Spectrum Clocking PCIe Disable Spread Spectrum Clocking.

Normal Operation(0x0)(Default) - SSC enabled, Disable SSC(0x1) - Disable SSC per platform design or for compliance testing 0:Normal Operation, 1:Disable SSC

Definition at line 633 of file FspmUpd.h.

13.33.2.110 PerCoreHtDisable

UINT16 FSP_M_CONFIG::PerCoreHtDisable

Offset 0x01DC - Per-core HT Disable Defines the per-core HT disable mask where: 1 - Disable selected logical core HT, 0 - is ignored.

Input is in HEX and each bit maps to a logical core. Ex. A value of '1F' would disable HT for cores 4,3,2,1 and 0. Default is 0, all cores have HT enabled. Range is 0 - 0x1FF. You can only disable up to MAX_CORE_COUNT - 1.

Definition at line 873 of file FspmUpd.h.

13.33.2.111 PlatformDebugConsent

UINT8 FSP_M_CONFIG::PlatformDebugConsent

Offset 0x0251 - Platform Debug Consent To 'opt-in' for debug, please select 'Enabled' with the desired debug probe type.

Enabling this BIOS option may alter the default value of other debug-related BIOS options. Note: DCI OOB (aka BSSB) uses CCA probe; [DCI OOB+DbC] and [USB2 DbC] have the same setting 0:Disabled, 1:Enabled (DCI OOB+[DbC]), 2:Enabled (DCI OOB), 3:Enabled (USB3 DbC), 4:Enabled (XDP/MIPI60), 5:Enabled (USB2 DbC)

Definition at line 1172 of file FspmUpd.h.

13.33.2.112 ProbelessTrace

UINT8 FSP_M_CONFIG::ProbelessTrace

Offset 0x00A6 - Probeless Trace Probeless Trace: 0=Disabled, 1=Enable.

Enabling Probeless Trace will reserve 128MB. This also requires IED to be enabled. \$EN_DIS

Definition at line 193 of file FspmUpd.h.

13.33.2.113 PwdwnIdleCounter

UINT8 FSP_M_CONFIG::PwdownIdleCounter

Offset 0x04F9 - Pwr Down Idle Timer The minimum value should = to the worst case Roundtrip delay + Burst_↔ Length.

0 means AUTO: 64 for ULX/ULT, 128 for DT/Halo

Definition at line 2368 of file FspmUpd.h.

13.33.2.114 RankInterleave

UINT8 FSP_M_CONFIG::RankInterleave

Offset 0x0490 - Rank Interleave support Enables/Disable Rank Interleave support.

NOTE: RI and HORI can not be enabled at the same time. \$EN_DIS

Definition at line 1821 of file FspmUpd.h.

13.33.2.115 Ratio

UINT8 FSP_M_CONFIG::Ratio

Offset 0x00C0 - Memory Ratio Automatic or the frequency will equal ratio times reference clock.

Set to Auto to recalculate memory timings listed below. 0:Auto, 4:4, 5:5, 6:6, 7:7, 8:8, 9:9, 10:10, 11:11, 12:12, 13:13, 14:14, 15:15

Definition at line 319 of file FspmUpd.h.

13.33.2.116 RcompResistor

UINT16 FSP_M_CONFIG::RcompResistor[3]

Offset 0x0082 - RcompResistor settings Indicates RcompResistor settings: CML - 0's means MRC auto configured based on Design Guidelines, otherwise input an Ohmic value per segment.

CFL will need to provide the appropriate values.

Definition at line 114 of file FspmUpd.h.

13.33.2.117 RcompTarget

UINT16 FSP_M_CONFIG::RcompTarget[5]

Offset 0x0088 - RcompTarget settings RcompTarget settings: CML - 0's mean MRC auto configured based on Design Guidelines, otherwise input an Ohmic value per segment.

CFL will need to provide the appropriate values.

Definition at line 120 of file FspmUpd.h.

13.33.2.118 RealtimeMemoryTiming

UINT8 FSP_M_CONFIG::RealtimeMemoryTiming

Offset 0x01CF - Realtime Memory Timing 0(Default): Disabled, 1: Enabled.

When enabled, it will allow the system to perform realtime memory timing changes after MRC_DONE. 0: Disabled, 1: Enabled

Definition at line 815 of file FspmUpd.h.

13.33.2.119 RefClk

UINT8 FSP_M_CONFIG::RefClk

Offset 0x00BC - Memory Reference Clock 100MHz, 133MHz.

0:133MHz, 1:100MHz

Definition at line 301 of file FspmUpd.h.

13.33.2.120 RhSolution

UINT8 FSP_M_CONFIG::RhSolution

Offset 0x04EB - Row Hammer Solution Type of method used to prevent Row Hammer.

Default is Hardware RHP 0:Hardware RHP, 1:2x Refresh

Definition at line 2272 of file FspmUpd.h.

13.33.2.121 RingDownBin

UINT8 FSP_M_CONFIG::RingDownBin

Offset 0x01F8 - Ring Downbin Ring Downbin enable/disable.

When enabled, CPU will ensure the ring ratio is always lower than the core ratio.0: Disable; 1: **Enable**. \$EN_DIS

Definition at line 1023 of file FspmUpd.h.

13.33.2.122 RingMaxOcRatio

UINT8 FSP_M_CONFIG::RingMaxOcRatio

Offset 0x01E6 - Maximum clr turbo ratio override Maximum clr turbo ratio override allows to increase CPU clr frequency beyond the fused max turbo ratio limit.

0: Hardware defaults. Range: 0-255

Definition at line 929 of file FspmUpd.h.

13.33.2.123 RingPllVoltageOffset

UINT8 FSP_M_CONFIG::RingPllVoltageOffset

Offset 0x0469 - Ring PLL voltage offset Core PLL voltage offset.

0: No offset. Range 0-63

Definition at line 1587 of file FspmUpd.h.

13.33.2.124 RingVoltageAdaptive

UINT16 FSP_M_CONFIG::RingVoltageAdaptive

Offset 0x01FC - Ring Turbo voltage Adaptive Extra Turbo voltage applied to the cpu ring when the cpu is operating in turbo mode.

Valid Range 0 to 2000

Definition at line 1041 of file FspmUpd.h.

13.33.2.125 RingVoltageMode

UINT8 FSP_M_CONFIG::RingVoltageMode

Offset 0x01F9 - Ring voltage mode Ring voltage mode; **0: Adaptive**; 1: Override.

\$EN_DIS

Definition at line 1029 of file FspmUpd.h.

13.33.2.126 RingVoltageOffset

UINT16 FSP_M_CONFIG::RingVoltageOffset

Offset 0x01FE - Ring Turbo voltage Offset The voltage offset applied to the ring while operating in turbo mode.

Valid Range 0 to 1000

Definition at line 1046 of file FspmUpd.h.

13.33.2.127 RingVoltageOverride

UINT16 FSP_M_CONFIG::RingVoltageOverride

Offset 0x01FA - Ring voltage override The ring voltage override which is applied to the entire range of cpu ring frequencies.

Valid Range 0 to 2000

Definition at line 1035 of file FspmUpd.h.

13.33.2.128 RMT

UINT8 FSP_M_CONFIG::RMT

Offset 0x00B6 - Rank Margin Tool Enable/disable Rank Margin Tool.

\$EN_DIS

Definition at line 263 of file FspmUpd.h.

13.33.2.129 RMTLoopCount

UINT8 FSP_M_CONFIG::RMTLoopCount

Offset 0x0504 - RMTLoopCount Specifies the Loop Count to be used during Rank Margin Tool Testing.

0 - AUTO

Definition at line 2429 of file FspmUpd.h.

13.33.2.130 RmtPerTask

UINT8 FSP_M_CONFIG::RmtPerTask

Offset 0x0097 - Rank Margin Tool per Task This option enables the user to execute Rank Margin Tool per major training step in the MRC.

\$EN_DIS

Definition at line 158 of file FspmUpd.h.

13.33.2.131 SafeMode

UINT8 FSP_M_CONFIG::SafeMode

Offset 0x04FF - Safe Mode Support This option configures the various items in the IO and MC to be more conservative.

(def=Disable) \$EN_DIS

Definition at line 2407 of file FspmUpd.h.

13.33.2.132 SaGv

UINT8 FSP_M_CONFIG::SaGv

Offset 0x00B1 - SA GV System Agent dynamic frequency support and when enabled memory will be training at two different frequencies.

Only effects ULX/ULT CPUs. 0=Disabled, 1=FixedLow, 2=FixedHigh, and 3=Enabled. 0:Disabled, 1:FixedLow, 2:FixedHigh, 3:Enabled

Definition at line 242 of file FspmUpd.h.

13.33.2.133 SaPllVoltageOffset

UINT8 FSP_M_CONFIG::SaPllVoltageOffset

Offset 0x046A - System Agent PLL voltage offset Core PLL voltage offset.

0: No offset. Range 0-63

Definition at line 1592 of file FspmUpd.h.

13.33.2.134 ScramblerSupport

UINT8 FSP_M_CONFIG::ScramblerSupport

Offset 0x00B9 - Scrambler Support This option enables data scrambling in memory.

\$EN_DIS

Definition at line 281 of file FspmUpd.h.

13.33.2.135 SerialDebugMrcLevel

UINT8 FSP_M_CONFIG::SerialDebugMrcLevel

Offset 0x0510 - SerialDebugMrcLevel MRC Serial Debug Message Level.

0:Disable, 1:Error Only, 2:Error & Warnings, 3:Load, Error, Warnings & Info, 4:Load, Error, Warnings, Info & Event, 5:Load, Error, Warnings, Info & Verbose. 0:Disable, 1:Error Only, 2:Error and Warnings, 3:Load Error Warnings and Info, 4:Load Error Warnings and Info & Event, 5:Load Error Warnings Info and Verbose

Definition at line 2506 of file FspmUpd.h.

13.33.2.136 SerialIoUartDebugAutoFlow

UINT8 FSP_M_CONFIG::SerialIoUartDebugAutoFlow

Offset 0x044D - Serial Io Uart Debug Auto Flow Enables UART hardware flow control, CTS and RTS lines.

\$EN_DIS

Definition at line 1452 of file FspmUpd.h.

13.33.2.137 SerialIoUartDebugBaudRate

UINT32 FSP_M_CONFIG::SerialIoUartDebugBaudRate

Offset 0x0450 - Serial Io Uart Debug BaudRate Set default BaudRate Supported from 0 - default to 6000000.

Recommended values 9600, 19200, 57600, 115200, 460800, 921600, 1500000, 1843200, 3000000, 3686400, 6000000

Definition at line 1462 of file FspmUpd.h.

13.33.2.138 SerialIoUartDebugControllerNumber

UINT8 FSP_M_CONFIG::SerialIoUartDebugControllerNumber

Offset 0x044C - Serial Io Uart Debug Controller Number Select SerialIo Uart Controller for debug.

Note: If UART0 is selected as CNVi BT Core interface, it cannot be used for debug purpose. 0:SerialIoUart0, 1:SerialIoUart1, 2:SerialIoUart2

Definition at line 1446 of file FspmUpd.h.

13.33.2.139 SerialIoUartDebugDataBits

UINT8 FSP_M_CONFIG::SerialIoUartDebugDataBits

Offset 0x0456 - Serial Io Uart Debug Data Bits Set default word length.

0: Default, 5,6,7,8 5:5BITS, 6:6BITS, 7:7BITS, 8:8BITS

Definition at line 1480 of file FspmUpd.h.

13.33.2.140 SerialIoUartDebugParity

UINT8 FSP_M_CONFIG::SerialIoUartDebugParity

Offset 0x0454 - Serial Io Uart Debug Parity Set default Parity.

0: DefaultParity, 1: NoParity, 2: EvenParity, 3: OddParity

Definition at line 1468 of file FspmUpd.h.

13.33.2.141 SerialIoUartDebugStopBits

UINT8 FSP_M_CONFIG::SerialIoUartDebugStopBits

Offset 0x0455 - Serial Io Uart Debug Stop Bits Set default stop bits.

0: DefaultStopBits, 1: OneStopBit, 2: OneFiveStopBits, 3: TwoStopBits

Definition at line 1474 of file FspmUpd.h.

13.33.2.142 SinitMemorySize

UINT32 FSP_M_CONFIG::SinitMemorySize

Offset 0x020C - SinitMemorySize Enable/Disable.

0: Disable, define default value of SinitMemorySize , 1: enable

Definition at line 1088 of file FspmUpd.h.

13.33.2.143 SkipMplnit

UINT8 FSP_M_CONFIG::SkipMpInit

Offset 0x00BA - Skip Multi-Processor Initialization When this is skipped, boot loader must initialize processors before SilicionInit API.

0: Initialize; **1: Skip \$EN_DIS**

Definition at line 288 of file FspmUpd.h.

13.33.2.144 SmbusArpEnable

UINT8 FSP_M_CONFIG::SmbusArpEnable

Offset 0x043A - Enable SMBus ARP support Enable SMBus ARP support.

\$EN_DIS

Definition at line 1390 of file FspmUpd.h.

13.33.2.145 SmbusEnable

UINT8 FSP_M_CONFIG::SmbusEnable

Offset 0x0250 - Enable SMBus Enable/disable SMBus controller.

\$EN_DIS

Definition at line 1162 of file FspmUpd.h.

13.33.2.146 SpdAddressTable

UINT8 FSP_M_CONFIG::SpdAddressTable[4]

Offset 0x00A9 - Spd Address Tabl Specify SPD Address table for CH0D0/CH0D1/CH1D0&CH1D1.

MemorySpdPtr will be used if SPD Address is 00

Definition at line 209 of file FspmUpd.h.

13.33.2.147 SpdProfileSelected

UINT8 FSP_M_CONFIG::SpdProfileSelected

Offset 0x00BB - SPD Profile Selected Select DIMM timing profile.

Options are 0=Default profile, 1=Custom profile, 2=XMP Profile 1, 3=XMP Profile 2 0:Default profile, 1:Custom profile, 2:XMP profile 1, 3:XMP profile 2

Definition at line 295 of file FspmUpd.h.

13.33.2.148 TgaSize

UINT32 FSP_M_CONFIG::TgaSize

Offset 0x022C - TgaSize Enable/Disable.

0: Disable, define default value of TgaSize , 1: enable

Definition at line 1123 of file FspmUpd.h.

13.33.2.149 ThrtCkeMinTmr

UINT8 FSP_M_CONFIG::ThrtCkeMinTmr

Offset 0x04E4 - Throttler CKEMin Timer Timer value for CKEMin, range[255;0].

Req'd min of SC_ROUND_T + BYTE_LENGTH (4). Default is 0x30

Definition at line 2232 of file FspmUpd.h.

13.33.2.150 ThrtCkeMinTmrLpddr

UINT8 FSP_M_CONFIG::ThrtCkeMinTmrLpddr

Offset 0x050B - Throttler CKEMin Timer - LPDDR Timer value for CKEMin (For LPDDR Only), range[255;0].

Req'd min of SC_ROUND_T + BYTE_LENGTH (4). Default is 0x40

Definition at line 2473 of file FspmUpd.h.

13.33.2.151 TjMaxOffset

UINT8 FSP_M_CONFIG::TjMaxOffset

Offset 0x0200 - TjMax Offset TjMax offset. Specified value here is clipped by pCode (125 - TjMax Offset) to support TjMax in the range of 62 to 115 deg Celsius.

Valid Range 10 - 63

Definition at line 1052 of file FspmUpd.h.

13.33.2.152 TrainTrace

UINT8 FSP_M_CONFIG::TrainTrace

Offset 0x0098 - Training Trace This option enables the trained state tracing feature in MRC.

This feature will print out the key training parameters state across major training steps. \$EN_DIS

Definition at line 165 of file FspmUpd.h.

13.33.2.153 tRTP

UINT8 FSP_M_CONFIG::tRTP

Offset 0x00CE - tRTP Min Internal Read to Precharge Command Delay Time, 0: AUTO, max: 15.

DDR4 legal values: 5, 6, 7, 8, 9, 10, 12

Definition at line 371 of file FspmUpd.h.

13.33.2.154 TsegSize

UINT32 FSP_M_CONFIG::TsegSize

Offset 0x00A0 - Tseg Size Size of SMRAM memory reserved.

0x400000 for Release build and 0x1000000 for Debug build 0x0400000:4MB, 0x01000000:16MB

Definition at line 181 of file FspmUpd.h.

13.33.2.155 TsodAlarmwindowLockBit

UINT8 FSP_M_CONFIG::TsodAlarmwindowLockBit

Offset 0x04F3 - Alarm window lock bit Disable:Alarm trips are not locked and can be changed.

Enable:Alarm trips are locked and cannot be changed \$EN_DIS

Definition at line 2328 of file FspmUpd.h.

13.33.2.156 TsodCriticalEventOnly

UINT8 FSP_M_CONFIG::TsodCriticalEventOnly

Offset 0x04F1 - Critical event only Disable:Trips on alarm or critical.

Enable:Trips only if criticaal temperature is reached \$EN_DIS

Definition at line 2314 of file FspmUpd.h.

13.33.2.157 TsodCriticaltripLockBit

UINT8 FSP_M_CONFIG::TsodCriticaltripLockBit

Offset 0x04F4 - Critical trip lock bit Disable:Critical trip is not locked and can be changed.

Enable:Critical trip is locked and cannot be changed \$EN_DIS

Definition at line 2335 of file FspmUpd.h.

13.33.2.158 TsodEventMode

UINT8 FSP_M_CONFIG::TsodEventMode

Offset 0x04EF - Event mode Disable:Comparator mode.

Enable:Interrupt mode \$EN_DIS

Definition at line 2300 of file FspmUpd.h.

13.33.2.159 TsodEventOutputControl

UINT8 FSP_M_CONFIG::TsodEventOutputControl

Offset 0x04F2 - Event output control Disable:Event output disable.

Enable:Event output enabled \$EN_DIS

Definition at line 2321 of file FspmUpd.h.

13.33.2.160 TsodEventPolarity

UINT8 FSP_M_CONFIG::TsodEventPolarity

Offset 0x04F0 - EVENT polarity Disable:Active LOW.

Enable:Active HIGH \$EN_DIS

Definition at line 2307 of file FspmUpd.h.

13.33.2.161 TsodManualEnable

UINT8 FSP_M_CONFIG::TsodManualEnable

Offset 0x04F7 - User Manual Thig and Tcrit Disabled(Default): Temperature will be given by the configuration of memories and 1x or 2xrefresh rate.

Enabled: User Input will define for Thigh and Tcrit. \$EN_DIS

Definition at line 2355 of file FspmUpd.h.

13.33.2.162 TsodShutdownMode

UINT8 FSP_M_CONFIG::TsodShutdownMode

Offset 0x04F5 - Shutdown mode Disable:Temperature sensor enable.

Enable:Temperature sensor disable \$EN_DIS

Definition at line 2342 of file FspmUpd.h.

13.33.2.163 TsodTcritMax

UINT8 FSP_M_CONFIG::TsodTcritMax

Offset 0x04EE - TcritMax Maximum Critical Temperature in Centigrade of the On-DIMM Thermal Sensor.

TCRITMax has to be greater than THIGHMax .

Critical temperature will be TcritMax

Definition at line 2293 of file FspmUpd.h.

13.33.2.164 TvbRatioClipping

UINT8 FSP_M_CONFIG::TvbRatioClipping

Offset 0x0121 - Thermal Velocity Boost Ratio clipping 0(Default): Disabled, 1: Enabled.

This service controls Core frequency reduction caused by high package temperatures for processors that implement the Intel Thermal Velocity Boost (TVB) feature 0: Disabled, 1: Enabled

Definition at line 661 of file FspmUpd.h.

13.33.2.165 TvbVoltageOptimization

UINT8 FSP_M_CONFIG::TvbVoltageOptimization

Offset 0x0122 - Thermal Velocity Boost voltage optimization 0: Disabled, 1: Enabled(Default).

This service controls thermal based voltage optimizations for processors that implement the Intel Thermal Velocity Boost (TVB) feature. 0: Disabled, 1: Enabled

Definition at line 668 of file FspmUpd.h.

13.33.2.166 Txt

UINT8 FSP_M_CONFIG::Txt

Offset 0x0204 - Txt Enable/Disable.

0: Disable, Enable/Disable Txt feature, 1: enable \$EN_DIS

Definition at line 1074 of file FspmUpd.h.

13.33.2.167 TxtDprMemoryBase

UINT64 FSP_M_CONFIG::TxtDprMemoryBase

Offset 0x0218 - TxtDprMemoryBase Enable/Disable.

0: Disable, define default value of TxtDprMemoryBase , 1: enable

Definition at line 1103 of file FspmUpd.h.

13.33.2.168 TxtDprMemorySize

UINT32 FSP_M_CONFIG::TxtDprMemorySize

Offset 0x0214 - TxtDprMemorySize Enable/Disable.

0: Disable, define default value of TxtDprMemorySize , 1: enable

Definition at line 1098 of file FspmUpd.h.

13.33.2.169 TxtHeapMemorySize

UINT32 FSP_M_CONFIG::TxtHeapMemorySize

Offset 0x0210 - TxtHeapMemorySize Enable/Disable.

0: Disable, define default value of TxtHeapMemorySize , 1: enable

Definition at line 1093 of file FspmUpd.h.

13.33.2.170 TxtImplemented

UINT8 FSP_M_CONFIG::TxtImplemented

Offset 0x01C1 - Enable/Disable MRC TXT dependency When enabled MRC execution will wait for TXT initialization to be done first.

Disabled(0x0)(Default): MRC will not wait for TXT initialization, Enabled(0x1): MRC will wait for TXT initialization
\$EN_DIS

Definition at line 762 of file FspmUpd.h.

13.33.2.171 TxtLcpPdBase

UINT64 FSP_M_CONFIG::TxtLcpPdBase

Offset 0x0230 - TxtLcpPdBase Enable/Disable.

0: Disable, define default value of TxtLcpPdBase , 1: enable

Definition at line 1128 of file FspmUpd.h.

13.33.2.172 TxtLcpPdSize

UINT64 FSP_M_CONFIG::TxtLcpPdSize

Offset 0x0238 - TxtLcpPdSize Enable/Disable.

0: Disable, define default value of TxtLcpPdSize , 1: enable

Definition at line 1133 of file FspmUpd.h.

13.33.2.173 UserBudgetEnable

UINT8 FSP_M_CONFIG::UserBudgetEnable

Offset 0x04ED - User Manual Budget Disabled: Configuration of memories will defined the Budget value.

Enabled: User Input will be used. \$EN_DIS

Definition at line 2286 of file FspmUpd.h.

13.33.2.174 UserThresholdEnable

UINT8 FSP_M_CONFIG::UserThresholdEnable

Offset 0x04EC - User Manual Threshold Disabled: Predefined threshold will be used.

Enabled: User Input will be used. \$EN_DIS

Definition at line 2279 of file FspmUpd.h.

13.33.2.175 VddVoltage

UINT16 FSP_M_CONFIG::VddVoltage

Offset 0x00BE - Memory Voltage Memory Voltage Override (Vddq).

Default = no override 0:Default, 1200:1.20 Volts, 1250:1.25 Volts, 1300:1.30 Volts, 1350:1.35 Volts, 1400:1.40 Volts, 1450:1.45 Volts, 1500:1.50 Volts, 1550:1.55 Volts, 1600:1.60 Volts, 1650:1.65 Volts

Definition at line 312 of file FspmUpd.h.

13.33.2.176 VmxEnable

UINT8 FSP_M_CONFIG::VmxEnable

Offset 0x01ED - Enable or Disable VMX Enable or Disable VMX; 0: Disable; 1: **Enable**.

\$EN_DIS

Definition at line 975 of file FspmUpd.h.

13.33.2.177 WarmThresholdCh0Dimm0

UINT8 FSP_M_CONFIG::WarmThresholdCh0Dimm0

Offset 0x04C0 - Warm Threshold Ch0 Dimm0 range[255;0]=[31.875;0] in W for OLTM, [127.5;0] in C for CLTM.

Default is 255

Definition at line 2051 of file FspmUpd.h.

13.33.2.178 WarmThresholdCh0Dimm1

UINT8 FSP_M_CONFIG::WarmThresholdCh0Dimm1

Offset 0x04C1 - Warm Threshold Ch0 Dimm1 range[255;0]=[31.875;0] in W for OLTM, [127.5;0] in C for CLTM.

Default is 255

Definition at line 2056 of file FspmUpd.h.

13.33.2.179 WarmThresholdCh1Dimm0

UINT8 FSP_M_CONFIG::WarmThresholdCh1Dimm0

Offset 0x04C2 - Warm Threshold Ch1 Dimm0 range[255;0]=[31.875;0] in W for OLTM, [127.5;0] in C for CLTM.

Default is 255

Definition at line 2061 of file FspmUpd.h.

13.33.2.180 WarmThresholdCh1Dimm1

UINT8 FSP_M_CONFIG::WarmThresholdCh1Dimm1

Offset 0x04C3 - Warm Threshold Ch1 Dimm1 range[255;0]=[31.875;0] in W for OLTM, [127.5;0] in C for CLTM.

Default is 255

Definition at line 2066 of file FspmUpd.h.

The documentation for this struct was generated from the following file:

- [FspmUpd.h](#)

13.34 FSP_M_RESTRICTED_CONFIG Struct Reference

Fsp M Restricted Configuration.

```
#include <FspmUpd.h>
```

Public Attributes

- UINT32 [Signature](#)
Offset 0x0608.
- UINT16 [SaSvRemapBaseOverride](#)
Offset 0x060C - Sa Sv Remap Base Override SvRemapBaseOverride.
- UINT8 [SaSystemAgentClockGatingEnable](#)
Offset 0x060E - Sa System Agent ClockGating Enable SystemAgentClockGatingEnable.
- UINT8 [SaPciePllShutdownEnable](#)
Offset 0x060F - Sa Pcie Pll Shutdown Enable PciePllShutdownEnable.
- UINT8 [SaSV_DMI_GEN1_halt](#)
Offset 0x0610 - Sa SV_DMI_GEN1_halt SV_DMI_GEN1_halt.
- UINT8 [SaSV_nFTS_DMI_auto](#)
Offset 0x0611 - Sa SV_nFTS_DMI_auto SV_nFTS_DMI_auto.
- UINT8 [SaSvDMI_nFTS](#)
Offset 0x0612 - Sa Sv DMI_nFTS SvDMI_nFTS.
- UINT8 [SanFTS_auto](#)
Offset 0x0613 - Sa nFTS_auto nFTS_auto.
- UINT8 [SaSvPEG_nFTS](#) [4]

- Offset 0x0614 - Sa SvPEG_nFTS SvPEG_nFTS.*

 - UINT8 [SaSvPEG_gen3_ccFTS](#) [4]

Offset 0x0618 - Sa SvPEG_gen3_ccFTS SvPEG_gen3_ccFTS.
 - UINT8 [SaSvPEG_gen3_nccFTS](#) [4]

Offset 0x061C - Sa SvPEG_gen3_nccFTS SvPEG_gen3_nccFTS.
 - UINT8 [SanFTS_gen3_auto](#)

Offset 0x0620 - Sa nFTS_gen3_auto nFTS_gen3_auto.
 - UINT8 [SaSVIAER](#)

Offset 0x0621 - Sa SVIAER SVIAER.
 - UINT8 [SaSvScramblerDmi](#)

Offset 0x0622 - Sa Sv Scrambler Dmi SvScramblerDmi.
 - UINT8 [SaSvScramblerPeg](#) [4]

Offset 0x0623 - Sa Sv Scrambler Peg SvScramblerPeg.
 - UINT8 [SaSvDmiSerr](#)

Offset 0x0627 - Sa Sv Dmi Serr SvDmiSerr.
 - UINT8 [SaSvScramblerPegGen3](#) [4]

Offset 0x0628 - Sa Sv Scrambler Peg Gen3 SvScramblerPegGen3.
 - UINT8 [SaSvPegSerr](#) [4]

Offset 0x062C - Sa Sv Peg Serr SvPegSerr.
 - UINT8 [SaTestTxClkGating](#)

Offset 0x0630 - Sa Test Tx ClkGating TestTxClkGating.
 - UINT8 [SaTestRxClkGating](#)

Offset 0x0631 - Sa Test Rx ClkGating TestRxClkGating.
 - UINT8 [SaTestLowPwrMode](#)

Offset 0x0632 - Sa Test Low Pwr Mode TestLowPwrMode.
 - UINT8 [SaSrMode](#)

Offset 0x0633 - Sa Sr Mode SrMode.
 - UINT8 [SaSrSeq](#)

Offset 0x0634 - Sa Sr Seq SrSeq.
 - UINT8 [SaBurstSpacing](#)

Offset 0x0635 - Sa Burst Spacing BurstSpacing.
 - UINT8 [SaRestrictedSvPolicyEnable](#)

Offset 0x0636 - SvPolicyEnable Enable: SV policy is enabled, Disable(Default): SV policy is disabled \$EN_DIS.
 - UINT8 [SaCpuSvBootMode](#)

Offset 0x0637 - Cpu Sv Boot Mode 0: Auto (Default), 1: Commercial boot mode, 2: SV boot mode, 3: SV boot JTAG mode with SB loop, 4: SV boot JTAG mode without SB loop 0: Auto , 1: Commercial boot mode, 2: SV boot mode, 3: SV boot JTAG mode with SB loop, 4: SV boot JTAG mode without SB loop.
 - UINT8 [XmICliEnable](#)

Offset 0x0638 - CpuSvBootMode Enable: XmICli is enabled, Disble(Default): XmICli is disabled \$EN_DIS.
 - UINT8 [LoadValidationFv](#)

Offset 0x0639 - LoadValidationFv Enable: Enable loading of ValidationFV, Disable(Default) \$EN_DIS.
 - UINT8 [SvReserveMemoryBelowPrmrr](#)

Offset 0x063A - SvReserveMemoryBelowPrmrr Enable: Enable reserve SV memory below PMRR, Disable(Default) \$EN_DIS.
 - UINT8 [SaTestSamplePartStatusOverride](#)

Offset 0x063B - Sa Test Sample Part Status Override 0-Passthrough, 1-Production part, 2-Preproduction part.
 - UINT8 [SaTestGrunitClockGating](#)

Offset 0x063C - Sa Test Grunit ClockGating Enable Sa Test Grunit ClockGating \$EN_DIS.
 - UINT8 [SaTestDmiCapRegLock](#)

Offset 0x063D - Sa Test Dmi Cap Reg Lock DMI Capability Register Lock.
 - UINT8 [SaTestDmiMaxPayloadSize](#)
-

- Offset 0x063E - Sa Test Dmi Max Payload Size DMI Max Payload Size.*

 - UINT8 [SaPcieVcLimLock](#)
 - Offset 0x063F - Sa Pcie VcLim Lock Lock bit.*
 - UINT8 [SaPcieVCmCmpLim](#)
 - Offset 0x0640 - Sa Pcie VCm Cmp Lim VCm Completions override.*
 - UINT8 [SaPcieVCmPLim](#)
 - Offset 0x0641 - Sa Pcie VCm PLim posted VCm Requests override.*
 - UINT8 [SaPcieVCmNpLim](#)
 - Offset 0x0642 - Sa Pcie VCm NpLim non-posted VCm Requests override.*
 - UINT8 [SaLagunaCreditWA](#)
 - Offset 0x0643 - Sa Laguna Credit WA Laguna Credit WA.*
 - UINT8 [SaSvDmiComplianceDeemphasis](#)
 - Offset 0x0644 - Sa Sv Dmi Compliance Deemphasis SvDmiComplianceDeemphasis.*
 - UINT8 [PrefetchNonPrefetchRatio](#)
 - Offset 0x0645 - Prefetch NonPrefetch Ratio 0: All prefetch, 1: Seven of Eight Prefetch, 2: Three of Four Prefetch, 3: Half Prefetch Half Non-Prefetch(Default), 4: Three of Four Non-Prefetch, 5: Seven of Eight Prefetch, 6: All Non-prefetch 0: All prefetch, 1: Seven of Eight Prefetch, 2: Three of Four Prefetch, 3: Half Prefetch Half Non-Prefetch, 4: Three of Four Non-Prefetch, 5: Seven of Eight Prefetch, 6: All Non-prefetch.*
 - UINT8 [SaTestDev0DidOverride](#)
 - Offset 0x0646 - Sa Test Dev0 Did Override Dev 0 Device ID override.*
 - UINT8 [SaTestMobileSaDidOverride](#)
 - Offset 0x0647 - Sa Test Mobile Sa Did Override Dev 0 Mobile (ULT/ULX) Device ID override.*
 - UINT8 [SaTestNonMobileSaDidOverride](#)
 - Offset 0x0648 - Sa Test NonMobile Sa Did Override Dev 0 Non Mobile (DT, DT_Halo, M_Halo, Server) Device ID override.*
 - UINT8 [SaTestDev2GtDidOverride](#)
 - Offset 0x0649 - Sa Test Dev2 Gt Did Override Dev 2 GT Device ID override.*
 - UINT8 [SaTestGt4HaloDidOverride](#)
 - Offset 0x064A - Sa Test Gt4 Halo Did Override Dev 2 GT4 Halo Device ID override.*
 - UINT8 [SaTestGt3UltDidOverride](#)
 - Offset 0x064B - Sa Test Gt3 Ult Did Override Dev 2 GT3 ULT Device ID override.*
 - UINT8 [SaTestGt2UlxDidOverride](#)
 - Offset 0x064C - Sa Test Gt2 Ulx Did Override Dev 2 GT2 ULX Device ID override.*
 - UINT8 [SaTestGt2UltDidOverride](#)
 - Offset 0x064D - Sa Test Gt2 Ult Did Override Dev 2 GT2 ULT Device ID override.*
 - UINT8 [SaPreMemRestrictedRsvd](#) [14]
 - Offset 0x064E - SaPreMemRestrictedRsvd Reserved for SA Pre-Mem Restricted \$EN_DIS.*
 - UINT8 [UnusedUpdSpace1](#) [4]
 - Offset 0x065C.*
 - UINT64 [MsegSize](#)
 - Offset 0x0660 - MSEG Size MSEG Size.*
 - UINT8 [ForceTxtEnable](#)
 - Offset 0x0668 - Force TXT Enable Force TXT Enable; 0: disable, 1: enable \$EN_DIS.*
 - UINT8 [UnlockMchbarCtrlRegs](#)
 - Offset 0x0669 - Unlock MCHBAR control registers Unlock MCHBAR control registers; 0: disable, 1: enable \$EN_DIS.*
 - UINT8 [CpuPreMemRestrictedRsvd](#) [6]
 - Offset 0x066A - SaPreMemRestrictedRsvd Reserved for SA Pre-Mem Restricted \$EN_DIS.*
 - UINT8 [DmaPassThrough](#)
 - Offset 0x0670 - Enable or disable VT-d DmaPassThrough 0=Disable, 1(Default)=Enable \$EN_DIS.*
 - UINT8 [CCHit2pend](#)
 - Offset 0x0671 - Enable or disable VT-d CCHit2pend 0=Disable, 1(Default)=Enable \$EN_DIS.*

- UINT8 [ContextInvalidation](#)
Offset 0x0672 - Enable or disable VT-d ContextInvalidation 0(Default)=Disable, 1=Enable \$EN_DIS.
 - UINT8 [IotblInvalidation](#)
Offset 0x0673 - Enable or disable VT-d IotblInvalidation 0(Default)=Disable, 1=Enable \$EN_DIS.
 - UINT8 [ContextCacheDis](#)
Offset 0x0674 - Enable or disable VT-d ContextCacheDis 0=Disable, 1(Default)=Enable \$EN_DIS.
 - UINT8 [L1Disable](#)
Offset 0x0675 - Enable or disable VT-d L1Disable 0=Disable, 1(Default)=Enable \$EN_DIS.
 - UINT8 [L2Disable](#)
Offset 0x0676 - Enable or disable VT-d L2Disable 0=Disable, 1(Default)=Enable \$EN_DIS.
 - UINT8 [L3Disable](#)
Offset 0x0677 - Enable or disable VT-d L3Disable 0=Disable, 1(Default)=Enable \$EN_DIS.
 - UINT8 [L1Hit2PendDis](#)
Offset 0x0678 - Enable or disable VT-d L1Hit2PendDis 0=Disable, 1(Default)=Enable \$EN_DIS.
 - UINT8 [L3Hit2PendDis](#)
Offset 0x0679 - Enable or disable VT-d L3Hit2PendDis 0=Disable, 1(Default)=Enable \$EN_DIS.
 - UINT8 [InvQueueCohDis](#)
Offset 0x067A - Enable or disable VT-d InvQueueCohDis 0=Disable, 1(Default)=Enable \$EN_DIS.
 - UINT8 [SuperPageCap](#)
Offset 0x067B - Enable or disable VT-d SuperPageCap 0=Disable, 1(Default)=Enable \$EN_DIS.
 - UINT8 [QueueInvCapDis](#)
Offset 0x067C - Enable or disable VT-d QueueInvCapDis 0=Disable, 1(Default)=Enable \$EN_DIS.
 - UINT8 [TestIntrRemapCapDis](#)
Offset 0x067D - Enable or disable VT-d IntrRemapCapDis 0=Disable, 1(Default)=Enable \$EN_DIS.
 - UINT8 [SnoopControl](#)
Offset 0x067E - Enable or disable VT-d SnoopControl 0=Disable, 1(Default)=Enable \$EN_DIS.
 - UINT8 [RemapReverseCtrl](#)
Offset 0x067F - Enable or disable VT-d RemapReverseCtrl 0=Disable, 1(Default)=Enable \$EN_DIS.
 - UINT8 [PchTestDmiTranCoOverEn](#) [4]
Offset 0x0680 - Dmi Test Tran Co Over En Enable/Disable Lane Transmitter Coefficient.
 - UINT8 [PchTestDmiTranCoOverPostCur](#) [4]
Offset 0x0684 - Dmi Test Tran Co Over Post Cur Lane Transmitter Post-Cursor Coefficient Override.
 - UINT8 [PchTestDmiTranCoOverPreCur](#) [4]
Offset 0x0688 - Dmi Test Tran Co Over Pre Cur Lane Transmitter Pre-Cursor Coefficient Override.
 - UINT8 [PchTestDmiUpPortTranPreset](#) [4]
Offset 0x068C - Dmi Test Up Port Tran Preset Upstream Port Lane Transmitter Preset.
 - UINT8 [PchTestDmiUpPortTranPresetEn](#)
Offset 0x0690 - Dmi Test UpPort Tran Preset En 0: POR setting, 1: force enable, 2: force disable.
 - UINT8 [PchTestDmiRtlepceb](#)
Offset 0x0691 - Dmi Test Rtlepceb DMI Remote Transmit Link Equalization Preset/Coefficient Evaluation Bypass (RTLEPCEB).
 - UINT8 [PchTestDmiMeUmaRootSpaceCheck](#)
Offset 0x0692 - DMI ME UMA Root Space Check DMI IOSF Root Space attribute check for RS3 for cycles targeting MEUMA.
 - UINT8 [PchHdaTestConfigLockdown](#)
Offset 0x0693 - Configuration Lockdown (BCLD) 0: POR (Enable), 1: Enable, 2: Disable.
 - UINT8 [PchHdaTestLowFreqLinkClkSrc](#)
Offset 0x0694 - Low Frequency Link Clock Source (LFLCS) 0: POR (Enable), 1: Enable (XTAL), 2: Disable (Audio PLL).
 - UINT8 [PchHdaTestPowerClockGating](#)
Offset 0x0695 - HDA Power/Clock Gating (PGD/CGD) POR, 1: FORCE_ENABLE, 2: FORCE_DISABLE.
-

- UINT8 [HeciCommunication](#)
Offset 0x0696 - HECI Communication Test, 0: POR, 1: enable, 2: disable, Disables HECI communication causing ME to enter error state.
 - UINT8 [HeciCommunication3](#)
Offset 0x0697 - HECI3 Interface Communication Test, 0: POR, 1: enable, 2: disable, Adds or Removes HECI3 Device from PCI space.
 - UINT8 [HostResetNotification](#)
Offset 0x0698 - Notification test for Host Reset Test, 0: POR, 1: enable, 2: disable, Enable test for notification when Host Reset \$EN_DIS.
 - UINT8 [ManufRstAndHaltOnS3Resume](#)
Offset 0x0699 - Send Manufacturing Reset And Halt On S3 Resume Test, 0: POR, 1: enable, 2: disable, Enable sending Manufacturing Reset and Halt on S3 Resume \$EN_DIS.
 - UINT8 [ForceUnlockAes](#)
Offset 0x069A - Force Unlock AES 0(Default)=Disable, 1=Enable \$EN_DIS.
 - UINT8 [PreMemRestrictedRsvd2](#) [23]
Offset 0x069B - PreMemRestrictedRsvd2 Reserved for Pre-Mem RestrictedReserved \$EN_DIS.
 - UINT8 [AsyncOdtDis](#)
Offset 0x06B2 - Asynchronous ODT This option configures the Memory Controller Asynchronous ODT control 0:Enabled, 1:Disabled.
 - UINT8 [PowerDownMode](#)
Offset 0x06B3 - Power Down Mode This option controls command bus tristating during idle periods 0x0:No Power Down, 0x1:APD, 0x6:PPD DLL OFF, 0xFF:Auto.
 - UINT8 [WeaklockEn](#)
Offset 0x06B4 - DLL Weak Lock Support Enables/Disable DLL Weak Lock Support \$EN_DIS.
 - UINT8 [Force1Dpc](#)
Offset 0x06B5 - Fore 1 DPC config Enables/Disable Fore 1 DPC config \$EN_DIS.
 - UINT8 [ForceSingleRank](#)
Offset 0x06B6 - Fore Single Rank config Enables/Disable Fore Single Rank config \$EN_DIS.
 - UINT8 [UnusedUpdSpace12](#)
Offset 0x06B7.
 - UINT16 [SrefCfIdleTmr](#)
Offset 0x06B8 - SelfRefresh IdleTimer Self Refresh idle timer in nCK units: 0 = Auto (default), or value in range [512 .
 - UINT8 [StrongWkLeaker](#)
Offset 0x06BA - Strong Weak Leaker Strong Weak Leaker value.
 - UINT8 [IgnoreDdr4FreqLimit3200](#)
Offset 0x06BB - Ignore DDR4 Frequency Limitation Option to ignore the DDR4-3200 frequency limitation based on board type and memory popualation \$EN_DIS.
 - UINT8 [OpportunisticRead](#)
Offset 0x06BC - Opportunistic Read Enables/Disable Opportunistic Read (Def= Enable) \$EN_DIS.
 - UINT8 [MemStackMode](#)
Offset 0x06BD - Stacked Mode Memory Stacked Mode Support (Def = Disable) \$EN_DIS.
 - UINT8 [StackModeChBit](#)
Offset 0x06BE - Stacked Mode Ch Bit Channel hash bit used during Stacked Mode(Def= BIT28) 0:BIT28, 1:BIT29, 2:BIT30, 3:BIT31, 4:BIT32, 5:BIT33, 6:BIT34.
 - UINT8 [LowMemChannel](#)
Offset 0x06BF - Low Memory Channel Selecting which Physical Channel is mapped to low memory.
 - UINT8 [Disable2CycleBypass](#)
Offset 0x06C0 - Cycle Bypass Support Enables/Disable Cycle Bypass Support(Def=Disable) \$EN_DIS.
 - UINT8 [MCREGOFFSET](#)
Offset 0x06C1 - MC Register Offset Apply user offsets to select MC registers(Def=Disable) \$EN_DIS.
 - UINT8 [CAVrefCtlOffset](#)
-

- Offset 0x06C2 - CA Vref Ctl Offset Offset to be applied to DDRDATA7CH1_CR_DDRCRVREFADJUST1.CAVref 0↔ :-12,1:-11, 2:-10, 3:-9, 4:-8, 5:-7, 6:-6, 7:-5, 8:-4, 9:-3, 10:-2, 11:-1, 12:0, 13:+1, 14:+2, 15:+3, 16:+4, 17:+5, 18:+6, 19:+7, 20:+8, 21:+9, 22:+10, 23:+11, 24:+12, 0xFF:RANDOM.*
- UINT8 [Ch0VrefCtlOffset](#)

Offset 0x06C3 - Ch0 DQ Vref Ctrl Offset Offset to be applied to DDRDATA7CH1_CR_DDRCRVREFADJUST1.↔ Ch0VrefCtl 0:-12,1:-11, 2:-10, 3:-9, 4:-8, 5:-7, 6:-6, 7:-5, 8:-4, 9:-3, 10:-2, 11:-1, 12:0, 13:+1, 14:+2, 15:+3, 16:+4, 17:+5, 18:+6, 19:+7, 20:+8, 21:+9, 22:+10, 23:+11, 24:+12, 0xFF:RANDOM.
 - UINT8 [Ch1VrefCtlOffset](#)

Offset 0x06C4 - Ch1 DQ Vref Ctrl Offset Offset to be applied to DDRDATA7CH1_CR_DDRCRVREFADJUST1.↔ Ch1VrefCtl 0:-12,1:-11, 2:-10, 3:-9, 4:-8, 5:-7, 6:-6, 7:-5, 8:-4, 9:-3, 10:-2, 11:-1, 12:0, 13:+1, 14:+2, 15:+3, 16:+4, 17:+5, 18:+6, 19:+7, 20:+8, 21:+9, 22:+10, 23:+11, 24:+12, 0xFF:RANDOM.
 - UINT8 [Ch0ClkPiCodeOffset](#)

Offset 0x06C5 - Ch0 Clk PI Code Offset Offset to be applied to DDRCLKCH0_CR_DDRCRCLKPICODE.PiSetting↔ Rank[0-3] 0:-6,1:-5, 2:-4, 3:-3, 4:-2, 5:-1, 6:0, 7:1, 8:2, 9:3, 10:4, 11:5, 12:6, 0xFF:RANDOM.
 - UINT8 [Ch1ClkPiCodeOffset](#)

Offset 0x06C6 - Ch1 Clk PI Code Offset Offset to be applied to DDRCLKCH1_CR_DDRCRCLKPICODE.PiSetting↔ Rank[0-3] 0:-6,1:-5, 2:-4, 3:-3, 4:-2, 5:-1, 6:0, 7:1, 8:2, 9:3, 10:4, 11:5, 12:6, 0xFF:RANDOM.
 - UINT8 [Ch0RcvEnOffset](#)

Offset 0x06C7 - Ch0 RcvEn Offset Offset to be applied to DDRDATAACH0_CR_DDRCRDATAOFFSETTRAIN.RcvEn 0:-3,1:-2, 2:-1, 3:0, 4:1, 5:2, 6:3, 0xFF:RANDOM.
 - UINT8 [Ch1RcvEnOffset](#)

Offset 0x06C8 - Ch1 RcvEn Offset Offset to be applied to DDRDATAACH1_CR_DDRCRDATAOFFSETTRAIN.RcvEn 0:-3,1:-2, 2:-1, 3:0, 4:1, 5:2, 6:3, 0xFF:RANDOM.
 - UINT8 [Ch0RxDqsOffset](#)

Offset 0x06C9 - Ch0 Rx Dqs Offset Offset to be applied to DDRDATAACH0_CR_DDRCRDATAOFFSETTRAIN.Rx↔ DqsOffset 0:-3,1:-2, 2:-1, 3:0, 4:1, 5:2, 6:3, 0xFF:RANDOM.
 - UINT8 [Ch1RxDqsOffset](#)

Offset 0x06CA - Ch1 Rx Dqs Offset Offset to be applied to DDRDATAACH1_CR_DDRCRDATAOFFSETTRAIN.Rx↔ DqsOffset 0:-3,1:-2, 2:-1, 3:0, 4:1, 5:2, 6:3, 0xFF:RANDOM.
 - UINT8 [Ch0TxDqOffset](#)

Offset 0x06CB - Ch0 Tx Dq Offset Offset to be applied to DDRDATAACH0_CR_DDRCRDATAOFFSETTRAIN.Tx↔ DqOffset 0:-3,1:-2, 2:-1, 3:0, 4:1, 5:2, 6:3, 0xFF:RANDOM.
 - UINT8 [Ch1TxDqOffset](#)

Offset 0x06CC - Ch1 Tx Dq Offset Offset to be applied to DDRDATAACH1_CR_DDRCRDATAOFFSETTRAIN.Tx↔ DqOffset 0:-3,1:-2, 2:-1, 3:0, 4:1, 5:2, 6:3, 0xFF:RANDOM.
 - UINT8 [Ch0TxDqsOffset](#)

Offset 0x06CD - Ch0 Tx Dqs Offset Offset to be applied to DDRDATAACH0_CR_DDRCRDATAOFFSETTRAIN.Tx↔ DqsOffset 0:-3,1:-2, 2:-1, 3:0, 4:1, 5:2, 6:3, 0xFF:RANDOM.
 - UINT8 [Ch1TxDqsOffset](#)

Offset 0x06CE - Ch1 Tx Dqs Offset Offset to be applied to DDRDATAACH1_CR_DDRCRDATAOFFSETTRAIN.Tx↔ DqsOffset 0:-3,1:-2, 2:-1, 3:0, 4:1, 5:2, 6:3, 0xFF:RANDOM.
 - UINT8 [Ch0VrefOffset](#)

Offset 0x06CF - Ch0 Vref Offset Offset to be applied to DDRDATAACH0_CR_DDRCRDATAOFFSETTRAIN.VrefOffset 0:-6,1:-5, 2:-4, 3:-3, 4:-2, 5:-1, 6:0, 7:1, 8:2, 9:3, 10:4, 11:5, 12:6, 0xFF:RANDOM.
 - UINT8 [Ch1VrefOffset](#)

Offset 0x06D0 - Ch1 Vref Offset Offset to be applied to DDRDATAACH1_CR_DDRCRDATAOFFSETTRAIN.VrefOffset 0:-6,1:-5, 2:-4, 3:-3, 4:-2, 5:-1, 6:0, 7:1, 8:2, 9:3, 10:4, 11:5, 12:6, 0xFF:RANDOM.
 - UINT8 [MrcRestrictedRsvd0x067F](#) [16]

Offset 0x06D1.
 - UINT8 [DcttTest](#)

Offset 0x06E1 - DCTT Test Select which test to run 0:Basic walking memory test, 1:Row Hammer test.
 - UINT8 [DcttRhIterationOnRow](#)

Offset 0x06E2 - DCTT: Iterations on Row Number of repetitions on a Row.
 - UINT8 [DcttRhPageCloseDelay](#)
-

- Offset 0x06E3 - Page Close Delay Prompt SubSequence Delay value used to ensure the page closes (In DCIks)*

 - UINT8 [DcttRhRefreshEnable](#)
 - Offset 0x06E4 - Row Hammer Refresh Enable/Disables refreshes during the Row Hammer Test \$EN_DIS.*
 - UINT8 [DcttDataBase](#)
 - Offset 0x06E5 - Data Base Select which data pattern that is used as the base pattern 0:Zeros, 1:Ones, 2:Five, 3:A.*
 - UINT8 [UnusedUpdSpace13](#) [2]
 - Offset 0x06E6.*
 - UINT32 [DcttRhHammerCount](#)
 - Offset 0x06E8 - DCTT: Row Hammer Count Number of Hammers for a given Row.*
 - UINT8 [DcttRowSwizzleType](#)
 - Offset 0x06EC - Row swizzle Select which Row swizzle algorithm to use during Row Hammer test 0:No Swizzle, 1:3xOr1_3xOr2, 2:01234567EFCDA89.*
 - UINT8 [DcttRefreshMultiplier](#)
 - Offset 0x06ED - Refresh Multiplier Multiplier applied to tREFI.*
 - UINT8 [DcttBankDisableMask](#)
 - Offset 0x06EE - Bank Disable Mask Bit Mask Bank Disable for per-Bank tests (Row Hammer)*
 - UINT8 [ScramClockGateAB](#)
 - Offset 0x06EF - Clock Gate AB Clock Gate AB 0:Disable, 1:2 Cycles, 2:3 Cycles, 3:4 Cycles.*
 - UINT8 [ScramClockGateC](#)
 - Offset 0x06F0 - Clock Gate C Select which Row swizzle algorithm to use during Row Hammer test 0:Disable, 1:2 Cycles, 2:4 Cycles, 3:8 Cycles.*
 - UINT8 [ScramEnableDbiAB](#)
 - Offset 0x06F1 - Enable DBI AB Enable DBI AB \$EN_DIS.*
 - UINT8 [Interpreter](#)
 - Offset 0x06F2 - MRC Interpreter Select CMOS location match of DD01 or Ctrl-Break key or force entry 0:CMOS, 1:Break, 2:Force.*
 - UINT8 [IoOdtMode](#)
 - Offset 0x06F3 - ODT mode ODT mode 0:Default, 1:Ctt, 2:Vtt, 3:Vddq, 4:Vss,5:Max.*
 - UINT8 [TestMenuDprLock](#)
 - Offset 0x06F4 - Lock DPR register Lock DPR register.*
 - UINT8 [PerBankRefresh](#)
 - Offset 0x06F5 - PerBankRefresh Control of Per Bank Refresh feature for LPDDR DRAMs \$EN_DIS.*
 - UINT8 [CmdTriStateDis](#)
 - Offset 0x06F6 - Command Tristate Enables/Disable Command Tristate \$EN_DIS.*
 - UINT8 [MrcRestrictedRsvd](#) [1]
 - Offset 0x06F7.*
 - UINT8 [PpvBtrEnable](#)
 - Offset 0x06F8 - PPV Boot Time Reduction This option disable/enable PPV Boot Time Reduction functionality.*
 - UINT8 [UnusedUpdSpace14](#) [5]
 - Offset 0x06F9.*
 - UINT8 [ReservedFspmRestrictedUpd](#) [26]
 - Offset 0x06FE.*

13.34.1 Detailed Description

Fsp M Restricted Configuration.

Definition at line 3049 of file FspmUpd.h.

13.34.2 Member Data Documentation

13.34.2.1 HeciCommunication

UINT8 FSP_M_RESTRICTED_CONFIG::HeciCommunication

Offset 0x0696 - HECI Communication Test, 0: POR, 1: enable, 2: disable, Disables HECI communication causing ME to enter error state.

\$EN_DIS

Definition at line 3490 of file FspmUpd.h.

13.34.2.2 HeciCommunication3

UINT8 FSP_M_RESTRICTED_CONFIG::HeciCommunication3

Offset 0x0697 - HECI3 Interface Communication Test, 0: POR, 1: enable, 2: disable, Adds or Removes HECI3 Device from PCI space.

\$EN_DIS

Definition at line 3496 of file FspmUpd.h.

13.34.2.3 LowMemChannel

UINT8 FSP_M_RESTRICTED_CONFIG::LowMemChannel

Offset 0x06BF - Low Memory Channel Selecting which Physical Channel is mapped to low memory.

0:Channel A, 1:Channel B, 0xFF:AUTO

Definition at line 3596 of file FspmUpd.h.

13.34.2.4 MsegSize

UINT64 FSP_M_RESTRICTED_CONFIG::MsegSize

Offset 0x0660 - MSEG Size MSEG Size.

Valid values 0 : 512K , 1 : 1M , 2 : 1.5M , 3 : 2M , 4 : 2.4M , 5 : 3M 0 : 512K , 1 : 1M , 2 : 1.5M , 3 : 2M , 4 : 2.4M , 5 : 3M

Definition at line 3317 of file FspmUpd.h.

13.34.2.5 PchHdaTestPowerClockGating

UINT8 FSP_M_RESTRICTED_CONFIG::PchHdaTestPowerClockGating

Offset 0x0695 - HDA Power/Clock Gating (PGD/CGD) POR, 1: FORCE_ENABLE, 2: FORCE_DISABLE.

0: POR, 1: Force Enable, 2: Force Disable

Definition at line 3483 of file FspmUpd.h.

13.34.2.6 PchTestDmiMeUmaRootSpaceCheck

UINT8 FSP_M_RESTRICTED_CONFIG::PchTestDmiMeUmaRootSpaceCheck

Offset 0x0692 - DMI ME UMA Root Space Check DMI IOSF Root Space attribute check for RS3 for cycles targeting MEUMA.

0: POR, 1: enable, 2: disable

Definition at line 3467 of file FspmUpd.h.

13.34.2.7 PpvBtrEnable

UINT8 FSP_M_RESTRICTED_CONFIG::PpvBtrEnable

Offset 0x06F8 - PPV Boot Time Reduction This option disable/enable PPV Boot Time Reduction functionality.

(Default==False) 0:Platform POR, 1: Enable Skip non-MRC Resets, 2: Enable Skip MRC Full Training, 3: Enable Skip Both MRC FT and Resets

Definition at line 3820 of file FspmUpd.h.

13.34.2.8 SrefCfgIdleTmr

UINT16 FSP_M_RESTRICTED_CONFIG::SrefCfgIdleTmr

Offset 0x06B8 - SelfRefresh IdleTimer Self Refresh idle timer in nCK units: 0 = Auto (default), or value in range [512 . 65535]

Definition at line 3560 of file FspmUpd.h.

13.34.2.9 StrongWkLeaker

UINT8 FSP_M_RESTRICTED_CONFIG::StrongWkLeaker

Offset 0x06BA - Strong Weak Leaker Strong Weak Leaker value.

7=def

Definition at line 3565 of file FspmUpd.h.

13.34.2.10 TestMenuDprLock

UINT8 FSP_M_RESTRICTED_CONFIG::TestMenuDprLock

Offset 0x06F4 - Lock DPR register Lock DPR register.

0: Platform POR ; 1: Enable; 2: Disable 0:Platform POR, 1: Enable, 2: Disable

Definition at line 3797 of file FspmUpd.h.

The documentation for this struct was generated from the following file:

- [FspmUpd.h](#)

13.35 FSP_M_TEST_CONFIG Struct Reference

Fsp M Test Configuration.

```
#include <FspmUpd.h>
```

Public Attributes

- UUINT32 [Signature](#)
Offset 0x0558.
 - UUINT8 [SkipExtGfxScan](#)
Offset 0x055C - Skip external display device scanning Enable: Do not scan for external display device, Disable (Default): Scan external display devices \$EN_DIS.
 - UUINT8 [BdatEnable](#)
Offset 0x055D - Generate BIOS Data ACPI Table Enable: Generate BDAT for MRC RMT or SA PCIe data.
 - UUINT8 [ScanExtGfxForLegacyOpRom](#)
Offset 0x055E - Detect External Graphics device for LegacyOpROM Detect and report if external graphics device only support LegacyOpROM or not (to support CSM auto-enable).
 - UUINT8 [LockPTMregs](#)
Offset 0x055F - Lock PCU Thermal Management registers Lock PCU Thermal Management registers.
 - UUINT8 [DmiMaxLinkSpeed](#)
Offset 0x0560 - DMI Max Link Speed Auto (Default)(0x0): Maximum possible link speed, Gen1(0x1): Limit Link to Gen1 Speed, Gen2(0x2): Limit Link to Gen2 Speed, Gen3(0x3):Limit Link to Gen3 Speed 0:Auto, 1:Gen1, 2:Gen2, 3:Gen3.
 - UUINT8 [DmiGen3EqPh2Enable](#)
Offset 0x0561 - DMI Equalization Phase 2 DMI Equalization Phase 2.
 - UUINT8 [DmiGen3EqPh3Method](#)
Offset 0x0562 - DMI Gen3 Equalization Phase3 DMI Gen3 Equalization Phase3.
 - UUINT8 [Peg0Gen3EqPh2Enable](#)
Offset 0x0563 - Phase2 EQ enable on the PEG 0:1:0.
 - UUINT8 [Peg1Gen3EqPh2Enable](#)
Offset 0x0564 - Phase2 EQ enable on the PEG 0:1:1.
 - UUINT8 [Peg2Gen3EqPh2Enable](#)
Offset 0x0565 - Phase2 EQ enable on the PEG 0:1:2.
 - UUINT8 [Peg3Gen3EqPh2Enable](#)
Offset 0x0566 - Phase2 EQ enable on the PEG 0:1:3.
 - UUINT8 [Peg0Gen3EqPh3Method](#)
Offset 0x0567 - Phase3 EQ method on the PEG 0:1:0.
 - UUINT8 [Peg1Gen3EqPh3Method](#)
Offset 0x0568 - Phase3 EQ method on the PEG 0:1:1.
 - UUINT8 [Peg2Gen3EqPh3Method](#)
Offset 0x0569 - Phase3 EQ method on the PEG 0:1:2.
 - UUINT8 [Peg3Gen3EqPh3Method](#)
Offset 0x056A - Phase3 EQ method on the PEG 0:1:3.
 - UUINT8 [PegGen3ProgramStaticEq](#)
Offset 0x056B - Enable/Disable PEG GEN3 Static EQ Phase1 programming Program PEG Gen3 EQ Phase1 Static Presets.
 - UUINT8 [Gen3SwEqAlwaysAttempt](#)
Offset 0x056C - PEG Gen3 SwEq Always Attempt Gen3 Software Equalization will be executed every boot.
 - UUINT8 [Gen3SwEqNumberOfPresets](#)
Offset 0x056D - Select number of TxEq presets to test in the PCIe/DMI SwEq Select number of TxEq presets to test in the PCIe/DMI SwEq.
-

- UINT8 [Gen3SwEqEnableVocTest](#)
Offset 0x056E - Enable use of the Voltage Offset and Centering Test in the PCIe SwEq Enable use of the Voltage Offset and Centering Test in the PCIe Software Equalization Algorithm.
 - UINT8 [PegRxCemTestingMode](#)
Offset 0x056F - PCIe Rx Compliance Testing Mode Disabled(0x0)(Default): Normal Operation - Disable PCIe Rx Compliance testing, Enabled(0x1): PCIe Rx Compliance Test Mode - PEG controller is in Rx Compliance Testing Mode; it should only be set when doing PCIe compliance testing \$EN_DIS.
 - UINT8 [PegRxCemLoopbackLane](#)
Offset 0x0570 - PCIe Rx Compliance Loopback Lane When PegRxCemTestingMode is Enabled the specified Lane (0 - 15) will be used for RxCEMLoopback.
 - UINT8 [PegGenerateBdatMarginTable](#)
Offset 0x0571 - Generate PCIe BDAT Margin Table Set this policy to enable the generation and addition of PCIe margin data to the BDAT table.
 - UINT8 [PegRxCemNonProtocolAwareness](#)
Offset 0x0572 - PCIe Non-Protocol Awareness for Rx Compliance Testing Set this policy to enable the generation and addition of PCIe margin data to the BDAT table.
 - UINT8 [PegGen3RxCtleOverride](#)
Offset 0x0573 - PCIe Override RxCTLE Disable(0x0)(Default): Normal Operation - RxCTLE adaptive behavior enabled, Enable(0x1): Override RxCTLE - Disable RxCTLE adaptive behavior to keep the configured RxCTLE peak values unmodified \$EN_DIS.
 - UINT8 [PegGen3Rsvd](#)
Offset 0x0574 - Rsvd Disable(0x0)(Default): Normal Operation - RxCTLE adaptive behavior enabled, Enable(0x1)↔ : Override RxCTLE - Disable RxCTLE adaptive behavior to keep the configured RxCTLE peak values unmodified \$EN_DIS.
 - UINT8 [PegGen3RootPortPreset](#) [20]
Offset 0x0575 - PEG Gen3 Root port preset values per lane Used for programming PEG Gen3 preset values per lane.
 - UINT8 [PegGen3EndPointPreset](#) [20]
Offset 0x0589 - PEG Gen3 End port preset values per lane Used for programming PEG Gen3 preset values per lane.
 - UINT8 [PegGen3EndPointHint](#) [20]
Offset 0x059D - PEG Gen3 End port Hint values per lane Used for programming PEG Gen3 Hint values per lane.
 - UINT8 [UnusedUpdSpace9](#)
Offset 0x05B1.
 - UINT16 [Gen3SwEqJitterDwellTime](#)
Offset 0x05B2 - Jitter Dwell Time for PCIe Gen3 Software Equalization Range: 0-65535, default is 1000.
 - UINT16 [Gen3SwEqJitterErrorTarget](#)
Offset 0x05B4 - Jitter Error Target for PCIe Gen3 Software Equalization Range: 0-65535, default is 1.
 - UINT16 [Gen3SwEqVocDwellTime](#)
Offset 0x05B6 - VOC Dwell Time for PCIe Gen3 Software Equalization Range: 0-65535, default is 10000.
 - UINT16 [Gen3SwEqVocErrorTarget](#)
Offset 0x05B8 - VOC Error Target for PCIe Gen3 Software Equalization Range: 0-65535, default is 2.
 - UINT8 [PanelPowerEnable](#)
Offset 0x05BA - Panel Power Enable Control for enabling/disabling VDD force bit (Required only for early enabling of eDP panel).
 - UINT8 [BdatTestType](#)
Offset 0x05BB - BdatTestType Indicates the type of Memory Training data to populate into the BDAT ACPI table.
 - UINT8 [VtdDisable](#)
Offset 0x05BC - Disable VT-d 0=Enable/FALSE(VT-d enabled), 1=Disable/TRUE (VT-d disabled) \$EN_DIS.
 - UINT8 [UnusedUpdSpace10](#)
Offset 0x05BD.
 - UINT16 [DeltaT12PowerCycleDelayPreMem](#)
Offset 0x05BE - Delta T12 Power Cycle Delay required in ms Select the value for delay required.
 - UINT8 [OemT12DelayOverride](#)
-

- Offset 0x05C0 - Oem T12 Dealy Override Oem T12 Dealy Override.*

 - UINT8 [SaPreMemTestRsvd](#) [9]
 - Offset 0x05C1 - SaPreMemTestRsvd Reserved for SA Pre-Mem Test \$EN_DIS.*
 - UINT16 [TotalFlashSize](#)
 - Offset 0x05CA - TotalFlashSize Enable/Disable.*
 - UINT16 [BiosSize](#)
 - Offset 0x05CC - BiosSize Enable/Disable.*
 - UINT8 [TxtAcheckRequest](#)
 - Offset 0x05CE - TxtAcheckRequest Enable/Disable.*
 - UINT8 [SecurityTestRsvd](#) [3]
 - Offset 0x05CF - SecurityTestRsvd Reserved for SA Pre-Mem Test \$EN_DIS.*
 - UINT8 [SmbusDynamicPowerGating](#)
 - Offset 0x05D2 - Smbus dynamic power gating Disable or Enable Smbus dynamic power gating.*
 - UINT8 [WdtDisableAndLock](#)
 - Offset 0x05D3 - Disable and Lock Watch Dog Register Set 1 to clear WDT status, then disable and lock WDT registers.*
 - UINT8 [SmbusSpdWriteDisable](#)
 - Offset 0x05D4 - SMBUS SPD Write Disable Set/Clear Smbus SPD Write Disable.*
 - UINT8 [ReservedPchPreMemTest](#) [16]
 - Offset 0x05D5 - ReservedPchPreMemTest Reserved for Pch Pre-Mem Test \$EN_DIS.*
 - UINT8 [DidInitStat](#)
 - Offset 0x05E5 - Force ME DID Init Status Test, 0: disable, 1: Success, 2: No Memory in Channels, 3: Memory Init Error, Set ME DID init stat value \$EN_DIS.*
 - UINT8 [DisableCpuReplacedPolling](#)
 - Offset 0x05E6 - CPU Replaced Polling Disable Test, 0: disable, 1: enable, Setting this option disables CPU replacement polling loop \$EN_DIS.*
 - UINT8 [SendDidMsg](#)
 - Offset 0x05E7 - ME DID Message Test, 0: disable, 1: enable, Enable/Disable ME DID Message (disable will prevent the DID message from being sent) \$EN_DIS.*
 - UINT8 [DisableMessageCheck](#)
 - Offset 0x05E8 - Check HECI message before send Test, 0: disable, 1: enable, Enable/Disable message check.*
 - UINT8 [SkipMbpHob](#)
 - Offset 0x05E9 - Skip MBP HOB Test, 0: disable, 1: enable, Enable/Disable MOB HOB.*
 - UINT8 [HeciCommunication2](#)
 - Offset 0x05EA - HECI2 Interface Communication Test, 0: disable, 1: enable, Adds or Removes HECI2 Device from PCI space.*
 - UINT8 [KtDeviceEnable](#)
 - Offset 0x05EB - Enable KT device Test, 0: disable, 1: enable, Enable or Disable KT device.*
 - UINT8 [tRd2RdSG](#)
 - Offset 0x05EC - tRd2RdSG Delay between Read-to-Read commands in the same Bank Group.*
 - UINT8 [tRd2RdDG](#)
 - Offset 0x05ED - tRd2RdDG Delay between Read-to-Read commands in different Bank Group for DDR4.*
 - UINT8 [tRd2RdDR](#)
 - Offset 0x05EE - tRd2RdDR Delay between Read-to-Read commands in different Ranks.*
 - UINT8 [tRd2RdDD](#)
 - Offset 0x05EF - tRd2RdDD Delay between Read-to-Read commands in different DIMMs.*
 - UINT8 [tWr2RdSG](#)
 - Offset 0x05F0 - tWr2RdSG Delay between Write-to-Read commands in the same Bank Group.*
 - UINT8 [tWr2RdDG](#)
 - Offset 0x05F1 - tWr2RdDG Delay between Write-to-Read commands in different Bank Group for DDR4.*
 - UINT8 [tWr2RdDR](#)
 - Offset 0x05F2 - tWr2RdDR Delay between Write-to-Read commands in different Ranks.*
-

- UINT8 [tWr2RdDD](#)
Offset 0x05F3 - tWr2RdDD Delay between Write-to-Read commands in different DIMMs.
- UINT8 [tWr2WrSG](#)
Offset 0x05F4 - tWr2WrSG Delay between Write-to-Write commands in the same Bank Group.
- UINT8 [tWr2WrDG](#)
Offset 0x05F5 - tWr2WrDG Delay between Write-to-Write commands in different Bank Group for DDR4.
- UINT8 [tWr2WrDR](#)
Offset 0x05F6 - tWr2WrDR Delay between Write-to-Write commands in different Ranks.
- UINT8 [tWr2WrDD](#)
Offset 0x05F7 - tWr2WrDD Delay between Write-to-Write commands in different DIMMs.
- UINT8 [tRd2WrSG](#)
Offset 0x05F8 - tRd2WrSG Delay between Read-to-Write commands in the same Bank Group.
- UINT8 [tRd2WrDG](#)
Offset 0x05F9 - tRd2WrDG Delay between Read-to-Write commands in different Bank Group for DDR4.
- UINT8 [tRd2WrDR](#)
Offset 0x05FA - tRd2WrDR Delay between Read-to-Write commands in different Ranks.
- UINT8 [tRd2WrDD](#)
Offset 0x05FB - tRd2WrDD Delay between Read-to-Write commands in different DIMMs.
- UINT8 [tRRD_L](#)
Offset 0x05FC - tRRD_L Min Row Active to Row Active Delay Time for Same Bank Group, DDR4 Only.
- UINT8 [tRRD_S](#)
Offset 0x05FD - tRRD_S Min Row Active to Row Active Delay Time for Different Bank Group, DDR4 Only.
- UINT8 [tWTR_L](#)
Offset 0x05FE - tWTR_L Min Internal Write to Read Command Delay Time for Same Bank Group, DDR4 Only.
- UINT8 [tWTR_S](#)
Offset 0x05FF - tWTR_S Min Internal Write to Read Command Delay Time for Different Bank Group, DDR4 Only.
- UINT8 [SkipCpuReplacementCheck](#)
Offset 0x0600 - Skip CPU replacement check Test, 0: disable, 1: enable, Setting this option to skip CPU replacement check \$EN_DIS.
- UINT8 [ReservedFspmTestUpd](#) [7]
Offset 0x0601.

13.35.1 Detailed Description

Fsp M Test Configuration.

Definition at line 2554 of file FspmUpd.h.

13.35.2 Member Data Documentation

13.35.2.1 BdatEnable

UINT8 FSP_M_TEST_CONFIG::BdatEnable

Offset 0x055D - Generate BIOS Data ACPI Table Enable: Generate BDAT for MRC RMT or SA PCIe data.

Disable (Default): Do not generate it \$EN_DIS

Definition at line 2571 of file FspmUpd.h.

13.35.2.2 BdatTestType

UINT8 FSP_M_TEST_CONFIG::BdatTestType

Offset 0x05BB - BdatTestType Indicates the type of Memory Training data to populate into the BDAT ACPI table.

0:Rank Margin Tool, 1:Margin2D

Definition at line 2807 of file FspmUpd.h.

13.35.2.3 BiosSize

UINT16 FSP_M_TEST_CONFIG::BiosSize

Offset 0x05CC - BiosSize Enable/Disable.

0: Disable, define default value of BiosSize , 1: enable

Definition at line 2846 of file FspmUpd.h.

13.35.2.4 DeltaT12PowerCycleDelayPreMem

UINT16 FSP_M_TEST_CONFIG::DeltaT12PowerCycleDelayPreMem

Offset 0x05BE - Delta T12 Power Cycle Delay required in ms Select the value for delay required.

0(Default)= No delay, 0xFFFF = Auto calculate T12 Delay to max 500ms 0 : No Delay, 0xFFFF : Auto Calculate T12 Delay

Definition at line 2824 of file FspmUpd.h.

13.35.2.5 DisableMessageCheck

UINT8 FSP_M_TEST_CONFIG::DisableMessageCheck

Offset 0x05E8 - Check HECI message before send Test, 0: disable, 1: enable, Enable/Disable message check.

\$EN_DIS

Definition at line 2909 of file FspmUpd.h.

13.35.2.6 DmiGen3EqPh2Enable

UINT8 FSP_M_TEST_CONFIG::DmiGen3EqPh2Enable

Offset 0x0561 - DMI Equalization Phase 2 DMI Equalization Phase 2.

(0x0): Disable phase 2, (0x1): Enable phase 2, (0x2)(Default): AUTO - Use the current default method 0:Disable phase2, 1:Enable phase2, 2:Auto

Definition at line 2598 of file FspmUpd.h.

13.35.2.7 DmiGen3EqPh3Method

UINT8 FSP_M_TEST_CONFIG::DmiGen3EqPh3Method

Offset 0x0562 - DMI Gen3 Equalization Phase3 DMI Gen3 Equalization Phase3.

Auto(0x0)(Default): Use the current default method, HwEq(0x1): Use Adaptive Hardware Equalization, Sw↔Eq(0x2): Use Adaptive Software Equalization (Implemented in BIOS Reference Code), Static(0x3): Use the Static EQs provided in DmiGen3EndPointPreset array for Phase1 AND Phase3 (Instead of just Phase1), Disabled(0x4): Bypass Equalization Phase 3 0:Auto, 1:HwEq, 2:SwEq, 3:StaticEq, 4:BypassPhase3

Definition at line 2608 of file FspmUpd.h.

13.35.2.8 Gen3SwEqAlwaysAttempt

```
UINT8 FSP_M_TEST_CONFIG::Gen3SwEqAlwaysAttempt
```

Offset 0x056C - PEG Gen3 SwEq Always Attempt Gen3 Software Equalization will be executed every boot.

Disabled(0x0)(Default): Reuse EQ settings saved/restored from NVRAM whenever possible, Enabled(0x1): Re-test and generate new EQ values every boot, not recommended 0:Disable, 1:Enable

Definition at line 2691 of file FspmUpd.h.

13.35.2.9 Gen3SwEqEnableVocTest

```
UINT8 FSP_M_TEST_CONFIG::Gen3SwEqEnableVocTest
```

Offset 0x056E - Enable use of the Voltage Offset and Centering Test in the PCIe SwEq Enable use of the Voltage Offset and Centering Test in the PCIe Software Equalization Algorithm.

Disabled(0x0): Disable VOC Test, Enabled(0x1): Enable VOC Test, Auto(0x2)(Default): Use the current default 0:Disable, 1:Enable, 2:Auto

Definition at line 2709 of file FspmUpd.h.

13.35.2.10 Gen3SwEqJitterDwellTime

```
UINT16 FSP_M_TEST_CONFIG::Gen3SwEqJitterDwellTime
```

Offset 0x05B2 - Jitter Dwell Time for PCIe Gen3 Software Equalization Range: 0-65535, default is 1000.

Warning

Do not change from the default

Definition at line 2779 of file FspmUpd.h.

13.35.2.11 Gen3SwEqJitterErrorTarget

```
UINT16 FSP_M_TEST_CONFIG::Gen3SwEqJitterErrorTarget
```

Offset 0x05B4 - Jitter Error Target for PCIe Gen3 Software Equalization Range: 0-65535, default is 1.

Warning

Do not change from the default

Definition at line 2784 of file FspmUpd.h.

13.35.2.12 Gen3SwEqNumberOfPresets

UINT8 FSP_M_TEST_CONFIG::Gen3SwEqNumberOfPresets

Offset 0x056D - Select number of TxEq presets to test in the PCIe/DMI SwEq Select number of TxEq presets to test in the PCIe/DMI SwEq.

P7,P3,P5(0x0): Test Presets 7, 3, and 5, P0-P9(0x1): Test Presets 0-9, Auto(0x2)(Default): Use the current default method (Default)Auto will test Presets 7, 3, and 5. It is possible for this default to change over time;using Auto will ensure Reference Code always uses the latest default settings 0:P7 P3 P5, 1:P0 to P9, 2:Auto

Definition at line 2701 of file FspmUpd.h.

13.35.2.13 Gen3SwEqVocDwellTime

UINT16 FSP_M_TEST_CONFIG::Gen3SwEqVocDwellTime

Offset 0x05B6 - VOC Dwell Time for PCIe Gen3 Software Equalization Range: 0-65535, default is 10000.

Warning

Do not change from the default

Definition at line 2789 of file FspmUpd.h.

13.35.2.14 Gen3SwEqVocErrorTarget

UINT16 FSP_M_TEST_CONFIG::Gen3SwEqVocErrorTarget

Offset 0x05B8 - VOC Error Target for PCIe Gen3 Software Equalization Range: 0-65535, default is 2.

Warning

Do not change from the default

Definition at line 2794 of file FspmUpd.h.

13.35.2.15 HeciCommunication2

UINT8 FSP_M_TEST_CONFIG::HeciCommunication2

Offset 0x05EA - HECI2 Interface Communication Test, 0: disable, 1: enable, Adds or Removes HECI2 Device from PCI space.

\$EN_DIS

Definition at line 2921 of file FspmUpd.h.

13.35.2.16 KtDeviceEnable

UINT8 FSP_M_TEST_CONFIG::KtDeviceEnable

Offset 0x05EB - Enable KT device Test, 0: disable, 1: enable, Enable or Disable KT device.

\$EN_DIS

Definition at line 2927 of file FspmUpd.h.

13.35.2.17 LockPTMregs

UINT8 FSP_M_TEST_CONFIG::LockPTMregs

Offset 0x055F - Lock PCU Thermal Management registers Lock PCU Thermal Management registers.

Enable(Default)=1, Disable=0 \$EN_DIS

Definition at line 2584 of file FspmUpd.h.

13.35.2.18 OemT12DelayOverride

UINT8 FSP_M_TEST_CONFIG::OemT12DelayOverride

Offset 0x05C0 - Oem T12 Dealy Override Oem T12 Dealy Override.

0(Default)=Disable 1=Enable \$EN_DIS

Definition at line 2830 of file FspmUpd.h.

13.35.2.19 PanelPowerEnable

UINT8 FSP_M_TEST_CONFIG::PanelPowerEnable

Offset 0x05BA - Panel Power Enable Control for enabling/disabling VDD force bit (Required only for early enabling of eDP panel).

0=Disable, 1(Default)=Enable \$EN_DIS

Definition at line 2801 of file FspmUpd.h.

13.35.2.20 Peg0Gen3EqPh2Enable

UINT8 FSP_M_TEST_CONFIG::Peg0Gen3EqPh2Enable

Offset 0x0563 - Phase2 EQ enable on the PEG 0:1:0.

Phase2 EQ enable on the PEG 0:1:0. Disabled(0x0): Disable phase 2, Enabled(0x1): Enable phase 2, Auto(0x2)(Default): Use the current default method 0:Disable, 1:Enable, 2:Auto

Definition at line 2615 of file FspmUpd.h.

13.35.2.21 Peg0Gen3EqPh3Method

UINT8 FSP_M_TEST_CONFIG::Peg0Gen3EqPh3Method

Offset 0x0567 - Phase3 EQ method on the PEG 0:1:0.

PEG Gen3 Equalization Phase3. Auto(0x0)(Default): Use the current default method, HwEq(0x1): Use Adaptive Hardware Equalization, SwEq(0x2): Use Adaptive Software Equalization (Implemented in BIOS Reference Code), Static(0x3): Use the Static EQs provided in DmiGen3EndPointPreset array for Phase1 AND Phase3 (Instead of just Phase1), Disabled(0x4): Bypass Equalization Phase 3 0:Auto, 1:HwEq, 2:SwEq, 3:StaticEq, 4:BypassPhase3

Definition at line 2646 of file FspmUpd.h.

13.35.2.22 Peg1Gen3EqPh2Enable

UINT8 FSP_M_TEST_CONFIG::Peg1Gen3EqPh2Enable

Offset 0x0564 - Phase2 EQ enable on the PEG 0:1:1.

Phase2 EQ enable on the PEG 0:1:0. Disabled(0x0): Disable phase 2, Enabled(0x1): Enable phase 2, Auto(0x2)(Default): Use the current default method 0:Disable, 1:Enable, 2:Auto

Definition at line 2622 of file FspmUpd.h.

13.35.2.23 Peg1Gen3EqPh3Method

UINT8 FSP_M_TEST_CONFIG::Peg1Gen3EqPh3Method

Offset 0x0568 - Phase3 EQ method on the PEG 0:1:1.

PEG Gen3 Equalization Phase3. Auto(0x0)(Default): Use the current default method, HwEq(0x1): Use Adaptive Hardware Equalization, SwEq(0x2): Use Adaptive Software Equalization (Implemented in BIOS Reference Code), Static(0x3): Use the Static EQs provided in DmiGen3EndPointPreset array for Phase1 AND Phase3 (Instead of just Phase1), Disabled(0x4): Bypass Equalization Phase 3 0:Auto, 1:HwEq, 2:SwEq, 3:StaticEq, 4:BypassPhase3

Definition at line 2656 of file FspmUpd.h.

13.35.2.24 Peg2Gen3EqPh2Enable

UINT8 FSP_M_TEST_CONFIG::Peg2Gen3EqPh2Enable

Offset 0x0565 - Phase2 EQ enable on the PEG 0:1:2.

Phase2 EQ enable on the PEG 0:1:0. Disabled(0x0): Disable phase 2, Enabled(0x1): Enable phase 2, Auto(0x2)(Default): Use the current default method 0:Disable, 1:Enable, 2:Auto

Definition at line 2629 of file FspmUpd.h.

13.35.2.25 Peg2Gen3EqPh3Method

UINT8 FSP_M_TEST_CONFIG::Peg2Gen3EqPh3Method

Offset 0x0569 - Phase3 EQ method on the PEG 0:1:2.

PEG Gen3 Equalization Phase3. Auto(0x0)(Default): Use the current default method, HwEq(0x1): Use Adaptive Hardware Equalization, SwEq(0x2): Use Adaptive Software Equalization (Implemented in BIOS Reference Code), Static(0x3): Use the Static EQs provided in DmiGen3EndPointPreset array for Phase1 AND Phase3 (Instead of just Phase1), Disabled(0x4): Bypass Equalization Phase 3 0:Auto, 1:HwEq, 2:SwEq, 3:StaticEq, 4:BypassPhase3

Definition at line 2666 of file FspmUpd.h.

13.35.2.26 Peg3Gen3EqPh2Enable

UINT8 FSP_M_TEST_CONFIG::Peg3Gen3EqPh2Enable

Offset 0x0566 - Phase2 EQ enable on the PEG 0:1:3.

Phase2 EQ enable on the PEG 0:1:0. Disabled(0x0): Disable phase 2, Enabled(0x1): Enable phase 2, Auto(0x2)(Default): Use the current default method 0:Disable, 1:Enable, 2:Auto

Definition at line 2636 of file FspmUpd.h.

13.35.2.27 Peg3Gen3EqPh3Method

```
UINT8 FSP_M_TEST_CONFIG::Peg3Gen3EqPh3Method
```

Offset 0x056A - Phase3 EQ method on the PEG 0:1:3.

PEG Gen3 Equalization Phase3. Auto(0x0)(Default): Use the current default method, HwEq(0x1): Use Adaptive Hardware Equalization, SwEq(0x2): Use Adaptive Software Equalization (Implemented in BIOS Reference Code), Static(0x3): Use the Static EQs provided in DmiGen3EndPointPreset array for Phase1 AND Phase3 (Instead of just Phase1), Disabled(0x4): Bypass Equalization Phase 3 0:Auto, 1:HwEq, 2:SwEq, 3:StaticEq, 4:BypassPhase3

Definition at line 2676 of file FspmUpd.h.

13.35.2.28 PegGen3EndPointHint

```
UINT8 FSP_M_TEST_CONFIG::PegGen3EndPointHint [20]
```

Offset 0x059D - PEG Gen3 End port Hint values per lane Used for programming PEG Gen3 Hint values per lane.

Range: 0-6, 2 is default for each lane

Definition at line 2770 of file FspmUpd.h.

13.35.2.29 PegGen3EndPointPreset

```
UINT8 FSP_M_TEST_CONFIG::PegGen3EndPointPreset [20]
```

Offset 0x0589 - PEG Gen3 End port preset values per lane Used for programming PEG Gen3 preset values per lane.

Range: 0-9, 7 is default for each lane

Definition at line 2765 of file FspmUpd.h.

13.35.2.30 PegGen3ProgramStaticEq

```
UINT8 FSP_M_TEST_CONFIG::PegGen3ProgramStaticEq
```

Offset 0x056B - Enable/Disable PEG GEN3 Static EQ Phase1 programming Program PEG Gen3 EQ Phase1 Static Presets.

Disabled(0x0): Disable EQ Phase1 Static Presets Programming, Enabled(0x1)(Default): Enable EQ Phase1 Static Presets Programming \$EN_DIS

Definition at line 2683 of file FspmUpd.h.

13.35.2.31 PegGen3RootPortPreset

UINT8 FSP_M_TEST_CONFIG::PegGen3RootPortPreset [20]

Offset 0x0575 - PEG Gen3 Root port preset values per lane Used for programming PEG Gen3 preset values per lane.

Range: 0-9, 8 is default for each lane

Definition at line 2760 of file FspmUpd.h.

13.35.2.32 PegGenerateBdatMarginTable

UINT8 FSP_M_TEST_CONFIG::PegGenerateBdatMarginTable

Offset 0x0571 - Generate PCIe BDAT Margin Table Set this policy to enable the generation and addition of PCIe margin data to the BDAT table.

Disabled(0x0)(Default): Normal Operation - Disable PCIe BDAT margin data generation, Enable(0x1): Generate PCIe BDAT margin data \$EN_DIS

Definition at line 2730 of file FspmUpd.h.

13.35.2.33 PegRxCemLoopbackLane

UINT8 FSP_M_TEST_CONFIG::PegRxCemLoopbackLane

Offset 0x0570 - PCIe Rx Compliance Loopback Lane When PegRxCemTestingMode is Enabled the specified Lane (0 - 15) will be used for RxCEMLoopback.

Default is Lane 0

Definition at line 2722 of file FspmUpd.h.

13.35.2.34 PegRxCemNonProtocolAwareness

UINT8 FSP_M_TEST_CONFIG::PegRxCemNonProtocolAwareness

Offset 0x0572 - PCIe Non-Protocol Awareness for Rx Compliance Testing Set this policy to enable the generation and addition of PCIe margin data to the BDAT table.

Disabled(0x0)(Default): Normal Operation - Disable non-protocol awareness, Enable(0x1): Non-Protocol Awareness Enabled - Enable non-protocol awareness for compliance testing \$EN_DIS

Definition at line 2739 of file FspmUpd.h.

13.35.2.35 ScanExtGfxForLegacyOpRom

UINT8 FSP_M_TEST_CONFIG::ScanExtGfxForLegacyOpRom

Offset 0x055E - Detect External Graphics device for LegacyOpROM Detect and report if external graphics device only support LegacyOpROM or not (to support CSM auto-enable).

Enable(Default)=1, Disable=0 \$EN_DIS

Definition at line 2578 of file FspmUpd.h.

13.35.2.36 SkipMbpHob

UINT8 FSP_M_TEST_CONFIG::SkipMbpHob

Offset 0x05E9 - Skip MBP HOB Test, 0: disable, 1: enable, Enable/Disable MOB HOB.

\$EN_DIS

Definition at line 2915 of file FspmUpd.h.

13.35.2.37 SmbusDynamicPowerGating

UINT8 FSP_M_TEST_CONFIG::SmbusDynamicPowerGating

Offset 0x05D2 - Smbus dynamic power gating Disable or Enable Smbus dynamic power gating.

\$EN_DIS

Definition at line 2864 of file FspmUpd.h.

13.35.2.38 SmbusSpdWriteDisable

UINT8 FSP_M_TEST_CONFIG::SmbusSpdWriteDisable

Offset 0x05D4 - SMBUS SPD Write Disable Set/Clear Smbus SPD Write Disable.

0: leave SPD Write Disable bit; 1: set SPD Write Disable bit. For security recommendations, SPD write disable bit must be set. \$EN_DIS

Definition at line 2877 of file FspmUpd.h.

13.35.2.39 TotalFlashSize

UINT16 FSP_M_TEST_CONFIG::TotalFlashSize

Offset 0x05CA - TotalFlashSize Enable/Disable.

0: Disable, define default value of TotalFlashSize , 1: enable

Definition at line 2841 of file FspmUpd.h.

13.35.2.40 tRd2RdDD

UINT8 FSP_M_TEST_CONFIG::tRd2RdDD

Offset 0x05EF - tRd2RdDD Delay between Read-to-Read commands in different DIMMs.

0-Auto, Range 4-54.

Definition at line 2948 of file FspmUpd.h.

13.35.2.41 tRd2RdDG

UINT8 FSP_M_TEST_CONFIG::tRd2RdDG

Offset 0x05ED - tRd2RdDG Delay between Read-to-Read commands in different Bank Group for DDR4.

All other DDR technologies should set this equal to SG. 0-Auto, Range 4-54.

Definition at line 2938 of file FspmUpd.h.

13.35.2.42 tRd2RdDR

UINT8 FSP_M_TEST_CONFIG::tRd2RdDR

Offset 0x05EE - tRd2RdDR Delay between Read-to-Read commands in different Ranks.

0-Auto, Range 4-54.

Definition at line 2943 of file FspmUpd.h.

13.35.2.43 tRd2RdSG

UINT8 FSP_M_TEST_CONFIG::tRd2RdSG

Offset 0x05EC - tRd2RdSG Delay between Read-to-Read commands in the same Bank Group.

0-Auto, Range 4-54.

Definition at line 2932 of file FspmUpd.h.

13.35.2.44 tRd2WrDD

UINT8 FSP_M_TEST_CONFIG::tRd2WrDD

Offset 0x05FB - tRd2WrDD Delay between Read-to-Write commands in different DIMMs.

0-Auto, Range 4-54.

Definition at line 3011 of file FspmUpd.h.

13.35.2.45 tRd2WrDG

UINT8 FSP_M_TEST_CONFIG::tRd2WrDG

Offset 0x05F9 - tRd2WrDG Delay between Read-to-Write commands in different Bank Group for DDR4.

All other DDR technologies should set this equal to SG. 0-Auto, Range 4-54.

Definition at line 3001 of file FspmUpd.h.

13.35.2.46 tRd2WrDR

UINT8 FSP_M_TEST_CONFIG::tRd2WrDR

Offset 0x05FA - tRd2WrDR Delay between Read-to-Write commands in different Ranks.

0-Auto, Range 4-54.

Definition at line 3006 of file FspmUpd.h.

13.35.2.47 tRd2WrSG

UINT8 FSP_M_TEST_CONFIG::tRd2WrSG

Offset 0x05F8 - tRd2WrSG Delay between Read-to-Write commands in the same Bank Group.

0-Auto, Range 4-54.

Definition at line 2995 of file FspmUpd.h.

13.35.2.48 tRRD_L

UINT8 FSP_M_TEST_CONFIG::tRRD_L

Offset 0x05FC - tRRD_L Min Row Active to Row Active Delay Time for Same Bank Group, DDR4 Only.

0: AUTO, max: 31

Definition at line 3016 of file FspmUpd.h.

13.35.2.49 tRRD_S

UINT8 FSP_M_TEST_CONFIG::tRRD_S

Offset 0x05FD - tRRD_S Min Row Active to Row Active Delay Time for Different Bank Group, DDR4 Only.

0: AUTO, max: 31

Definition at line 3022 of file FspmUpd.h.

13.35.2.50 tWr2RdDD

UINT8 FSP_M_TEST_CONFIG::tWr2RdDD

Offset 0x05F3 - tWr2RdDD Delay between Write-to-Read commands in different DIMMs.

0-Auto, Range 4-54.

Definition at line 2969 of file FspmUpd.h.

13.35.2.51 tWr2RdDG

UINT8 FSP_M_TEST_CONFIG::tWr2RdDG

Offset 0x05F1 - tWr2RdDG Delay between Write-to-Read commands in different Bank Group for DDR4.

All other DDR technologies should set this equal to SG. 0-Auto, Range 4-54.

Definition at line 2959 of file FspmUpd.h.

13.35.2.52 tWr2RdDR

UINT8 FSP_M_TEST_CONFIG::tWr2RdDR

Offset 0x05F2 - tWr2RdDR Delay between Write-to-Read commands in different Ranks.

0-Auto, Range 4-54.

Definition at line 2964 of file FspmUpd.h.

13.35.2.53 tWr2RdSG

UINT8 FSP_M_TEST_CONFIG::tWr2RdSG

Offset 0x05F0 - tWr2RdSG Delay between Write-to-Read commands in the same Bank Group.

0-Auto, Range 4-86.

Definition at line 2953 of file FspmUpd.h.

13.35.2.54 tWr2WrDD

UINT8 FSP_M_TEST_CONFIG::tWr2WrDD

Offset 0x05F7 - tWr2WrDD Delay between Write-to-Write commands in different DIMMs.

0-Auto, Range 4-54.

Definition at line 2990 of file FspmUpd.h.

13.35.2.55 tWr2WrDG

UINT8 FSP_M_TEST_CONFIG::tWr2WrDG

Offset 0x05F5 - tWr2WrDG Delay between Write-to-Write commands in different Bank Group for DDR4.

All other DDR technologies should set this equal to SG. 0-Auto, Range 4-54.

Definition at line 2980 of file FspmUpd.h.

13.35.2.56 tWr2WrDR

UINT8 FSP_M_TEST_CONFIG::tWr2WrDR

Offset 0x05F6 - tWr2WrDR Delay between Write-to-Write commands in different Ranks.

0-Auto, Range 4-54.

Definition at line 2985 of file FspmUpd.h.

13.35.2.57 tWr2WrSG

UINT8 FSP_M_TEST_CONFIG::tWr2WrSG

Offset 0x05F4 - tWr2WrSG Delay between Write-to-Write commands in the same Bank Group.

0-Auto, Range 4-54.

Definition at line 2974 of file FspmUpd.h.

13.35.2.58 tWTR_L

UINT8 FSP_M_TEST_CONFIG::tWTR_L

Offset 0x05FE - tWTR_L Min Internal Write to Read Command Delay Time for Same Bank Group, DDR4 Only.

0: AUTO, max: 60

Definition at line 3028 of file FspmUpd.h.

13.35.2.59 tWTR_S

UINT8 FSP_M_TEST_CONFIG::tWTR_S

Offset 0x05FF - tWTR_S Min Internal Write to Read Command Delay Time for Different Bank Group, DDR4 Only.

0: AUTO, max: 28

Definition at line 3034 of file FspmUpd.h.

13.35.2.60 TxtAcheckRequest

UINT8 FSP_M_TEST_CONFIG::TxtAcheckRequest

Offset 0x05CE - TxtAcheckRequest Enable/Disable.

When Enabled, it will forcing calling TXT Acheck once. \$EN_DIS

Definition at line 2852 of file FspmUpd.h.

13.35.2.61 WdtDisableAndLock

UINT8 FSP_M_TEST_CONFIG::WdtDisableAndLock

Offset 0x05D3 - Disable and Lock Watch Dog Register Set 1 to clear WDT status, then disable and lock WDT registers.

\$EN_DIS

Definition at line 2870 of file FspmUpd.h.

The documentation for this struct was generated from the following file:

- [FspmUpd.h](#)

13.36 FSP_S_CONFIG Struct Reference

Fsp S Configuration.

```
#include <FspsUpd.h>
```

Public Attributes

- UINT32 [LogoPtr](#)
Offset 0x0020 - Logo Pointer Points to PEI Display Logo Image.
 - UINT32 [LogoSize](#)
-

- Offset 0x0024 - Logo Size Size of PEI Display Logo Image.*

 - UUINT32 [GraphicsConfigPtr](#)
 - Offset 0x0028 - Graphics Configuration Ptr Points to VBT.*
 - UUINT8 [Device4Enable](#)
 - Offset 0x002C - Enable Device 4 Enable/disable Device 4 \$EN_DIS.*
 - UUINT8 [UnusedUpdSpace0](#) [3]
 - Offset 0x002D.*
 - UUINT32 [MicrocodeRegionBase](#)
 - Offset 0x0030 - MicrocodeRegionBase Memory Base of Microcode Updates.*
 - UUINT32 [MicrocodeRegionSize](#)
 - Offset 0x0034 - MicrocodeRegionSize Size of Microcode Updates.*
 - UUINT8 [TurboMode](#)
 - Offset 0x0038 - Turbo Mode Enable/Disable Turbo mode.*
 - UUINT8 [PchDmiCwbEnable](#)
 - Offset 0x0039 - PchDmiCwbEnable Central Write Buffer feature configurable and disabled by default \$EN_DIS.*
 - UUINT8 [Heci3Enabled](#)
 - Offset 0x003A - HECI3 state The HECI3 state from Mbp for reference in S3 path or when MbpHob is not installed.*
 - UUINT8 [Heci1Disabled](#)
 - Offset 0x003B - HECI1 state Determine if HECI1 is hidden prior to boot to OS.*
 - UUINT8 [AmtEnabled](#)
 - Offset 0x003C - AMT Switch Enable/Disable.*
 - UUINT8 [WatchDogEnabled](#)
 - Offset 0x003D - WatchDog Timer Switch Enable/Disable.*
 - UUINT8 [ManageabilityMode](#)
 - Offset 0x003E - Manageability Mode set by Mebx Enable/Disable.*
 - UUINT8 [FwProgress](#)
 - Offset 0x003F - PET Progress Enable/Disable.*
 - UUINT8 [AmtSolEnabled](#)
 - Offset 0x0040 - SOL Switch Enable/Disable.*
 - UUINT8 [UnusedUpdSpace1](#)
 - Offset 0x0041.*
 - UUINT16 [WatchDogTimerOs](#)
 - Offset 0x0042 - OS Timer 16 bits Value, Set OS watchdog timer.*
 - UUINT16 [WatchDogTimerBios](#)
 - Offset 0x0044 - BIOS Timer 16 bits Value, Set BIOS watchdog timer.*
 - UUINT8 [RemoteAssistance](#)
 - Offset 0x0046 - Remote Assistance Trigger Availablilty Enable/Disable.*
 - UUINT8 [AmtKvmEnabled](#)
 - Offset 0x0047 - KVM Switch Enable/Disable.*
 - UUINT8 [ForcMebxSyncUp](#)
 - Offset 0x0048 - MEBX execution Enable/Disable.*
 - UUINT8 [CridEnable](#)
 - Offset 0x0049 - Enable/Disable SA CRID Enable: SA CRID, Disable (Default): SA CRID \$EN_DIS.*
 - UUINT8 [DmiAspm](#)
 - Offset 0x004A - DMI ASPM 0=Disable, 1:L0s, 2:L1, 3(Default)=L0sL1 0:Disable, 1:L0s, 2:L1, 3:L0sL1.*
 - UUINT8 [PegDeEmphasis](#) [4]
 - Offset 0x004B - PCIe DeEmphasis control per root port 0: -6dB, 1(Default): -3.5dB 0:-6dB, 1:-3.5dB.*
 - UUINT8 [PegSlotPowerLimitValue](#) [4]
 - Offset 0x004F - PCIe Slot Power Limit value per root port Slot power limit value per root port.*
 - UUINT8 [PegSlotPowerLimitScale](#) [4]
-

- Offset 0x0053 - PCIe Slot Power Limit scale per root port Slot power limit scale per root port 0:1.0x, 1:0.1x, 2:0.01x, 3:0x001x.*
- UINTE8 [UnusedUpdSpace2](#) [1]

Offset 0x0057.
 - UINTE16 [PegPhysicalSlotNumber](#) [4]

Offset 0x0058 - PCIe Physical Slot Number per root port Physical Slot Number per root port.
 - UINTE8 [PavpEnable](#)

Offset 0x0060 - Enable/Disable PavpEnable Enable(Default): Enable PavpEnable, Disable: Disable PavpEnable \$EN_DIS.
 - UINTE8 [CdClock](#)

Offset 0x0061 - CdClock Frequency selection 0=337.5 Mhz, 1=450 Mhz, 2=540 Mhz, 3(Default)=675 Mhz 0: 337.5 Mhz, 1: 450 Mhz, 2: 540 Mhz, 3: 675 Mhz.
 - UINTE8 [PeiGraphicsPeimInit](#)

Offset 0x0062 - Enable/Disable PeiGraphicsPeimInit Enable: Enable PeiGraphicsPeimInit, Disable(Default): Disable PeiGraphicsPeimInit \$EN_DIS.
 - UINTE8 [GnaEnable](#)

Offset 0x0063 - Enable or disable GNA device 0=Disable, 1(Default)=Enable \$EN_DIS.
 - UINTE8 [X2ApicOptOutDeprecated](#)

Offset 0x0064 - State of X2APIC_OPT_OUT bit in the DMAR table 0=Disable/Clear, 1=Enable/Set \$EN_DIS.
 - UINTE8 [UnusedUpdSpace3](#) [3]

Offset 0x0065.
 - UINTE32 [VtdBaseAddressDeprecated](#) [3]

Offset 0x0068 - Base addresses for VT-d function MMIO access Base addresses for VT-d MMIO access per VT-d engine.
 - UINTE8 [DdiPortEdp](#)

Offset 0x0074 - Enable or disable eDP device 0=Disable, 1(Default)=Enable \$EN_DIS.
 - UINTE8 [DdiPortBHpd](#)

Offset 0x0075 - Enable or disable HPD of DDI port B 0=Disable, 1(Default)=Enable \$EN_DIS.
 - UINTE8 [DdiPortCHpd](#)

Offset 0x0076 - Enable or disable HPD of DDI port C 0=Disable, 1(Default)=Enable \$EN_DIS.
 - UINTE8 [DdiPortDHpd](#)

Offset 0x0077 - Enable or disable HPD of DDI port D 0=Disable, 1(Default)=Enable \$EN_DIS.
 - UINTE8 [DdiPortFHpd](#)

Offset 0x0078 - Enable or disable HPD of DDI port F 0=Disable, 1(Default)=Enable \$EN_DIS.
 - UINTE8 [DdiPortBDdc](#)

Offset 0x0079 - Enable or disable DDC of DDI port B 0=Disable, 1(Default)=Enable \$EN_DIS.
 - UINTE8 [DdiPortCDdc](#)

Offset 0x007A - Enable or disable DDC of DDI port C 0=Disable, 1(Default)=Enable \$EN_DIS.
 - UINTE8 [DdiPortDDdc](#)

Offset 0x007B - Enable or disable DDC of DDI port D 0=Disable, 1(Default)=Enable \$EN_DIS.
 - UINTE8 [DdiPortFDdc](#)

Offset 0x007C - Enable or disable DDC of DDI port F 0(Default)=Disable, 1=Enable \$EN_DIS.
 - UINTE8 [SkipS3CdClockInit](#)

Offset 0x007D - Enable/Disable SkipS3CdClockInit Enable: Skip Full CD clock initializaton, Disable(Default): Initialize the full CD clock in S3 resume due to GOP absent \$EN_DIS.
 - UINTE16 [DeltaT12PowerCycleDelay](#)

Offset 0x007E - Delta T12 Power Cycle Delay required in ms DEPRECATED 0 : No Delay, 0xFFFF : Auto Calculate T12 Delay.
 - UINTE32 [BltBufferAddress](#)

Offset 0x0080 - Blt Buffer Address Address of Blt buffer.
 - UINTE32 [BltBufferSize](#)
-

- Offset 0x0084 - Blt Buffer Size Size of Blt Buffer, is equal to PixelWidth * PixelHeight * 4 bytes (the size of EFI_GRAPHICS_OUTPUT_BLT_PIXEL)
- UINT8 [ProgramGtChickenBits](#)
Offset 0x0088 - Program GT Chicken bits Program the GT chicken bits in GTMMADR + 0xD00 BITS [3:1].
 - UINT8 [SaPostMemProductionRsvd](#) [34]
Offset 0x0089 - SaPostMemProductionRsvd Reserved for SA Post-Mem Production \$EN_DIS.
 - UINT8 [PcieRootPortGen2Pll1CgDisable](#) [24]
Offset 0x00AB - PCIE RP Disable Gen2PLL Shutdown and L1 Clock Gating Enable PCIE RP Disable Gen2PLL Shutdown and L1 Clock Gating Enable Workaround needed for Alpine ridge.
 - UINT8 [AesEnable](#)
Offset 0x00C3 - Advanced Encryption Standard (AES) feature Enable or Disable Advanced Encryption Standard (AES) feature; 0: Disable; 1: **Enable** \$EN_DIS.
 - UINT8 [Psi3Enable](#) [5]
Offset 0x00C4 - Power State 3 enable/disable PCODE MMIO Mailbox: Power State 3 enable/disable; 0: Disable; 1: **Enable**.
 - UINT8 [Psi4Enable](#) [5]
Offset 0x00C9 - Power State 4 enable/disable PCODE MMIO Mailbox: Power State 4 enable/disable; 0: Disable; 1: **Enable**.For all VR Indexes.
 - UINT8 [ImonSlope](#) [5]
Offset 0x00CE - Imon slope correction PCODE MMIO Mailbox: Imon slope correction.
 - UINT8 [ImonOffset](#) [5]
Offset 0x00D3 - Imon offset correction DEPRECATED.
 - UINT8 [VrConfigEnable](#) [5]
Offset 0x00D8 - Enable/Disable BIOS configuration of VR Enable/Disable BIOS configuration of VR; 0: **Disable**; 1: **Enable**.For all VR Indexes.
 - UINT8 [TdcEnable](#) [5]
Offset 0x00DD - Thermal Design Current enable/disable PCODE MMIO Mailbox: Thermal Design Current enable/disable; 0: **Disable**; 1: **Enable**.For all VR Indexes.
 - UINT8 [TdcTimeWindow](#) [5]
Offset 0x00E2 - HECI3 state PCODE MMIO Mailbox: Thermal Design Current time window.
 - UINT8 [TdcLock](#) [5]
Offset 0x00E7 - Thermal Design Current Lock PCODE MMIO Mailbox: Thermal Design Current Lock; 0: **Disable**; 1: **Enable**.For all VR Indexes.
 - UINT8 [PsysSlope](#)
Offset 0x00EC - Platform Psys slope correction PCODE MMIO Mailbox: Platform Psys slope correction.
 - UINT8 [PsysOffset](#)
Offset 0x00ED - Platform Psys offset correction PCODE MMIO Mailbox: Platform Psys offset correction.
 - UINT8 [AcousticNoiseMitigation](#)
Offset 0x00EE - Acoustic Noise Mitigation feature Enable or Disable Acoustic Noise Mitigation feature.
 - UINT8 [FastPkgCRampDisablela](#)
Offset 0x00EF - Disable Fast Slew Rate for Deep Package C States for VR IA domain Disable Fast Slew Rate for Deep Package C States based on Acoustic Noise Mitigation feature enabled.
 - UINT8 [SlowSlewRateForIa](#)
Offset 0x00F0 - Slew Rate configuration for Deep Package C States for VR IA domain Slew Rate configuration for Deep Package C States for VR IA domain based on Acoustic Noise Mitigation feature enabled.
 - UINT8 [SlowSlewRateForGt](#)
Offset 0x00F1 - Slew Rate configuration for Deep Package C States for VR GT domain Slew Rate configuration for Deep Package C States for VR GT domain based on Acoustic Noise Mitigation feature enabled.
 - UINT8 [SlowSlewRateForSa](#)
Offset 0x00F2 - Slew Rate configuration for Deep Package C States for VR SA domain Slew Rate configuration for Deep Package C States for VR SA domain based on Acoustic Noise Mitigation feature enabled.
 - UINT8 [UnusedUpdSpace4](#) [1]
Offset 0x00F3.
-

- UINT16 [TdcPowerLimit](#) [5]
Offset 0x00F4 - Thermal Design Current current limit PCODE MMIO Mailbox: Thermal Design Current current limit.
 - UINT16 [AcLoadline](#) [5]
Offset 0x00FE - AcLoadline PCODE MMIO Mailbox: AcLoadline in 1/100 mOhms (ie.
 - UINT16 [DcLoadline](#) [5]
Offset 0x0108 - DcLoadline PCODE MMIO Mailbox: DcLoadline in 1/100 mOhms (ie.
 - UINT16 [Psi1Threshold](#) [5]
Offset 0x0112 - Power State 1 Threshold current PCODE MMIO Mailbox: Power State 1 current cuttof in 1/4 Amp increments.
 - UINT16 [Psi2Threshold](#) [5]
Offset 0x011C - Power State 2 Threshold current PCODE MMIO Mailbox: Power State 2 current cuttof in 1/4 Amp increments.
 - UINT16 [Psi3Threshold](#) [5]
Offset 0x0126 - Power State 3 Threshold current PCODE MMIO Mailbox: Power State 3 current cuttof in 1/4 Amp increments.
 - UINT16 [IccMax](#) [5]
Offset 0x0130 - Icc Max limit PCODE MMIO Mailbox: VR Icc Max limit.
 - UINT16 [VrVoltageLimit](#) [5]
Offset 0x013A - VR Voltage Limit PCODE MMIO Mailbox: VR Voltage Limit.
 - UINT8 [FastPkgCRampDisableGt](#)
Offset 0x0144 - Disable Fast Slew Rate for Deep Package C States for VR GT domain Disable Fast Slew Rate for Deep Package C States based on Acoustic Noise Mitigation feature enabled.
 - UINT8 [FastPkgCRampDisableSa](#)
Offset 0x0145 - Disable Fast Slew Rate for Deep Package C States for VR SA domain Disable Fast Slew Rate for Deep Package C States based on Acoustic Noise Mitigation feature enabled.
 - UINT8 [SendVrMbxCmd](#)
Offset 0x0146 - Enable VR specific mailbox command VR specific mailbox commands.
 - UINT8 [Reserved2](#)
Offset 0x0147 - Reserved Reserved.
 - UINT8 [TxtEnable](#)
*Offset 0x0148 - Enable or Disable TXT Enable or Disable TXT; 0: Disable; 1: **Enable**.*
 - UINT8 [SkipMplnitDeprecated](#)
Offset 0x0149 - Deprecated DO NOT USE Skip Multi-Processor Initialization.
 - UINT8 [MclvrRfiFrequencyPrefix](#)
Offset 0x014A - MclVR RFI Frequency Prefix PCODE MMIO Mailbox: MclVR RFI Frequency Adjustment Prefix.
 - UINT8 [MclvrRfiFrequencyAdjust](#)
Offset 0x014B - MclVR RFI Frequency Adjustment PCODE MMIO Mailbox: Adjust the RFI frequency relative to the nominal frequency in increments of 100KHz.
 - UINT16 [FivrRfiFrequency](#)
Offset 0x014C - FIVR RFI Frequency PCODE MMIO Mailbox: Set the desired RFI frequency, in increments of 100← KHz.
 - UINT8 [MclvrSpreadSpectrum](#)
Offset 0x014E - MclVR RFI Spread Spectrum PCODE MMIO Mailbox: MclVR RFI Spread Spectrum.
 - UINT8 [FivrSpreadSpectrum](#)
Offset 0x014F - FIVR RFI Spread Spectrum PCODE MMIO Mailbox: FIVR RFI Spread Spectrum, in 0.1% increments.
 - UINT8 [FastPkgCRampDisableFivr](#)
Offset 0x0150 - Disable Fast Slew Rate for Deep Package C States for VR FIVR domain Disable Fast Slew Rate for Deep Package C States based on Acoustic Noise Mitigation feature enabled.
 - UINT8 [SlowSlewRateForFivr](#)
Offset 0x0151 - Slew Rate configuration for Deep Package C States for VR FIVR domain Slew Rate configuration for Deep Package C States for VR FIVR domain based on Acoustic Noise Mitigation feature enabled.
 - UINT8 [UnusedUpdSpace5](#) [2]
-

- Offset 0x0152.*

 - UINT32 [CpuBistData](#)

Offset 0x0154 - CpuBistData Pointer CPU BIST Data.
 - UINT8 [IsVrCmd](#)

Offset 0x0158 - Activates VR mailbox command for Intersil VR C-state issues.
 - UINT8 [UnusedUpdSpace6](#) [1]

Offset 0x0159.
 - UINT16 [ImonSlope1](#) [5]

Offset 0x015A - Imon slope1 correction PCODE MMIO Mailbox: Imon slope correction.
 - UINT32 [VrPowerDeliveryDesign](#)

Offset 0x0164 - CPU VR Power Delivery Design Used to communicate the power delivery design capability of the board.
 - UINT8 [PreWake](#)

Offset 0x0168 - Pre Wake Randomization time PCODE MMIO Mailbox: Acoustic Migitation Range. Defines the maximum pre-wake randomization time in micro ticks. This can be programmed only if AcousticNoiseMigation is enabled.
 - UINT8 [RampUp](#)

Offset 0x0169 - Ramp Up Randomization time PCODE MMIO Mailbox: Acoustic Migitation Range. Defines the maximum Ramp Up randomization time in micro ticks. This can be programmed only if AcousticNoiseMigation is enabled. Range 0-255 0.
 - UINT8 [RampDown](#)

Offset 0x016A - Ramp Down Randomization time PCODE MMIO Mailbox: Acoustic Migitation Range. Defines the maximum Ramp Down randomization time in micro ticks. This can be programmed only if AcousticNoiseMigation is enabled. Range 0-255 0.
 - UINT8 [UnusedUpdSpace7](#)

Offset 0x016B.
 - UINT32 [CpuMpPpi](#)

Offset 0x016C - CpuMpPpi Pointer for CpuMpPpi.
 - UINT32 [CpuMpHob](#)

Offset 0x0170 - CpuMpHob Pointer for CpuMpHob.
 - UINT8 [DebugInterfaceEnable](#)

*Offset 0x0174 - CPU Run Control Enable, Disable or Do not configure CPU Run Control; 0: Disable; 1: Enable ; 2: **No Change** 0:Disabled, 1:Enabled, 2:No Change.*
 - UINT8 [UnusedUpdSpace8](#) [1]

Offset 0x0175.
 - UINT16 [ImonOffset1](#) [5]

Offset 0x0176 - Imon offset 1 correction PCODE MMIO Mailbox: Imon offset correction.
 - UINT8 [ReservedCpuPostMemProduction](#) [8]

Offset 0x0180 - ReservedCpuPostMemProduction Reserved for CPU Post-Mem Production \$EN_DIS.
 - UINT8 [PchHdaDspEnable](#)

Offset 0x0188 - Enable HD Audio DSP Enable/disable HD Audio DSP feature.
 - UINT8 [SerialloSpi0CsPolarity](#) [2]

Offset 0x0189 - SPI0 Chip Select Polarity Sets polarity for each chip Select.
 - UINT8 [SerialloSpi1CsPolarity](#) [2]

Offset 0x018B - SPI1 Chip Select Polarity Sets polarity for each chip Select.
 - UINT8 [SerialloSpi2CsPolarity](#) [2]

Offset 0x018D - SPI2 Chip Select Polarity Sets polarity for each chip Select.
 - UINT8 [SerialloSpi0CsEnable](#) [2]

Offset 0x018F - SPI0 Chip Select Enable 0:Disabled, 1:Enabled.
 - UINT8 [SerialloSpi1CsEnable](#) [2]

Offset 0x0191 - SPI1 Chip Select Enable 0:Disabled, 1:Enabled.
 - UINT8 [SerialloSpi2CsEnable](#) [2]

Offset 0x0193 - SPI2 Chip Select Enable 0:Disabled, 1:Enabled.
-

- UINT8 [SerialloSpiMode](#) [3]
Offset 0x0195 - SPIn Device Mode Selects SPI operation mode.
 - UINT8 [SerialloSpiDefaultCsOutput](#) [3]
Offset 0x0198 - SPIn Default Chip Select Output Sets Default CS as Output.
 - UINT8 [PchSerialloI2cPadsTermination](#) [6]
Offset 0x019B - PCH Seriallo I2C Pads Termination 0x0: Hardware default, 0x1: None, 0x13: 1kOhm weak pull-up, 0x15: 5kOhm weak pull-up, 0x19: 20kOhm weak pull-up - Enable/disable Seriallo I2C0,I2C1,I2C2,I2C3,I2C4,I2C5 pads termination respectively.
 - UINT8 [SerialloI2cMode](#) [6]
Offset 0x01A1 - I2Cn Device Mode Selects I2c operation mode.
 - UINT8 [SerialloUartMode](#) [3]
Offset 0x01A7 - UARTn Device Mode Selects Uart operation mode.
 - UINT8 [UnusedUpdSpace9](#) [2]
Offset 0x01AA.
 - UINT32 [SerialloUartBaudRate](#) [3]
Offset 0x01AC - Default BaudRate for each Serial IO UART Set default BaudRate Supported from 0 - default to 600000.
 - UINT8 [SerialloUartParity](#) [3]
Offset 0x01B8 - Default ParityType for each Serial IO UART Set default Parity.
 - UINT8 [SerialloUartDataBits](#) [3]
Offset 0x01BB - Default DataBits for each Serial IO UART Set default word length.
 - UINT8 [SerialloUartStopBits](#) [3]
Offset 0x01BE - Default StopBits for each Serial IO UART Set default stop bits.
 - UINT8 [SerialloUartPowerGating](#) [3]
Offset 0x01C1 - Power Gating mode for each Serial IO UART that works in COM mode Set Power Gating.
 - UINT8 [SerialloUartDmaEnable](#) [3]
Offset 0x01C4 - Enable Dma for each Serial IO UART that supports it Set DMA/PIO mode.
 - UINT8 [SerialloUartAutoFlow](#) [3]
Offset 0x01C7 - Enables UART hardware flow control, CTS and RTS lines Enables UART hardware flow control, CTS and RTS lines.
 - UINT8 [SerialloUartPinMux](#) [3]
Offset 0x01CA - Serial IO UART Pin Mux Applies only to UART0 muxed with CNVI 0 = GPIO C8 to C11 1 = GPIO F5 - F7 (PCH LP) J5 - J7 (PCH H)
 - UINT8 [SerialloDebugUartNumber](#)
Offset 0x01CD - UART Number For Debug Purpose UART number for debug purpose.
 - UINT8 [SerialloUartDbg2](#) [3]
*Offset 0x01CE - Serial IO UART DBG2 table Enable or disable Serial Io UART DBG2 table, default is Disable; 0: **Disable**; 1: Enable.*
 - UINT8 [ScsEmmcEnabled](#)
Offset 0x01D1 - Enable eMMC Controller Enable/disable eMMC Controller.
 - UINT8 [ScsEmmcHs400Enabled](#)
Offset 0x01D2 - Enable eMMC HS400 Mode Enable eMMC HS400 Mode.
 - UINT8 [ScsSdCardEnabled](#)
Offset 0x01D3 - Enable SdCard Controller Enable/disable SD Card Controller.
 - UINT8 [ShowSpiController](#)
Offset 0x01D4 - Show SPI controller Enable/disable to show SPI controller.
 - UINT8 [SataSalpSupport](#)
Offset 0x01D5 - Enable SATA SALP Support Enable/disable SATA Aggressive Link Power Management.
 - UINT8 [SataPortsEnable](#) [8]
Offset 0x01D6 - Enable SATA ports Enable/disable SATA ports.
 - UINT8 [SataPortsDevSlp](#) [8]
Offset 0x01DE - Enable SATA DEVSLP Feature Enable/disable SATA DEVSLP per port.
-

- UINT8 [PortUsb20Enable](#) [16]
Offset 0x01E6 - Enable USB2 ports Enable/disable per USB2 ports.
 - UINT8 [PortUsb30Enable](#) [10]
Offset 0x01F6 - Enable USB3 ports Enable/disable per USB3 ports.
 - UINT8 [XdcEnable](#)
Offset 0x0200 - Enable xDCI controller Enable/disable to xDCI controller.
 - UINT8 [UnusedUpdSpace10](#) [3]
Offset 0x0201.
 - UINT32 [DevIntConfigPtr](#)
Offset 0x0204 - Address of PCH_DEVICE_INTERRUPT_CONFIG table.
 - UINT8 [NumOfDevIntConfig](#)
Offset 0x0208 - Number of DevIntConfig Entry Number of Device Interrupt Configuration Entry.
 - UINT8 [PxRcConfig](#) [8]
Offset 0x0209 - PIRQx to IRQx Map Config PIRQx to IRQx mapping.
 - UINT8 [GpioIrqRoute](#)
Offset 0x0211 - Select GPIO IRQ Route GPIO IRQ Select.
 - UINT8 [ScIrqSelect](#)
Offset 0x0212 - Select ScIrqSelect SCI IRQ Select.
 - UINT8 [TcolrqSelect](#)
Offset 0x0213 - Select TcolrqSelect TCO IRQ Select.
 - UINT8 [TcolrqEnable](#)
Offset 0x0214 - Enable/Disable Tco IRQ Enable/disable TCO IRQ \$EN_DIS.
 - UINT8 [PchHdaVerbTableEntryNum](#)
Offset 0x0215 - PCH HDA Verb Table Entry Number Number of Entries in Verb Table.
 - UINT8 [UnusedUpdSpace11](#) [2]
Offset 0x0216.
 - UINT32 [PchHdaVerbTablePtr](#)
Offset 0x0218 - PCH HDA Verb Table Pointer Pointer to Array of pointers to Verb Table.
 - UINT8 [PchHdaCodecSxWakeCapability](#)
Offset 0x021C - PCH HDA Codec Sx Wake Capability Capability to detect wake initiated by a codec in Sx.
 - UINT8 [SataEnable](#)
Offset 0x021D - Enable SATA Enable/disable SATA controller.
 - UINT8 [SataMode](#)
Offset 0x021E - SATA Mode Select SATA controller working mode.
 - UINT8 [Usb2AfePetxiset](#) [16]
Offset 0x021F - USB Per Port HS Preemphasis Bias USB Per Port HS Preemphasis Bias.
 - UINT8 [Usb2AfeTxiset](#) [16]
Offset 0x022F - USB Per Port HS Transmitter Bias USB Per Port HS Transmitter Bias.
 - UINT8 [Usb2AfePredeemp](#) [16]
Offset 0x023F - USB Per Port HS Transmitter Emphasis USB Per Port HS Transmitter Emphasis.
 - UINT8 [Usb2AfePehalfbit](#) [16]
Offset 0x024F - USB Per Port Half Bit Pre-emphasis USB Per Port Half Bit Pre-emphasis.
 - UINT8 [Usb3HsioTxDeEmphEnable](#) [10]
Offset 0x025F - Enable the write to USB 3.0 TX Output -3.5dB De-Emphasis Adjustment Enable the write to USB 3.0 TX Output -3.5dB De-Emphasis Adjustment.
 - UINT8 [Usb3HsioTxDeEmph](#) [10]
*Offset 0x0269 - USB 3.0 TX Output -3.5dB De-Emphasis Adjustment Setting USB 3.0 TX Output -3.5dB De-Emphasis Adjustment Setting, HSIO_TX_DWORD5[21:16], **Default = 29h** (approximately -3.5dB De-Emphasis).*
 - UINT8 [Usb3HsioTxDownscaleAmpEnable](#) [10]
Offset 0x0273 - Enable the write to USB 3.0 TX Output Downscale Amplitude Adjustment Enable the write to USB 3.0 TX Output Downscale Amplitude Adjustment, Each value in array can be between 0-1.
-

- UINT8 [Usb3HsioTxDownscaleAmp](#) [10]
Offset 0x027D - USB 3.0 TX Output Downscale Amplitude Adjustment USB 3.0 TX Output Downscale Amplitude Adjustment, HSIO_TX_DWORD8[21:16], Default = 00h.
 - UINT8 [PchUsbLtrOverrideEnable](#)
Offset 0x0287 - Enable xHCI LTR override Enables override of recommended LTR values for xHCI \$EN_DIS.
 - UINT32 [PchUsbLtrHighIdleTimeOverride](#)
Offset 0x0288 - xHCI High Idle Time LTR override Value used for overriding LTR recommendation for xHCI High Idle Time LTR setting.
 - UINT32 [PchUsbLtrMediumIdleTimeOverride](#)
Offset 0x028C - xHCI Medium Idle Time LTR override Value used for overriding LTR recommendation for xHCI Medium Idle Time LTR setting.
 - UINT32 [PchUsbLtrLowIdleTimeOverride](#)
Offset 0x0290 - xHCI Low Idle Time LTR override Value used for overriding LTR recommendation for xHCI Low Idle Time LTR setting.
 - UINT8 [PchLanEnable](#)
Offset 0x0294 - Enable LAN Enable/disable LAN controller.
 - UINT8 [PchHdaAudioLinkHda](#)
Offset 0x0295 - Enable HD Audio Link Enable/disable HD Audio Link.
 - UINT8 [PchHdaAudioLinkDmic0](#)
Offset 0x0296 - Enable HD Audio DMIC0 Link Enable/disable HD Audio DMIC0 link.
 - UINT8 [PchHdaAudioLinkDmic1](#)
Offset 0x0297 - Enable HD Audio DMIC1 Link Enable/disable HD Audio DMIC1 link.
 - UINT8 [PchHdaAudioLinkSsp0](#)
Offset 0x0298 - Enable HD Audio SSP0 Link Enable/disable HD Audio SSP0/I2S link.
 - UINT8 [PchHdaAudioLinkSsp1](#)
Offset 0x0299 - Enable HD Audio SSP1 Link Enable/disable HD Audio SSP1/I2S link.
 - UINT8 [PchHdaAudioLinkSsp2](#)
Offset 0x029A - Enable HD Audio SSP2 Link Enable/disable HD Audio SSP2/I2S link.
 - UINT8 [PchHdaAudioLinkSndw1](#)
Offset 0x029B - Enable HD Audio SoundWire#1 Link Enable/disable HD Audio SNDW1 link.
 - UINT8 [PchHdaAudioLinkSndw2](#)
Offset 0x029C - Enable HD Audio SoundWire#2 Link Enable/disable HD Audio SNDW2 link.
 - UINT8 [PchHdaAudioLinkSndw3](#)
Offset 0x029D - Enable HD Audio SoundWire#3 Link Enable/disable HD Audio SNDW3 link.
 - UINT8 [PchHdaAudioLinkSndw4](#)
Offset 0x029E - Enable HD Audio SoundWire#4 Link Enable/disable HD Audio SNDW4 link.
 - UINT8 [PchHdaSndwBufferRcomp](#)
Offset 0x029F - Soundwire Clock Buffer GPIO RCOMP Setting 0: non-ACT - 50 Ohm driver impedance, 1: ACT - 8 Ohm driver impedance.
 - UINT32 [PcieRpPtmMask](#)
Offset 0x02A0 - PTM for PCIE RP Mask Enable/disable Precision Time Measurement for PCIE Root Ports.
 - UINT32 [PcieRpDpcMask](#)
Offset 0x02A4 - DPC for PCIE RP Mask Enable/disable Downstream Port Containment for PCIE Root Ports.
 - UINT32 [PcieRpDpcExtensionsMask](#)
Offset 0x02A8 - DPC Extensions PCIE RP Mask Enable/disable DPC Extensions for PCIE Root Ports.
 - UINT8 [UsbPdoProgramming](#)
Offset 0x02AC - USB PDO Programming Enable/disable PDO programming for USB in PEI phase.
 - UINT8 [UnusedUpdSpace12](#) [3]
Offset 0x02AD.
 - UINT32 [PmcPowerButtonDebounce](#)
Offset 0x02B0 - Power button debounce configuration Debounce time for PWRBTN in microseconds.
 - UINT8 [PchEspibmeMasterSlaveEnabled](#)
-

- Offset 0x02B4 - PCH eSPI Master and Slave BME enabled PCH eSPI Master and Slave BME enabled \$EN_DIS.*

 - UINT8 [SataRstLegacyOrom](#)

Offset 0x02B5 - PCH SATA use RST Legacy OROM Use PCH SATA RST Legacy OROM when CSM is Enabled \$EN_DIS.
 - UINT8 [UnusedUpdSpace13](#) [2]

Offset 0x02B6.
 - UINT32 [TraceHubMemBase](#)

Offset 0x02B8 - Trace Hub Memory Base If Trace Hub is enabled and trace to memory is desired, BootLoader needs to allocate trace hub memory as reserved and uncacheable, set the base to ensure Trace Hub memory is configured properly.
 - UINT8 [PmcDbgMsgEn](#)

Offset 0x02BC - PMC Debug Message Enable When Enabled, PMC HW will send debug messages to trace hub; When Disabled, PMC HW will never send debug meesages to trace hub.
 - UINT8 [UnusedUpdSpace14](#) [3]

Offset 0x02BD.
 - UINT32 [ChipsetInitBinPtr](#)

Offset 0x02C0 - Pointer of ChipsetInit Binary ChipsetInit Binary Pointer.
 - UINT32 [ChipsetInitBinLen](#)

Offset 0x02C4 - Length of ChipsetInit Binary ChipsetInit Binary Length.
 - UINT8 [ScsUfsEnabled](#)

Offset 0x02C8 - Enable Ufs Controller Enable/disable Ufs 2.0 Controller.
 - UINT8 [CnviMode](#)

Offset 0x02C9 - CNVi Configuration This option allows for automatic detection of Connectivity Solution.
 - UINT8 [CnviBtCore](#)

Offset 0x02CA - CNVi BT Core Enable/Disable CNVi BT Core, Default is ENABLE.
 - UINT8 [CnviBtAudioOffload](#)

Offset 0x02CB - CNVi BT Audio Offload Enable/Disable BT Audio Offload, Default is DISABLE.
 - UINT8 [SdCardPowerEnableActiveHigh](#)

Offset 0x02CC - SdCard power enable polarity Choose SD_PWREN# polarity 0: Active low, 1: Active high.
 - UINT8 [PchUsb2PhySusPgEnable](#)

Offset 0x02CD - PCH USB2 PHY Power Gating enable 1: Will enable USB2 PHY SUS Well Power Gating, 0: Will not enable PG of USB2 PHY Sus Well PG \$EN_DIS.
 - UINT8 [PchUsbOverCurrentEnable](#)

Offset 0x02CE - PCH USB OverCurrent mapping enable 1: Will program USB OC pin mapping in xHCI controller memory, 0: Will clear OC pin mapping allow for NOA usage of OC pins \$EN_DIS.
 - UINT8 [PchEspilgmrEnable](#)

Offset 0x02CF - Espi Lgmr Memory Range decode This option enables or disables espi lgmr \$EN_DIS.
 - UINT8 [PchHotEnable](#)

Offset 0x02D0 - PCHHOT# pin Enable PCHHOT# pin assertion when temperature is higher than PchHotLevel.
 - UINT8 [SataLedEnable](#)

Offset 0x02D1 - SATA LED SATA LED indicating SATA controller activity.
 - UINT8 [PchPmVrAlert](#)

Offset 0x02D2 - VRAAlert# Pin When VRAAlert# feature pin is enabled and its state is '0', the PMC requests throttling to a T3 Tstate to the PCH throttling unit.
 - UINT8 [PchPmSlpS0VmRuntimeControl](#)

Offset 0x02D3 - SLP_S0 VM Dynamic Control SLP_S0 Voltage Margining Runtime Control Policy.
 - UINT8 [PchPmSlpS0Vm070VSupport](#)

Offset 0x02D4 - SLP_S0 VM 0.70V Support SLP_S0 Voltage Margining 0.70V Support Policy.
 - UINT8 [PchPmSlpS0Vm075VSupport](#)

Offset 0x02D5 - SLP_S0 VM 0.75V Support SLP_S0 Voltage Margining 0.75V Support Policy.
 - UINT8 [PcieRpSlotImplemented](#) [24]

Offset 0x02D6 - PCH PCIe root port connection type 0: built-in device, 1:slot.

- UINT8 [PcieClkSrcUsage](#) [16]
Offset 0x02EE - Usage type for ClkSrc 0-23: PCH rootport, 0x40-0x43: PEG port, 0x70:LAN, 0x80: unspecified but in use (free running), 0xFF: not used.
 - UINT8 [PcieClkSrcClkReq](#) [16]
Offset 0x02FE - ClkReq-to-ClkSrc mapping Number of ClkReq signal assigned to ClkSrc.
 - UINT8 [PcieRpAcnsEnabled](#) [24]
Offset 0x030E - PCIE RP Access Control Services Extended Capability Enable/Disable PCIE RP Access Control Services Extended Capability.
 - UINT8 [PcieRpEnableCpm](#) [24]
Offset 0x0326 - PCIE RP Clock Power Management Enable/Disable PCIE RP Clock Power Management, even if disabled, CLKREQ# signal can still be controlled by L1 PM substates mechanism.
 - UINT16 [PcieRpDetectTimeoutMs](#) [24]
Offset 0x033E - PCIE RP Detect Timeout Ms The number of milliseconds within 0~65535 in reference code will wait for link to exit Detect state for enabled ports before assuming there is no device and potentially disabling the port.
 - UINT8 [PmcModPhySusPgEnable](#)
Offset 0x036E - ModPHY SUS Power Domain Dynamic Gating Enable/Disable ModPHY SUS Power Domain Dynamic Gating.
 - UINT8 [SlpS0WithGbeSupport](#)
Offset 0x036F - SlpS0WithGbeSupport Enable/Disable SLP_S0 with GBE Support.
 - UINT8 [PchPwrOptEnable](#)
Offset 0x0370 - Enable Power Optimizer Enable DMI Power Optimizer on PCH side.
 - UINT8 [PchWriteProtectionEnable](#) [5]
Offset 0x0371 - PCH Flash Protection Ranges Write Enable Write or erase is blocked by hardware.
 - UINT8 [PchReadProtectionEnable](#) [5]
Offset 0x0376 - PCH Flash Protection Ranges Read Enable Read is blocked by hardware.
 - UINT8 [UnusedUpdSpace15](#) [1]
Offset 0x037B.
 - UINT16 [PchProtectedRangeLimit](#) [5]
Offset 0x037C - PCH Protect Range Limit Left shifted address by 12 bits with address bits 11:0 are assumed to be FFFh for limit comparison.
 - UINT16 [PchProtectedRangeBase](#) [5]
Offset 0x0386 - PCH Protect Range Base Left shifted address by 12 bits with address bits 11:0 are assumed to be 0.
 - UINT8 [PchHdaPme](#)
Offset 0x0390 - Enable Pme Enable Azalia wake-on-ring.
 - UINT8 [PchHdaVcType](#)
Offset 0x0391 - VC Type Virtual Channel Type Select: 0: VC0, 1: VC1.
 - UINT8 [PchHdaLinkFrequency](#)
Offset 0x0392 - HD Audio Link Frequency HDA Link Freq (PCH_HDAUDIO_LINK_FREQUENCY enum): 0: 6MHz, 1: 12MHz, 2: 24MHz.
 - UINT8 [PchHdaIDispLinkFrequency](#)
Offset 0x0393 - iDisp-Link Frequency iDisp-Link Freq (PCH_HDAUDIO_LINK_FREQUENCY enum): 4: 96MHz, 3: 48MHz.
 - UINT8 [PchHdaIDispLinkTmode](#)
Offset 0x0394 - iDisp-Link T-mode iDisp-Link T-Mode (PCH_HDAUDIO_IDISP_TMODE enum): 0: 2T, 1: 1T.
 - UINT8 [PchHdaDspUaaCompliance](#)
Offset 0x0395 - Universal Audio Architecture compliance for DSP enabled system 0: Not-UAA Compliant (Intel SST driver supported only), 1: UAA Compliant (HDA Inbox driver or SST driver supported).
 - UINT8 [PchHdaIDispCodecDisconnect](#)
Offset 0x0396 - iDisplay Audio Codec disconnection 0: Not disconnected, enumerable, 1: Disconnected SDI, not enumerable.
 - UINT8 [PchUsbHsioFilterSel](#) [10]
Offset 0x0397 - USB LFPS Filter selection For each byte bits 2:0 are for p, bits 4:6 are for n.
 - UINT8 [PchIoApicEntry24_119](#)
-

- Offset 0x03A1 - Enable PCH Io Apic Entry 24-119 0: Disable; 1: Enable.*

 - UINT8 [PchIoApicId](#)
 - Offset 0x03A2 - PCH Io Apic ID This member determines IOAPIC ID.*

 - UINT8 [PchIshSpiGpioAssign](#)
 - Offset 0x03A3 - Enable PCH ISH SPI GPIO pins assigned 0: Disable; 1: Enable.*

 - UINT8 [PchIshUart0GpioAssign](#)
 - Offset 0x03A4 - Enable PCH ISH UART0 GPIO pins assigned 0: Disable; 1: Enable.*

 - UINT8 [PchIshUart1GpioAssign](#)
 - Offset 0x03A5 - Enable PCH ISH UART1 GPIO pins assigned 0: Disable; 1: Enable.*

 - UINT8 [PchIshI2c0GpioAssign](#)
 - Offset 0x03A6 - Enable PCH ISH I2C0 GPIO pins assigned 0: Disable; 1: Enable.*

 - UINT8 [PchIshI2c1GpioAssign](#)
 - Offset 0x03A7 - Enable PCH ISH I2C1 GPIO pins assigned 0: Disable; 1: Enable.*

 - UINT8 [PchIshI2c2GpioAssign](#)
 - Offset 0x03A8 - Enable PCH ISH I2C2 GPIO pins assigned 0: Disable; 1: Enable.*

 - UINT8 [PchIshGp0GpioAssign](#)
 - Offset 0x03A9 - Enable PCH ISH GP_0 GPIO pin assigned 0: Disable; 1: Enable.*

 - UINT8 [PchIshGp1GpioAssign](#)
 - Offset 0x03AA - Enable PCH ISH GP_1 GPIO pin assigned 0: Disable; 1: Enable.*

 - UINT8 [PchIshGp2GpioAssign](#)
 - Offset 0x03AB - Enable PCH ISH GP_2 GPIO pin assigned 0: Disable; 1: Enable.*

 - UINT8 [PchIshGp3GpioAssign](#)
 - Offset 0x03AC - Enable PCH ISH GP_3 GPIO pin assigned 0: Disable; 1: Enable.*

 - UINT8 [PchIshGp4GpioAssign](#)
 - Offset 0x03AD - Enable PCH ISH GP_4 GPIO pin assigned 0: Disable; 1: Enable.*

 - UINT8 [PchIshGp5GpioAssign](#)
 - Offset 0x03AE - Enable PCH ISH GP_5 GPIO pin assigned 0: Disable; 1: Enable.*

 - UINT8 [PchIshGp6GpioAssign](#)
 - Offset 0x03AF - Enable PCH ISH GP_6 GPIO pin assigned 0: Disable; 1: Enable.*

 - UINT8 [PchIshGp7GpioAssign](#)
 - Offset 0x03B0 - Enable PCH ISH GP_7 GPIO pin assigned 0: Disable; 1: Enable.*

 - UINT8 [PchIshPdtUnlock](#)
 - Offset 0x03B1 - PCH ISH PDT Unlock Msg 0: False; 1: True.*

 - UINT8 [PchLanLtrEnable](#)
 - Offset 0x03B2 - Enable PCH Lan LTR capability of PCH internal LAN 0: Disable; 1: Enable.*

 - UINT8 [PchLockDownBiosLock](#)
 - Offset 0x03B3 - Enable LOCKDOWN BIOS LOCK Enable the BIOS Lock feature and set EISS bit (D31:F5:RegD←Ch[5]) for the BIOS region protection.*

 - UINT8 [PchCrid](#)
 - Offset 0x03B4 - PCH Compatibility Revision ID This member describes whether or not the CRID feature of PCH should be enabled.*

 - UINT8 [PchLockDownRtcMemoryLock](#)
 - Offset 0x03B5 - RTC CMOS MEMORY LOCK Enable RTC lower and upper 128 byte Lock bits to lock Bytes 38h-3Fh in the upper and and lower 128-byte bank of RTC RAM.*

 - UINT8 [PcieRpHotPlug](#) [24]
 - Offset 0x03B6 - Enable PCIE RP HotPlug Indicate whether the root port is hot plug available.*

 - UINT8 [PcieRpPmSci](#) [24]
 - Offset 0x03CE - Enable PCIE RP Pm Sci Indicate whether the root port power manager SCI is enabled.*

 - UINT8 [PcieRpExtSync](#) [24]
 - Offset 0x03E6 - Enable PCIE RP Ext Sync Indicate whether the extended synch is enabled.*

 - UINT8 [PcieRpTransmitterHalfSwing](#) [24]
-

- Offset 0x03FE - Enable PCIE RP Transmitter Half Swing Indicate whether the Transmitter Half Swing is enabled.*

 - UINT8 [PcieRpClkReqDetect](#) [24]

Offset 0x0416 - Enable PCIE RP Clk Req Detect Probe CLKREQ# signal before enabling CLKREQ# based power management.
- UINT8 [PcieRpAdvancedErrorReporting](#) [24]

Offset 0x042E - PCIE RP Advanced Error Report Indicate whether the Advanced Error Reporting is enabled.
- UINT8 [PcieRpUnsupportedRequestReport](#) [24]

Offset 0x0446 - PCIE RP Unsupported Request Report Indicate whether the Unsupported Request Report is enabled.
- UINT8 [PcieRpFatalErrorReport](#) [24]

Offset 0x045E - PCIE RP Fatal Error Report Indicate whether the Fatal Error Report is enabled.
- UINT8 [PcieRpNoFatalErrorReport](#) [24]

Offset 0x0476 - PCIE RP No Fatal Error Report Indicate whether the No Fatal Error Report is enabled.
- UINT8 [PcieRpCorrectableErrorReport](#) [24]

Offset 0x048E - PCIE RP Correctable Error Report Indicate whether the Correctable Error Report is enabled.
- UINT8 [PcieRpSystemErrorOnFatalError](#) [24]

Offset 0x04A6 - PCIE RP System Error On Fatal Error Indicate whether the System Error on Fatal Error is enabled.
- UINT8 [PcieRpSystemErrorOnNonFatalError](#) [24]

Offset 0x04BE - PCIE RP System Error On Non Fatal Error Indicate whether the System Error on Non Fatal Error is enabled.
- UINT8 [PcieRpSystemErrorOnCorrectableError](#) [24]

Offset 0x04D6 - PCIE RP System Error On Correctable Error Indicate whether the System Error on Correctable Error is enabled.
- UINT8 [PcieRpMaxPayload](#) [24]

Offset 0x04EE - PCIE RP Max Payload Max Payload Size supported, Default 128B, see enum PCH_PCIE_MAX_PAYLOAD.
- UINT8 [PchUsbHsioRxTuningParameters](#) [10]

Offset 0x0506 - PCH USB3 RX HSIO Tuning parameters Bits 7:3 are for Signed Magnatude number added to the CTLE code, Bits 2:0 are for controlling the input offset.
- UINT8 [PchUsbHsioRxTuningEnable](#) [10]

Offset 0x0510 - PCH USB3 HSIO Rx Tuning Enable Mask for enabling tuning of HSIO Rx signals of USB3 ports.
- UINT8 [PcieRpPcieSpeed](#) [24]

Offset 0x051A - PCIE RP Pcie Speed Determines each PCIE Port speed capability.
- UINT8 [PcieRpGen3EqPh3Method](#) [24]

Offset 0x0532 - PCIE RP Gen3 Equalization Phase Method PCIe Gen3 Eq Ph3 Method (see PCH_PCIE_EQ_METHOD).
- UINT8 [PcieRpPhysicalSlotNumber](#) [24]

Offset 0x054A - PCIE RP Physical Slot Number Indicates the slot number for the root port.
- UINT8 [PcieRpCompletionTimeout](#) [24]

Offset 0x0562 - PCIE RP Completion Timeout The root port completion timeout(see: PCH_PCIE_COMPLETION_TIMEOUT).
- UINT8 [PcieRpAspm](#) [24]

Offset 0x057A - PCIE RP Aspm The ASPM configuration of the root port (see: PCH_PCIE_ASPM_CONTROL).
- UINT8 [PcieRpL1Substates](#) [24]

Offset 0x0592 - PCIE RP L1 Substates The L1 Substates configuration of the root port (see: PCH_PCIE_L1SUBSTATES_CONTROL).
- UINT8 [PcieRpLtrEnable](#) [24]

Offset 0x05AA - PCIE RP Ltr Enable Latency Tolerance Reporting Mechanism.
- UINT8 [PcieRpLtrConfigLock](#) [24]

Offset 0x05C2 - PCIE RP Ltr Config Lock 0: Disable; 1: Enable.
- UINT8 [PcieEqPh3LaneParamCm](#) [24]

Offset 0x05DA - PCIE Eq Ph3 Lane Param Cm PCH_PCIE_EQ_LANE_PARAM.
- UINT8 [PcieEqPh3LaneParamCp](#) [24]

- Offset 0x05F2 - PCIE Eq Ph3 Lane Param Cp PCH_PCIE_EQ_LANE_PARAM.*

 - UINT8 [PcieSwEqCoeffListCm](#) [5]
 - Offset 0x060A - PCIE Sw Eq CoeffList Cm PCH_PCIE_EQ_PARAM.*
 - UINT8 [PcieSwEqCoeffListCp](#) [5]
 - Offset 0x060F - PCIE Sw Eq CoeffList Cp PCH_PCIE_EQ_PARAM.*
 - UINT8 [PcieDisableRootPortClockGating](#)
 - Offset 0x0614 - PCIE Disable RootPort Clock Gating Describes whether the PCI Express Clock Gating for each root port is enabled by platform modules.*
 - UINT8 [PcieEnablePeerMemoryWrite](#)
 - Offset 0x0615 - PCIE Enable Peer Memory Write This member describes whether Peer Memory Writes are enabled on the platform.*
 - UINT8 [PcieComplianceTestMode](#)
 - Offset 0x0616 - PCIE Compliance Test Mode Compliance Test Mode shall be enabled when using Compliance Load Board.*
 - UINT8 [PcieRpFunctionSwap](#)
 - Offset 0x0617 - PCIE Rp Function Swap Allows BIOS to use root port function number swapping when root port of function 0 is disabled.*
 - UINT8 [TetonGlacierCR](#)
 - Offset 0x0618 - Teton Glacier Cycle Router Specify to which cycle router Teton Glacier is connected, it is valid only when Teton Glacier support is enabled.*
 - UINT8 [PchPmPmeB0S5Dis](#)
 - Offset 0x0619 - PCH Pm PME_B0_S5_DIS When cleared (default), wake events from PME_B0_STS are allowed in S5 if PME_B0_EN = 1.*
 - UINT8 [PcieRplmrEnabled](#)
 - Offset 0x061A - PCIE IMR Enables Isolated Memory Region for PCIe.*
 - UINT8 [PcieRplmrSelection](#)
 - Offset 0x061B - PCIE IMR port number Selects PCIe root port number for IMR feature.*
 - UINT8 [TetonGlacierMode](#)
 - Offset 0x061C - Teton Glacier Detection and Configuration Mode Enables support for Teton Glacier hybrid storage device.*
 - UINT8 [PchPmWolEnableOverride](#)
 - Offset 0x061D - PCH Pm Wol Enable Override Corresponds to the WOL Enable Override bit in the General PM Configuration B (GEN_PMCON_B) register.*
 - UINT8 [PchPmPcieWakeFromDeepSx](#)
 - Offset 0x061E - PCH Pm Pcie Wake From DeepSx Determine if enable PCIe to wake from deep Sx.*
 - UINT8 [PchPmWoWlanEnable](#)
 - Offset 0x061F - PCH Pm WoW lan Enable Determine if WLAN wake from Sx, corresponds to the HOST_WLAN_PP_EN bit in the PWRM_CFG3 register.*
 - UINT8 [PchPmWoWlanDeepSxEnable](#)
 - Offset 0x0620 - PCH Pm WoW lan DeepSx Enable Determine if WLAN wake from DeepSx, corresponds to the DSX_WLAN_PP_EN bit in the PWRM_CFG3 register.*
 - UINT8 [PchPmLanWakeFromDeepSx](#)
 - Offset 0x0621 - PCH Pm Lan Wake From DeepSx Determine if enable LAN to wake from deep Sx.*
 - UINT8 [PchPmDeepSxPol](#)
 - Offset 0x0622 - PCH Pm Deep Sx Pol Deep Sx Policy.*
 - UINT8 [PchPmSlpS3MinAssert](#)
 - Offset 0x0623 - PCH Pm Slp S3 Min Assert SLP_S3 Minimum Assertion Width Policy.*
 - UINT8 [PchPmSlpS4MinAssert](#)
 - Offset 0x0624 - PCH Pm Slp S4 Min Assert SLP_S4 Minimum Assertion Width Policy.*
 - UINT8 [PchPmSlpSusMinAssert](#)
 - Offset 0x0625 - PCH Pm Slp Sus Min Assert SLP_SUS Minimum Assertion Width Policy.*
 - UINT8 [PchPmSlpAMinAssert](#)
 - Offset 0x0626 - PCH Pm Slp A Min Assert SLP_A Minimum Assertion Width Policy.*

- UINT8 [SlpS0Override](#)
Offset 0x0627 - SLP_S0# Override Select 'Auto', it will be auto-configured according to probe type.
 - UINT8 [SlpS0DisQForDebug](#)
Offset 0x0628 - S0ix Override Settings Select 'Auto', it will be auto-configured according to probe type.
 - UINT8 [PchEnableDbcObs](#)
Offset 0x0629 - USB Overcurrent Override for Dbc This option overrides USB Over Current enablement state that USB OC will be disabled after enabling this option.
 - UINT8 [PchLegacyIoLowLatency](#)
Offset 0x062A - PCH Legacy IO Low Latency Enable Set to enable low latency of legacy IO.
 - UINT8 [PchPmLpcClockRun](#)
Offset 0x062B - PCH Pm Lpc Clock Run This member describes whether or not the LPC ClockRun feature of PCH should be enabled.
 - UINT8 [PchPmSlpStrchSusUp](#)
Offset 0x062C - PCH Pm Slp Strch Sus Up Enable SLP_X Stretching After SUS Well Power Up.
 - UINT8 [PchPmSlpLanLowDc](#)
Offset 0x062D - PCH Pm Slp Lan Low Dc Enable/Disable SLP_LAN# Low on DC Power.
 - UINT8 [PchPmPwrBtnOverridePeriod](#)
Offset 0x062E - PCH Pm Pwr Btn Override Period PCH power button override period.
 - UINT8 [PchPmDisableDsxAcPresentPullDown](#)
Offset 0x062F - PCH Pm Disable Dsx Ac Present PullDown When Disable, PCH will internal pull down AC_PRESENT in deep SX and during G3 exit.
 - UINT8 [PchPmDisableNativePowerButton](#)
Offset 0x0630 - PCH Pm Disable Native Power Button Power button native mode disable.
 - UINT8 [PchPmSlpS0Enable](#)
Offset 0x0631 - PCH Pm Slp S0 Enable Indicates whether SLP_S0# is to be asserted when PCH reaches idle state.
 - UINT8 [PchPmMeWakeSts](#)
Offset 0x0632 - PCH Pm ME_WAKE_STS Clear the ME_WAKE_STS bit in the Power and Reset Status (PRSTS) register.
 - UINT8 [PchPmWolOvrWkSts](#)
Offset 0x0633 - PCH Pm WOL_OVR_WK_STS Clear the WOL_OVR_WK_STS bit in the Power and Reset Status (PRSTS) register.
 - UINT8 [PchPmPwrCycDur](#)
Offset 0x0634 - PCH Pm Reset Power Cycle Duration Could be customized in the unit of second.
 - UINT8 [PchPmPciePllSsc](#)
Offset 0x0635 - PCH Pm Pcie Pll Ssc Specifies the Pcie Pll Spread Spectrum Percentage.
 - UINT8 [SataPwrOptEnable](#)
Offset 0x0636 - PCH Sata Pwr Opt Enable SATA Power Optimizer on PCH side.
 - UINT8 [EsataSpeedLimit](#)
Offset 0x0637 - PCH Sata eSATA Speed Limit When enabled, BIOS will configure the PxSCTL.SPD to 2 to limit the eSATA port speed.
 - UINT8 [SataSpeedLimit](#)
Offset 0x0638 - PCH Sata Speed Limit Indicates the maximum speed the SATA controller can support 0h: Pch→ SataSpeedDefault.
 - UINT8 [SataPortsHotPlug](#) [8]
Offset 0x0639 - Enable SATA Port HotPlug Enable SATA Port HotPlug.
 - UINT8 [SataPortsInterlockSw](#) [8]
Offset 0x0641 - Enable SATA Port Interlock Sw Enable SATA Port Interlock Sw.
 - UINT8 [SataPortsExternal](#) [8]
Offset 0x0649 - Enable SATA Port External Enable SATA Port External.
 - UINT8 [SataPortsSpinUp](#) [8]
Offset 0x0651 - Enable SATA Port SpinUp Enable the COMRESET initialization Sequence to the device.
 - UINT8 [SataPortsSolidStateDrive](#) [8]
-

- Offset 0x0659 - Enable SATA Port Solid State Drive 0: HDD; 1: SSD.*

 - UINT8 [SataPortsEnableDitoConfig](#) [8]
 - Offset 0x0661 - Enable SATA Port Enable Dito Config Enable DEVSLP Idle Timeout settings (DmVal, DitoVal).*
 - UINT8 [SataPortsDmVal](#) [8]
 - Offset 0x0669 - Enable SATA Port DmVal DITO multiplier.*
 - UINT8 [UnusedUpdSpace16](#) [1]
 - Offset 0x0671.*
 - UINT16 [SataPortsDitoVal](#) [8]
 - Offset 0x0672 - Enable SATA Port DmVal DEVSLP Idle Timeout (DITO), Default is 625.*
 - UINT8 [SataPortsZpOdd](#) [8]
 - Offset 0x0682 - Enable SATA Port ZpOdd Support zero power ODD.*
 - UINT8 [SataRstRaidDeviceld](#)
 - Offset 0x068A - PCH Sata Rst Raid Device Id Enable RAID Alternate ID.*
 - UINT8 [SataRstRaid0](#)
 - Offset 0x068B - PCH Sata Rst Raid0 RAID0.*
 - UINT8 [SataRstRaid1](#)
 - Offset 0x068C - PCH Sata Rst Raid1 RAID1.*
 - UINT8 [SataRstRaid10](#)
 - Offset 0x068D - PCH Sata Rst Raid10 RAID10.*
 - UINT8 [SataRstRaid5](#)
 - Offset 0x068E - PCH Sata Rst Raid5 RAID5.*
 - UINT8 [SataRstIrrt](#)
 - Offset 0x068F - PCH Sata Rst Irrt Intel Rapid Recovery Technology.*
 - UINT8 [SataRstOromUiBanner](#)
 - Offset 0x0690 - PCH Sata Rst Orom Ui Banner OROM UI and BANNER.*
 - UINT8 [SataRstOromUiDelay](#)
 - Offset 0x0691 - PCH Sata Rst Orom Ui Delay 00b: 2 secs; 01b: 4 secs; 10b: 6 secs; 11: 8 secs (see: PCH_SATA←_OROM_DELAY).*
 - UINT8 [SataRstHddUnlock](#)
 - Offset 0x0692 - PCH Sata Rst Hdd Unlock Indicates that the HDD password unlock in the OS is enabled.*
 - UINT8 [SataRstLedLocate](#)
 - Offset 0x0693 - PCH Sata Rst Led Locate Indicates that the LED/SGPIO hardware is attached and ping to locate feature is enabled on the OS.*
 - UINT8 [SataRstIrrtOnly](#)
 - Offset 0x0694 - PCH Sata Rst Irrt Only Allow only IRRT drives to span internal and external ports.*
 - UINT8 [SataRstSmartStorage](#)
 - Offset 0x0695 - PCH Sata Rst Smart Storage RST Smart Storage caching Bit.*
 - UINT8 [SataRstPcieEnable](#) [3]
 - Offset 0x0696 - PCH Sata Rst Pcie Storage Remap enable Enable Intel RST for PCIe Storage remapping.*
 - UINT8 [SataRstPcieStoragePort](#) [3]
 - Offset 0x0699 - PCH Sata Rst Pcie Storage Port Intel RST for PCIe Storage remapping - PCIe Port Selection (1-based, 0 = autodetect).*
 - UINT8 [SataRstPcieDeviceResetDelay](#) [3]
 - Offset 0x069C - PCH Sata Rst Pcie Device Reset Delay PCIe Storage Device Reset Delay in milliseconds.*
 - UINT8 [PchScsEmmcHs400TrainingRequired](#)
 - Offset 0x069F - Enable eMMC HS400 Training Deprecated.*
 - UINT8 [PchScsEmmcHs400DIIIDataValid](#)
 - Offset 0x06A0 - Set HS400 Tuning Data Valid Deprecated \$EN_DIS.*
 - UINT8 [PchScsEmmcHs400RxStrobeDII1](#)
 - Offset 0x06A1 - Rx Strobe Delay Control Deprecated.*
 - UINT8 [PchScsEmmcHs400TxDataDII](#)
-

- Offset 0x06A2 - Tx Data Delay Control Deprecated.*

 - UINT8 [PchScsEmmcHs400DriverStrength](#)
 - Offset 0x06A3 - I/O Driver Strength Deprecated 0:33 Ohm, 1:40 Ohm, 2:50 Ohm.*
 - UINT8 [PchSirqEnable](#)
 - Offset 0x06A4 - Enable Serial IRQ Determines if enable Serial IRQ.*
 - UINT8 [PchSirqMode](#)
 - Offset 0x06A5 - Serial IRQ Mode Select Serial IRQ Mode Select, 0: quiet mode, 1: continuous mode.*
 - UINT8 [PchStartFramePulse](#)
 - Offset 0x06A6 - Start Frame Pulse Width Start Frame Pulse Width, 0: PchSfpw4Clk, 1: PchSfpw6Clk, 2: PchSfpw8Clk.*
 - UINT8 [PchEspilockLinkConfiguration](#)
 - Offset 0x06A7 - PCH eSPI Link Configuration Lock (SBLCL) Enable/Disable lock of communication through SET_CONFIG/GET_CONFIG to eSPI slaves addresses from range 0x0 - 0x7FF \$EN_DIS.*
 - UINT8 [PchTsmicLock](#)
 - Offset 0x06A8 - Thermal Device SMI Enable This locks down SMI Enable on Alert Thermal Sensor Trip.*
 - UINT8 [UnusedUpdSpace17](#)
 - Offset 0x06A9.*
 - UINT16 [PchT0Level](#)
 - Offset 0x06AA - Thermal Throttling Customized T0Level Value Customized T0Level value.*
 - UINT16 [PchT1Level](#)
 - Offset 0x06AC - Thermal Throttling Customized T1Level Value Customized T1Level value.*
 - UINT16 [PchT2Level](#)
 - Offset 0x06AE - Thermal Throttling Customized T2Level Value Customized T2Level value.*
 - UINT8 [PchTTEnable](#)
 - Offset 0x06B0 - Enable The Thermal Throttle Enable the thermal throttle function.*
 - UINT8 [PchTTState13Enable](#)
 - Offset 0x06B1 - PMSync State 13 When set to 1 and the programmed GPIO pin is a 1, then PMSync state 13 will force at least T2 state.*
 - UINT8 [PchTTLock](#)
 - Offset 0x06B2 - Thermal Throttle Lock Thermal Throttle Lock.*
 - UINT8 [TTSuggestedSetting](#)
 - Offset 0x06B3 - Thermal Throttling Suggested Setting Thermal Throttling Suggested Setting.*
 - UINT8 [TTCrossThrottling](#)
 - Offset 0x06B4 - Enable PCH Cross Throttling Enable/Disable PCH Cross Throttling \$EN_DIS.*
 - UINT8 [PchDmiTsawEn](#)
 - Offset 0x06B5 - DMI Thermal Sensor Autonomous Width Enable DMI Thermal Sensor Autonomous Width Enable.*
 - UINT8 [DmiSuggestedSetting](#)
 - Offset 0x06B6 - DMI Thermal Sensor Suggested Setting DMT thermal sensor suggested representative values.*
 - UINT8 [DmiTS0TW](#)
 - Offset 0x06B7 - Thermal Sensor 0 Target Width DMT thermal sensor suggested representative values.*
 - UINT8 [DmiTS1TW](#)
 - Offset 0x06B8 - Thermal Sensor 1 Target Width Thermal Sensor 1 Target Width.*
 - UINT8 [DmiTS2TW](#)
 - Offset 0x06B9 - Thermal Sensor 2 Target Width Thermal Sensor 2 Target Width.*
 - UINT8 [DmiTS3TW](#)
 - Offset 0x06BA - Thermal Sensor 3 Target Width Thermal Sensor 3 Target Width.*
 - UINT8 [SataP0T1M](#)
 - Offset 0x06BB - Port 0 T1 Multiplier Port 0 T1 Multiplier.*
 - UINT8 [SataP0T2M](#)
 - Offset 0x06BC - Port 0 T2 Multiplier Port 0 T2 Multiplier.*
 - UINT8 [SataP0T3M](#)
-

- Offset 0x06BD - Port 0 T3 Multiplier Port 0 T3 Multiplier.*

 - UINT8 [SataP0TDisp](#)
 - Offset 0x06BE - Port 0 Tdispatch Port 0 Tdispatch.*

 - UINT8 [SataP1T1M](#)
 - Offset 0x06BF - Port 1 T1 Multiplier Port 1 T1 Multiplier.*

 - UINT8 [SataP1T2M](#)
 - Offset 0x06C0 - Port 1 T2 Multiplier Port 1 T2 Multiplier.*

 - UINT8 [SataP1T3M](#)
 - Offset 0x06C1 - Port 1 T3 Multiplier Port 1 T3 Multiplier.*

 - UINT8 [SataP1TDisp](#)
 - Offset 0x06C2 - Port 1 Tdispatch Port 1 Tdispatch.*

 - UINT8 [SataP0Tinact](#)
 - Offset 0x06C3 - Port 0 Tinactive Port 0 Tinactive.*

 - UINT8 [SataP0TDispFinit](#)
 - Offset 0x06C4 - Port 0 Alternate Fast Init Tdispatch Port 0 Alternate Fast Init Tdispatch.*

 - UINT8 [SataP1Tinact](#)
 - Offset 0x06C5 - Port 1 Tinactive Port 1 Tinactive.*

 - UINT8 [SataP1TDispFinit](#)
 - Offset 0x06C6 - Port 1 Alternate Fast Init Tdispatch Port 1 Alternate Fast Init Tdispatch.*

 - UINT8 [SataThermalSuggestedSetting](#)
 - Offset 0x06C7 - SATA Thermal Throttling Suggested Setting SATA Thermal Throttling Suggested Setting.*

 - UINT8 [PchMemoryThrottlingEnable](#)
 - Offset 0x06C8 - Enable Memory Thermal Throttling Enable Memory Thermal Throttling.*

 - UINT8 [PchMemoryPmsyncEnable](#) [2]
 - Offset 0x06C9 - Memory Thermal Throttling Enable Memory Thermal Throttling.*

 - UINT8 [PchMemoryC0TransmitEnable](#) [2]
 - Offset 0x06CB - Enable Memory Thermal Throttling Enable Memory Thermal Throttling.*

 - UINT8 [PchMemoryPinSelection](#) [2]
 - Offset 0x06CD - Enable Memory Thermal Throttling Enable Memory Thermal Throttling.*

 - UINT8 [UnusedUpdSpace18](#)
 - Offset 0x06CF.*

 - UINT16 [PchTemperatureHotLevel](#)
 - Offset 0x06D0 - Thermal Device Temperature Decides the temperature.*

 - UINT8 [PchEnableComplianceMode](#)
 - Offset 0x06D2 - Enable xHCI Compliance Mode Compliance Mode can be enabled for testing through this option but this is disabled by default.*

 - UINT8 [Usb2OverCurrentPin](#) [16]
 - Offset 0x06D3 - USB2 Port Over Current Pin Describe the specific over current pin number of USB 2.0 Port N.*

 - UINT8 [Usb3OverCurrentPin](#) [10]
 - Offset 0x06E3 - USB3 Port Over Current Pin Describe the specific over current pin number of USB 3.0 Port N.*

 - UINT8 [Enable8254ClockGating](#)
 - Offset 0x06ED - Enable 8254 Static Clock Gating Set 8254CGE=1 is required for SLP_S0 support.*

 - UINT8 [SataRstOptaneMemory](#)
 - Offset 0x06EE - PCH SATA Rst Optane Memory Optane Memory \$EN_DIS.*

 - UINT8 [SataRstCpuAttachedStorage](#)
 - Offset 0x06EF - PCH SATA Rst CPU Attached Storage CPU Attached Storage \$EN_DIS.*

 - UINT8 [Enable8254ClockGatingOnS3](#)
 - Offset 0x06F0 - Enable 8254 Static Clock Gating On S3 This is only applicable when Enable8254ClockGating is disabled.*

 - UINT8 [UnusedUpdSpace19](#) [3]
 - Offset 0x06F1.*
-

- UUINT32 [PchPcieDeviceOverrideTablePtr](#)
Offset 0x06F4 - Pch PCIE device override table pointer The PCIe device table is being used to override PCIe device ASPM settings.
 - UUINT8 [EnableTcoTimer](#)
Offset 0x06F8 - Enable TCO timer.
 - UUINT8 [PsOnEnable](#)
Offset 0x06F9 - Enable PS_ON.
 - UUINT8 [PmcCpuC10GatePinEnable](#)
Offset 0x06FA - Pmc Cpu C10 Gate Pin Enable Enable/Disable platform support for CPU_C10_GATE# pin to control gating of CPU VccIO and VccSTG rails instead of SLP_S0# pin.
 - UUINT8 [PchDmiAspmCtrl](#)
Offset 0x06FB - Pch Dmi Aspm Ctrl ASPM configuration on the PCH side of the DMI/OPI Link.
 - UUINT8 [Usb3HsioTxRate3UniqTranEnable](#) [10]
Offset 0x06FC - Enable the write to USB 3.0 TX Output Unique Transition Bit Mode for rate 3 Enable the write to USB 3.0 TX Output Unique Transition Bit Mode for rate 3, Each value in array can be between 0-1.
 - UUINT8 [Usb3HsioTxRate3UniqTran](#) [10]
*Offset 0x0706 - USB 3.0 TX Output Unique Transition Bit Scale for rate 3 USB 3.0 TX Output Unique Transition Bit Scale for rate 3, HSIO_TX_DWORD9[6:0], **Default = 4Ch.***
 - UUINT8 [Usb3HsioTxRate2UniqTranEnable](#) [10]
Offset 0x0710 - Enable the write to USB 3.0 TX Output Unique Transition Bit Mode for rate 2 Enable the write to USB 3.0 TX Output Unique Transition Bit Mode for rate 2, Each value in array can be between 0-1.
 - UUINT8 [Usb3HsioTxRate2UniqTran](#) [10]
*Offset 0x071A - USB 3.0 TX Output Unique Transition Bit Scale for rate 2 USB 3.0 TX Output Unique Transition Bit Scale for rate 2, HSIO_TX_DWORD9[14:8], **Default = 4Ch.***
 - UUINT8 [Usb3HsioTxRate1UniqTranEnable](#) [10]
Offset 0x0724 - Enable the write to USB 3.0 TX Output Unique Transition Bit Mode for rate 1 Enable the write to USB 3.0 TX Output Unique Transition Bit Mode for rate 1, Each value in array can be between 0-1.
 - UUINT8 [Usb3HsioTxRate1UniqTran](#) [10]
*Offset 0x072E - USB 3.0 TX Output Unique Transition Bit Scale for rate 1 USB 3.0 TX Output Unique Transition Bit Scale for rate 1, HSIO_TX_DWORD9[22:16], **Default = 4Ch.***
 - UUINT8 [Usb3HsioTxRate0UniqTranEnable](#) [10]
Offset 0x0738 - Enable the write to USB 3.0 TX Output Unique Transition Bit Mode for rate 0 Enable the write to USB 3.0 TX Output Unique Transition Bit Mode for rate 0, Each value in array can be between 0-1.
 - UUINT8 [Usb3HsioTxRate0UniqTran](#) [10]
*Offset 0x0742 - USB 3.0 TX Output Unique Transition Bit Scale for rate 0 USB 3.0 TX Output Unique Transition Bit Scale for rate 0, HSIO_TX_DWORD9[30:24], **Default = 4Ch.***
 - UUINT8 [PcieNumOfCoefficients](#)
Offset 0x074C - Number of Coefficients to be used The number of coefficients to be used for equalization, default value is 3.
 - UUINT8 [GpioPmRcompCommunityLocalClockGating](#)
Offset 0x074D - GPIO RCOMP Community Clock Gating 0 = Disable dynamic RCOMP clock local clock gating, 1 = Enable dynamic RCOMP clock local clock gating, default value is 1 \$EN_DIS.
 - UUINT8 [ScsSdCardWpPinEnabled](#)
Offset 0x074E - Enable SD Card Write Protect Pin Enable/disable SD Card Write Protect Pin.
 - UUINT8 [SataPortsDevSlpResetConfig](#) [8]
Offset 0x074F - Set SATA DEVSLP GPIO Reset Config Set SATA DEVSLP GPIO Reset Config per port.
 - UUINT8 [SpiFlashCfgLockDown](#)
Offset 0x0757 - Flash Configuration Lock Down Enable/disable flash lock down.
 - UUINT8 [PchHdaSndwLinkIoControlEnabled](#) [4]
Offset 0x0758 - Enable HD Audio Sndw Link IO Control 0:Disabled, 1:Enabled.
 - UUINT8 [ReservedPchPostMem](#) [3]
Offset 0x075C - ReservedPchPostMem Reserved for Pch Post-Mem \$EN_DIS.
 - UUINT8 [UnusedUpdSpace20](#) [1]
-

- Offset 0x075F.
- UINT64 [BgpdtHash](#) [4]
 - Offset 0x0760 - BgpdtHash[4] BgpdtHash values.
- UINT32 [BiosGuardAttr](#)
 - Offset 0x0780 - BiosGuardAttr BiosGuardAttr default values.
- UINT8 [UnusedUpdSpace21](#) [4]
 - Offset 0x0784.
- UINT64 [BiosGuardModulePtr](#)
 - Offset 0x0788 - BiosGuardModulePtr BiosGuardModulePtr default values.
- UINT64 [SendEcCmd](#)
 - Offset 0x0790 - SendEcCmd SendEcCmd function pointer.
- UINT8 [EcCmdProvisionEav](#)
 - Offset 0x0798 - EcCmdProvisionEav Ephemeral Authorization Value default values.
- UINT8 [EcCmdLock](#)
 - Offset 0x0799 - EcCmdLock EcCmdLock default values.
- UINT8 [UnusedUpdSpace22](#) [6]
 - Offset 0x079A.
- UINT64 [SgxEpoch0](#)
 - Offset 0x07A0 - SgxEpoch0 SgxEpoch0 default values.
- UINT64 [SgxEpoch1](#)
 - Offset 0x07A8 - SgxEpoch1 SgxEpoch1 default values.
- UINT8 [SgxSinitNvsData](#)
 - Offset 0x07B0 - SgxSinitNvsData SgxSinitNvsData default values.
- UINT8 [SiCsmFlag](#)
 - Offset 0x07B1 - Si Config CSM Flag.
- UINT8 [UnusedUpdSpace23](#) [2]
 - Offset 0x07B2.
- UINT32 [SiSsidTablePtr](#)
 - Offset 0x07B4 - SVID SDID table Poniter.
- UINT16 [SiNumberOfSsidTableEntry](#)
 - Offset 0x07B8 - Number of ssid table.
- UINT8 [SataRstInterrupt](#)
 - Offset 0x07BA - SATA RST Interrupt Mode Allows to choose which interrupts will be implemented by SATA controller in RAID mode.
- UINT8 [MeUnconfigOnRtcClear](#)
 - Offset 0x07BB - ME Unconfig on RTC clear 0: Disable ME Unconfig On Rtc Clear.
- UINT8 [UnusedUpdSpace24](#) [3]
 - Offset 0x07BC.
- UINT8 [ReservedFspUpd](#) [1]
 - Offset 0x07BF.

13.36.1 Detailed Description

Fsp S Configuration.

Definition at line 86 of file FspUpd.h.

13.36.2 Member Data Documentation

13.36.2.1 AcLoadline

UINT16 FSP_S_CONFIG::AcLoadline[5]

Offset 0x00FE - AcLoadline PCODE MMIO Mailbox: AcLoadline in 1/100 mOhms (ie.

1250 = 12.50 mOhm); Range is 0-6249. **Intel Recommended Defaults vary by domain and SKU.**

Definition at line 501 of file FspsUpd.h.

13.36.2.2 AcousticNoiseMitigation

UINT8 FSP_S_CONFIG::AcousticNoiseMitigation

Offset 0x00EE - Acoustic Noise Mitigation feature Enable or Disable Acoustic Noise Mitigation feature.

This has to be enabled to program slew rate configuration for all VR domains, Pre Wake, Ramp Up and, Ramp Down times. **0: Disabled**; 1: Enabled \$EN_DIS

Definition at line 457 of file FspsUpd.h.

13.36.2.3 AmtEnabled

UINT8 FSP_S_CONFIG::AmtEnabled

Offset 0x003C - AMT Switch Enable/Disable.

0: Disable, 1: enable, Enable or disable AMT functionality. \$EN_DIS

Definition at line 152 of file FspsUpd.h.

13.36.2.4 AmtKvmEnabled

UINT8 FSP_S_CONFIG::AmtKvmEnabled

Offset 0x0047 - KVM Switch Enable/Disable.

0: Disable, 1: enable, KVM enable/disable state by Mebx. Setting is invalid if AmtEnabled is 0. \$EN_DIS

Definition at line 206 of file FspsUpd.h.

13.36.2.5 AmtSolEnabled

UINT8 FSP_S_CONFIG::AmtSolEnabled

Offset 0x0040 - SOL Switch Enable/Disable.

0: Disable, 1: enable, Serial Over Lan enable/disable state by Mebx. Setting is invalid if AmtEnabled is 0. \$EN_DIS

Definition at line 179 of file FspsUpd.h.

13.36.2.6 CnviBtAudioOffload

UINT8 FSP_S_CONFIG::CnviBtAudioOffload

Offset 0x02CB - CNVi BT Audio Offload Enable/Disable BT Audio Offload, Default is DISABLE.

0: DISABLE, 1: ENABLE \$EN_DIS

Definition at line 1216 of file FspUpd.h.

13.36.2.7 CnviBtCore

UINT8 FSP_S_CONFIG::CnviBtCore

Offset 0x02CA - CNVi BT Core Enable/Disable CNVi BT Core, Default is ENABLE.

0: DISABLE, 1: ENABLE \$EN_DIS

Definition at line 1210 of file FspUpd.h.

13.36.2.8 CnviMode

UINT8 FSP_S_CONFIG::CnviMode

Offset 0x02C9 - CNVi Configuration This option allows for automatic detection of Connectivity Solution.

[Auto Detection] assumes that CNVi will be enabled when available, [Disable] allows for disabling CNVi. 0:Disable, 1:Auto

Definition at line 1204 of file FspUpd.h.

13.36.2.9 CpuMpHob

UINT32 FSP_S_CONFIG::CpuMpHob

Offset 0x0170 - CpuMpHob Pointer for CpuMpHob.

This is optional data buffer for CpuMpPpi usage.

Definition at line 683 of file FspUpd.h.

13.36.2.10 DcLoadline

UINT16 FSP_S_CONFIG::DcLoadline[5]

Offset 0x0108 - DcLoadline PCODE MMIO Mailbox: DcLoadline in 1/100 mOhms (ie.

1250 = 12.50 mOhm); Range is 0-6249. **Intel Recommended Defaults vary by domain and SKU.**

Definition at line 507 of file FspUpd.h.

13.36.2.11 DevIntConfigPtr

UINT32 FSP_S_CONFIG::DevIntConfigPtr

Offset 0x0204 - Address of PCH_DEVICE_INTERRUPT_CONFIG table.

The address of the table of PCH_DEVICE_INTERRUPT_CONFIG.

Definition at line 906 of file FspUpd.h.

13.36.2.12 DmiSuggestedSetting

UINT8 FSP_S_CONFIG::DmiSuggestedSetting

Offset 0x06B6 - DMI Thermal Sensor Suggested Setting DMT thermal sensor suggested representative values.

\$EN_DIS

Definition at line 2169 of file FspUpd.h.

13.36.2.13 DmiTS0TW

UINT8 FSP_S_CONFIG::DmiTS0TW

Offset 0x06B7 - Thermal Sensor 0 Target Width DMT thermal sensor suggested representative values.

0:x1, 1:x2, 2:x4, 3:x8, 4:x16

Definition at line 2175 of file FspUpd.h.

13.36.2.14 DmiTS1TW

UINT8 FSP_S_CONFIG::DmiTS1TW

Offset 0x06B8 - Thermal Sensor 1 Target Width Thermal Sensor 1 Target Width.

0:x1, 1:x2, 2:x4, 3:x8, 4:x16

Definition at line 2181 of file FspUpd.h.

13.36.2.15 DmiTS2TW

UINT8 FSP_S_CONFIG::DmiTS2TW

Offset 0x06B9 - Thermal Sensor 2 Target Width Thermal Sensor 2 Target Width.

0:x1, 1:x2, 2:x4, 3:x8, 4:x16

Definition at line 2187 of file FspUpd.h.

13.36.2.16 DmiTS3TW

UINT8 FSP_S_CONFIG::DmiTS3TW

Offset 0x06BA - Thermal Sensor 3 Target Width Thermal Sensor 3 Target Width.

0:x1, 1:x2, 2:x4, 3:x8, 4:x16

Definition at line 2193 of file FspUpd.h.

13.36.2.17 EcCmdLock

UINT8 FSP_S_CONFIG::EcCmdLock

Offset 0x0799 - EcCmdLock EcCmdLock default values.

Locks Ephemeral Authorization Value sent previously

Definition at line 2508 of file FspUpd.h.

13.36.2.18 EcCmdProvisionEav

UINT8 FSP_S_CONFIG::EcCmdProvisionEav

Offset 0x0798 - EcCmdProvisionEav Ephemeral Authorization Value default values.

Provisions an ephemeral shared secret to the EC

Definition at line 2503 of file FspUpd.h.

13.36.2.19 Enable8254ClockGating

UINT8 FSP_S_CONFIG::Enable8254ClockGating

Offset 0x06ED - Enable 8254 Static Clock Gating Set 8254CGE=1 is required for SLP_S0 support.

However, set 8254CGE=1 in POST time might fail to boot legacy OS using 8254 timer. Make sure it is disabled to support boot legacy OS using 8254 timer. Also enable this while S0ix is enabled. \$EN_DIS

Definition at line 2316 of file FspUpd.h.

13.36.2.20 Enable8254ClockGatingOnS3

UINT8 FSP_S_CONFIG::Enable8254ClockGatingOnS3

Offset 0x06F0 - Enable 8254 Static Clock Gating On S3 This is only applicable when Enable8254ClockGating is disabled.

FSP will do the 8254 CGE programming on S3 resume when Enable8254ClockGatingOnS3 is enabled. This avoids the SMI requirement for the programming. \$EN_DIS

Definition at line 2336 of file FspUpd.h.

13.36.2.21 EnableTcoTimer

UINT8 FSP_S_CONFIG::EnableTcoTimer

Offset 0x06F8 - Enable TCO timer.

When FALSE, it disables PCH ACPI timer, and stops TCO timer. NOTE: This will have huge power impact when it's enabled. If TCO timer is disabled, uCode ACPI timer emulation must be enabled, and WDAT table must not be exposed to the OS. \$EN_DIS

Definition at line 2356 of file FspUpd.h.

13.36.2.22 EsataSpeedLimit

UINT8 FSP_S_CONFIG::EsataSpeedLimit

Offset 0x0637 - PCH Sata eSATA Speed Limit When enabled, BIOS will configure the PxSCTL.SPD to 2 to limit the eSATA port speed.

\$EN_DIS

Definition at line 1907 of file FspUpd.h.

13.36.2.23 FastPkgCRampDisableFivr

UINT8 FSP_S_CONFIG::FastPkgCRampDisableFivr

Offset 0x0150 - Disable Fast Slew Rate for Deep Package C States for VR FIVR domain Disable Fast Slew Rate for Deep Package C States based on Acoustic Noise Mitigation feature enabled.

0: False; 1: True \$EN_DIS

Definition at line 609 of file FspUpd.h.

13.36.2.24 FastPkgCRampDisableGt

UINT8 FSP_S_CONFIG::FastPkgCRampDisableGt

Offset 0x0144 - Disable Fast Slew Rate for Deep Package C States for VR GT domain Disable Fast Slew Rate for Deep Package C States based on Acoustic Noise Mitigation feature enabled.

0: False; 1: True \$EN_DIS

Definition at line 539 of file FspUpd.h.

13.36.2.25 FastPkgCRampDisableIa

UINT8 FSP_S_CONFIG::FastPkgCRampDisableIa

Offset 0x00EF - Disable Fast Slew Rate for Deep Package C States for VR IA domain Disable Fast Slew Rate for Deep Package C States based on Acoustic Noise Mitigation feature enabled.

0: False; 1: True \$EN_DIS

Definition at line 464 of file FspUpd.h.

13.36.2.26 FastPkgCRampDisableSa

UINT8 FSP_S_CONFIG::FastPkgCRampDisableSa

Offset 0x0145 - Disable Fast Slew Rate for Deep Package C States for VR SA domain Disable Fast Slew Rate for Deep Package C States based on Acoustic Noise Mitigation feature enabled.

0: False; 1: True \$EN_DIS

Definition at line 546 of file FspUpd.h.

13.36.2.27 FivrRfiFrequency

UINT16 FSP_S_CONFIG::FivrRfiFrequency

Offset 0x014C - FIVR RFI Frequency PCODE MMIO Mailbox: Set the desired RFI frequency, in increments of 100KHz.

0: Auto. Range varies based on XTAL clock: 0-1918 (Up to 191.8MHz) for 24MHz clock; 0-1535 (Up to 153.5MHz) for 19MHz clock.

Definition at line 590 of file FspsUpd.h.

13.36.2.28 FivrSpreadSpectrum

UINT8 FSP_S_CONFIG::FivrSpreadSpectrum

Offset 0x014F - FIVR RFI Spread Spectrum PCODE MMIO Mailbox: FIVR RFI Spread Spectrum, in 0.1% increments.

0: 0%; Range: 0.0% to 10.0% (0-100).

Definition at line 602 of file FspsUpd.h.

13.36.2.29 ForcMebxSyncUp

UINT8 FSP_S_CONFIG::ForcMebxSyncUp

Offset 0x0048 - MEBX execution Enable/Disable.

0: Disable, 1: enable, Force MEBX execution. \$EN_DIS

Definition at line 212 of file FspsUpd.h.

13.36.2.30 FwProgress

UINT8 FSP_S_CONFIG::FwProgress

Offset 0x003F - PET Progress Enable/Disable.

0: Disable, 1: enable, Enable/Disable PET Events Progress to receive PET Events. Setting is invalid if AmtEnabled is 0. \$EN_DIS

Definition at line 172 of file FspsUpd.h.

13.36.2.31 GpioIrqRoute

UINT8 FSP_S_CONFIG::GpioIrqRoute

Offset 0x0211 - Select GPIO IRQ Route GPIO IRQ Select.

The valid value is 14 or 15.

Definition at line 924 of file FspsUpd.h.

13.36.2.32 Heci1Disabled

UINT8 FSP_S_CONFIG::Heci1Disabled

Offset 0x003B - HECI1 state Determine if HECI1 is hidden prior to boot to OS.

0: Disable; 1: Enable. \$EN_DIS

Definition at line 146 of file FspUpd.h.

13.36.2.33 Heci3Enabled

UINT8 FSP_S_CONFIG::Heci3Enabled

Offset 0x003A - HECI3 state The HECI3 state from Mbp for reference in S3 path or when MbpHob is not installed.

0: disable, 1: enable \$EN_DIS

Definition at line 140 of file FspUpd.h.

13.36.2.34 IccMax

UINT16 FSP_S_CONFIG::IccMax[5]

Offset 0x0130 - Icc Max limit PCODE MMIO Mailbox: VR Icc Max limit.

0-255A in 1/4 A units. 400 = 100A

Definition at line 527 of file FspUpd.h.

13.36.2.35 ImonOffset1

UINT16 FSP_S_CONFIG::ImonOffset1[5]

Offset 0x0176 - Imon offset 1 correction PCODE MMIO Mailbox: Imon offset correction.

Value is a 2's complement signed integer. Units 1/1000, Range 0-63999. For an offset = 12.580, use 12580. **0: Auto**

Definition at line 700 of file FspUpd.h.

13.36.2.36 ImonSlope

UINT8 FSP_S_CONFIG::ImonSlope[5]

Offset 0x00CE - Imon slope correction PCODE MMIO Mailbox: Imon slope correction.

Specified in 1/100 increment values. Range is 0-200. 125 = 1.25. **0: Auto**. For all VR Indexes

Definition at line 408 of file FspUpd.h.

13.36.2.37 ImonSlope1

UINT16 FSP_S_CONFIG::ImonSlope1[5]

Offset 0x015A - Imon slope1 correction PCODE MMIO Mailbox: Imon slope correction.
Specified in 1/100 increment values. Range is 0-200. 125 = 1.25. **0: Auto.** For all VR Indexes
Definition at line 641 of file FspsUpd.h.

13.36.2.38 IslVrCmd

UINT8 FSP_S_CONFIG::IslVrCmd

Offset 0x0158 - Activates VR mailbox command for Intersil VR C-state issues.

Intersil VR mailbox command. **0 - no mailbox command sent.** 1 - VR mailbox command sent for IA/GT rails only.
2 - VR mailbox command sent for IA/GT/SA rails.

Definition at line 631 of file FspsUpd.h.

13.36.2.39 ManageabilityMode

UINT8 FSP_S_CONFIG::ManageabilityMode

Offset 0x003E - Manageability Mode set by Mebx Enable/Disable.

0: Disable, 1: enable, Enable or disable Manageability Mode. \$EN_DIS

Definition at line 165 of file FspsUpd.h.

13.36.2.40 McivrRfiFrequencyAdjust

UINT8 FSP_S_CONFIG::McivrRfiFrequencyAdjust

Offset 0x014B - McIVR RFI Frequency Adjustment PCODE MMIO Mailbox: Adjust the RFI frequency relative to the nominal frequency in increments of 100KHz.

For subtraction, change McivrRfiFrequencyPrefix. **0: Auto.**

Definition at line 583 of file FspsUpd.h.

13.36.2.41 McivrRfiFrequencyPrefix

UINT8 FSP_S_CONFIG::McivrRfiFrequencyPrefix

Offset 0x014A - McIVR RFI Frequency Prefix PCODE MMIO Mailbox: McIVR RFI Frequency Adjustment Prefix.

0: Plus (+); 1: Minus (-).

Definition at line 577 of file FspsUpd.h.

13.36.2.42 McivrSpreadSpectrum

UINT8 FSP_S_CONFIG::McivrSpreadSpectrum

Offset 0x014E - McIVR RFI Spread Spectrum PCODE MMIO Mailbox: McIVR RFI Spread Spectrum.

0: 0%; 1: +/- 0.5%; 2: +/- 1%; 3: +/- 1.5%; 4: +/- 2%; 5: +/- 3%; 6: +/- 4%; 7: +/- 5%; 8: +/- 6%.

Definition at line 596 of file FspUpd.h.

13.36.2.43 MeUnconfigOnRtcClear

UINT8 FSP_S_CONFIG::MeUnconfigOnRtcClear

Offset 0x07BB - ME Unconfig on RTC clear 0: Disable ME Unconfig On Rtc Clear.

1: Enable ME Unconfig On Rtc Clear. 2: Cmos is clear, status unkonwn. 3: Reserved 0: Disable ME Unconfig On Rtc Clear, 1: Enable ME Unconfig On Rtc Clear, 2: Cmos is clear, 3: Reserved

Definition at line 2561 of file FspUpd.h.

13.36.2.44 NumOfDevIntConfig

UINT8 FSP_S_CONFIG::NumOfDevIntConfig

Offset 0x0208 - Number of DevIntConfig Entry Number of Device Interrupt Configuration Entry.

If this is not zero, the DevIntConfigPtr must not be NULL.

Definition at line 912 of file FspUpd.h.

13.36.2.45 PchCrid

UINT8 FSP_S_CONFIG::PchCrid

Offset 0x03B4 - PCH Compatibility Revision ID This member describes whether or not the CRID feature of PCH should be enabled.

\$EN_DIS

Definition at line 1527 of file FspUpd.h.

13.36.2.46 PchDmiAspmCtrl

UINT8 FSP_S_CONFIG::PchDmiAspmCtrl

Offset 0x06FB - Pch Dmi Aspm Ctrl ASPM configuration on the PCH side of the DMI/OPI Link.

Default is **PchPcieAspmAutoConfig** 0:Disabled, 1:L0s, 2:L1, 3:L0sL1, 4:Auto

Definition at line 2377 of file FspUpd.h.

13.36.2.47 PchDmiTsawEn

UINT8 FSP_S_CONFIG::PchDmiTsawEn

Offset 0x06B5 - DMI Thermal Sensor Autonomous Width Enable DMI Thermal Sensor Autonomous Width Enable.

\$EN_DIS

Definition at line 2163 of file FspUpd.h.

13.36.2.48 PchEnableComplianceMode

UINT8 FSP_S_CONFIG::PchEnableComplianceMode

Offset 0x06D2 - Enable xHCI Compliance Mode Compliance Mode can be enabled for testing through this option but this is disabled by default.

\$EN_DIS

Definition at line 2298 of file FspUpd.h.

13.36.2.49 PchEnableDbcObs

UINT8 FSP_S_CONFIG::PchEnableDbcObs

Offset 0x0629 - USB Overcurrent Override for Dbc This option overrides USB Over Current enablement state that USB OC will be disabled after enabling this option.

Enable when Dbc is used to avoid signaling conflicts. \$EN_DIS

Definition at line 1823 of file FspUpd.h.

13.36.2.50 PchHdaAudioLinkDmic0

UINT8 FSP_S_CONFIG::PchHdaAudioLinkDmic0

Offset 0x0296 - Enable HD Audio DMIC0 Link Enable/disable HD Audio DMIC0 link.

Muxed with SNDW4. \$EN_DIS

Definition at line 1058 of file FspUpd.h.

13.36.2.51 PchHdaAudioLinkDmic1

UINT8 FSP_S_CONFIG::PchHdaAudioLinkDmic1

Offset 0x0297 - Enable HD Audio DMIC1 Link Enable/disable HD Audio DMIC1 link.

Muxed with SNDW3. \$EN_DIS

Definition at line 1064 of file FspUpd.h.

13.36.2.52 PchHdaAudioLinkHda

UINT8 FSP_S_CONFIG::PchHdaAudioLinkHda

Offset 0x0295 - Enable HD Audio Link Enable/disable HD Audio Link.

Muxed with SSP0/SSP1/SNDW1. \$EN_DIS

Definition at line 1052 of file FspUpd.h.

13.36.2.53 PchHdaAudioLinkSndw1

UINT8 FSP_S_CONFIG::PchHdaAudioLinkSndw1

Offset 0x029B - Enable HD Audio SoundWire#1 Link Enable/disable HD Audio SNDW1 link.
Muxed with HDA. \$EN_DIS
Definition at line 1088 of file FspUpd.h.

13.36.2.54 PchHdaAudioLinkSndw2

UINT8 FSP_S_CONFIG::PchHdaAudioLinkSndw2

Offset 0x029C - Enable HD Audio SoundWire#2 Link Enable/disable HD Audio SNDW2 link.
Muxed with SSP1. \$EN_DIS
Definition at line 1094 of file FspUpd.h.

13.36.2.55 PchHdaAudioLinkSndw3

UINT8 FSP_S_CONFIG::PchHdaAudioLinkSndw3

Offset 0x029D - Enable HD Audio SoundWire#3 Link Enable/disable HD Audio SNDW3 link.
Muxed with DMIC1. \$EN_DIS
Definition at line 1100 of file FspUpd.h.

13.36.2.56 PchHdaAudioLinkSndw4

UINT8 FSP_S_CONFIG::PchHdaAudioLinkSndw4

Offset 0x029E - Enable HD Audio SoundWire#4 Link Enable/disable HD Audio SNDW4 link.
Muxed with DMIC0. \$EN_DIS
Definition at line 1106 of file FspUpd.h.

13.36.2.57 PchHdaAudioLinkSsp0

UINT8 FSP_S_CONFIG::PchHdaAudioLinkSsp0

Offset 0x0298 - Enable HD Audio SSP0 Link Enable/disable HD Audio SSP0/I2S link.
Muxed with HDA. \$EN_DIS
Definition at line 1070 of file FspUpd.h.

13.36.2.58 PchHdaAudioLinkSsp1

UINT8 FSP_S_CONFIG::PchHdaAudioLinkSsp1

Offset 0x0299 - Enable HD Audio SSP1 Link Enable/disable HD Audio SSP1/I2S link.
Muxed with HDA/SNDW2. \$EN_DIS
Definition at line 1076 of file FspUpd.h.

13.36.2.59 PchHdaAudioLinkSsp2

UINT8 FSP_S_CONFIG::PchHdaAudioLinkSsp2

Offset 0x029A - Enable HD Audio SSP2 Link Enable/disable HD Audio SSP2/I2S link.

\$EN_DIS

Definition at line 1082 of file FspUpd.h.

13.36.2.60 PchHdaDspEnable

UINT8 FSP_S_CONFIG::PchHdaDspEnable

Offset 0x0188 - Enable HD Audio DSP Enable/disable HD Audio DSP feature.

\$EN_DIS

Definition at line 712 of file FspUpd.h.

13.36.2.61 PchHdaDspUaaCompliance

UINT8 FSP_S_CONFIG::PchHdaDspUaaCompliance

Offset 0x0395 - Universal Audio Architecture compliance for DSP enabled system 0: Not-UAA Compliant (Intel SST driver supported only), 1: UAA Compliant (HDA Inbox driver or SST driver supported).

\$EN_DIS

Definition at line 1395 of file FspUpd.h.

13.36.2.62 PchHdaIDispCodecDisconnect

UINT8 FSP_S_CONFIG::PchHdaIDispCodecDisconnect

Offset 0x0396 - iDisplay Audio Codec disconnection 0: Not disconnected, enumerable, 1: Disconnected SDI, not enumerable.

\$EN_DIS

Definition at line 1401 of file FspUpd.h.

13.36.2.63 PchHdaIDispLinkFrequency

UINT8 FSP_S_CONFIG::PchHdaIDispLinkFrequency

Offset 0x0393 - iDisp-Link Frequency iDisp-Link Freq (PCH_HDAUDIO_LINK_FREQUENCY enum): 4: 96MHz, 3: 48MHz.

4: 96MHz, 3: 48MHz

Definition at line 1382 of file FspUpd.h.

13.36.2.64 PchHdaDispLinkTmode

UINT8 FSP_S_CONFIG::PchHdaIDispLinkTmode

Offset 0x0394 - iDisp-Link T-mode iDisp-Link T-Mode (PCH_HDAUDIO_IDISP_TMODE enum): 0: 2T, 1: 1T.

0: 2T, 1: 1T

Definition at line 1388 of file FspUpd.h.

13.36.2.65 PchHdaLinkFrequency

UINT8 FSP_S_CONFIG::PchHdaLinkFrequency

Offset 0x0392 - HD Audio Link Frequency HDA Link Freq (PCH_HDAUDIO_LINK_FREQUENCY enum): 0: 6MHz, 1: 12MHz, 2: 24MHz.

0: 6MHz, 1: 12MHz, 2: 24MHz

Definition at line 1376 of file FspUpd.h.

13.36.2.66 PchHdaPme

UINT8 FSP_S_CONFIG::PchHdaPme

Offset 0x0390 - Enable Pme Enable Azalia wake-on-ring.

\$EN_DIS

Definition at line 1364 of file FspUpd.h.

13.36.2.67 PchHdaSndwBufferRcomp

UINT8 FSP_S_CONFIG::PchHdaSndwBufferRcomp

Offset 0x029F - Soundwire Clock Buffer GPIO RCOMP Setting 0: non-ACT - 50 Ohm driver impedance, 1: ACT - 8 Ohm driver impedance.

\$EN_DIS

Definition at line 1112 of file FspUpd.h.

13.36.2.68 PchHdaSndwLinkIoControlEnabled

UINT8 FSP_S_CONFIG::PchHdaSndwLinkIoControlEnabled[4]

Offset 0x0758 - Enable HD Audio Sndw Link IO Control 0:Disabled, 1:Enabled.

Enables IO Control to Sndw link if it is Enabled

Definition at line 2462 of file FspUpd.h.

13.36.2.69 PchHdaVcType

UINT8 FSP_S_CONFIG::PchHdaVcType

Offset 0x0391 - VC Type Virtual Channel Type Select: 0: VC0, 1: VC1.

0: VC0, 1: VC1

Definition at line 1370 of file FspUpd.h.

13.36.2.70 PchHotEnable

UINT8 FSP_S_CONFIG::PchHotEnable

Offset 0x02D0 - PCHHOT# pin Enable PCHHOT# pin assertion when temperature is higher than PchHotLevel.

0: disable, 1: enable \$EN_DIS

Definition at line 1248 of file FspUpd.h.

13.36.2.71 PchIoApicEntry24_119

UINT8 FSP_S_CONFIG::PchIoApicEntry24_119

Offset 0x03A1 - Enable PCH Io Apic Entry 24-119 0: Disable; 1: Enable.

\$EN_DIS

Definition at line 1413 of file FspUpd.h.

13.36.2.72 PchIoApicId

UINT8 FSP_S_CONFIG::PchIoApicId

Offset 0x03A2 - PCH Io Apic ID This member determines IOAPIC ID.

Default is 0x02.

Definition at line 1418 of file FspUpd.h.

13.36.2.73 PchIshGp0GpioAssign

UINT8 FSP_S_CONFIG::PchIshGp0GpioAssign

Offset 0x03A9 - Enable PCH ISH GP_0 GPIO pin assigned 0: Disable; 1: Enable.

\$EN_DIS

Definition at line 1460 of file FspUpd.h.

13.36.2.74 PchIshGp1GpioAssign

UINT8 FSP_S_CONFIG::PchIshGp1GpioAssign

Offset 0x03AA - Enable PCH ISH GP_1 GPIO pin assigned 0: Disable; 1: Enable.

\$EN_DIS

Definition at line 1466 of file FspUpd.h.

13.36.2.75 PchIshGp2GpioAssign

UINT8 FSP_S_CONFIG::PchIshGp2GpioAssign

Offset 0x03AB - Enable PCH ISH GP_2 GPIO pin assigned 0: Disable; 1: Enable.

\$EN_DIS

Definition at line 1472 of file FspUpd.h.

13.36.2.76 PchIshGp3GpioAssign

UINT8 FSP_S_CONFIG::PchIshGp3GpioAssign

Offset 0x03AC - Enable PCH ISH GP_3 GPIO pin assigned 0: Disable; 1: Enable.

\$EN_DIS

Definition at line 1478 of file FspUpd.h.

13.36.2.77 PchIshGp4GpioAssign

UINT8 FSP_S_CONFIG::PchIshGp4GpioAssign

Offset 0x03AD - Enable PCH ISH GP_4 GPIO pin assigned 0: Disable; 1: Enable.

\$EN_DIS

Definition at line 1484 of file FspUpd.h.

13.36.2.78 PchIshGp5GpioAssign

UINT8 FSP_S_CONFIG::PchIshGp5GpioAssign

Offset 0x03AE - Enable PCH ISH GP_5 GPIO pin assigned 0: Disable; 1: Enable.

\$EN_DIS

Definition at line 1490 of file FspUpd.h.

13.36.2.79 PchIshGp6GpioAssign

UINT8 FSP_S_CONFIG::PchIshGp6GpioAssign

Offset 0x03AF - Enable PCH ISH GP_6 GPIO pin assigned 0: Disable; 1: Enable.

\$EN_DIS

Definition at line 1496 of file FspUpd.h.

13.36.2.80 PchIshGp7GpioAssign

UINT8 FSP_S_CONFIG::PchIshGp7GpioAssign

Offset 0x03B0 - Enable PCH ISH GP_7 GPIO pin assigned 0: Disable; 1: Enable.

\$EN_DIS

Definition at line 1502 of file FspUpd.h.

13.36.2.81 PchIshI2c0GpioAssign

UINT8 FSP_S_CONFIG::PchIshI2c0GpioAssign

Offset 0x03A6 - Enable PCH ISH I2C0 GPIO pins assigned 0: Disable; 1: Enable.

\$EN_DIS

Definition at line 1442 of file FspUpd.h.

13.36.2.82 PchIshI2c1GpioAssign

UINT8 FSP_S_CONFIG::PchIshI2c1GpioAssign

Offset 0x03A7 - Enable PCH ISH I2C1 GPIO pins assigned 0: Disable; 1: Enable.

\$EN_DIS

Definition at line 1448 of file FspUpd.h.

13.36.2.83 PchIshI2c2GpioAssign

UINT8 FSP_S_CONFIG::PchIshI2c2GpioAssign

Offset 0x03A8 - Enable PCH ISH I2C2 GPIO pins assigned 0: Disable; 1: Enable.

\$EN_DIS

Definition at line 1454 of file FspUpd.h.

13.36.2.84 PchIshPdtUnlock

UINT8 FSP_S_CONFIG::PchIshPdtUnlock

Offset 0x03B1 - PCH ISH PDT Unlock Msg 0: False; 1: True.

\$EN_DIS

Definition at line 1508 of file FspUpd.h.

13.36.2.85 PchIshSpiGpioAssign

UINT8 FSP_S_CONFIG::PchIshSpiGpioAssign

Offset 0x03A3 - Enable PCH ISH SPI GPIO pins assigned 0: Disable; 1: Enable.

\$EN_DIS

Definition at line 1424 of file FspUpd.h.

13.36.2.86 PchIshUart0GpioAssign

UINT8 FSP_S_CONFIG::PchIshUart0GpioAssign

Offset 0x03A4 - Enable PCH ISH UART0 GPIO pins assigned 0: Disable; 1: Enable.

\$EN_DIS

Definition at line 1430 of file FspUpd.h.

13.36.2.87 PchIshUart1GpioAssign

UINT8 FSP_S_CONFIG::PchIshUart1GpioAssign

Offset 0x03A5 - Enable PCH ISH UART1 GPIO pins assigned 0: Disable; 1: Enable.

\$EN_DIS

Definition at line 1436 of file FspUpd.h.

13.36.2.88 PchLanEnable

UINT8 FSP_S_CONFIG::PchLanEnable

Offset 0x0294 - Enable LAN Enable/disable LAN controller.

\$EN_DIS

Definition at line 1046 of file FspUpd.h.

13.36.2.89 PchLanLtrEnable

UINT8 FSP_S_CONFIG::PchLanLtrEnable

Offset 0x03B2 - Enable PCH Lan LTR capability of PCH internal LAN 0: Disable; 1: Enable.

\$EN_DIS

Definition at line 1514 of file FspUpd.h.

13.36.2.90 PchLegacyIoLowLatency

UINT8 FSP_S_CONFIG::PchLegacyIoLowLatency

Offset 0x062A - PCH Legacy IO Low Latency Enable Set to enable low latency of legacy IO.

0: Disable, 1: Enable \$EN_DIS

Definition at line 1829 of file FspUpd.h.

13.36.2.91 PchLockDownBiosLock

UINT8 FSP_S_CONFIG::PchLockDownBiosLock

Offset 0x03B3 - Enable LOCKDOWN BIOS LOCK Enable the BIOS Lock feature and set EISS bit (D31:F5:RegD↔Ch[5]) for the BIOS region protection.

\$EN_DIS

Definition at line 1521 of file FspUpd.h.

13.36.2.92 PchLockDownRtcMemoryLock

```
UINT8 FSP_S_CONFIG::PchLockDownRtcMemoryLock
```

Offset 0x03B5 - RTC CMOS MEMORY LOCK Enable RTC lower and upper 128 byte Lock bits to lock Bytes 38h-3Fh in the upper and and lower 128-byte bank of RTC RAM.

\$EN_DIS

Definition at line 1534 of file FspUpd.h.

13.36.2.93 PchMemoryThrottlingEnable

```
UINT8 FSP_S_CONFIG::PchMemoryThrottlingEnable
```

Offset 0x06C8 - Enable Memory Thermal Throttling Enable Memory Thermal Throttling.

\$EN_DIS

Definition at line 2267 of file FspUpd.h.

13.36.2.94 PchPcieDeviceOverrideTablePtr

```
UINT32 FSP_S_CONFIG::PchPcieDeviceOverrideTablePtr
```

Offset 0x06F4 - Pch PCIe device override table pointer The PCIe device table is being used to override PCIe device ASPM settings.

This is a pointer points to a 32bit address. And it's only used in PostMem phase. Please refer to PCH_PCIE_DE↔VICE_OVERRIDE structure for the table. Last entry VendorId must be 0.

Definition at line 2348 of file FspUpd.h.

13.36.2.95 PchPmDeepSxPol

```
UINT8 FSP_S_CONFIG::PchPmDeepSxPol
```

Offset 0x0622 - PCH Pm Deep Sx Pol Deep Sx Policy.

\$EN_DIS

Definition at line 1775 of file FspUpd.h.

13.36.2.96 PchPmDisableDsxAcPresentPulldown

```
UINT8 FSP_S_CONFIG::PchPmDisableDsxAcPresentPulldown
```

Offset 0x062F - PCH Pm Disable Dsx Ac Present Pulldown When Disable, PCH will internal pull down AC_PRESENT in deep SX and during G3 exit.

\$EN_DIS

Definition at line 1859 of file FspUpd.h.

13.36.2.97 PchPmDisableNativePowerButton

UINT8 FSP_S_CONFIG::PchPmDisableNativePowerButton

Offset 0x0630 - PCH Pm Disable Native Power Button Power button native mode disable.

\$EN_DIS

Definition at line 1865 of file FspUpd.h.

13.36.2.98 PchPmLanWakeFromDeepSx

UINT8 FSP_S_CONFIG::PchPmLanWakeFromDeepSx

Offset 0x0621 - PCH Pm Lan Wake From DeepSx Determine if enable LAN to wake from deep Sx.

\$EN_DIS

Definition at line 1769 of file FspUpd.h.

13.36.2.99 PchPmLpcClockRun

UINT8 FSP_S_CONFIG::PchPmLpcClockRun

Offset 0x062B - PCH Pm Lpc Clock Run This member describes whether or not the LPC ClockRun feature of PCH should be enabled.

Default value is Disabled \$EN_DIS

Definition at line 1836 of file FspUpd.h.

13.36.2.100 PchPmMeWakeSts

UINT8 FSP_S_CONFIG::PchPmMeWakeSts

Offset 0x0632 - PCH Pm ME_WAKE_STS Clear the ME_WAKE_STS bit in the Power and Reset Status (PRSTS) register.

\$EN_DIS

Definition at line 1877 of file FspUpd.h.

13.36.2.101 PchPmPciePllSsc

UINT8 FSP_S_CONFIG::PchPmPciePllSsc

Offset 0x0635 - PCH Pm Pcie Pll Ssc Specifies the Pcie Pll Spread Spectrum Percentage.

The default is 0xFF: AUTO - No BIOS override.

Definition at line 1895 of file FspUpd.h.

13.36.2.102 PchPmPcieWakeFromDeepSx

UINT8 FSP_S_CONFIG::PchPmPcieWakeFromDeepSx

Offset 0x061E - PCH Pm Pcie Wake From DeepSx Determine if enable PCIe to wake from deep Sx.

\$EN_DIS

Definition at line 1750 of file FspUpd.h.

13.36.2.103 PchPmPmeB0S5Dis

UINT8 FSP_S_CONFIG::PchPmPmeB0S5Dis

Offset 0x0619 - PCH Pm PME_B0_S5_DIS When cleared (default), wake events from PME_B0_STS are allowed in S5 if PME_B0_EN = 1.

\$EN_DIS

Definition at line 1720 of file FspUpd.h.

13.36.2.104 PchPmPwrBtnOverridePeriod

UINT8 FSP_S_CONFIG::PchPmPwrBtnOverridePeriod

Offset 0x062E - PCH Pm Pwr Btn Override Period PCH power button override period.

000b-4s, 001b-6s, 010b-8s, 011b-10s, 100b-12s, 101b-14s.

Definition at line 1853 of file FspUpd.h.

13.36.2.105 PchPmPwrCycDur

UINT8 FSP_S_CONFIG::PchPmPwrCycDur

Offset 0x0634 - PCH Pm Reset Power Cycle Duration Could be customized in the unit of second.

Please refer to EDS for all support settings. 0 is default, 1 is 1 second, 2 is 2 seconds, ...

Definition at line 1889 of file FspUpd.h.

13.36.2.106 PchPmSlpAMinAssert

UINT8 FSP_S_CONFIG::PchPmSlpAMinAssert

Offset 0x0626 - PCH Pm Slp A Min Assert SLP_A Minimum Assertion Width Policy.

Default is PchSlpA2s.

Definition at line 1795 of file FspUpd.h.

13.36.2.107 PchPmSlpLanLowDc

UINT8 FSP_S_CONFIG::PchPmSlpLanLowDc

Offset 0x062D - PCH Pm Slp Lan Low Dc Enable/Disable SLP_LAN# Low on DC Power.

\$EN_DIS

Definition at line 1848 of file FspUpd.h.

13.36.2.108 PchPmSlpS0Enable

UINT8 FSP_S_CONFIG::PchPmSlpS0Enable

Offset 0x0631 - PCH Pm Slp S0 Enable Indicates whether SLP_S0# is to be asserted when PCH reaches idle state.

\$EN_DIS

Definition at line 1871 of file FspUpd.h.

13.36.2.109 PchPmSlpS0Vm070VSupport

UINT8 FSP_S_CONFIG::PchPmSlpS0Vm070VSupport

Offset 0x02D4 - SLP_S0 VM 0.70V Support SLP_S0 Voltage Margining 0.70V Support Policy.

0: disable, 1: enable \$EN_DIS

Definition at line 1273 of file FspUpd.h.

13.36.2.110 PchPmSlpS0Vm075VSupport

UINT8 FSP_S_CONFIG::PchPmSlpS0Vm075VSupport

Offset 0x02D5 - SLP_S0 VM 0.75V Support SLP_S0 Voltage Margining 0.75V Support Policy.

0: disable, 1: enable \$EN_DIS

Definition at line 1279 of file FspUpd.h.

13.36.2.111 PchPmSlpS0VmRuntimeControl

UINT8 FSP_S_CONFIG::PchPmSlpS0VmRuntimeControl

Offset 0x02D3 - SLP_S0 VM Dynamic Control SLP_S0 Voltage Margining Runtime Control Policy.

0: disable, 1: enable \$EN_DIS

Definition at line 1267 of file FspUpd.h.

13.36.2.112 PchPmSlpS3MinAssert

UINT8 FSP_S_CONFIG::PchPmSlpS3MinAssert

Offset 0x0623 - PCH Pm Slp S3 Min Assert SLP_S3 Minimum Assertion Width Policy.

Default is PchSlpS350ms.

Definition at line 1780 of file FspUpd.h.

13.36.2.113 PchPmSlpS4MinAssert

UINT8 FSP_S_CONFIG::PchPmSlpS4MinAssert

Offset 0x0624 - PCH Pm Slp S4 Min Assert SLP_S4 Minimum Assertion Width Policy.

Default is PchSlpS44s.

Definition at line 1785 of file FspUpd.h.

13.36.2.114 PchPmSlpStrchSusUp

UINT8 FSP_S_CONFIG::PchPmSlpStrchSusUp

Offset 0x062C - PCH Pm Slp Strch Sus Up Enable SLP_X Stretching After SUS Well Power Up.

\$EN_DIS

Definition at line 1842 of file FspUpd.h.

13.36.2.115 PchPmSlpSusMinAssert

UINT8 FSP_S_CONFIG::PchPmSlpSusMinAssert

Offset 0x0625 - PCH Pm Slp Sus Min Assert SLP_SUS Minimum Assertion Width Policy.

Default is PchSlpSus4s.

Definition at line 1790 of file FspUpd.h.

13.36.2.116 PchPmVrAlert

UINT8 FSP_S_CONFIG::PchPmVrAlert

Offset 0x02D2 - VRAlert# Pin When VRAlert# feature pin is enabled and its state is '0', the PMC requests throttling to a T3 Tstate to the PCH throttling unit.

. 0: disable, 1: enable \$EN_DIS

Definition at line 1261 of file FspUpd.h.

13.36.2.117 PchPmWolEnableOverride

UINT8 FSP_S_CONFIG::PchPmWolEnableOverride

Offset 0x061D - PCH Pm Wol Enable Override Corresponds to the WOL Enable Override bit in the General PM Configuration B (GEN_PMCON_B) register.

\$EN_DIS

Definition at line 1744 of file FspUpd.h.

13.36.2.118 PchPmWoLvrWkSts

UINT8 FSP_S_CONFIG::PchPmWoLvrWkSts

Offset 0x0633 - PCH Pm WOL_OVR_WK_STS Clear the WOL_OVR_WK_STS bit in the Power and Reset Status (PRSTS) register.

\$EN_DIS

Definition at line 1883 of file FspUpd.h.

13.36.2.119 PchPmWoWlanDeepSxEnable

UINT8 FSP_S_CONFIG::PchPmWoWlanDeepSxEnable

Offset 0x0620 - PCH Pm WoW lan DeepSx Enable Determine if WLAN wake from DeepSx, corresponds to the DSX_WLAN_PP_EN bit in the PWRM_CFG3 register.

\$EN_DIS

Definition at line 1763 of file FspUpd.h.

13.36.2.120 PchPmWoWlanEnable

UINT8 FSP_S_CONFIG::PchPmWoWlanEnable

Offset 0x061F - PCH Pm WoW lan Enable Determine if WLAN wake from Sx, corresponds to the HOST_WLAN_PP_EN bit in the PWRM_CFG3 register.

\$EN_DIS

Definition at line 1756 of file FspUpd.h.

13.36.2.121 PchPwrOptEnable

UINT8 FSP_S_CONFIG::PchPwrOptEnable

Offset 0x0370 - Enable Power Optimizer Enable DMI Power Optimizer on PCH side.

\$EN_DIS

Definition at line 1333 of file FspUpd.h.

13.36.2.122 PchScsEmmcHs400TuningRequired

UINT8 FSP_S_CONFIG::PchScsEmmcHs400TuningRequired

Offset 0x069F - Enable eMMC HS400 Training Deprecated.

\$EN_DIS

Definition at line 2054 of file FspUpd.h.

13.36.2.123 PchSerialIoI2cPadsTermination

UINT8 FSP_S_CONFIG::PchSerialIoI2cPadsTermination[6]

Offset 0x019B - PCH SerialIo I2C Pads Termination 0x0: Hardware default, 0x1: None, 0x13: 1kOhm weak pull-up, 0x15: 5kOhm weak pull-up, 0x19: 20kOhm weak pull-up - Enable/disable SerialIo I2C0,I2C1,I2C2,I2C3,I2C4,I2C5 pads termination respectively.

One byte for each controller, byte0 for I2C0, byte1 for I2C1, and so on.

Definition at line 765 of file FspUpd.h.

13.36.2.124 PchSirqEnable

UINT8 FSP_S_CONFIG::PchSirqEnable

Offset 0x06A4 - Enable Serial IRQ Determines if enable Serial IRQ.

\$EN_DIS

Definition at line 2082 of file FspUpd.h.

13.36.2.125 PchSirqMode

UINT8 FSP_S_CONFIG::PchSirqMode

Offset 0x06A5 - Serial IRQ Mode Select Serial IRQ Mode Select, 0: quiet mode, 1: continuous mode.

\$EN_DIS

Definition at line 2088 of file FspUpd.h.

13.36.2.126 PchStartFramePulse

UINT8 FSP_S_CONFIG::PchStartFramePulse

Offset 0x06A6 - Start Frame Pulse Width Start Frame Pulse Width, 0: PchSfpw4Clk, 1: PchSfpw6Clk, 2: Pch↔Sfpw8Clk.

0: PchSfpw4Clk, 1: PchSfpw6Clk, 2: PchSfpw8Clk

Definition at line 2094 of file FspUpd.h.

13.36.2.127 PchTsmicLock

UINT8 FSP_S_CONFIG::PchTsmicLock

Offset 0x06A8 - Thermal Device SMI Enable This locks down SMI Enable on Alert Thermal Sensor Trip.

\$EN_DIS

Definition at line 2107 of file FspUpd.h.

13.36.2.128 PchTTEnable

UINT8 FSP_S_CONFIG::PchTTEnable

Offset 0x06B0 - Enable The Thermal Throttle Enable the thermal throttle function.

\$EN_DIS

Definition at line 2132 of file FspUpd.h.

13.36.2.129 PchTTLock

UINT8 FSP_S_CONFIG::PchTTLock

Offset 0x06B2 - Thermal Throttle Lock Thermal Throttle Lock.

\$EN_DIS

Definition at line 2145 of file FspUpd.h.

13.36.2.130 PchTTState13Enable

UINT8 FSP_S_CONFIG::PchTTState13Enable

Offset 0x06B1 - PMSync State 13 When set to 1 and the programmed GPIO pin is a 1, then PMSync state 13 will force at least T2 state.

\$EN_DIS

Definition at line 2139 of file FspUpd.h.

13.36.2.131 PchUsbHsioFilterSel

UINT8 FSP_S_CONFIG::PchUsbHsioFilterSel[10]

Offset 0x0397 - USB LFPS Filter selection For each byte bits 2:0 are for p, bits 4:6 are for n.

0h:1.6ns, 1h:2.4ns, 2h:3.2ns, 3h:4.0ns, 4h:4.8ns, 5h:5.6ns, 6h:6.4ns.

Definition at line 1407 of file FspUpd.h.

13.36.2.132 PchUsbHsioRxTuningEnable

UINT8 FSP_S_CONFIG::PchUsbHsioRxTuningEnable[10]

Offset 0x0510 - PCH USB3 HSIO Rx Tuning Enable Mask for enabling tuning of HSIO Rx signals of USB3 ports.

Bits: 0 - HsioCtrlAdaptOffsetCfgEnable, 1 - HsioFilterSelINEnable, 2 - HsioFilterSelPEnable, 3 - HsioOlfpsCfgPull↔
UpDwnResEnable

Definition at line 1616 of file FspUpd.h.

13.36.2.133 PcieComplianceTestMode

UINT8 FSP_S_CONFIG::PcieComplianceTestMode

Offset 0x0616 - PCIE Compliance Test Mode Compliance Test Mode shall be enabled when using Compliance Load Board.

\$EN_DIS

Definition at line 1701 of file FspUpd.h.

13.36.2.134 PcieDisableRootPortClockGating

UINT8 FSP_S_CONFIG::PcieDisableRootPortClockGating

Offset 0x0614 - PCIE Disable RootPort Clock Gating Describes whether the PCI Express Clock Gating for each root port is enabled by platform modules.

0: Disable; 1: Enable. \$EN_DIS

Definition at line 1689 of file FspUpd.h.

13.36.2.135 PcieEnablePeerMemoryWrite

UINT8 FSP_S_CONFIG::PcieEnablePeerMemoryWrite

Offset 0x0615 - PCIE Enable Peer Memory Write This member describes whether Peer Memory Writes are enabled on the platform.

\$EN_DIS

Definition at line 1695 of file FspUpd.h.

13.36.2.136 PcieEqPh3LaneParamCm

UINT8 FSP_S_CONFIG::PcieEqPh3LaneParamCm[24]

Offset 0x05DA - PCIE Eq Ph3 Lane Param Cm PCH_PCIE_EQ_LANE_PARAM.

Coefficient C-1.

Definition at line 1665 of file FspUpd.h.

13.36.2.137 PcieEqPh3LaneParamCp

UINT8 FSP_S_CONFIG::PcieEqPh3LaneParamCp[24]

Offset 0x05F2 - PCIE Eq Ph3 Lane Param Cp PCH_PCIE_EQ_LANE_PARAM.

Coefficient C+1.

Definition at line 1670 of file FspUpd.h.

13.36.2.138 PcieRpAspm

UINT8 FSP_S_CONFIG::PcieRpAspm[24]

Offset 0x057A - PCIE RP Aspm The ASPM configuration of the root port (see: PCH_PCIE_ASPM_CONTROL).

Default is PchPcieAspmAutoConfig.

Definition at line 1644 of file FspUpd.h.

13.36.2.139 PcieRpCompletionTimeout

UINT8 FSP_S_CONFIG::PcieRpCompletionTimeout[24]

Offset 0x0562 - PCIE RP Completion Timeout The root port completion timeout(see: PCH_PCIE_COMPLETION_TIMEOUT).

Default is PchPcieCompletionTO_Default.

Definition at line 1638 of file FspUpd.h.

13.36.2.140 PcieRpDpcExtensionsMask

UINT32 FSP_S_CONFIG::PcieRpDpcExtensionsMask

Offset 0x02A8 - DPC Extensions PCIE RP Mask Enable/disable DPC Extensions for PCIE Root Ports.

0: disable, 1: enable. One bit for each port, bit0 for port1, bit1 for port2, and so on.

Definition at line 1130 of file FspUpd.h.

13.36.2.141 PcieRpDpcMask

UINT32 FSP_S_CONFIG::PcieRpDpcMask

Offset 0x02A4 - DPC for PCIE RP Mask Enable/disable Downstream Port Containment for PCIE Root Ports.

0: disable, 1: enable. One bit for each port, bit0 for port1, bit1 for port2, and so on.

Definition at line 1124 of file FspUpd.h.

13.36.2.142 PcieRpFunctionSwap

UINT8 FSP_S_CONFIG::PcieRpFunctionSwap

Offset 0x0617 - PCIE Rp Function Swap Allows BIOS to use root port function number swapping when root port of function 0 is disabled.

\$EN_DIS

Definition at line 1708 of file FspUpd.h.

13.36.2.143 PcieRpGen3EqPh3Method

UINT8 FSP_S_CONFIG::PcieRpGen3EqPh3Method[24]

Offset 0x0532 - PCIE RP Gen3 Equalization Phase Method PCIe Gen3 Eq Ph3 Method (see PCH_PCIE_EQ_METHOD).

0: DEPRECATED, hardware equalization; 1: hardware equalization; 4: Fixed Coefficients.

Definition at line 1628 of file FspUpd.h.

13.36.2.144 PcieRpImrEnabled

UINT8 FSP_S_CONFIG::PcieRpImrEnabled

Offset 0x061A - PCIE IMR Enables Isolated Memory Region for PCIE.

\$EN_DIS

Definition at line 1726 of file FspUpd.h.

13.36.2.145 PcieRpL1Substates

UINT8 FSP_S_CONFIG::PcieRpL1Substates[24]

Offset 0x0592 - PCIE RP L1 Substates The L1 Substates configuration of the root port (see: PCH_PCIE_L1SUB↔ STATES_CONTROL).

Default is PchPcieL1SubstatesL1_1_2.

Definition at line 1650 of file FspUpd.h.

13.36.2.146 PcieRpPcieSpeed

UINT8 FSP_S_CONFIG::PcieRpPcieSpeed[24]

Offset 0x051A - PCIE RP Pcie Speed Determines each PCIE Port speed capability.

0: Auto; 1: Gen1; 2: Gen2; 3: Gen3 (see: PCH_PCIE_SPEED).

Definition at line 1622 of file FspUpd.h.

13.36.2.147 PcieRpPhysicalSlotNumber

UINT8 FSP_S_CONFIG::PcieRpPhysicalSlotNumber[24]

Offset 0x054A - PCIE RP Physical Slot Number Indicates the slot number for the root port.

Default is the value as root port index.

Definition at line 1633 of file FspUpd.h.

13.36.2.148 PcieRpPtmMask

UINT32 FSP_S_CONFIG::PcieRpPtmMask

Offset 0x02A0 - PTM for PCIE RP Mask Enable/disable Precision Time Measurement for PCIE Root Ports.

0: disable, 1: enable. One bit for each port, bit0 for port1, bit1 for port2, and so on.

Definition at line 1118 of file FspUpd.h.

13.36.2.149 PcieSwEqCoeffListCm

UINT8 FSP_S_CONFIG::PcieSwEqCoeffListCm[5]

Offset 0x060A - PCIE Sw Eq CoeffList Cm PCH_PCIE_EQ_PARAM.

Coefficient C-1. The values depend on PcieNumOfCoefficients, the default value of PcieNumOfCoefficients is 3 hence only first 3 values are considered.

Definition at line 1676 of file FspUpd.h.

13.36.2.150 PcieSwEqCoeffListCp

UINT8 FSP_S_CONFIG::PcieSwEqCoeffListCp[5]

Offset 0x060F - PCIE Sw Eq CoeffList Cp PCH_PCIE_EQ_PARAM.

Coefficient C+1. The values depend on PcieNumOfCoefficients, the default value of PcieNumOfCoefficients is 3 hence only first 3 values are considered.

Definition at line 1682 of file FspUpd.h.

13.36.2.151 PmcCpuC10GatePinEnable

UINT8 FSP_S_CONFIG::PmcCpuC10GatePinEnable

Offset 0x06FA - Pmc Cpu C10 Gate Pin Enable Enable/Disable platform support for CPU_C10_GATE# pin to control gating of CPU VccIO and VccSTG rails instead of SLP_S0# pin.

\$EN_DIS

Definition at line 2371 of file FspUpd.h.

13.36.2.152 PmcDbgMsgEn

UINT8 FSP_S_CONFIG::PmcDbgMsgEn

Offset 0x02BC - PMC Debug Message Enable When Enabled, PMC HW will send debug messages to trace hub; When Disabled, PMC HW will never send debug messages to trace hub.

Noted: When Enabled, may not enter S0ix \$EN_DIS

Definition at line 1177 of file FspUpd.h.

13.36.2.153 PmcModPhySusPgEnable

UINT8 FSP_S_CONFIG::PmcModPhySusPgEnable

Offset 0x036E - ModPHY SUS Power Domain Dynamic Gating Enable/Disable ModPHY SUS Power Domain Dynamic Gating.

Setting not supported on PCH-H. 0: disable, 1: enable \$EN_DIS

Definition at line 1320 of file FspUpd.h.

13.36.2.154 PmcPowerButtonDebounce

UINT32 FSP_S_CONFIG::PmcPowerButtonDebounce

Offset 0x02B0 - Power button debounce configuration Debounce time for PWRBTN in microseconds.

For values not supported by HW, they will be rounded down to closest supported on. 0: disable, 250-1024000us: supported range

Definition at line 1147 of file FspUpd.h.

13.36.2.155 PortUsb20Enable

UINT8 FSP_S_CONFIG::PortUsb20Enable[16]

Offset 0x01E6 - Enable USB2 ports Enable/disable per USB2 ports.

One byte for each port, byte0 for port0, byte1 for port1, and so on.

Definition at line 885 of file FspUpd.h.

13.36.2.156 PortUsb30Enable

UINT8 FSP_S_CONFIG::PortUsb30Enable[10]

Offset 0x01F6 - Enable USB3 ports Enable/disable per USB3 ports.

One byte for each port, byte0 for port0, byte1 for port1, and so on.

Definition at line 891 of file FspUpd.h.

13.36.2.157 PreWake

UINT8 FSP_S_CONFIG::PreWake

Offset 0x0168 - Pre Wake Randomization time PCODE MMIO Mailbox: Acoustic Mitigation Range. Defines the maximum pre-wake randomization time in micro ticks. This can be programmed only if AcousticNoiseMitigation is enabled.

Range 0-255 0.

Definition at line 655 of file FspUpd.h.

13.36.2.158 Psi1Threshold

UINT16 FSP_S_CONFIG::Psi1Threshold[5]

Offset 0x0112 - Power State 1 Threshold current PCODE MMIO Mailbox: Power State 1 current cutoff in 1/4 Amp increments.

Range is 0-128A.

Definition at line 512 of file FspUpd.h.

13.36.2.159 Psi2Threshold

UINT16 FSP_S_CONFIG::Psi2Threshold[5]

Offset 0x011C - Power State 2 Threshold current PCODE MMIO Mailbox: Power State 2 current cutoff in 1/4 Amp increments.

Range is 0-128A.

Definition at line 517 of file FspUpd.h.

13.36.2.160 Psi3Enable

UINT8 FSP_S_CONFIG::Psi3Enable[5]

Offset 0x00C4 - Power State 3 enable/disable PCODE MMIO Mailbox: Power State 3 enable/disable; 0: Disable; **1: Enable.**

For all VR Indexes

Definition at line 396 of file FspUpd.h.

13.36.2.161 Psi3Threshold

UINT16 FSP_S_CONFIG::Psi3Threshold[5]

Offset 0x0126 - Power State 3 Threshold current PCODE MMIO Mailbox: Power State 3 current cutoff in 1/4 Amp increments.

Range is 0-128A.

Definition at line 522 of file FspUpd.h.

13.36.2.162 PsOnEnable

UINT8 FSP_S_CONFIG::PsOnEnable

Offset 0x06F9 - Enable PS_ON.

PS_ON is a new C10 state from the CPU on desktop SKUs that enables a lower power target that will be required by the California Energy Commission (CEC). When FALSE, PS_ON is to be disabled. \$EN_DIS

Definition at line 2364 of file FspUpd.h.

13.36.2.163 PsysOffset

UINT8 FSP_S_CONFIG::PsysOffset

Offset 0x00ED - Platform Psys offset correction PCODE MMIO Mailbox: Platform Psys offset correction.

0 - Auto Units 1/4, Range 0-255. Value of 100 = 100/4 = 25 offset

Definition at line 449 of file FspUpd.h.

13.36.2.164 PsysSlope

UINT8 FSP_S_CONFIG::PsysSlope

Offset 0x00EC - Platform Psys slope correction PCODE MMIO Mailbox: Platform Psys slope correction.

0 - Auto Specified in 1/100 increment values. Range is 0-200. 125 = 1.25

Definition at line 443 of file FspsUpd.h.

13.36.2.165 PxRcConfig

UINT8 FSP_S_CONFIG::PxRcConfig[8]

Offset 0x0209 - PIRQx to IRQx Map Config PIRQx to IRQx mapping.

The valid value is 0x00 to 0x0F for each. First byte is for PIRQA, second byte is for PIRQB, and so on. The setting is only available in Legacy 8259 PCI mode.

Definition at line 919 of file FspsUpd.h.

13.36.2.166 RemoteAssistance

UINT8 FSP_S_CONFIG::RemoteAssistance

Offset 0x0046 - Remote Assistance Trigger Availablilty Enable/Disable.

0: Disable, 1: enable, Remote Assistance enable/disable state by Mebx. \$EN_DIS

Definition at line 199 of file FspsUpd.h.

13.36.2.167 SataEnable

UINT8 FSP_S_CONFIG::SataEnable

Offset 0x021D - Enable SATA Enable/disable SATA controller.

\$EN_DIS

Definition at line 965 of file FspsUpd.h.

13.36.2.168 SataLedEnable

UINT8 FSP_S_CONFIG::SataLedEnable

Offset 0x02D1 - SATA LED SATA LED indicating SATA controller activity.

0: disable, 1: enable \$EN_DIS

Definition at line 1254 of file FspsUpd.h.

13.36.2.169 SataMode

UINT8 FSP_S_CONFIG::SataMode

Offset 0x021E - SATA Mode Select SATA controller working mode.

0:AHCI, 1:RAID

Definition at line 971 of file FspUpd.h.

13.36.2.170 SataP0TDispFinit

```
UINT8 FSP_S_CONFIG::SataP0TDispFinit
```

Offset 0x06C4 - Port 0 Alternate Fast Init Tdispatch Port 0 Alternate Fast Init Tdispatch.

\$EN_DIS

Definition at line 2244 of file FspUpd.h.

13.36.2.171 SataP1TDispFinit

```
UINT8 FSP_S_CONFIG::SataP1TDispFinit
```

Offset 0x06C6 - Port 1 Alternate Fast Init Tdispatch Port 1 Alternate Fast Init Tdispatch.

\$EN_DIS

Definition at line 2255 of file FspUpd.h.

13.36.2.172 SataPortsDevSlp

```
UINT8 FSP_S_CONFIG::SataPortsDevSlp[8]
```

Offset 0x01DE - Enable SATA DEVSLP Feature Enable/disable SATA DEVSLP per port.

0 is disable, 1 is enable. One byte for each port, byte0 for port0, byte1 for port1, and so on.

Definition at line 879 of file FspUpd.h.

13.36.2.173 SataPortsDevSlpResetConfig

```
UINT8 FSP_S_CONFIG::SataPortsDevSlpResetConfig[8]
```

Offset 0x074F - Set SATA DEVSLP GPIO Reset Config Set SATA DEVSLP GPIO Reset Config per port.

0x00 - GpioResetDefault, 0x01 - GpioResumeReset, 0x03 - GpioHostDeepReset, 0x05 - GpioPlatformReset, 0x07 - GpioDswReset. One byte for each port, byte0 for port0, byte1 for port1, and so on.

Definition at line 2450 of file FspUpd.h.

13.36.2.174 SataPortsDmVal

```
UINT8 FSP_S_CONFIG::SataPortsDmVal[8]
```

Offset 0x0669 - Enable SATA Port DmVal DITO multiplier.

Default is 15.

Definition at line 1947 of file FspUpd.h.

13.36.2.175 SataPortsEnable

UINT8 FSP_S_CONFIG::SataPortsEnable[8]

Offset 0x01D6 - Enable SATA ports Enable/disable SATA ports.

One byte for each port, byte0 for port0, byte1 for port1, and so on.

Definition at line 873 of file FspUpd.h.

13.36.2.176 SataPwrOptEnable

UINT8 FSP_S_CONFIG::SataPwrOptEnable

Offset 0x0636 - PCH Sata Pwr Opt Enable SATA Power Optimizer on PCH side.

\$EN_DIS

Definition at line 1901 of file FspUpd.h.

13.36.2.177 SataRstHddUnlock

UINT8 FSP_S_CONFIG::SataRstHddUnlock

Offset 0x0692 - PCH Sata Rst Hdd Unlock Indicates that the HDD password unlock in the OS is enabled.

\$EN_DIS

Definition at line 2014 of file FspUpd.h.

13.36.2.178 SataRstInterrupt

UINT8 FSP_S_CONFIG::SataRstInterrupt

Offset 0x07BA - SATA RST Interrupt Mode Allows to choose which interrupts will be implemented by SATA controller in RAID mode.

0:Msix, 1:Msi, 2:Legacy

Definition at line 2553 of file FspUpd.h.

13.36.2.179 SataRstIrrt

UINT8 FSP_S_CONFIG::SataRstIrrt

Offset 0x068F - PCH Sata Rst Irrt Intel Rapid Recovery Technology.

\$EN_DIS

Definition at line 1997 of file FspUpd.h.

13.36.2.180 SataRstIrrtOnly

UINT8 FSP_S_CONFIG::SataRstIrrtOnly

Offset 0x0694 - PCH Sata Rst Irrt Only Allow only IRRT drives to span internal and external ports.

\$EN_DIS

Definition at line 2027 of file FspUpd.h.

13.36.2.181 SataRstLedLocate

UINT8 FSP_S_CONFIG::SataRstLedLocate

Offset 0x0693 - PCH Sata Rst Led Locate Indicates that the LED/SGPIO hardware is attached and ping to locate feature is enabled on the OS.

\$EN_DIS

Definition at line 2021 of file FspUpd.h.

13.36.2.182 SataRstOromUiBanner

UINT8 FSP_S_CONFIG::SataRstOromUiBanner

Offset 0x0690 - PCH Sata Rst Orom Ui Banner OROM UI and BANNER.

\$EN_DIS

Definition at line 2003 of file FspUpd.h.

13.36.2.183 SataRstPcieDeviceResetDelay

UINT8 FSP_S_CONFIG::SataRstPcieDeviceResetDelay[3]

Offset 0x069C - PCH Sata Rst Pcie Device Reset Delay PCIe Storage Device Reset Delay in milliseconds.

Default value is 100ms

Definition at line 2048 of file FspUpd.h.

13.36.2.184 SataRstRaid0

UINT8 FSP_S_CONFIG::SataRstRaid0

Offset 0x068B - PCH Sata Rst Raid0 RAID0.

\$EN_DIS

Definition at line 1973 of file FspUpd.h.

13.36.2.185 SataRstRaid1

UINT8 FSP_S_CONFIG::SataRstRaid1

Offset 0x068C - PCH Sata Rst Raid1 RAID1.

\$EN_DIS

Definition at line 1979 of file FspUpd.h.

13.36.2.186 SataRstRaid10

UINT8 FSP_S_CONFIG::SataRstRaid10

Offset 0x068D - PCH Sata Rst Raid10 RAID10.

\$EN_DIS

Definition at line 1985 of file FspUpd.h.

13.36.2.187 SataRstRaid5

UINT8 FSP_S_CONFIG::SataRstRaid5

Offset 0x068E - PCH Sata Rst Raid5 RAID5.

\$EN_DIS

Definition at line 1991 of file FspUpd.h.

13.36.2.188 SataRstRaidDeviceId

UINT8 FSP_S_CONFIG::SataRstRaidDeviceId

Offset 0x068A - PCH Sata Rst Raid Device Id Enable RAID Alternate ID.

0:Client, 1:Alternate, 2:Server

Definition at line 1967 of file FspUpd.h.

13.36.2.189 SataRstSmartStorage

UINT8 FSP_S_CONFIG::SataRstSmartStorage

Offset 0x0695 - PCH Sata Rst Smart Storage RST Smart Storage caching Bit.

\$EN_DIS

Definition at line 2033 of file FspUpd.h.

13.36.2.190 SataSalpSupport

UINT8 FSP_S_CONFIG::SataSalpSupport

Offset 0x01D5 - Enable SATA SALP Support Enable/disable SATA Aggressive Link Power Management.

\$EN_DIS

Definition at line 867 of file FspUpd.h.

13.36.2.191 SataThermalSuggestedSetting

UINT8 FSP_S_CONFIG::SataThermalSuggestedSetting

Offset 0x06C7 - Sata Thermal Throttling Suggested Setting Sata Thermal Throttling Suggested Setting.

\$EN_DIS

Definition at line 2261 of file FspUpd.h.

13.36.2.192 ScIrqSelect

UINT8 FSP_S_CONFIG::SciIrqSelect

Offset 0x0212 - Select ScIrqSelect SCI IRQ Select.

The valid value is 9, 10, 11, and 20, 21, 22, 23 for APIC only.

Definition at line 929 of file FspUpd.h.

13.36.2.193 ScsEmmcEnabled

UINT8 FSP_S_CONFIG::ScsEmmcEnabled

Offset 0x01D1 - Enable eMMC Controller Enable/disable eMMC Controller.

\$EN_DIS

Definition at line 843 of file FspUpd.h.

13.36.2.194 ScsEmmcHs400Enabled

UINT8 FSP_S_CONFIG::ScsEmmcHs400Enabled

Offset 0x01D2 - Enable eMMC HS400 Mode Enable eMMC HS400 Mode.

\$EN_DIS

Definition at line 849 of file FspUpd.h.

13.36.2.195 ScsSdCardEnabled

UINT8 FSP_S_CONFIG::ScsSdCardEnabled

Offset 0x01D3 - Enable SdCard Controller Enable/disable SD Card Controller.

\$EN_DIS

Definition at line 855 of file FspUpd.h.

13.36.2.196 ScsSdCardWpPinEnabled

UINT8 FSP_S_CONFIG::ScsSdCardWpPinEnabled

Offset 0x074E - Enable SD Card Write Protect Pin Enable/disable SD Card Write Protect Pin.

\$EN_DIS

Definition at line 2443 of file FspUpd.h.

13.36.2.197 ScsUfsEnabled

UINT8 FSP_S_CONFIG::ScsUfsEnabled

Offset 0x02C8 - Enable Ufs Controller Enable/disable Ufs 2.0 Controller.

\$EN_DIS

Definition at line 1197 of file FspUpd.h.

13.36.2.198 SendEcCmd

UINT64 FSP_S_CONFIG::SendEcCmd

Offset 0x0790 - SendEcCmd SendEcCmd function pointer.

```
typedef EFI_STATUS (EFI_API *PLATFORM_SEND_EC_COMMAND) (IN EC_COMMAND_TYPE
EcCmdType, IN UINT8 EcCmd, IN UINT8 SendData, IN OUT UINT8 *ReceiveData);
```

Definition at line 2498 of file FspUpd.h.

13.36.2.199 SendVrMbxCmd

UINT8 FSP_S_CONFIG::SendVrMbxCmd

Offset 0x0146 - Enable VR specific mailbox command VR specific mailbox commands.

00b - no VR specific command sent. 01b - A VR mailbox command specifically for the MPS IMPV8 VR will be sent. 10b - VR specific command sent for PS4 exit issue. 11b - Reserved. \$EN_DIS

Definition at line 554 of file FspUpd.h.

13.36.2.200 SerialIoDebugUartNumber

UINT8 FSP_S_CONFIG::SerialIoDebugUartNumber

Offset 0x01CD - UART Number For Debug Purpose UART number for debug purpose.

0:UART0, 1: UART1, 2:UART2. Note: If UART0 is selected as CNVi BT Core interface, it cannot be used for debug purpose. 0:UART0, 1:UART1, 2:UART2

Definition at line 831 of file FspUpd.h.

13.36.2.201 SerialIoI2cMode

UINT8 FSP_S_CONFIG::SerialIoI2cMode[6]

Offset 0x01A1 - I2Cn Device Mode Selects I2c operation mode.

N represents controller index: I2c0, I2c1, ... Available modes: 0:SerialIoI2cDisabled, 1:SerialIoI2cPci, 2:SerialIoI2cHidden

Definition at line 771 of file FspUpd.h.

13.36.2.202 SerialIoSpi0CsEnable

```
UINT8 FSP_S_CONFIG::SerialIoSpi0CsEnable[2]
```

Offset 0x018F - SPI0 Chip Select Enable 0:Disabled, 1:Enabled.

Enables GPIO for CS0 or CS1 if it is Enabled

Definition at line 735 of file FspUpd.h.

13.36.2.203 SerialIoSpi0CsPolarity

```
UINT8 FSP_S_CONFIG::SerialIoSpi0CsPolarity[2]
```

Offset 0x0189 - SPI0 Chip Select Polarity Sets polarity for each chip Select.

Available options: 0:PchSerialIoCsActiveLow, 1:PchSerialIoCsActiveHigh

Definition at line 718 of file FspUpd.h.

13.36.2.204 SerialIoSpi1CsEnable

```
UINT8 FSP_S_CONFIG::SerialIoSpi1CsEnable[2]
```

Offset 0x0191 - SPI1 Chip Select Enable 0:Disabled, 1:Enabled.

Enables GPIO for CS0 or CS1 if it is Enabled

Definition at line 740 of file FspUpd.h.

13.36.2.205 SerialIoSpi1CsPolarity

```
UINT8 FSP_S_CONFIG::SerialIoSpi1CsPolarity[2]
```

Offset 0x018B - SPI1 Chip Select Polarity Sets polarity for each chip Select.

Available options: 0:PchSerialIoCsActiveLow, 1:PchSerialIoCsActiveHigh

Definition at line 724 of file FspUpd.h.

13.36.2.206 SerialIoSpi2CsEnable

```
UINT8 FSP_S_CONFIG::SerialIoSpi2CsEnable[2]
```

Offset 0x0193 - SPI2 Chip Select Enable 0:Disabled, 1:Enabled.

Enables GPIO for CS0 or CS1 if it is Enabled

Definition at line 745 of file FspUpd.h.

13.36.2.207 SerialIoSpi2CsPolarity

UINT8 FSP_S_CONFIG::SerialIoSpi2CsPolarity[2]

Offset 0x018D - SPI2 Chip Select Polarity Sets polarity for each chip Select.

Available options: 0:PchSerialIoCsActiveLow, 1:PchSerialIoCsActiveHigh

Definition at line 730 of file FspUpd.h.

13.36.2.208 SerialIoSpiDefaultCsOutput

UINT8 FSP_S_CONFIG::SerialIoSpiDefaultCsOutput[3]

Offset 0x0198 - SPIn Default Chip Select Output Sets Default CS as Output.

N represents controller index: SPI0, SPI1, ... Available options: 0:CS0, 1:CS1

Definition at line 757 of file FspUpd.h.

13.36.2.209 SerialIoSpiMode

UINT8 FSP_S_CONFIG::SerialIoSpiMode[3]

Offset 0x0195 - SPIn Device Mode Selects SPI operation mode.

N represents controller index: SPI0, SPI1, ... Available modes: 0:SerialIoSpiDisabled, 1:SerialIoSpiPci, 2:SerialIoSpiHidden

Definition at line 751 of file FspUpd.h.

13.36.2.210 SerialIoUartDataBits

UINT8 FSP_S_CONFIG::SerialIoUartDataBits[3]

Offset 0x01BB - Default DataBits for each Serial IO UART Set default word length.

0: Default, 5,6,7,8

Definition at line 797 of file FspUpd.h.

13.36.2.211 SerialIoUartDmaEnable

UINT8 FSP_S_CONFIG::SerialIoUartDmaEnable[3]

Offset 0x01C4 - Enable Dma for each Serial IO UART that supports it Set DMA/PIO mode.

0: Disabled, 1: Enabled

Definition at line 813 of file FspUpd.h.

13.36.2.212 SerialIoUartMode

```
UINT8 FSP_S_CONFIG::SerialIoUartMode[3]
```

Offset 0x01A7 - UARTn Device Mode Selects Uart operation mode.

N represents controller index: Uart0, Uart1, ... Available modes: 0:SerialIoUartDisabled, 1:SerialIoUartPci, 2:SerialIoUartHidden, 3:SerialIoUartCom, 4:SerialIoUartSkiplnit

Definition at line 778 of file FspUpd.h.

13.36.2.213 SerialIoUartParity

```
UINT8 FSP_S_CONFIG::SerialIoUartParity[3]
```

Offset 0x01B8 - Default ParityType for each Serial IO UART Set default Parity.

0: DefaultParity, 1: NoParity, 2: EvenParity, 3: OddParity

Definition at line 792 of file FspUpd.h.

13.36.2.214 SerialIoUartPowerGating

```
UINT8 FSP_S_CONFIG::SerialIoUartPowerGating[3]
```

Offset 0x01C1 - Power Gating mode for each Serial IO UART that works in COM mode Set Power Gating.

0: Disabled, 1: Enabled, 2: Auto

Definition at line 808 of file FspUpd.h.

13.36.2.215 SerialIoUartStopBits

```
UINT8 FSP_S_CONFIG::SerialIoUartStopBits[3]
```

Offset 0x01BE - Default StopBits for each Serial IO UART Set default stop bits.

0: DefaultStopBits, 1: OneStopBit, 2: OneFiveStopBits, 3: TwoStopBits

Definition at line 803 of file FspUpd.h.

13.36.2.216 ShowSpiController

```
UINT8 FSP_S_CONFIG::ShowSpiController
```

Offset 0x01D4 - Show SPI controller Enable/disable to show SPI controller.

\$EN_DIS

Definition at line 861 of file FspUpd.h.

13.36.2.217 SiCsmFlag

```
UINT8 FSP_S_CONFIG::SiCsmFlag
```

Offset 0x07B1 - Si Config CSM Flag.

Platform specific common policies that used by several silicon components. CSM status flag. \$EN_DIS

Definition at line 2533 of file FspUpd.h.

13.36.2.218 SiNumberOfSsidTableEntry

```
UINT16 FSP_S_CONFIG::SiNumberOfSsidTableEntry
```

Offset 0x07B8 - Number of ssid table.

SiNumberOfSsidTableEntry should match the table entries created in SiSsidTablePtr.

Definition at line 2547 of file FspUpd.h.

13.36.2.219 SiSsidTablePtr

```
UINT32 FSP_S_CONFIG::SiSsidTablePtr
```

Offset 0x07B4 - SVID SDID table Poniter.

The address of the table of SVID SDID to customize each SVID SDID entry.

Definition at line 2542 of file FspUpd.h.

13.36.2.220 SkipMplnitDeprecated

```
UINT8 FSP_S_CONFIG::SkipMpInitDeprecated
```

Offset 0x0149 - Deprecated DO NOT USE Skip Multi-Processor Initialization.

Deprecated SkipMplnit has been moved to FspmUpd \$EN_DIS

Definition at line 571 of file FspUpd.h.

13.36.2.221 SlowSlewRateForFivr

```
UINT8 FSP_S_CONFIG::SlowSlewRateForFivr
```

Offset 0x0151 - Slew Rate configuration for Deep Package C States for VR FIVR domain Slew Rate configuration for Deep Package C States for VR FIVR domain based on Acoustic Noise Mitigation feature enabled.

0: Fast/2; 1: Fast/4; 2: Fast/8; 3: Fast/16 0: Fast/2, 1: Fast/4, 2: Fast/8, 3: Fast/16

Definition at line 616 of file FspUpd.h.

13.36.2.222 SlowSlewRateForGt

```
UINT8 FSP_S_CONFIG::SlowSlewRateForGt
```

Offset 0x00F1 - Slew Rate configuration for Deep Package C States for VR GT domain Slew Rate configuration for Deep Package C States for VR GT domain based on Acoustic Noise Mitigation feature enabled.

0: Fast/2; 1: Fast/4; 2: Fast/8; 3: Fast/16 0: Fast/2, 1: Fast/4, 2: Fast/8, 3: Fast/16

Definition at line 478 of file FspUpd.h.

13.36.2.223 SlowSlewRateForIa

UINT8 FSP_S_CONFIG::SlowSlewRateForIa

Offset 0x00F0 - Slew Rate configuration for Deep Package C States for VR IA domain Slew Rate configuration for Deep Package C States for VR IA domain based on Acoustic Noise Mitigation feature enabled.

0: Fast/2; 1: Fast/4; 2: Fast/8; 3: Fast/16 0: Fast/2, 1: Fast/4, 2: Fast/8, 3: Fast/16

Definition at line 471 of file FspUpd.h.

13.36.2.224 SlowSlewRateForSa

UINT8 FSP_S_CONFIG::SlowSlewRateForSa

Offset 0x00F2 - Slew Rate configuration for Deep Package C States for VR SA domain Slew Rate configuration for Deep Package C States for VR SA domain based on Acoustic Noise Mitigation feature enabled.

0: Fast/2; 1: Fast/4; 2: Fast/8; 3: Fast/16 0: Fast/2, 1: Fast/4, 2: Fast/8, 3: Fast/16

Definition at line 485 of file FspUpd.h.

13.36.2.225 SlpS0DisQForDebug

UINT8 FSP_S_CONFIG::SlpS0DisQForDebug

Offset 0x0628 - S0ix Override Settings Select 'Auto', it will be auto-configured according to probe type.

'No Change' will keep PMC default settings. Or select the desired debug probe type for S0ix Override settings.

Reminder: DCI OOB (aka BSSB) uses CCA probe.

Note: This BIOS option should keep 'Auto', other options are intended for advanced configuration only. 0:No Change, 1:DCI OOB, 2:USB2 DbC, 3:Auto

Definition at line 1816 of file FspUpd.h.

13.36.2.226 SlpS0Override

UINT8 FSP_S_CONFIG::SlpS0Override

Offset 0x0627 - SLP_S0# Override Select 'Auto', it will be auto-configured according to probe type.

Select 'Enabled' will disable SLP_S0# assertion whereas 'Disabled' will enable SLP_S0# assertion when debug is enabled.

Note: This BIOS option should keep 'Auto', other options are intended for advanced configuration only. 0:Disabled, 1:Enabled, 2:Auto

Definition at line 1805 of file FspUpd.h.

13.36.2.227 SlpS0WithGbeSupport

UINT8 FSP_S_CONFIG::SlpS0WithGbeSupport

Offset 0x036F - SlpS0WithGbeSupport Enable/Disable SLP_S0 with GBE Support.

Default is 0 for PCH-LP, WHL V0 Stepping CPU and 1 for PCH-H Series. 0: Disable, 1: Enable \$EN_DIS

Definition at line 1327 of file FspUpd.h.

13.36.2.228 SpiFlashCfgLockDown

UINT8 FSP_S_CONFIG::SpiFlashCfgLockDown

Offset 0x0757 - Flash Configuration Lock Down Enable/disable flash lock down.

If platform decides to skip this programming, it must lock SPI flash register DLOCK, FLOCKDN, and WRSDIS before end of post. \$EN_DIS

Definition at line 2457 of file FspUpd.h.

13.36.2.229 TcolrqSelect

UINT8 FSP_S_CONFIG::TcoIrqSelect

Offset 0x0213 - Select TcolrqSelect TCO IRQ Select.

The valid value is 9, 10, 11, 20, 21, 22, 23.

Definition at line 934 of file FspUpd.h.

13.36.2.230 TdcPowerLimit

UINT16 FSP_S_CONFIG::TdcPowerLimit[5]

Offset 0x00F4 - Thermal Design Current current limit PCODE MMIO Mailbox: Thermal Design Current current limit.

Specified in 1/8A units. Range is 0-4095. 1000 = 125A. **0: Auto**. For all VR Indexes

Definition at line 495 of file FspUpd.h.

13.36.2.231 TdcTimeWindow

UINT8 FSP_S_CONFIG::TdcTimeWindow[5]

Offset 0x00E2 - HECI3 state PCODE MMIO Mailbox: Thermal Design Current time window.

Defined in milli seconds. Valid Values 1 - 1ms , 2 - 2ms , 3 - 3ms , 4 - 4ms , 5 - 5ms , 6 - 6ms , 7 - 7ms , 8 - 8ms , 10 - 10ms. For all VR Indexe

Definition at line 431 of file FspUpd.h.

13.36.2.232 TetonGlacierCR

UINT8 FSP_S_CONFIG::TetonGlacierCR

Offset 0x0618 - Teton Glacier Cycle Router Specify to which cycle router Teton Glacier is connected, it is valid only when Teton Glacier support is enabled.

Default is 0 for CNP-H system and 1 for CNP-LP system

Definition at line 1714 of file FspUpd.h.

13.36.2.233 TetonGlacierMode

```
UINT8 FSP_S_CONFIG::TetonGlacierMode
```

Offset 0x061C - Teton Glacier Detection and Configuration Mode Enables support for Teton Glacier hybrid storage device.

0: Disabled; 1: Dynamic Configuration. Default is 0: Disabled 0: Disabled, 1: Dynamic Configuration

Definition at line 1738 of file FspUpd.h.

13.36.2.234 TTSuggestedSetting

```
UINT8 FSP_S_CONFIG::TTSuggestedSetting
```

Offset 0x06B3 - Thermal Throttling Suggested Setting Thermal Throttling Suggested Setting.

\$EN_DIS

Definition at line 2151 of file FspUpd.h.

13.36.2.235 TurboMode

```
UINT8 FSP_S_CONFIG::TurboMode
```

Offset 0x0038 - Turbo Mode Enable/Disable Turbo mode.

0: disable, 1: enable \$EN_DIS

Definition at line 127 of file FspUpd.h.

13.36.2.236 TxtEnable

```
UINT8 FSP_S_CONFIG::TxtEnable
```

Offset 0x0148 - Enable or Disable TXT Enable or Disable TXT; 0: Disable; **1: Enable.**

\$EN_DIS

Definition at line 565 of file FspUpd.h.

13.36.2.237 Usb2AfePehalfbit

```
UINT8 FSP_S_CONFIG::Usb2AfePehalfbit[16]
```

Offset 0x024F - USB Per Port Half Bit Pre-emphasis USB Per Port Half Bit Pre-emphasis.

1b - half-bit pre-emphasis, 0b - full-bit pre-emphasis. One byte for each port.

Definition at line 995 of file FspsUpd.h.

13.36.2.238 Usb2AfePetxiset

```
UINT8 FSP_S_CONFIG::Usb2AfePetxiset[16]
```

Offset 0x021F - USB Per Port HS Preemphasis Bias USB Per Port HS Preemphasis Bias.

000b-0mV, 001b-11.25mV, 010b-16.9mV, 011b-28.15mV, 100b-28.15mV, 101b-39.35mV, 110b-45mV, 111b-56.↵
3mV. One byte for each port.

Definition at line 977 of file FspsUpd.h.

13.36.2.239 Usb2AfePredeemp

```
UINT8 FSP_S_CONFIG::Usb2AfePredeemp[16]
```

Offset 0x023F - USB Per Port HS Transmitter Emphasis USB Per Port HS Transmitter Emphasis.

00b - Emphasis OFF, 01b - De-emphasis ON, 10b - Pre-emphasis ON, 11b - Pre-emphasis & De-emphasis ON.
One byte for each port.

Definition at line 989 of file FspsUpd.h.

13.36.2.240 Usb2AfeTxiset

```
UINT8 FSP_S_CONFIG::Usb2AfeTxiset[16]
```

Offset 0x022F - USB Per Port HS Transmitter Bias USB Per Port HS Transmitter Bias.

000b-0mV, 001b-11.25mV, 010b-16.9mV, 011b-28.15mV, 100b-28.15mV, 101b-39.35mV, 110b-45mV, 111b-56.↵
3mV, One byte for each port.

Definition at line 983 of file FspsUpd.h.

13.36.2.241 Usb3HsioTxDeEmph

```
UINT8 FSP_S_CONFIG::Usb3HsioTxDeEmph[10]
```

Offset 0x0269 - USB 3.0 TX Output -3.5dB De-Emphasis Adjustment Setting USB 3.0 TX Output -3.5dB De-↵
Emphasis Adjustment Setting, HSIO_TX_DWORD5[21:16], **Default = 29h** (approximately -3.5dB De-Emphasis).

One byte for each port.

Definition at line 1007 of file FspsUpd.h.

13.36.2.242 Usb3HsioTxDeEmphEnable

```
UINT8 FSP_S_CONFIG::Usb3HsioTxDeEmphEnable[10]
```

Offset 0x025F - Enable the write to USB 3.0 TX Output -3.5dB De-Emphasis Adjustment Enable the write to USB
3.0 TX Output -3.5dB De-Emphasis Adjustment.

Each value in array can be between 0-1. One byte for each port.

Definition at line 1001 of file FspUpd.h.

13.36.2.243 Usb3HsioTxDownscaleAmp

UINT8 FSP_S_CONFIG::Usb3HsioTxDownscaleAmp[10]

Offset 0x027D - USB 3.0 TX Output Downscale Amplitude Adjustment USB 3.0 TX Output Downscale Amplitude Adjustment, HSIO_TX_DWORD8[21:16], **Default = 00h**.

One byte for each port.

Definition at line 1019 of file FspUpd.h.

13.36.2.244 Usb3HsioTxDownscaleAmpEnable

UINT8 FSP_S_CONFIG::Usb3HsioTxDownscaleAmpEnable[10]

Offset 0x0273 - Enable the write to USB 3.0 TX Output Downscale Amplitude Adjustment Enable the write to USB 3.0 TX Output Downscale Amplitude Adjustment, Each value in array can be between 0-1.

One byte for each port.

Definition at line 1013 of file FspUpd.h.

13.36.2.245 Usb3HsioTxRate0UniqTran

UINT8 FSP_S_CONFIG::Usb3HsioTxRate0UniqTran[10]

Offset 0x0742 - USB 3.0 TX Output Unique Transition Bit Scale for rate 0 USB 3.0 TX Output Unique Transition Bit Scale for rate 0, HSIO_TX_DWORD9[30:24], **Default = 4Ch**.

One byte for each port.

Definition at line 2425 of file FspUpd.h.

13.36.2.246 Usb3HsioTxRate0UniqTranEnable

UINT8 FSP_S_CONFIG::Usb3HsioTxRate0UniqTranEnable[10]

Offset 0x0738 - Enable the write to USB 3.0 TX Output Unique Transition Bit Mode for rate 0 Enable the write to USB 3.0 TX Output Unique Transition Bit Mode for rate 0, Each value in array can be between 0-1.

One byte for each port.

Definition at line 2419 of file FspUpd.h.

13.36.2.247 Usb3HsioTxRate1UniqTran

UINT8 FSP_S_CONFIG::Usb3HsioTxRate1UniqTran[10]

Offset 0x072E - USB 3.0 TX Output Unique Transition Bit Scale for rate 1 USB 3.0 TX Output Unique Transition Bit Scale for rate 1, HSIO_TX_DWORD9[22:16], **Default = 4Ch**.

One byte for each port.

Definition at line 2413 of file FspUpd.h.

13.36.2.248 Usb3HsioTxRate1UniqTranEnable

```
UINT8 FSP_S_CONFIG::Usb3HsioTxRate1UniqTranEnable[10]
```

Offset 0x0724 - Enable the write to USB 3.0 TX Output Unique Transition Bit Mode for rate 1 Enable the write to USB 3.0 TX Output Unique Transition Bit Mode for rate 1, Each value in array can be between 0-1.

One byte for each port.

Definition at line 2407 of file FspUpd.h.

13.36.2.249 Usb3HsioTxRate2UniqTran

```
UINT8 FSP_S_CONFIG::Usb3HsioTxRate2UniqTran[10]
```

Offset 0x071A - USB 3.0 TX Output Unique Transition Bit Scale for rate 2 USB 3.0 TX Output Unique Transition Bit Scale for rate 2, HSIO_TX_DWORD9[14:8], **Default = 4Ch.**

One byte for each port.

Definition at line 2401 of file FspUpd.h.

13.36.2.250 Usb3HsioTxRate2UniqTranEnable

```
UINT8 FSP_S_CONFIG::Usb3HsioTxRate2UniqTranEnable[10]
```

Offset 0x0710 - Enable the write to USB 3.0 TX Output Unique Transition Bit Mode for rate 2 Enable the write to USB 3.0 TX Output Unique Transition Bit Mode for rate 2, Each value in array can be between 0-1.

One byte for each port.

Definition at line 2395 of file FspUpd.h.

13.36.2.251 Usb3HsioTxRate3UniqTran

```
UINT8 FSP_S_CONFIG::Usb3HsioTxRate3UniqTran[10]
```

Offset 0x0706 - USB 3.0 TX Output Unique Transition Bit Scale for rate 3 USB 3.0 TX Output Unique Transition Bit Scale for rate 3, HSIO_TX_DWORD9[6:0], **Default = 4Ch.**

One byte for each port.

Definition at line 2389 of file FspUpd.h.

13.36.2.252 Usb3HsioTxRate3UniqTranEnable

```
UINT8 FSP_S_CONFIG::Usb3HsioTxRate3UniqTranEnable[10]
```

Offset 0x06FC - Enable the write to USB 3.0 TX Output Unique Transition Bit Mode for rate 3 Enable the write to USB 3.0 TX Output Unique Transition Bit Mode for rate 3, Each value in array can be between 0-1.

One byte for each port.

Definition at line 2383 of file FspUpd.h.

13.36.2.253 UsbPdoProgramming

UINT8 FSP_S_CONFIG::UsbPdoProgramming

Offset 0x02AC - USB PDO Programming Enable/disable PDO programming for USB in PEI phase.

Disabling will allow for programming during later phase. 1: enable, 0: disable \$EN_DIS

Definition at line 1137 of file FspUpd.h.

13.36.2.254 VrPowerDeliveryDesign

UINT32 FSP_S_CONFIG::VrPowerDeliveryDesign

Offset 0x0164 - CPU VR Power Delivery Design Used to communicate the power delivery design capability of the board.

This value is an enum of the available power delivery segments that are defined in the Platform Design Guide.

Definition at line 648 of file FspUpd.h.

13.36.2.255 VrVoltageLimit

UINT16 FSP_S_CONFIG::VrVoltageLimit[5]

Offset 0x013A - VR Voltage Limit PCODE MMIO Mailbox: VR Voltage Limit.

Range is 0-7999mV.

Definition at line 532 of file FspUpd.h.

13.36.2.256 WatchDogEnabled

UINT8 FSP_S_CONFIG::WatchDogEnabled

Offset 0x003D - WatchDog Timer Switch Enable/Disable.

0: Disable, 1: enable, Enable or disable WatchDog timer. Setting is invalid if AmtEnabled is 0. \$EN_DIS

Definition at line 159 of file FspUpd.h.

13.36.2.257 WatchDogTimerBios

UINT16 FSP_S_CONFIG::WatchDogTimerBios

Offset 0x0044 - BIOS Timer 16 bits Value, Set BIOS watchdog timer.

Setting is invalid if AmtEnabled is 0.

Definition at line 193 of file FspUpd.h.

13.36.2.258 WatchDogTimerOs

UINT16 FSP_S_CONFIG::WatchDogTimerOs

Offset 0x0042 - OS Timer 16 bits Value, Set OS watchdog timer.

Setting is invalid if AmtEnabled is 0.

Definition at line 188 of file FspsUpd.h.

13.36.2.259 XdciEnable

UINT8 FSP_S_CONFIG::XdciEnable

Offset 0x0200 - Enable xDCI controller Enable/disable to xDCI controller.

\$EN_DIS

Definition at line 897 of file FspsUpd.h.

The documentation for this struct was generated from the following file:

- [FspsUpd.h](#)

13.37 FSP_S_RESTRICTED_CONFIG Struct Reference

Fsp S Restricted Configuration.

```
#include <FspsUpd.h>
```

Public Attributes

- [UINT32 Signature](#)
Offset 0x0AD0.
- [UINT8 TestGnaErrorCheckDis](#)
Offset 0x0AD4 - Enable or disable GNA Error Check Disable Bit 0=Disable, 1(Default)=Enable \$EN_DIS.
- [UINT8 DmaPassThroughDeprecated](#)
Offset 0x0AD5 - Enable or disable VT-d DmaPassThrough 0=Disable, 1(Default)=Enable \$EN_DIS.
- [UINT8 CCHit2pendDeprecated](#)
Offset 0x0AD6 - Enable or disable VT-d CCHit2pend 0=Disable, 1(Default)=Enable \$EN_DIS.
- [UINT8 ContextInvalidationDeprecated](#)
Offset 0x0AD7 - Enable or disable VT-d ContextInvalidation 0(Default)=Disable, 1=Enable \$EN_DIS.
- [UINT8 lotlbInvalidationDeprecated](#)
Offset 0x0AD8 - Enable or disable VT-d lotlbInvalidation 0(Default)=Disable, 1=Enable \$EN_DIS.
- [UINT8 ContextCacheDisDeprecated](#)
Offset 0x0AD9 - Enable or disable VT-d ContextCacheDis 0=Disable, 1(Default)=Enable \$EN_DIS.
- [UINT8 L1DisableDeprecated](#)
Offset 0x0ADA - Enable or disable VT-d L1Disable 0=Disable, 1(Default)=Enable \$EN_DIS.
- [UINT8 L2DisableDeprecated](#)
Offset 0x0ADB - Enable or disable VT-d L2Disable 0=Disable, 1(Default)=Enable \$EN_DIS.
- [UINT8 L3DisableDeprecated](#)
Offset 0x0ADC - Enable or disable VT-d L3Disable 0=Disable, 1(Default)=Enable \$EN_DIS.
- [UINT8 L1Hit2PendDisDeprecated](#)
Offset 0x0ADD - Enable or disable VT-d L1Hit2PendDis 0=Disable, 1(Default)=Enable \$EN_DIS.

- UINT8 [L3Hit2PendDisDeprecated](#)
Offset 0x0ADE - Enable or disable VT-d L3Hit2PendDis 0=Disable, 1(Default)=Enable \$EN_DIS.
 - UINT8 [InvQueueCohDisDeprecated](#)
Offset 0x0ADF - Enable or disable VT-d InvQueueCohDis 0=Disable, 1(Default)=Enable \$EN_DIS.
 - UINT8 [SuperPageCapDeprecated](#)
Offset 0x0AE0 - Enable or disable VT-d SuperPageCap 0=Disable, 1(Default)=Enable \$EN_DIS.
 - UINT8 [QueueInvCapDisDeprecated](#)
Offset 0x0AE1 - Enable or disable VT-d QueueInvCapDis 0=Disable, 1(Default)=Enable \$EN_DIS.
 - UINT8 [TestIntrRemapCapDisDeprecated](#)
Offset 0x0AE2 - Enable or disable VT-d IntrRemapCapDis 0=Disable, 1(Default)=Enable \$EN_DIS.
 - UINT8 [SnoopControlDeprecated](#)
Offset 0x0AE3 - Enable or disable VT-d SnoopControl 0=Disable, 1(Default)=Enable \$EN_DIS.
 - UINT8 [RemapReverseCtrlDeprecated](#)
Offset 0x0AE4 - Enable or disable VT-d RemapReverseCtrl 0=Disable, 1(Default)=Enable \$EN_DIS.
 - UINT8 [VtdSvPolicyEnable](#)
Offset 0x0AE5 - Enable or disable VT-d SvPolicyEnable 0(Default)=Disable, 1=Enable \$EN_DIS.
 - UINT8 [SaTestForceWake](#)
Offset 0x0AE6 - Sa Graphics Pei Test Force Wake Test Force Wake.
 - UINT8 [SaTestGfxPause](#)
Offset 0x0AE7 - Sa Graphics Pei Test Gfx Pause Test Gfx Pause.
 - UINT8 [SaTestGraphicsFreqModify](#)
Offset 0x0AE8 - Sa Graphics Pei Test Graphics Freq Modify Test Graphics Freq Modify.
 - UINT8 [SaTestPmLock](#)
Offset 0x0AE9 - Sa Graphics Pei Test PmLock Test PmLock.
 - UINT8 [SaTestPavpHeavyMode](#)
Offset 0x0AEA - Sa Graphics Pei Test Pavp Heavy Mode Test Pavp Heavy Mode.
 - UINT8 [SaTestDopClockGating](#)
Offset 0x0AEB - Sa Graphics Pei Test Dop ClockGating Test Dop ClockGating.
 - UINT8 [SaTestUnsolicitedAttackOverride](#)
Offset 0x0AEC - Sa Graphics Pei Test Unsolicited Attack Override Test Unsolicited Attack Override.
 - UINT8 [SaTestWOPCMSupport](#)
Offset 0x0AED - Sa Graphics Pei Test WOPCM Support Test WOPCM Support.
 - UINT8 [SaTestPavpAsmf](#)
Offset 0x0AEE - Sa Graphics Pei Test Pavp Asmf Test Pavp Asmf.
 - UINT8 [SaTestPowerGating](#)
Offset 0x0AEF - Sa Graphics Pei Test Power Gating Test Power Gating.
 - UINT8 [SaTestUnitLevelClockGating](#)
Offset 0x0AF0 - Sa Graphics Pei Test Unit Level ClockGating Test Unit Level ClockGating.
 - UINT8 [SaTestAutoTearDown](#)
Offset 0x0AF1 - Sa Graphics Pei Test Auto TearDown Test Auto TearDown.
 - UINT8 [SaTestGraphicsVideoFreq](#)
Offset 0x0AF2 - Sa Graphics Pei Test Graphics Video Freq Test Graphics Video Freq.
 - UINT8 [SaTestWOPCMSize](#)
Offset 0x0AF3 - Sa Graphics Pei Test WOPCM Size Test WOPCM Size.
 - UINT8 [SaTestGraphicsFreqReq](#)
Offset 0x0AF4 - Sa Graphics Pei Test Graphics Freq Req Test Graphics Freq Req.
 - UINT8 [SaTestPegAspmL0sAggression](#) [4]
Offset 0x0AF5 - Sa Test Peg Aspm L0s Aggression Test Peg Aspm L0s Aggression.
 - UINT8 [SaClearCorrUnCorrErrEnable](#)
Offset 0x0AF9 - Sa Clear CorrUnCorrErr Enable Clear CorrUnCorrErr Enable \$EN_DIS.
 - UINT8 [SaSvPegArifen](#) [4]
-

- Offset 0x0AFA - Sa SvPegArifen SvPegArifen.*
 - UINT8 [SaPeg0CompletionTimeout](#)
 - Offset 0x0AFE - Sa Peg0 Completion Timeout Peg0 Completion Timeout.*
 - UINT8 [SaPeg1CompletionTimeout](#)
 - Offset 0x0AFF - Sa Peg1 Completion Timeout Peg1 Completion Timeout.*
 - UINT8 [SaPeg2CompletionTimeout](#)
 - Offset 0x0B00 - Sa Peg2 Completion Timeout Peg2 Completion Timeout.*
 - UINT8 [SaPeg3CompletionTimeout](#)
 - Offset 0x0B01 - Sa Peg3 Completion Timeout Peg3 Completion Timeout.*
 - UINT8 [SaSvPegComplianceDeemphasis](#) [4]
 - Offset 0x0B02 - Sa Sv Peg Compliance Deemphasis SvPegComplianceDeemphasis.*
 - UINT8 [SaSvPegTxLnStaggeringMode](#) [4]
 - Offset 0x0B06 - Sa Sv Peg TxLn Staggering Mode SvPegTxLnStaggeringMode.*
 - UINT8 [SaSvPegTxLaneStaggeringInterval](#) [4]
 - Offset 0x0B0A - Sa Sv Peg TxLane Staggering Interval SvPegTxLaneStaggeringInterval.*
 - UINT8 [SaSvPegRxLnStaggeringMode](#) [4]
 - Offset 0x0B0E - Sa Sv Peg RxLn Staggering Mode SvPegRxLnStaggeringMode.*
 - UINT8 [SaSvPegRxLaneStaggeringInterval](#) [4]
 - Offset 0x0B12 - Sa Sv Peg RxLane Staggering Interval SvPegRxLaneStaggeringInterval.*
 - UINT8 [SaTestMpllOffSen](#)
 - Offset 0x0B16 - Sa Test MpllOffSen TestMpllOffSen.*
 - UINT8 [SaTestMdllOffSen](#)
 - Offset 0x0B17 - Sa Test MdllOffSen TestMdllOffSen.*
 - UINT8 [SaTestModeEdramInternal](#)
 - Offset 0x0B18 - Sa Test Mode Edram Internal Edram Enable Option.*
 - UINT8 [SaTestSecurityLock](#)
 - Offset 0x0B19 - Sa Test Security Lock Enable/Disable Security lock.*
 - UINT8 [SaTestSpcLock](#)
 - Offset 0x0B1A - Sa Graphics Pei Test SPC Lock Test Spc Lock 0: POR (Enable), 1: Enable, 2: Disable.*
 - UINT8 [SaTestTouchLock](#)
 - Offset 0x0B1B - Sa Itouch Doorbell Lock Enable Sa Itouch Doorbell Lock \$EN_DIS.*
 - UINT8 [SaPostMemRestrictedRsvd](#) [21]
 - Offset 0x0B1C - SaPostMemRestrictedRsvd Reserved for SA Post-Mem Restricted \$EN_DIS.*
 - UINT8 [CpuPostMemRestrictedRsvd](#) [15]
 - Offset 0x0B31 - CpuPostMemRestrictedRsvd Reserved for CPU Post-Mem Restricted \$EN_DIS.*
 - UINT8 [SkipAcpiNvs](#)
 - Offset 0x0B40 - SkipAcpiNvs SkipAcpiNvs default values.*
 - UINT8 [EnableSgx7a](#)
 - Offset 0x0B41 - EnableSgx7a EnableSgx7a default values.*
 - UINT8 [SgxDebugMode](#)
 - Offset 0x0B42 - SgxDebugMode SgxDebugMode default values.*
 - UINT8 [SvLtEnable](#)
 - Offset 0x0B43 - SvLtEnable SvLtEnable default values.*
 - UINT16 [SelectiveEnableSgx](#)
 - Offset 0x0B44 - SelectiveEnableSgx Deprecated.*
 - UINT8 [UnusedUpdSpace33](#) [2]
 - Offset 0x0B46.*
 - UINT64 [EpcOffset](#)
 - Offset 0x0B48 - EpcOffset EpcOffset default values.*
 - UINT64 [EpcLength](#)
 - Offset 0x0B50 - EpcLength EpcLength default values.*
-

- UINT8 [SgxLCP](#)
Offset 0x0B58 - SgxLCP SgxLCP default values.
 - UINT8 [UnusedUpdSpace34](#) [7]
Offset 0x0B59.
 - UINT64 [SgxLEPubKeyHash0](#)
Offset 0x0B60 - EpcLength EpcLength default values.
 - UINT64 [SgxLEPubKeyHash1](#)
Offset 0x0B68 - EpcLength EpcLength default values.
 - UINT64 [SgxLEPubKeyHash2](#)
Offset 0x0B70 - EpcLength EpcLength default values.
 - UINT64 [SgxLEPubKeyHash3](#)
Offset 0x0B78 - EpcLength EpcLength default values.
 - UINT32 [SelectiveEnableSgx1](#)
Offset 0x0B80 - SelectiveEnableSgx1 SelectiveEnableSgx1 default values.
 - UINT8 [PchDmiTestMemCloseStateEn](#)
Offset 0x0B84 - MEM CLOSED State on PCH side Enable/Disable MEM CLOSED State on PCH side.
 - UINT8 [PchDmiTestInternalObffEn](#)
Offset 0x0B85 - Optimized Buffer Flush/Fill (OBFF) protocol for internal on PCH side enable/disable Optimized Buffer Flush/Fill (OBFF) protocol for internal on PCH side.
 - UINT8 [PchDmiTestDmiExtSync](#)
Offset 0x0B86 - Determines if force extended transmission of FTS ordered sets Determines if force extended transmission of FTS ordered sets when exiting L0s prior to entering L0.
 - UINT8 [PchDmiTestExternalObffEn](#)
Offset 0x0B87 - Optimized Buffer Flush/Fill (OBFF) protocol for external on PCH side Enable/Disable Optimized Buffer Flush/Fill (OBFF) protocol for external on PCH side.
 - UINT8 [PchDmiTestClientObffEn](#)
Offset 0x0B88 - Client Obff Enable Client Obff Enable.
 - UINT8 [PchDmiTestCxObffEntryDelay](#)
Offset 0x0B89 - CxObff Entry Delay CxObff Entry Delay.
 - UINT8 [PchDmiTestPchTcLockDown](#)
Offset 0x0B8A - Pch Tc Lock Down Pch Tc Lock Down.
 - UINT8 [PchDmiTestDelayEnDmiAspm](#)
Offset 0x0B8B - Enable DMI ASPM after booting to OS Enable DMI ASPM after booting to OS.
 - UINT8 [PchDmiTestDmiSecureRegLock](#)
Offset 0x0B8C - DMI Secure Reg Lock DMI Secure Reg Lock.
 - UINT8 [PchHdaTestConfigLockdown](#)
Offset 0x0B8D - Configuration Lockdown (BCLD) 0: POR (Enable), 1: Enable, 2: Disable.
 - UINT8 [PchHdaTestLowFreqLinkClkSrc](#)
Offset 0x0B8E - Low Frequency Link Clock Source (LFLCS) 0: POR (Enable), 1: Enable (XTAL), 2: Disable (Audio PLL).
 - UINT8 [PchLanTestPchWOLFastSupport](#)
Offset 0x0B8F - PCH Lan Test WOL Fast Support Enables bit B_PCH_ACPI_GPE0_EN_127_96_PME_B0 during PchLanSxCallback in PchLanSxSmm.
 - UINT8 [PchLockDownTestSmiUnlock](#)
Offset 0x0B90 - Smi Unlock bit for SV policy 0: Lock; 1: Unlock.
 - UINT8 [PchPostMemRestrictedRsvd](#) [24]
Offset 0x0B91 - PchPostMemRestrictedRsvd Reserved for PCH Post-Mem Restricted Reserved \$EN_DIS.
 - UINT8 [PcieRpTestEqPh2Override](#) [24]
Offset 0x0BA9 - Gen3 EQ Phase2 Tx override Coefficient requested by the remote device is ignored.
 - UINT8 [PcieRpTestEqPh2Preset](#) [24]
Offset 0x0BC1 - Tx preset to use when TestEqPh2Override is set Tx preset to use when TestEqPh2Override is set.
 - UINT8 [PcieRpTestAspmOc](#) [24]
-

- Offset 0x0BD9 - Enable/Disable ASPM Optionality Compliance Enable/Disable ASPM Optionality Compliance.*
 - UINT8 [PcieRpTestForcelTrOverride](#) [24]
Offset 0x0BF1 - Force LTR Override Force LTR Override.
 - UINT8 [PcieTestPchPciebem](#)
Offset 0x0C09 - PCH Pcie bem PCH Pcie bem.
 - UINT8 [PcieTestPchPciebemPortIndex](#)
Offset 0x0C0A - PCH Pcie Test bem Port Index PCH Pcie Test bem Port Index.
 - UINT8 [PcieTestPchPcieRpdcbgen](#)
Offset 0x0C0B - PCH Test PcieRp dbc gen PCH Test PcieRp dbc gen.
 - UINT8 [PcieTestPchPcieRpdlcgen](#)
Offset 0x0C0C - PCH Test PcieRp dlc gen PCH Test PcieRp dlc gen.
 - UINT8 [PcieTestPchPcieDcgeisma](#)
Offset 0x0C0D - PCH Test Pcie Dcgeisma PCH Test Pcie Dcgeisma.
 - UINT8 [PcieTestPchPcieRpscgen](#)
Offset 0x0C0E - PCH Test PcieRp scgen PCH Test PcieRp scgen.
 - UINT8 [PcieTestPchPcieSrdcbgen](#)
Offset 0x0C0F - PCH Test Pcie Srdcbgen PCH Test Pcie Srdcbgen.
 - UINT8 [PcieTestPchPcieScptcge](#)
Offset 0x0C10 - PCH Test Pcie Scptcge PCH Test Pcie Scptcge.
 - UINT8 [PcieTestPchPcieFdppge](#)
Offset 0x0C11 - PCH Test Pcie Fdppge PCH Test Pcie Fdppge.
 - UINT8 [PcieTestPchPciePhyclpge](#)
Offset 0x0C12 - PCH Test Pcie Phyclpge PCH Test Pcie Phyclpge.
 - UINT8 [PcieTestPchPcieFdcpgge](#)
Offset 0x0C13 - PCH Test Pcie Fdcpgge PCH Test Pcie Fdcpgge.
 - UINT8 [PcieTestPchPcieDetscpge](#)
Offset 0x0C14 - PCH Test Pcie Detscpge PCH Test Pcie Detscpge.
 - UINT8 [PcieTestPchPcieL23rdyscpge](#)
Offset 0x0C15 - PCH Test Pcie L23 rdyscpge PCH Test Pcie L23 rdyscpge.
 - UINT8 [PcieTestPchPcieDisscpge](#)
Offset 0x0C16 - PCH Test Pcie Disscpge PCH Test Pcie Disscpge.
 - UINT8 [PcieTestPchPcieL1scpge](#)
Offset 0x0C17 - PCH Test Pcie L1 scpge PCH Test Pcie L1 scpge.
 - UINT8 [PcieTestLaneEqEn](#)
Offset 0x0C18 - PCH Pcie Test Lane Eq En PCH PcieTest Lane Eq En.
 - UINT8 [PchPmTestPchPmRegisterLock](#)
Offset 0x0C19 - PCH Pm Register Lock PCH Pm Register Lock.
 - UINT8 [PchPmTestSlpS0CsMePgQDis](#)
Offset 0x0C1A - PCH Pm Test SlpS0 CsMe PgQDis CPPM VRIC CSME Power Gated Qualification Disable.
 - UINT8 [PchPmTestSlpS0GbeDiscQDis](#)
Offset 0x0C1B - PCH Pm Test Slp S0 Gbe Disc QDis CPPM VRIC GbE Disconnected Qualification Disable.
 - UINT8 [PchPmTestSlpS0ADspD3QDis](#)
Offset 0x0C1C - PCH Pm Test Slp S0A Dsp D3 QDis CPPM VRIC Audio DSP is in D3 Qualification Disable.
 - UINT8 [PchPmTestSlpS0XhciD3QDis](#)
Offset 0x0C1D - PCH Pm Test Slp S0 Xhci D3QDis CPPM VRIC XHCI is in D3 Qualification Disable.
 - UINT8 [PchPmTestSlpS0LpioD3QDis](#)
Offset 0x0C1E - PCH Pm Test Slp S0 Lpio D3QDis CPPM VRIC LPIO is in D3 Qualification Disable.
 - UINT8 [PchPmTestSlpS0IccPIIWBEEn](#)
Offset 0x0C1F - PCH Pm Test Slp S0 Icc PII W BEEn CPPM VRIC ICC PLL Wake Block Enable.
 - UINT8 [PchPmTestSlpS0PUGBEn](#)
Offset 0x0C20 - PCH Pm Test Slp S0 PUGB En PCH Pm CPPM VRIC Power Ungate Block Enable.
-

- UINT8 [PchPmTestPchClearPowerSts](#)
Offset 0x0C21 - PCH Pm Test Clear Power Sts.
 - UINT8 [SataTestRstPcieStorageTestMode](#) [3]
Offset 0x0C22 - PCH Sata Test Rst Pcie Storage Test Mode PCIe Storage remapping Test Mode to override existing PCIe Storage remapping POR setting for development purpose.
 - UINT8 [SataTestRstPcieStoragePortConfigCheck](#) [3]
Offset 0x0C25 - PCH Sata Test Rst Pcie Storage Port Config Check Enable/Disable Port Configuration Check for RST PCIe Storage Remapping.
 - UINT8 [SataTestRstPcieStorageDeviceInterface](#) [3]
Offset 0x0C28 - PCH Sata Test Rst Pcie Storage Device Interface Select the device interface (AHCI/NVME) for remapped device.
 - UINT8 [SataTestRstPcieStorageDeviceBarSizeCheck](#) [3]
Offset 0x0C2B - PCH Sata Test Rst Pcie Storage Device Bar Size Check Enable/Disable Device BAR Size Check for remapped device.
 - UINT8 [SataTestRstPcieStorageDeviceBarSelect](#) [3]
Offset 0x0C2E - PCH Sata Test Rst Pcie Storage Device Bar Select Select the device BAR (BAR0-BAR5) that will be used for Remapping.
 - UINT8 [SataTestRstPcieStorageDeviceInterrupt](#) [3]
Offset 0x0C31 - PCH Sata Test Rst Pcie Storage Device Interrupt Select the device interrupt (Legacy/MSIX) for remapped device.
 - UINT8 [SataTestRstPcieStorageAspmProgramming](#) [3]
Offset 0x0C34 - PCH Sata Test Rst Pcie Storage Aspm Programming Enable/Disable ASPM Programming for remapped device.
 - UINT8 [SataTestRstPcieStorageSaveRestore](#) [3]
Offset 0x0C37 - PCH Sata Test Rst Pcie Storage Save Restore Enable/Disable ASPM Programming for remapped device.
 - UINT8 [SataTestLtrEnable](#)
Offset 0x0C3A - Latency Tolerance Reporting Mechanism Latency Tolerance Reporting Mechanism.
 - UINT8 [SataTestLtrConfigLock](#)
Offset 0x0C3B - Latency Tolerance Reporting Mechanism Latency Tolerance Reporting Mechanism.
 - UINT8 [SataTestLtrOverride](#)
Offset 0x0C3C - Latency Tolerance Reporting Mechanism Latency Tolerance Reporting Mechanism.
 - UINT8 [SataTestSnoopLatencyOverrideMultiplier](#)
Offset 0x0C3D - Latency Tolerance Reporting Mechanism Latency Tolerance Reporting Mechanism.
 - UINT16 [SataTestSnoopLatencyOverrideValue](#)
Offset 0x0C3E - Latency Tolerance Reporting Mechanism Latency Tolerance Reporting Mechanism.
 - UINT8 [SataTestSataAssel](#)
Offset 0x0C40 - Latency Tolerance Reporting Mechanism Latency Tolerance Reporting Mechanism.
 - UINT8 [PchTestTselLock](#)
Offset 0x0C41 - This locks down Enables the thermal sensor 0: Disabled, 1: Enabled.
 - UINT8 [PchTestTscLock](#)
Offset 0x0C42 - This locks down Catastrophic Power-Down Enable and Catastrophic Trip Point Register 0: Disabled, 1: Enabled.
 - UINT8 [PchTestPhlcLock](#)
Offset 0x0C43 - This locks down PHL and PHLC 0: Disabled, 1: Enabled.
 - UINT32 [PchTestEPTYPELockPolicy](#)
Offset 0x0C44 - USB EP Type Lock Policy USB EP Type Lock Policy.
 - UINT32 [PchTestEPTYPELockPolicyPortControl1](#)
Offset 0x0C48 - USB EP Type Lock Policy Control 1 USB EP Type Lock Policy Control 1.
 - UINT32 [PchTestEPTYPELockPolicyPortControl2](#)
Offset 0x0C4C - USB EP Type Lock Policy Control 2 USB EP Type Lock Policy Control 2.
 - UINT8 [PchTestControllerEnabled](#)
-

- Offset 0x0C50 - Xhci Controller Enable 0: Disable; 1: Enable.*
 - UINT8 [PchTestUnlockUsbForSvNoa](#)
 - Offset 0x0C51 - Unlock to enable NOA for SV usage 1: Unlock to enable NOA usage.*
 - UINT8 [PchTestClkGatingXhci](#)
 - Offset 0x0C52 - Enable XHCI Clock Gating for SV usage 1: Enable XHCI Clock Gating.*
 - UINT8 [PchTestCyclonePcieSwitchWA](#)
 - Offset 0x0C53 - Restricted Cyclone Pcie Switch WA Restricted Cyclone Pcie Switch WA.*
 - UINT8 [PchTestPchRootPort](#)
 - Offset 0x0C54 - Restricted Pch Root Port Restricted Pch Root Port.*
 - UINT8 [TestPchPmErDebugMode](#)
 - Offset 0x0C55 - PCH PMC ER Debug mode Disable/Enable Energy Reporting Debug Mode.*
 - UINT8 [TestUsbTsLdoShutdown](#)
 - Offset 0x0C56 - USB2/TS LDO Dynamic Shutdown Enable/Disable USB2/TS LDO Dynamic Shutdown 0: POR, 1: force enable, 2: force disable.*
 - UINT8 [PchDmiTestOpiPllPowerGating](#)
 - Offset 0x0C57 - OPI PLL Power Gating OPI PLL Power Gating.*
 - UINT8 [PchHdaTestPowerClockGating](#)
 - Offset 0x0C58 - HDA Power/Clock Gating (PGD/CGD) Enable/Disable HD Audio Power and Clock Gating(POR↔: Enable).*
 - UINT8 [TestCnviWifiLtrEn](#)
 - Offset 0x0C59 - CNVi WiFi LTR Enable/Disable CNVi WiFi LTR.*
 - UINT8 [TestPchPmLatchEventsC10Exit](#)
 - Offset 0x0C5A - PCH Pm Latch events C10 exit PCH Pm Latch events C10 exit Enable.*
 - UINT8 [TestCnviLteCoex](#)
 - Offset 0x0C5B - CNVi LTE Coexistence Enable/Disable MFUART2 connection for coexistence between LTE and Wi-Fi/BT.*
 - UINT8 [TestCnviBtInterface](#)
 - Offset 0x0C5C - CNVi BT Interface This option configures BT device interface to either USB or UART 0:UART, 1:USB.*
 - UINT8 [TestCnviBtUartType](#)
 - Offset 0x0C5D - CNVi BT Uart Type This is a test option which allows configuration of UART type for BT communication 0:Serial IO Uart0, 1:ISH Uart0, 2:Uart over external pads.*
 - UINT8 [TestCnviSharedXtalClocking](#)
 - Offset 0x0C5E - CNVi Shared XTAL Clocking This option is used to tell CNVi that XTAL is being shared.*
 - UINT8 [PcieRpTestDmiL1Edm](#) [24]
 - Offset 0x0C5F - Enable/Disable DMI L1 entry disable mode Enable/Disable DMI L1 entry disable mode.*
 - UINT8 [TestPcieMpcSecureRegisterLock](#)
 - Offset 0x0C77 - MPC Secure Register Lock Enable/Disable Secure Register Lock, 0: PLATFORM_POR, 1: FOR↔CE_ENABLE, 2: FORCE_DISABLE.*
 - UINT8 [SiSvPolicyEnable](#)
 - Offset 0x0C78 - Si Config SvPolicyEnable.*
 - UINT8 [HsleWorkaround](#)
 - Offset 0x0C79 - Si Config HsleWorkaround Enable/Disable HSLE model specific workarounds \$EN_DIS.*
 - UINT8 [TestSkipPostBootSai](#)
 - Offset 0x0C7A - Skip POSTBOOT SAI This skips the Post Boot Sai programming.*
 - UINT8 [UnusedUpdSpace35](#) [2]
 - Offset 0x0C7B.*
 - UINT8 [ReservedFspRestrictedUpd](#) [3]
 - Offset 0x0C7D.*
-

13.37.1 Detailed Description

Fsp S Restricted Configuration.

Definition at line 3672 of file FspUpd.h.

13.37.2 Member Data Documentation

13.37.2.1 PchDmiTestClientObffEn

UINT8 FSP_S_RESTRICTED_CONFIG::PchDmiTestClientObffEn

Offset 0x0B88 - Client Obff Enable Client Obff Enable.

\$EN_DIS

Definition at line 4067 of file FspUpd.h.

13.37.2.2 PchDmiTestDelayEnDmiAspm

UINT8 FSP_S_RESTRICTED_CONFIG::PchDmiTestDelayEnDmiAspm

Offset 0x0B8B - Enable DMI ASPM after booting to OS Enable DMI ASPM after booting to OS.

\$EN_DIS

Definition at line 4084 of file FspUpd.h.

13.37.2.3 PchDmiTestDmiSecureRegLock

UINT8 FSP_S_RESTRICTED_CONFIG::PchDmiTestDmiSecureRegLock

Offset 0x0B8C - DMI Secure Reg Lock DMI Secure Reg Lock.

0: POR (Enable), 1: Enable, 2: Disable

Definition at line 4090 of file FspUpd.h.

13.37.2.4 PchDmiTestExternalObffEn

UINT8 FSP_S_RESTRICTED_CONFIG::PchDmiTestExternalObffEn

Offset 0x0B87 - Optimized Buffer Flush/Fill (OBFF) protocol for external on PCH side Enable/Disable Optimized Buffer Flush/Fill (OBFF) protocol for external on PCH side.

\$EN_DIS

Definition at line 4061 of file FspUpd.h.

13.37.2.5 PchDmiTestInternalObffEn

UINT8 FSP_S_RESTRICTED_CONFIG::PchDmiTestInternalObffEn

Offset 0x0B85 - Optimized Buffer Flush/Fill (OBFF) protocol for internal on PCH side enable/disable Optimized Buffer Flush/Fill (OBFF) protocol for internal on PCH side.

\$EN_DIS

Definition at line 4049 of file FspUpd.h.

13.37.2.6 PchDmiTestMemCloseStateEn

UINT8 FSP_S_RESTRICTED_CONFIG::PchDmiTestMemCloseStateEn

Offset 0x0B84 - MEM CLOSED State on PCH side Enable/Disable MEM CLOSED State on PCH side.

\$EN_DIS

Definition at line 4043 of file FspUpd.h.

13.37.2.7 PchDmiTestOpiPllPowerGating

UINT8 FSP_S_RESTRICTED_CONFIG::PchDmiTestOpiPllPowerGating

Offset 0x0C57 - OPI PLL Power Gating OPI PLL Power Gating.

0: POR, 1: force enable, 2: force disable

Definition at line 4415 of file FspUpd.h.

13.37.2.8 PchDmiTestPchTcLockDown

UINT8 FSP_S_RESTRICTED_CONFIG::PchDmiTestPchTcLockDown

Offset 0x0B8A - Pch Tc Lock Down Pch Tc Lock Down.

\$EN_DIS

Definition at line 4078 of file FspUpd.h.

13.37.2.9 PchHdaTestConfigLockdown

UINT8 FSP_S_RESTRICTED_CONFIG::PchHdaTestConfigLockdown

Offset 0x0B8D - Configuration Lockdown (BCLD) 0: POR (Enable), 1: Enable, 2: Disable.

0: POR (Enable), 1: Enable, 2: Disable

Definition at line 4096 of file FspUpd.h.

13.37.2.10 PchHdaTestLowFreqLinkClkSrc

UINT8 FSP_S_RESTRICTED_CONFIG::PchHdaTestLowFreqLinkClkSrc

Offset 0x0B8E - Low Frequency Link Clock Source (LFLCS) 0: POR (Enable), 1: Enable (XTAL), 2: Disable (Audio PLL).

0: POR (Enable), 1: Enable (XTAL), 2: Disable (Audio PLL)

Definition at line 4102 of file FspUpd.h.

13.37.2.11 PchHdaTestPowerClockGating

UINT8 FSP_S_RESTRICTED_CONFIG::PchHdaTestPowerClockGating

Offset 0x0C58 - HDA Power/Clock Gating (PGD/CGD) Enable/Disable HD Audio Power and Clock Gating(POR: Enable).

0: PLATFORM_POR, 1: FORCE_ENABLE, 2: FORCE_DISABLE. 0: POR, 1: Force Enable, 2: Force Disable

Definition at line 4422 of file FspUpd.h.

13.37.2.12 PchLanTestPchWOLFastSupport

UINT8 FSP_S_RESTRICTED_CONFIG::PchLanTestPchWOLFastSupport

Offset 0x0B8F - PCH Lan Test WOL Fast Support Enables bit B_PCH_ACPI_GPE0_EN_127_96_PME_B0 during PchLanSxCallback in PchLanSxSmm.

\$EN_DIS

Definition at line 4108 of file FspUpd.h.

13.37.2.13 PchLockDownTestSmiUnlock

UINT8 FSP_S_RESTRICTED_CONFIG::PchLockDownTestSmiUnlock

Offset 0x0B90 - Smi Unlock bit for SV policy 0: Lock; 1: Unlock.

\$EN_DIS

Definition at line 4114 of file FspUpd.h.

13.37.2.14 PchPmTestPchClearPowerSts

UINT8 FSP_S_RESTRICTED_CONFIG::PchPmTestPchClearPowerSts

Offset 0x0C21 - PCH Pm Test Clear Power Sts.

Todo ADD DESCRIPTION.

Policy for SV usage. NO USE..

Definition at line 4265 of file FspUpd.h.

13.37.2.15 PchTestClkGatingXhci

UINT8 FSP_S_RESTRICTED_CONFIG::PchTestClkGatingXhci

Offset 0x0C52 - Enable XHCI Clock Gating for SV usage 1: Enable XHCI Clock Gating.

0: Disable XHCI Clock Gating. Policy for SV usage. \$EN_DIS

Definition at line 4387 of file FspUpd.h.

13.37.2.16 PchTestPhlcLock

UINT8 FSP_S_RESTRICTED_CONFIG::PchTestPhlcLock

Offset 0x0C43 - This locks down PHL and PHLC 0: Disabled, 1: Enabled.

\$EN_DIS

Definition at line 4354 of file FspUpd.h.

13.37.2.17 PchTestTscLock

UINT8 FSP_S_RESTRICTED_CONFIG::PchTestTscLock

Offset 0x0C42 - This locks down Catastrophic Power-Down Enable and Catastrophic Trip Point Register 0: Disabled, 1: Enabled.

\$EN_DIS

Definition at line 4348 of file FspUpd.h.

13.37.2.18 PchTestTselLock

UINT8 FSP_S_RESTRICTED_CONFIG::PchTestTselLock

Offset 0x0C41 - This locks down Enables the thermal sensor 0: Disabled, 1: Enabled.

\$EN_DIS

Definition at line 4342 of file FspUpd.h.

13.37.2.19 PchTestUnlockUsbForSvNoa

UINT8 FSP_S_RESTRICTED_CONFIG::PchTestUnlockUsbForSvNoa

Offset 0x0C51 - Unlock to enable NOA for SV usage 1: Unlock to enable NOA usage.

0: Set Xhci OC registers, Set Xhci OCCDone bit, XHCI Access Control Bit. \$EN_DIS

Definition at line 4381 of file FspUpd.h.

13.37.2.20 SataTestRstPcieStorageDeviceInterface

UINT8 FSP_S_RESTRICTED_CONFIG::SataTestRstPcieStorageDeviceInterface[3]

Offset 0x0C28 - PCH Sata Test Rst Pcie Storage Device Interface Select the device interface (AHCI/NVME) for remapped device.

NO USE.

Definition at line 4281 of file FspUpd.h.

13.37.2.21 SiSvPolicyEnable

UINT8 FSP_S_RESTRICTED_CONFIG::SiSvPolicyEnable

Offset 0x0C78 - Si Config SvPolicyEnable.

Platform specific common policies that used by several silicon components. SvPolicyEnable. \$EN_DIS

Definition at line 4477 of file FspUpd.h.

13.37.2.22 TestCnviLteCoex

UINT8 FSP_S_RESTRICTED_CONFIG::TestCnviLteCoex

Offset 0x0C5B - CNVi LTE Coexistence Enable/Disable MFUART2 connection for coexistence between LTE and Wi-Fi/BT.

0: PLATFORM_POR, 1: FORCE_ENABLE, 2: FORCE_DISABLE. 0: POR, 1: Force Enable, 2: Force Disable

Definition at line 4441 of file FspUpd.h.

13.37.2.23 TestCnviSharedXtalClocking

UINT8 FSP_S_RESTRICTED_CONFIG::TestCnviSharedXtalClocking

Offset 0x0C5E - CNVi Shared XTAL Clocking This option is used to tell CNVi that XTAL is being shared.

0: PLATFORM_POR, 1: FORCE_ENABLE, 2: FORCE_DISABLE. 0: POR, 1: Force Enable, 2: Force Disable

Definition at line 4460 of file FspUpd.h.

13.37.2.24 TestCnviWifiLtrEn

UINT8 FSP_S_RESTRICTED_CONFIG::TestCnviWifiLtrEn

Offset 0x0C59 - CNVi WiFi LTR Enable/Disable CNVi WiFi LTR.

0: PLATFORM_POR, 1: FORCE_ENABLE, 2: FORCE_DISABLE. 0: POR, 1: Force Enable, 2: Force Disable

Definition at line 4428 of file FspUpd.h.

13.37.2.25 TestPchPmErDebugMode

UINT8 FSP_S_RESTRICTED_CONFIG::TestPchPmErDebugMode

Offset 0x0C55 - PCH PMC ER Debug mode Disable/Enable Energy Reporting Debug Mode.

\$EN_DIS

Definition at line 4403 of file FspUpd.h.

13.37.2.26 TestPchPmLatchEventsC10Exit

UINT8 FSP_S_RESTRICTED_CONFIG::TestPchPmLatchEventsC10Exit

Offset 0x0C5A - PCH Pm Latch events C10 exit PCH Pm Latch events C10 exit Enable.

0: POR, 1: force enable, 2: force disable

Definition at line 4434 of file FspUpd.h.

13.37.2.27 TestPcieMpcSecureRegisterLock

```
UINT8 FSP_S_RESTRICTED_CONFIG::TestPcieMpcSecureRegisterLock
```

Offset 0x0C77 - MPC Secure Register Lock Enable/Disable Secure Register Lock, 0: PLATFORM_POR, 1: FORCE_ENABLE, 2: FORCE_DISABLE.

0: POR, 1: Force Enable, 2: Force Disable

Definition at line 4471 of file FspUpd.h.

13.37.2.28 TestSkipPostBootSai

```
UINT8 FSP_S_RESTRICTED_CONFIG::TestSkipPostBootSai
```

Offset 0x0C7A - Skip POSTBOOT SAI This skips the Post Boot Sai programming.

0: PLATFORM_POR, 1: FORCE_ENABLE, 2: FORCE_DISABLE. 0: POR, 1: Force Enable, 2: Force Disable

Definition at line 4489 of file FspUpd.h.

The documentation for this struct was generated from the following file:

- [FspUpd.h](#)

13.38 FSP_S_TEST_CONFIG Struct Reference

Fsp S Test Configuration.

```
#include <FspUpd.h>
```

Public Attributes

- [UINT32 Signature](#)
Offset 0x07C0.
- [UINT8 ChapDeviceEnable](#)
Offset 0x07C4 - Enable/Disable Device 7 Enable: Device 7 enabled, Disable (Default): Device 7 disabled \$EN_DIS.
- [UINT8 SkipPamLock](#)
Offset 0x07C5 - Skip PAM register lock Enable: PAM register will not be locked by RC, platform code should lock it, Disable(Default): PAM registers will be locked by RC \$EN_DIS.
- [UINT8 EdramTestMode](#)
Offset 0x07C6 - EDRAM Test Mode Enable: PAM register will not be locked by RC, platform code should lock it, Disable(Default): PAM registers will be locked by RC 0: EDRAM SW disable, 1: EDRAM SW Enable, 2: EDRAM HW mode.
- [UINT8 DmiExtSync](#)
Offset 0x07C7 - DMI Extended Sync Control Enable: Enable DMI Extended Sync Control, Disable(Default): Disable DMI Extended Sync Control \$EN_DIS.
- [UINT8 Dmilot](#)

- Offset 0x07C8 - DMI IOT Control Enable: Enable DMI IOT Control, Disable(Default): Disable DMI IOT Control \$EN_DIS.
- UINT8 [PegMaxPayload](#) [4]

Offset 0x07C9 - PEG Max Payload size per root port 0xFF(Default):Auto, 0x1: Force 128B, 0x2: Force 256B 0xFF: Auto, 0x1: Force 128B, 0x2: Force 256B.
 - UINT8 [RenderStandby](#)

Offset 0x07CD - Enable/Disable IGFX RenderStandby Enable(Default): Enable IGFX RenderStandby, Disable: Disable IGFX RenderStandby \$EN_DIS.
 - UINT8 [PmSupport](#)

Offset 0x07CE - Enable/Disable IGFX PmSupport Enable(Default): Enable IGFX PmSupport, Disable: Disable IGFX PmSupport \$EN_DIS.
 - UINT8 [CdynmaxClampEnable](#)

Offset 0x07CF - Enable/Disable CdynmaxClamp Enable(Default): Enable CdynmaxClamp, Disable: Disable CdynmaxClamp \$EN_DIS.
 - UINT8 [VtdDisableDeprecated](#)

Offset 0x07D0 - Disable VT-d 0=Enable/FALSE(VT-d enabled), 1=Disable/TRUE (VT-d disabled) \$EN_DIS.
 - UINT8 [GtFreqMax](#)

Offset 0x07D1 - GT Frequency Limit 0xFF: Auto(Default), 2: 100 Mhz, 3: 150 Mhz, 4: 200 Mhz, 5: 250 Mhz, 6: 300 Mhz, 7: 350 Mhz, 8: 400 Mhz, 9: 450 Mhz, 0xA: 500 Mhz, 0xB: 550 Mhz, 0xC: 600 Mhz, 0xD: 650 Mhz, 0xE: 700 Mhz, 0xF: 750 Mhz, 0x10: 800 Mhz, 0x11: 850 Mhz, 0x12:900 Mhz, 0x13: 950 Mhz, 0x14: 1000 Mhz, 0x15: 1050 Mhz, 0x16: 1100 Mhz, 0x17: 1150 Mhz, 0x18: 1200 Mhz 0xFF: Auto(Default), 2: 100 Mhz, 3: 150 Mhz, 4: 200 Mhz, 5: 250 Mhz, 6: 300 Mhz, 7: 350 Mhz, 8: 400 Mhz, 9: 450 Mhz, 0xA: 500 Mhz, 0xB: 550 Mhz, 0xC: 600 Mhz, 0xD: 650 Mhz, 0xE: 700 Mhz, 0xF: 750 Mhz, 0x10: 800 Mhz, 0x11: 850 Mhz, 0x12:900 Mhz, 0x13: 950 Mhz, 0x14: 1000 Mhz, 0x15: 1050 Mhz, 0x16: 1100 Mhz, 0x17: 1150 Mhz, 0x18: 1200 Mhz.
 - UINT8 [DisableTurboGt](#)

Offset 0x07D2 - Disable Turbo GT 0=Disable: GT frequency is not limited, 1=Enable: Disables Turbo GT frequency \$EN_DIS.
 - UINT8 [SaPostMemTestRsvd](#) [11]

Offset 0x07D3 - SaPostMemTestRsvd Reserved for SA Post-Mem Test \$EN_DIS.
 - UINT8 [OneCoreRatioLimit](#)

Offset 0x07DE - 1-Core Ratio Limit 1-Core Ratio Limit: LFM to Fused, For overclocking part: LFM to 255.
 - UINT8 [TwoCoreRatioLimit](#)

Offset 0x07DF - 2-Core Ratio Limit 2-Core Ratio Limit: LFM to Fused, For overclocking part: LFM to 255.
 - UINT8 [ThreeCoreRatioLimit](#)

Offset 0x07E0 - 3-Core Ratio Limit 3-Core Ratio Limit: LFM to Fused, For overclocking part: LFM to 255.
 - UINT8 [FourCoreRatioLimit](#)

Offset 0x07E1 - 4-Core Ratio Limit 4-Core Ratio Limit: LFM to Fused, For overclocking part: LFM to 255.
 - UINT8 [Hwp](#)

Offset 0x07E2 - Enable or Disable HWP Enable or Disable HWP(Hardware P states) Support.
 - UINT8 [HdcControl](#)

Offset 0x07E3 - Hardware Duty Cycle Control Hardware Duty Cycle Control configuration.
 - UINT8 [PowerLimit1Time](#)

Offset 0x07E4 - Package Long duration turbo mode time Package Long duration turbo mode time window in seconds.
 - UINT8 [PowerLimit2](#)

Offset 0x07E5 - Short Duration Turbo Mode Enable or Disable short duration Turbo Mode.
 - UINT8 [TurboPowerLimitLock](#)

Offset 0x07E6 - Turbo settings Lock Lock all Turbo settings Enable/Disable; **0: Disable** , 1: Enable \$EN_DIS.
 - UINT8 [PowerLimit3Time](#)

Offset 0x07E7 - Package PL3 time window Package PL3 time window range for this policy from 0 to 64ms.
 - UINT8 [PowerLimit3DutyCycle](#)

Offset 0x07E8 - Package PL3 Duty Cycle Package PL3 Duty Cycle; Valid Range is 0 to 100.
 - UINT8 [PowerLimit3Lock](#)

Offset 0x07E9 - Package PL3 Lock Package PL3 Lock Enable/Disable; **0: Disable** ; **1: Enable** \$EN_DIS.
-

- UINT8 [PowerLimit4Lock](#)
Offset 0x07EA - Package PL4 Lock Package PL4 Lock Enable/Disable; **0: Disable** ; **1: Enable** \$EN_DIS.
 - UINT8 [TccActivationOffset](#)
Offset 0x07EB - TCC Activation Offset TCC Activation Offset.
 - UINT8 [TccOffsetClamp](#)
Offset 0x07EC - Tcc Offset Clamp Enable/Disable Tcc Offset Clamp for Runtime Average Temperature Limit (RATL) allows CPU to throttle below P1. For Y SKU, the recommended default for this policy is **1: Enabled**, For all other SKUs the recommended default are **0: Disabled**.
 - UINT8 [TccOffsetLock](#)
Offset 0x07ED - Tcc Offset Lock Tcc Offset Lock for Runtime Average Temperature Limit (RATL) to lock temperature target; **0: Disabled**; 1: Enabled.
 - UINT8 [NumberOfEntries](#)
Offset 0x07EE - Custom Ratio State Entries The number of custom ratio state entries, ranges from 0 to 40 for a valid custom ratio table. Sets the number of custom P-states.
 - UINT8 [Custom1PowerLimit1Time](#)
Offset 0x07EF - Custom Short term Power Limit time window Short term Power Limit time window value for custom CTDTP level 1.
 - UINT8 [Custom1TurboActivationRatio](#)
Offset 0x07F0 - Custom Turbo Activation Ratio Turbo Activation Ratio for custom cTDP level 1.
 - UINT8 [Custom1ConfigTdpControl](#)
Offset 0x07F1 - Custom Config Tdp Control Config Tdp Control (0/1/2) value for custom cTDP level 1.
 - UINT8 [Custom2PowerLimit1Time](#)
Offset 0x07F2 - Custom Short term Power Limit time window Short term Power Limit time window value for custom CTDTP level 2.
 - UINT8 [Custom2TurboActivationRatio](#)
Offset 0x07F3 - Custom Turbo Activation Ratio Turbo Activation Ratio for custom cTDP level 2.
 - UINT8 [Custom2ConfigTdpControl](#)
Offset 0x07F4 - Custom Config Tdp Control Config Tdp Control (0/1/2) value for custom cTDP level 1.
 - UINT8 [Custom3PowerLimit1Time](#)
Offset 0x07F5 - Custom Short term Power Limit time window Short term Power Limit time window value for custom CTDTP level 3.
 - UINT8 [Custom3TurboActivationRatio](#)
Offset 0x07F6 - Custom Turbo Activation Ratio Turbo Activation Ratio for custom cTDP level 3.
 - UINT8 [Custom3ConfigTdpControl](#)
Offset 0x07F7 - Custom Config Tdp Control Config Tdp Control (0/1/2) value for custom cTDP level 1.
 - UINT8 [ConfigTdpLock](#)
Offset 0x07F8 - ConfigTdp mode settings Lock Lock the ConfigTdp mode settings from runtime changes; **0: Disable**; 1: Enable \$EN_DIS.
 - UINT8 [ConfigTdpBios](#)
Offset 0x07F9 - Load Configurable TDP SSDT Configure whether to load Configurable TDP SSDT; **0: Disable**; 1: Enable.
 - UINT8 [PsysPowerLimit1](#)
Offset 0x07FA - PL1 Enable value PL1 Enable value to limit average platform power.
 - UINT8 [PsysPowerLimit1Time](#)
Offset 0x07FB - PL1 timewindow PL1 timewindow in seconds.
 - UINT8 [PsysPowerLimit2](#)
Offset 0x07FC - PL2 Enable Value PL2 Enable activates the PL2 value to limit average platform power.
 - UINT8 [MlcStreamerPrefetcher](#)
Offset 0x07FD - Enable or Disable MLC Streamer Prefetcher Enable or Disable MLC Streamer Prefetcher; **0: Disable**; **1: Enable**.
 - UINT8 [MlcSpatialPrefetcher](#)
Offset 0x07FE - Enable or Disable MLC Spatial Prefetcher Enable or Disable MLC Spatial Prefetcher; **0: Disable**; **1: Enable** \$EN_DIS.
-

- UINT8 [MonitorMwaitEnable](#)
Offset 0x07FF - Enable or Disable Monitor /MWAIT instructions Enable or Disable Monitor /MWAIT instructions; 0: Disable; 1: **Enable**.
 - UINT8 [MachineCheckEnable](#)
Offset 0x0800 - Enable or Disable initialization of machine check registers Enable or Disable initialization of machine check registers; 0: Disable; 1: **Enable**.
 - UINT8 [DebugInterfaceEnable](#)
Offset 0x0801 - Deprecated DO NOT USE Enable or Disable processor debug features.
 - UINT8 [DebugInterfaceLockEnable](#)
Offset 0x0802 - Lock or Unlock debug interface features Lock or Unlock debug interface features; 0: Disable; 1: **Enable**.
 - UINT8 [ApidleManner](#)
Offset 0x0803 - AP Idle Manner of waiting for SIPI AP Idle Manner of waiting for SIPI; 1: HALT loop; 2: **MWAIT loop**; 3: RUN loop.
 - UINT8 [ProcessorTraceOutputScheme](#)
Offset 0x0804 - Control on Processor Trace output scheme Control on Processor Trace output scheme; 0: **Single Range Output**; 1: ToPA Output.
 - UINT8 [ProcessorTraceEnable](#)
Offset 0x0805 - Enable or Disable Processor Trace feature Enable or Disable Processor Trace feature; 0: **Disable**; 1: Enable.
 - UINT8 [UnusedUpdSpace25](#) [2]
Offset 0x0806.
 - UINT64 [ProcessorTraceMemBase](#)
Offset 0x0808 - Base of memory region allocated for Processor Trace Base address of memory region allocated for Processor Trace.
 - UINT32 [ProcessorTraceMemLength](#)
Offset 0x0810 - Memory region allocation for Processor Trace Length in bytes of memory region allocated for Processor Trace.
 - UINT8 [VoltageOptimization](#)
Offset 0x0814 - Enable or Disable Voltage Optimization feature Enable or Disable Voltage Optimization feature 0: Disable; 1: **Enable** \$EN_DIS.
 - UINT8 [Eist](#)
Offset 0x0815 - Enable or Disable Intel SpeedStep Technology Enable or Disable Intel SpeedStep Technology.
 - UINT8 [EnergyEfficientPState](#)
Offset 0x0816 - Enable or Disable Energy Efficient P-state Enable or Disable Energy Efficient P-state will be applied in Turbo mode.
 - UINT8 [EnergyEfficientTurbo](#)
Offset 0x0817 - Enable or Disable Energy Efficient Turbo Enable or Disable Energy Efficient Turbo, will be applied in Turbo mode.
 - UINT8 [TStates](#)
Offset 0x0818 - Enable or Disable T states Enable or Disable T states; 0: **Disable**; 1: Enable.
 - UINT8 [BiProcHot](#)
Offset 0x0819 - Enable or Disable Bi-Directional PROCHOT# Enable or Disable Bi-Directional PROCHOT#; 0↔ : Disable; 1: **Enable** \$EN_DIS.
 - UINT8 [DisableProcHotOut](#)
Offset 0x081A - Enable or Disable PROCHOT# signal being driven externally Enable or Disable PROCHOT# signal being driven externally; 0: Disable; 1: **Enable**.
 - UINT8 [ProcHotResponse](#)
Offset 0x081B - Enable or Disable PROCHOT# Response Enable or Disable PROCHOT# Response; 0: **Disable**; 1: Enable.
 - UINT8 [DisableVrThermalAlert](#)
Offset 0x081C - Enable or Disable VR Thermal Alert Enable or Disable VR Thermal Alert; 0: **Disable**; 1: Enable.
 - UINT8 [AutoThermalReporting](#)
-

- Offset 0x081D - Enable or Disable Thermal Reporting Enable or Disable Thermal Reporting through ACPI tables; 0: Disable; 1: **Enable**.
- UINT8 [ThermalMonitor](#)
Offset 0x081E - Enable or Disable Thermal Monitor Enable or Disable Thermal Monitor; 0: Disable; 1: **Enable** \$EN_DIS.
 - UINT8 [Cx](#)
Offset 0x081F - Enable or Disable CPU power states (C-states) Enable or Disable CPU power states (C-states).
 - UINT8 [PmgCstCfgCtrlLock](#)
Offset 0x0820 - Configure C-State Configuration Lock Configure C-State Configuration Lock; 0: Disable; 1: **Enable**.
 - UINT8 [C1e](#)
Offset 0x0821 - Enable or Disable Enhanced C-states Enable or Disable Enhanced C-states.
 - UINT8 [PkgCStateDemotion](#)
Offset 0x0822 - Enable or Disable Package Cstate Demotion Enable or Disable Package Cstate Demotion.
 - UINT8 [PkgCStateUnDemotion](#)
Offset 0x0823 - Enable or Disable Package Cstate UnDemotion Enable or Disable Package Cstate UnDemotion.
 - UINT8 [CStatePreWake](#)
Offset 0x0824 - Enable or Disable CState-Pre wake Enable or Disable CState-Pre wake.
 - UINT8 [TimedMwait](#)
Offset 0x0825 - Enable or Disable TimedMwait Support.
 - UINT8 [CstCfgCtrlIoMwaitRedirection](#)
Offset 0x0826 - Enable or Disable IO to MWAIT redirection Enable or Disable IO to MWAIT redirection; 0: **Disable**; 1: **Enable**.
 - UINT8 [PkgCStateLimit](#)
Offset 0x0827 - Set the Max Pkg Cstate Set the Max Pkg Cstate.
 - UINT8 [CstateLatencyControl0TimeUnit](#)
Offset 0x0828 - TimeUnit for C-State Latency Control0 TimeUnit for C-State Latency Control0; Valid values 0 - 1ns , 1 - 32ns , 2 - 1024ns , 3 - 32768ns , 4 - 1048576ns , 5 - 33554432ns.
 - UINT8 [CstateLatencyControl1TimeUnit](#)
Offset 0x0829 - TimeUnit for C-State Latency Control1 TimeUnit for C-State Latency Control1; Valid values 0 - 1ns , 1 - 32ns , 2 - 1024ns , 3 - 32768ns , 4 - 1048576ns , 5 - 33554432ns.
 - UINT8 [CstateLatencyControl2TimeUnit](#)
Offset 0x082A - TimeUnit for C-State Latency Control2 TimeUnit for C-State Latency Control2; Valid values 0 - 1ns , 1 - 32ns , 2 - 1024ns , 3 - 32768ns , 4 - 1048576ns , 5 - 33554432ns.
 - UINT8 [CstateLatencyControl3TimeUnit](#)
Offset 0x082B - TimeUnit for C-State Latency Control3 TimeUnit for C-State Latency Control3; Valid values 0 - 1ns , 1 - 32ns , 2 - 1024ns , 3 - 32768ns , 4 - 1048576ns , 5 - 33554432ns.
 - UINT8 [CstateLatencyControl4TimeUnit](#)
Offset 0x082C - TimeUnit for C-State Latency Control4 Time - 1ns , 1 - 32ns , 2 - 1024ns , 3 - 32768ns , 4 - 1048576ns , 5 - 33554432ns.
 - UINT8 [CstateLatencyControl5TimeUnit](#)
Offset 0x082D - TimeUnit for C-State Latency Control5 TimeUnit for C-State Latency Control5; Valid values 0 - 1ns , 1 - 32ns , 2 - 1024ns , 3 - 32768ns , 4 - 1048576ns , 5 - 33554432ns.
 - UINT8 [PpmlrmSetting](#)
Offset 0x082E - Interrupt Redirection Mode Select Interrupt Redirection Mode Select.0: Fixed priority; 1: Round robin;2: Hash vector;4: PAIR with fixed priority;5: PAIR with round robin;6: PAIR with hash vector;7: No change.
 - UINT8 [ProcHotLock](#)
Offset 0x082F - Lock prohot configuration Lock prohot configuration Enable/Disable; 0: **Disable**; 1: **Enable** \$EN←_DIS.
 - UINT8 [ConfigTdpLevel](#)
Offset 0x0830 - Configuration for boot TDP selection Configuration for boot TDP selection; 0: **TDP Nominal**; 1: TDP Down; 2: TDP Up;0xFF : Deactivate.
 - UINT8 [RaceToHalt](#)
Offset 0x0831 - Race To Halt Enable/Disable Race To Halt feature.
-

- UUINT8 [MaxRatio](#)
Offset 0x0832 - Max P-State Ratio Max P-State Ratio, Valid Range 0 to 0x7F.
 - UUINT8 [StateRatio](#) [40]
Offset 0x0833 - P-state ratios for custom P-state table P-state ratios for custom P-state table.
 - UUINT8 [StateRatioMax16](#) [16]
Offset 0x085B - P-state ratios for max 16 version of custom P-state table P-state ratios for max 16 version of custom P-state table.
 - UUINT8 [UnusedUpdSpace26](#)
Offset 0x086B.
 - UUINT16 [PsysPmax](#)
Offset 0x086C - Platform Power Pmax PCODE MMIO Mailbox: Platform Power Pmax.
 - UUINT16 [CstateLatencyControl0Irtl](#)
Offset 0x086E - Interrupt Response Time Limit of C-State LatencyControl0 Interrupt Response Time Limit of C-State LatencyControl0.Range of value 0 to 0x3FF.
 - UUINT16 [CstateLatencyControl1Irtl](#)
Offset 0x0870 - Interrupt Response Time Limit of C-State LatencyControl1 Interrupt Response Time Limit of C-State LatencyControl1.Range of value 0 to 0x3FF.
 - UUINT16 [CstateLatencyControl2Irtl](#)
Offset 0x0872 - Interrupt Response Time Limit of C-State LatencyControl2 Interrupt Response Time Limit of C-State LatencyControl2.Range of value 0 to 0x3FF.
 - UUINT16 [CstateLatencyControl3Irtl](#)
Offset 0x0874 - Interrupt Response Time Limit of C-State LatencyControl3 Interrupt Response Time Limit of C-State LatencyControl3.Range of value 0 to 0x3FF.
 - UUINT16 [CstateLatencyControl4Irtl](#)
Offset 0x0876 - Interrupt Response Time Limit of C-State LatencyControl4 Interrupt Response Time Limit of C-State LatencyControl4.Range of value 0 to 0x3FF.
 - UUINT16 [CstateLatencyControl5Irtl](#)
Offset 0x0878 - Interrupt Response Time Limit of C-State LatencyControl5 Interrupt Response Time Limit of C-State LatencyControl5.Range of value 0 to 0x3FF.
 - UUINT8 [UnusedUpdSpace27](#) [2]
Offset 0x087A.
 - UUINT32 [PowerLimit1](#)
Offset 0x087C - Package Long duration turbo mode power limit Package Long duration turbo mode power limit.
 - UUINT32 [PowerLimit2Power](#)
Offset 0x0880 - Package Short duration turbo mode power limit Package Short duration turbo mode power limit.
 - UUINT32 [PowerLimit3](#)
Offset 0x0884 - Package PL3 power limit Package PL3 power limit.
 - UUINT32 [PowerLimit4](#)
Offset 0x0888 - Package PL4 power limit Package PL4 power limit.
 - UUINT32 [TccOffsetTimeWindowForRatl](#)
Offset 0x088C - Tcc Offset Time Window for RATL Package PL4 power limit.
 - UUINT32 [Custom1PowerLimit1](#)
Offset 0x0890 - Short term Power Limit value for custom cTDP level 1 Short term Power Limit value for custom cTDP level 1.
 - UUINT32 [Custom1PowerLimit2](#)
Offset 0x0894 - Long term Power Limit value for custom cTDP level 1 Long term Power Limit value for custom cTDP level 1.
 - UUINT32 [Custom2PowerLimit1](#)
Offset 0x0898 - Short term Power Limit value for custom cTDP level 2 Short term Power Limit value for custom cTDP level 2.
 - UUINT32 [Custom2PowerLimit2](#)
Offset 0x089C - Long term Power Limit value for custom cTDP level 2 Long term Power Limit value for custom cTDP level 2.
-

- UINT32 [Custom3PowerLimit1](#)
Offset 0x08A0 - Short term Power Limit value for custom cTDP level 3 Short term Power Limit value for custom cTDP level 3.
 - UINT32 [Custom3PowerLimit2](#)
Offset 0x08A4 - Long term Power Limit value for custom cTDP level 3 Long term Power Limit value for custom cTDP level 3.
 - UINT32 [PsysPowerLimit1Power](#)
Offset 0x08A8 - Platform PL1 power Platform PL1 power.
 - UINT32 [PsysPowerLimit2Power](#)
Offset 0x08AC - Platform PL2 power Platform PL2 power.
 - UINT8 [ThreeStrikeCounterDisable](#)
*Offset 0x08B0 - Set Three Strike Counter Disable False (default): Three Strike counter will be incremented and True: Prevents Three Strike counter from incrementing; **0: False**; 1: True.*
 - UINT8 [HwplInterruptControl](#)
*Offset 0x08B1 - Set HW P-State Interrupts Enabled for for MISC_PWR_MGMT Set HW P-State Interrupts Enabled for for MISC_PWR_MGMT; **0: Disable**; 1: Enable.*
 - UINT8 [FiveCoreRatioLimit](#)
Offset 0x08B2 - 5-Core Ratio Limit 5-Core Ratio Limit: LFM to Fused, For overlocking part: LFM to 255.
 - UINT8 [SixCoreRatioLimit](#)
Offset 0x08B3 - 6-Core Ratio Limit 6-Core Ratio Limit: LFM to Fused, For overlocking part: LFM to 255.
 - UINT8 [SevenCoreRatioLimit](#)
Offset 0x08B4 - 7-Core Ratio Limit 7-Core Ratio Limit: LFM to Fused, For overlocking part: LFM to 255.
 - UINT8 [EightCoreRatioLimit](#)
Offset 0x08B5 - 8-Core Ratio Limit 8-Core Ratio Limit: LFM to Fused, For overlocking part: LFM to 255.
 - UINT8 [EnableItbm](#)
Offset 0x08B6 - Intel Turbo Boost Max Technology 3.0 Intel Turbo Boost Max Technology 3.0.
 - UINT8 [EnableItbmDriver](#)
Offset 0x08B7 - Intel Turbo Boost Max Technology 3.0 Driver.
 - UINT8 [C1StateAutoDemotion](#)
Offset 0x08B8 - Enable or Disable C1 Cstate Demotion Enable or Disable C1 Cstate Demotion.
 - UINT8 [C1StateUnDemotion](#)
Offset 0x08B9 - Enable or Disable C1 Cstate UnDemotion Enable or Disable C1 Cstate UnDemotion.
 - UINT8 [CpuWakeUpTimer](#)
Offset 0x08BA - CpuWakeUpTimer Enable long CPU Wakeup Timer.
 - UINT8 [MinRingRatioLimit](#)
Offset 0x08BB - Minimum Ring ratio limit override Minimum Ring ratio limit override.
 - UINT8 [MaxRingRatioLimit](#)
Offset 0x08BC - Minimum Ring ratio limit override Maximum Ring ratio limit override.
 - UINT8 [C3StateAutoDemotion](#)
Offset 0x08BD - Enable or Disable C3 Cstate Demotion Enable or Disable C3 Cstate Demotion.
 - UINT8 [C3StateUnDemotion](#)
Offset 0x08BE - Enable or Disable C3 Cstate UnDemotion Enable or Disable C3 Cstate UnDemotion.
 - UINT8 [RatioLimitNumCore0](#)
Offset 0x08BF - Ratio Limit Num Core 0 Ratio Limit Num Core0: This register defines the active core ranges for each frequency point.
 - UINT8 [RatioLimitNumCore1](#)
Offset 0x08C0 - Ratio Limit Num Core 1 Ratio Limit Num Core1: This register defines the active core ranges for each frequency point.
 - UINT8 [RatioLimitNumCore2](#)
Offset 0x08C1 - Ratio Limit Num Core 2 Ratio Limit Num Core2: This register defines the active core ranges for each frequency point.
 - UINT8 [RatioLimitNumCore3](#)
-

- Offset 0x08C2 - Ratio Limit Core 3 Ratio Limit Num Core3: This register defines the active core ranges for each frequency point.
- UINT8 [RatioLimitNumCore4](#)
Offset 0x08C3 - Ratio Limit Num Core 4 Ratio Limit Num Core4: This register defines the active core ranges for each frequency point.
 - UINT8 [RatioLimitNumCore5](#)
Offset 0x08C4 - Ratio Limit Num Core 5 Ratio Limit Num Core5: This register defines the active core ranges for each frequency point.
 - UINT8 [RatioLimitNumCore6](#)
Offset 0x08C5 - Ratio Limit Num Core 6 Ratio Limit Num Core6: This register defines the active core ranges for each frequency point.
 - UINT8 [RatioLimitNumCore7](#)
Offset 0x08C6 - Ratio Limit Num Core 7 Ratio Limit Num Core7: This register defines the active core ranges for each frequency point.
 - UINT8 [DualTauBoost](#)
Offset 0x08C7 - Dual Tau Boost Enable, Disable Dual Tau Boost feature.
 - UINT8 [ItbmPeriodicSmmTimer](#)
Offset 0x08C8 - ITBMT 3.0 Runtime Periodic SMM timer Periodic SMM Polling timer for ITBMT 3.0 **Default 4 - 8 Sec.**
 - UINT8 [ReservedCpuPostMemTest](#) [9]
Offset 0x08C9 - ReservedCpuPostMemTest Reserved for CPU Post-Mem Test \$EN_DIS.
 - UINT8 [SgxSinitDataFromTpm](#)
Offset 0x08D2 - SgxSinitDataFromTpm SgxSinitDataFromTpm default values.
 - UINT8 [EndOfPostMessage](#)
Offset 0x08D3 - End of Post message Test, Send End of Post message.
 - UINT8 [DisableD0I3SettingForHeci](#)
Offset 0x08D4 - D0I3 Setting for HECI Disable Test, 0: disable, 1: enable, Setting this option disables setting D0I3 bit for all HECI devices \$EN_DIS.
 - UINT8 [UnusedUpdSpace28](#)
Offset 0x08D5.
 - UINT16 [PchHdaResetWaitTimer](#)
Offset 0x08D6 - HD Audio Reset Wait Timer The delay timer after Azalia reset, the value is number of microseconds.
 - UINT8 [PchLockDownGlobalSmi](#)
Offset 0x08D8 - Enable LOCKDOWN SMI Enable SMI_LOCK bit to prevent writes to the Global SMI Enable bit.
 - UINT8 [PchLockDownBiosInterface](#)
Offset 0x08D9 - Enable LOCKDOWN BIOS Interface Enable BIOS Interface Lock Down bit to prevent writes to the Backup Control Register.
 - UINT8 [PchUnlockGpioPads](#)
Offset 0x08DA - Unlock all GPIO pads Force all GPIO pads to be unlocked for debug purpose.
 - UINT8 [PchSbAccessUnlock](#)
Offset 0x08DB - PCH Unlock SideBand access The SideBand PortID mask for certain end point (e.g.
 - UINT16 [PcieRpLtrMaxSnoopLatency](#) [24]
Offset 0x08DC - PCIE RP Ltr Max Snoop Latency Latency Tolerance Reporting, Max Snoop Latency.
 - UINT16 [PcieRpLtrMaxNoSnoopLatency](#) [24]
Offset 0x090C - PCIE RP Ltr Max No Snoop Latency Latency Tolerance Reporting, Max Non-Snoop Latency.
 - UINT8 [PcieRpSnoopLatencyOverrideMode](#) [24]
Offset 0x093C - PCIE RP Snoop Latency Override Mode Latency Tolerance Reporting, Snoop Latency Override Mode.
 - UINT8 [PcieRpSnoopLatencyOverrideMultiplier](#) [24]
Offset 0x0954 - PCIE RP Snoop Latency Override Multiplier Latency Tolerance Reporting, Snoop Latency Override Multiplier.
 - UINT16 [PcieRpSnoopLatencyOverrideValue](#) [24]
Offset 0x096C - PCIE RP Snoop Latency Override Value Latency Tolerance Reporting, Snoop Latency Override Value.
-

- UINT8 [PcieRpNonSnoopLatencyOverrideMode](#) [24]
Offset 0x099C - PCIE RP Non Snoop Latency Override Mode Latency Tolerance Reporting, Non-Snoop Latency Override Mode.
 - UINT8 [PcieRpNonSnoopLatencyOverrideMultiplier](#) [24]
Offset 0x09B4 - PCIE RP Non Snoop Latency Override Multiplier Latency Tolerance Reporting, Non-Snoop Latency Override Multiplier.
 - UINT16 [PcieRpNonSnoopLatencyOverrideValue](#) [24]
Offset 0x09CC - PCIE RP Non Snoop Latency Override Value Latency Tolerance Reporting, Non-Snoop Latency Override Value.
 - UINT8 [PcieRpSlotPowerLimitScale](#) [24]
Offset 0x09FC - PCIE RP Slot Power Limit Scale Specifies scale used for slot power limit value.
 - UINT16 [PcieRpSlotPowerLimitValue](#) [24]
Offset 0x0A14 - PCIE RP Slot Power Limit Value Specifies upper limit on power supplied by slot.
 - UINT8 [PcieRpUptp](#) [24]
Offset 0x0A44 - PCIE RP Upstream Port Transmitter Preset Used during Gen3 Link Equalization.
 - UINT8 [PcieRpDptp](#) [24]
Offset 0x0A5C - PCIE RP Downstream Port Transmitter Preset Used during Gen3 Link Equalization.
 - UINT8 [PcieEnablePort8xhDecode](#)
Offset 0x0A74 - PCIE RP Enable Port8xh Decode This member describes whether PCIE root port Port 8xh Decode is enabled.
 - UINT8 [PchPciePort8xhDecodePortIndex](#)
Offset 0x0A75 - PCIE Port8xh Decode Port Index The Index of PCIe Port that is selected for Port8xh Decode (0 Based).
 - UINT8 [PchPmDisableEnergyReport](#)
Offset 0x0A76 - PCH Energy Reporting Disable/Enable PCH to CPU energy report feature.
 - UINT8 [SataTestMode](#)
Offset 0x0A77 - PCH Sata Test Mode Allow entrance to the PCH SATA test modes.
 - UINT8 [PchXhciOcLock](#)
Offset 0x0A78 - PCH USB OverCurrent mapping lock enable If this policy option is enabled then BIOS will program OCCFDONE bit in xHCI meaning that OC mapping data will be consumed by xHCI and OC mapping registers will be locked.
 - UINT8 [ReservedPchPostMemTest](#) [16]
Offset 0x0A79 - ReservedPchPostMemTest Reserved for Pch Post-Mem Test \$EN_DIS.
 - UINT8 [MctpBroadcastCycle](#)
*Offset 0x0A89 - Mctp Broadcast Cycle Test, Determine if MCTP Broadcast is enabled **0: Disable**; 1: Enable.*
 - UINT8 [EmmcUseCustomDlls](#)
Offset 0x0A8A - Use DLL values from policy Set if FSP should use HS400 DLL values from policy \$EN_DIS.
 - UINT8 [UnusedUpdSpace29](#)
Offset 0x0A8B.
 - UINT32 [EmmcTxCmdDelayRegValue](#)
Offset 0x0A8C - Emmc Tx CMD Delay control register value Please see Tx CMD Delay Control register definition for help.
 - UINT32 [EmmcTxDataDelay1RegValue](#)
Offset 0x0A90 - Emmc Tx DATA Delay control 1 register value Please see Tx DATA Delay control 1 register definition for help.
 - UINT32 [EmmcTxDataDelay2RegValue](#)
Offset 0x0A94 - Emmc Tx DATA Delay control 2 register value Please see Tx DATA Delay control 2 register definition for help.
 - UINT32 [EmmcRxCmdDataDelay1RegValue](#)
Offset 0x0A98 - Emmc Rx CMD + DATA Delay control 1 register value Please see Rx CMD + DATA Delay control 1 register definition for help.
 - UINT32 [EmmcRxCmdDataDelay2RegValue](#)
-

Offset 0x0A9C - Emmc Rx CMD + DATA Delay control 2 register value Please see Rx CMD + DATA Delay control 2 register definition for help.

- UINT32 [EmmcRxStrobeDelayRegValue](#)

Offset 0x0AA0 - Emmc Rx Strobe Delay control register value Please see Rx Strobe Delay control register definition for help.

- UINT8 [SdCardUseCustomDlls](#)

Offset 0x0AA4 - Use tuned DLL values from policy Set if FSP should use HS400 DLL values from policy \$EN_DIS.

- UINT8 [UnusedUpdSpace30](#) [3]

Offset 0x0AA5.

- UINT32 [SdCardTxCmdDelayRegValue](#)

Offset 0x0AA8 - SdCard Tx CMD Delay control register value Please see Tx CMD Delay Control register definition for help.

- UINT32 [SdCardTxDataDelay1RegValue](#)

Offset 0x0AAC - SdCard Tx DATA Delay control 1 register value Please see Tx DATA Delay control 1 register definition for help.

- UINT32 [SdCardTxDataDelay2RegValue](#)

Offset 0x0AB0 - SdCard Tx DATA Delay control 2 register value Please see Tx DATA Delay control 2 register definition for help.

- UINT32 [SdCardRxCmdDataDelay1RegValue](#)

Offset 0x0AB4 - SdCard Rx CMD + DATA Delay control 1 register value Please see Rx CMD + DATA Delay control 1 register definition for help.

- UINT32 [SdCardRxCmdDataDelay2RegValue](#)

Offset 0x0AB8 - SdCard Rx CMD + DATA Delay control 2 register value Please see Rx CMD + DATA Delay control 2 register definition for help.

- UINT8 [EnforceEDebugMode](#)

Offset 0x0ABC - Enforce Enhanced Debug Mode Determine if ME should enter Enhanced Debug Mode.

- UINT8 [UnusedUpdSpace31](#) [3]

Offset 0x0ABD.

- UINT32 [LogoPixelHeight](#)

Offset 0x0AC0 - LogoPixelHeight Address Address of LogoPixelHeight.

- UINT32 [LogoPixelWidth](#)

Offset 0x0AC4 - LogoPixelWidth Address Address of LogoPixelWidth.

- UINT8 [UnusedUpdSpace32](#) [4]

Offset 0x0AC8.

- UINT8 [ReservedFspstestUpd](#) [4]

Offset 0x0ACC.

13.38.1 Detailed Description

Fsp S Test Configuration.

Definition at line 2574 of file Fspstest.h.

13.38.2 Member Data Documentation

13.38.2.1 ApIdleManner

UINT8 FSP_S_TEST_CONFIG::ApIdleManner

Offset 0x0803 - AP Idle Manner of waiting for SIPI AP Idle Manner of waiting for SIPI; 1: HALT loop; 2: **MWAIT loop**; 3: RUN loop.

1: HALT loop, 2: MWAIT loop, 3: RUN loop

Definition at line 2897 of file FspUpd.h.

13.38.2.2 AutoThermalReporting

UINT8 FSP_S_TEST_CONFIG::AutoThermalReporting

Offset 0x081D - Enable or Disable Thermal Reporting Enable or Disable Thermal Reporting through ACPI tables; 0: Disable; 1: **Enable**.

\$EN_DIS

Definition at line 2987 of file FspUpd.h.

13.38.2.3 C1e

UINT8 FSP_S_TEST_CONFIG::C1e

Offset 0x0821 - Enable or Disable Enhanced C-states Enable or Disable Enhanced C-states.

0: Disable; 1: **Enable** \$EN_DIS

Definition at line 3011 of file FspUpd.h.

13.38.2.4 C1StateAutoDemotion

UINT8 FSP_S_TEST_CONFIG::C1StateAutoDemotion

Offset 0x08B8 - Enable or Disable C1 Cstate Demotion Enable or Disable C1 Cstate Demotion.

Disable; 1: **Enable** \$EN_DIS

Definition at line 3311 of file FspUpd.h.

13.38.2.5 C1StateUnDemotion

UINT8 FSP_S_TEST_CONFIG::C1StateUnDemotion

Offset 0x08B9 - Enable or Disable C1 Cstate UnDemotion Enable or Disable C1 Cstate UnDemotion.

Disable; 1: **Enable** \$EN_DIS

Definition at line 3317 of file FspUpd.h.

13.38.2.6 C3StateAutoDemotion

UINT8 FSP_S_TEST_CONFIG::C3StateAutoDemotion

Offset 0x08BD - Enable or Disable C3 Cstate Demotion Enable or Disable C3 Cstate Demotion.

Disable; **1: Enable** \$EN_DIS

Definition at line 3342 of file FspUpd.h.

13.38.2.7 C3StateUnDemotion

UINT8 FSP_S_TEST_CONFIG::C3StateUnDemotion

Offset 0x08BE - Enable or Disable C3 Cstate UnDemotion Enable or Disable C3 Cstate UnDemotion.

Disable; **1: Enable** \$EN_DIS

Definition at line 3348 of file FspUpd.h.

13.38.2.8 ConfigTdpBios

UINT8 FSP_S_TEST_CONFIG::ConfigTdpBios

Offset 0x07F9 - Load Configurable TDP SSDT Configure whether to load Configurable TDP SSDT; **0: Disable**; **1: Enable**.

\$EN_DIS

Definition at line 2836 of file FspUpd.h.

13.38.2.9 CpuWakeUpTimer

UINT8 FSP_S_TEST_CONFIG::CpuWakeUpTimer

Offset 0x08BA - CpuWakeUpTimer Enable long CPU Wakeup Timer.

When enabled, the cpu internal wakeup time is increased to 180 seconds. **0: Disable**; **1: Enable** \$EN_DIS

Definition at line 3324 of file FspUpd.h.

13.38.2.10 CStatePreWake

UINT8 FSP_S_TEST_CONFIG::CStatePreWake

Offset 0x0824 - Enable or Disable CState-Pre wake Enable or Disable CState-Pre wake.

0: Disable; **1: Enable** \$EN_DIS

Definition at line 3029 of file FspUpd.h.

13.38.2.11 CstCfgCtrlIoMwaitRedirection

UINT8 FSP_S_TEST_CONFIG::CstCfgCtrlIoMwaitRedirection

Offset 0x0826 - Enable or Disable IO to MWAIT redirection Enable or Disable IO to MWAIT redirection; **0: Disable**; **1: Enable**.

\$EN_DIS

Definition at line 3041 of file FspUpd.h.

13.38.2.12 Custom1ConfigTdpControl

UINT8 FSP_S_TEST_CONFIG::Custom1ConfigTdpControl

Offset 0x07F1 - Custom Config Tdp Control Config Tdp Control (0/1/2) value for custom cTDP level 1.

Valid Range is 0 to 2

Definition at line 2792 of file FspUpd.h.

13.38.2.13 Custom1PowerLimit1

UINT32 FSP_S_TEST_CONFIG::Custom1PowerLimit1

Offset 0x0890 - Short term Power Limit value for custom cTDP level 1 Short term Power Limit value for custom cTDP level 1.

Units are based on POWER_MGMT_CONFIG.CustomPowerUnit. Valid Range 0 to 4095875 in Step size of 125

Definition at line 3210 of file FspUpd.h.

13.38.2.14 Custom1PowerLimit1Time

UINT8 FSP_S_TEST_CONFIG::Custom1PowerLimit1Time

Offset 0x07EF - Custom Short term Power Limit time window Short term Power Limit time window value for custom CTD level 1.

Valid Range 0 to 128, 0 = AUTO

Definition at line 2782 of file FspUpd.h.

13.38.2.15 Custom1PowerLimit2

UINT32 FSP_S_TEST_CONFIG::Custom1PowerLimit2

Offset 0x0894 - Long term Power Limit value for custom cTDP level 1 Long term Power Limit value for custom cTDP level 1.

Units are based on POWER_MGMT_CONFIG.CustomPowerUnit. Valid Range 0 to 4095875 in Step size of 125

Definition at line 3216 of file FspUpd.h.

13.38.2.16 Custom1TurboActivationRatio

UINT8 FSP_S_TEST_CONFIG::Custom1TurboActivationRatio

Offset 0x07F0 - Custom Turbo Activation Ratio Turbo Activation Ratio for custom cTDP level 1.

Valid Range 0 to 255

Definition at line 2787 of file FspUpd.h.

13.38.2.17 Custom2ConfigTdpControl

UINT8 FSP_S_TEST_CONFIG::Custom2ConfigTdpControl

Offset 0x07F4 - Custom Config Tdp Control Config Tdp Control (0/1/2) value for custom cTDP level 1.

Valid Range is 0 to 2

Definition at line 2808 of file FspUpd.h.

13.38.2.18 Custom2PowerLimit1

UINT32 FSP_S_TEST_CONFIG::Custom2PowerLimit1

Offset 0x0898 - Short term Power Limit value for custom cTDP level 2 Short term Power Limit value for custom cTDP level 2.

Units are based on POWER_MGMT_CONFIG.CustomPowerUnit. Valid Range 0 to 4095875 in Step size of 125

Definition at line 3222 of file FspUpd.h.

13.38.2.19 Custom2PowerLimit1Time

UINT8 FSP_S_TEST_CONFIG::Custom2PowerLimit1Time

Offset 0x07F2 - Custom Short term Power Limit time window Short term Power Limit time window value for custom CTDP level 2.

Valid Range 0 to 128, 0 = AUTO

Definition at line 2798 of file FspUpd.h.

13.38.2.20 Custom2PowerLimit2

UINT32 FSP_S_TEST_CONFIG::Custom2PowerLimit2

Offset 0x089C - Long term Power Limit value for custom cTDP level 2 Long term Power Limit value for custom cTDP level 2.

Units are based on POWER_MGMT_CONFIG.CustomPowerUnit. Valid Range 0 to 4095875 in Step size of 125

Definition at line 3228 of file FspUpd.h.

13.38.2.21 Custom2TurboActivationRatio

UINT8 FSP_S_TEST_CONFIG::Custom2TurboActivationRatio

Offset 0x07F3 - Custom Turbo Activation Ratio Turbo Activation Ratio for custom cTDP level 2.

Valid Range 0 to 255

Definition at line 2803 of file FspUpd.h.

13.38.2.22 Custom3ConfigTdpControl

UINT8 FSP_S_TEST_CONFIG::Custom3ConfigTdpControl

Offset 0x07F7 - Custom Config Tdp Control Config Tdp Control (0/1/2) value for custom cTDP level 1.

Valid Range is 0 to 2

Definition at line 2824 of file FspUpd.h.

13.38.2.23 Custom3PowerLimit1

UINT32 FSP_S_TEST_CONFIG::Custom3PowerLimit1

Offset 0x08A0 - Short term Power Limit value for custom cTDP level 3 Short term Power Limit value for custom cTDP level 3.

Units are based on POWER_MGMT_CONFIG.CustomPowerUnit. Valid Range 0 to 4095875 in Step size of 125

Definition at line 3234 of file FspUpd.h.

13.38.2.24 Custom3PowerLimit1Time

UINT8 FSP_S_TEST_CONFIG::Custom3PowerLimit1Time

Offset 0x07F5 - Custom Short term Power Limit time window Short term Power Limit time window value for custom CTDP level 3.

Valid Range 0 to 128, 0 = AUTO

Definition at line 2814 of file FspUpd.h.

13.38.2.25 Custom3PowerLimit2

UINT32 FSP_S_TEST_CONFIG::Custom3PowerLimit2

Offset 0x08A4 - Long term Power Limit value for custom cTDP level 3 Long term Power Limit value for custom cTDP level 3.

Units are based on POWER_MGMT_CONFIG.CustomPowerUnit. Valid Range 0 to 4095875 in Step size of 125

Definition at line 3240 of file FspUpd.h.

13.38.2.26 Custom3TurboActivationRatio

UINT8 FSP_S_TEST_CONFIG::Custom3TurboActivationRatio

Offset 0x07F6 - Custom Turbo Activation Ratio Turbo Activation Ratio for custom cTDP level 3.

Valid Range 0 to 255

Definition at line 2819 of file FspUpd.h.

13.38.2.27 Cx

UINT8 FSP_S_TEST_CONFIG::Cx

Offset 0x081F - Enable or Disable CPU power states (C-states) Enable or Disable CPU power states (C-states).

0: Disable; **1: Enable** \$EN_DIS

Definition at line 2999 of file FspUpd.h.

13.38.2.28 DebugInterfaceEnable

UINT8 FSP_S_TEST_CONFIG::DebugInterfaceEnable

Offset 0x0801 - Deprecated DO NOT USE Enable or Disable processor debug features.

Deprecated Enable or Disable processor debug features; **0: Disable**; 1: Enable.

\$EN_DIS

Definition at line 2885 of file FspUpd.h.

13.38.2.29 DebugInterfaceLockEnable

UINT8 FSP_S_TEST_CONFIG::DebugInterfaceLockEnable

Offset 0x0802 - Lock or Unlock debug interface features Lock or Unlock debug interface features; 0: Disable; **1: Enable**.

\$EN_DIS

Definition at line 2891 of file FspUpd.h.

13.38.2.30 DisableProcHotOut

UINT8 FSP_S_TEST_CONFIG::DisableProcHotOut

Offset 0x081A - Enable or Disable PROCHOT# signal being driven externally Enable or Disable PROCHOT# signal being driven externally; 0: Disable; **1: Enable**.

\$EN_DIS

Definition at line 2969 of file FspUpd.h.

13.38.2.31 DisableVrThermalAlert

UINT8 FSP_S_TEST_CONFIG::DisableVrThermalAlert

Offset 0x081C - Enable or Disable VR Thermal Alert Enable or Disable VR Thermal Alert; **0: Disable**; 1: Enable.

\$EN_DIS

Definition at line 2981 of file FspUpd.h.

13.38.2.32 DualTauBoost

UINT8 FSP_S_TEST_CONFIG::DualTauBoost

Offset 0x08C7 - Dual Tau Boost Enable, Disable Dual Tau Boost feature.

This is only applicable for CMLS; **0: Disable**; 1: Enable \$EN_DIS

Definition at line 3395 of file FspUpd.h.

13.38.2.33 EightCoreRatioLimit

UINT8 FSP_S_TEST_CONFIG::EightCoreRatioLimit

Offset 0x08B5 - 8-Core Ratio Limit 8-Core Ratio Limit: LFM to Fused, For overclocking part: LFM to 255.

This 8-Core Ratio Limit Must be Less than or equal to 1-Core Ratio Limit. Range is 0 to 255 0x0:0xFF

Definition at line 3293 of file FspUpd.h.

13.38.2.34 Eist

UINT8 FSP_S_TEST_CONFIG::Eist

Offset 0x0815 - Enable or Disable Intel SpeedStep Technology Enable or Disable Intel SpeedStep Technology.

0: Disable; **1: Enable** \$EN_DIS

Definition at line 2937 of file FspUpd.h.

13.38.2.35 EnableItbm

UINT8 FSP_S_TEST_CONFIG::EnableItbm

Offset 0x08B6 - Intel Turbo Boost Max Technology 3.0 Intel Turbo Boost Max Technology 3.0.

0: Disabled; **1: Enabled** \$EN_DIS

Definition at line 3299 of file FspUpd.h.

13.38.2.36 EnableItbmDriver

UINT8 FSP_S_TEST_CONFIG::EnableItbmDriver

Offset 0x08B7 - Intel Turbo Boost Max Technology 3.0 Driver.

Deprecated Intel Turbo Boost Max Technology 3.0 Driver **0: Disabled**; 1: Enabled \$EN_DIS

Definition at line 3305 of file FspUpd.h.

13.38.2.37 EndOfPostMessage

UINT8 FSP_S_TEST_CONFIG::EndOfPostMessage

Offset 0x08D3 - End of Post message Test, Send End of Post message.

Disable(0x0): Disable EOP message, Enable(0x1)(Default): Enable EOP message \$EN_DIS

Definition at line 3420 of file FspUpd.h.

13.38.2.38 EnergyEfficientPState

```
UINT8 FSP_S_TEST_CONFIG::EnergyEfficientPState
```

Offset 0x0816 - Enable or Disable Energy Efficient P-state Enable or Disable Energy Efficient P-state will be applied in Turbo mode.

Disable; **1: Enable** \$EN_DIS

Definition at line 2944 of file FspUpd.h.

13.38.2.39 EnergyEfficientTurbo

```
UINT8 FSP_S_TEST_CONFIG::EnergyEfficientTurbo
```

Offset 0x0817 - Enable or Disable Energy Efficient Turbo Enable or Disable Energy Efficient Turbo, will be applied in Turbo mode.

Disable; **1: Enable, 2: Auto / Silicon default** 0: Disable, 1: Enable, 2: Auto

Definition at line 2951 of file FspUpd.h.

13.38.2.40 EnforceEDebugMode

```
UINT8 FSP_S_TEST_CONFIG::EnforceEDebugMode
```

Offset 0x0ABC - Enforce Enhanced Debug Mode Determine if ME should enter Enhanced Debug Mode.

0: disable, 1: enable \$EN_DIS

Definition at line 3645 of file FspUpd.h.

13.38.2.41 FiveCoreRatioLimit

```
UINT8 FSP_S_TEST_CONFIG::FiveCoreRatioLimit
```

Offset 0x08B2 - 5-Core Ratio Limit 5-Core Ratio Limit: LFM to Fused, For overclocking part: LFM to 255.

This 5-Core Ratio Limit Must be Less than or equal to 1-Core Ratio Limit. Range is 0 to 255 0x0:0xFF

Definition at line 3272 of file FspUpd.h.

13.38.2.42 FourCoreRatioLimit

```
UINT8 FSP_S_TEST_CONFIG::FourCoreRatioLimit
```

Offset 0x07E1 - 4-Core Ratio Limit 4-Core Ratio Limit: LFM to Fused, For overclocking part: LFM to 255.

This 4-Core Ratio Limit Must be Less than or equal to 1-Core Ratio Limit. Range is 0 to 255

Definition at line 2693 of file FspUpd.h.

13.38.2.43 HdcControl

UINT8 FSP_S_TEST_CONFIG::HdcControl

Offset 0x07E3 - Hardware Duty Cycle Control Hardware Duty Cycle Control configuration.

0: Disabled; **1: Enabled** 2-3:Reserved \$EN_DIS

Definition at line 2706 of file FspUpd.h.

13.38.2.44 Hwp

UINT8 FSP_S_TEST_CONFIG::Hwp

Offset 0x07E2 - Enable or Disable HWP Enable or Disable HWP(Hardware P states) Support.

0: Disable; **1: Enable**; 2-3:Reserved \$EN_DIS

Definition at line 2700 of file FspUpd.h.

13.38.2.45 HwpInterruptControl

UINT8 FSP_S_TEST_CONFIG::HwpInterruptControl

Offset 0x08B1 - Set HW P-State Interrupts Enabled for for MISC_PWR_MGMT Set HW P-State Interrupts Enabled for for MISC_PWR_MGMT; **0: Disable**; 1: Enable.

\$EN_DIS

Definition at line 3265 of file FspUpd.h.

13.38.2.46 ItbmPeriodicSmmTimer

UINT8 FSP_S_TEST_CONFIG::ItbmPeriodicSmmTimer

Offset 0x08C8 - ITBMT 3.0 Runtime Periodic SMM timer Periodic SMM Polling timer for ITBMT 3.0 **Default 4 - 8 Sec.**

0 = Diable periodic SMM, and Valid values 1 - 16ms , 2 - 32ms , 3 - 64ms , 4 - 8 sec , 5 - 16 sec, 6 - 32 sec, 7 - 64 sec.

Definition at line 3402 of file FspUpd.h.

13.38.2.47 MachineCheckEnable

UINT8 FSP_S_TEST_CONFIG::MachineCheckEnable

Offset 0x0800 - Enable or Disable initialization of machine check registers Enable or Disable initialization of machine check registers; 0: Disable; **1: Enable**.

\$EN_DIS

Definition at line 2879 of file FspUpd.h.

13.38.2.48 MaxRingRatioLimit

UINT8 FSP_S_TEST_CONFIG::MaxRingRatioLimit

Offset 0x08BC - Minimum Ring ratio limit override Maximum Ring ratio limit override.

0: Hardware defaults. Range: 0 - Max turbo ratio limit

Definition at line 3336 of file FspUpd.h.

13.38.2.49 MctpBroadcastCycle

UINT8 FSP_S_TEST_CONFIG::MctpBroadcastCycle

Offset 0x0A89 - Mctp Broadcast Cycle Test, Determine if MCTP Broadcast is enabled **0: Disable**; 1: Enable.

\$EN_DIS

Definition at line 3564 of file FspUpd.h.

13.38.2.50 MinRingRatioLimit

UINT8 FSP_S_TEST_CONFIG::MinRingRatioLimit

Offset 0x08BB - Minimum Ring ratio limit override Minimum Ring ratio limit override.

0: Hardware defaults. Range: 0 - Max turbo ratio limit

Definition at line 3330 of file FspUpd.h.

13.38.2.51 MlcStreamerPrefetcher

UINT8 FSP_S_TEST_CONFIG::MlcStreamerPrefetcher

Offset 0x07FD - Enable or Disable MLC Streamer Prefetcher Enable or Disable MLC Streamer Prefetcher; 0↔ : Disable; **1: Enable.**

\$EN_DIS

Definition at line 2861 of file FspUpd.h.

13.38.2.52 MonitorMwaitEnable

UINT8 FSP_S_TEST_CONFIG::MonitorMwaitEnable

Offset 0x07FF - Enable or Disable Monitor /MWAIT instructions Enable or Disable Monitor /MWAIT instructions; 0: Disable; **1: Enable.**

\$EN_DIS

Definition at line 2873 of file FspUpd.h.

13.38.2.53 NumberOfEntries

UINT8 FSP_S_TEST_CONFIG::NumberOfEntries

Offset 0x07EE - Custom Ratio State Entries The number of custom ratio state entries, ranges from 0 to 40 for a valid custom ratio table.Sets the number of custom P-states.

At least 2 states must be present

Definition at line 2776 of file FspUpd.h.

13.38.2.54 OneCoreRatioLimit

UINT8 FSP_S_TEST_CONFIG::OneCoreRatioLimit

Offset 0x07DE - 1-Core Ratio Limit 1-Core Ratio Limit: LFM to Fused, For overclocking part: LFM to 255.

This 1-Core Ratio Limit Must be greater than or equal to 2-Core Ratio Limit, 3-Core Ratio Limit, 4-Core Ratio Limit, 5-Core Ratio Limit, 6-Core Ratio Limit, 7-Core Ratio Limit, 8-Core Ratio Limit. Range is 0 to 255

Definition at line 2675 of file FspUpd.h.

13.38.2.55 PchHdaResetWaitTimer

UINT16 FSP_S_TEST_CONFIG::PchHdaResetWaitTimer

Offset 0x08D6 - HD Audio Reset Wait Timer The delay timer after Azalia reset, the value is number of microseconds. Default is 600.

Definition at line 3436 of file FspUpd.h.

13.38.2.56 PchLockDownBiosInterface

UINT8 FSP_S_TEST_CONFIG::PchLockDownBiosInterface

Offset 0x08D9 - Enable LOCKDOWN BIOS Interface Enable BIOS Interface Lock Down bit to prevent writes to the Backup Control Register.

\$EN_DIS

Definition at line 3448 of file FspUpd.h.

13.38.2.57 PchLockDownGlobalSmi

UINT8 FSP_S_TEST_CONFIG::PchLockDownGlobalSmi

Offset 0x08D8 - Enable LOCKDOWN SMI Enable SMI_LOCK bit to prevent writes to the Global SMI Enable bit.

\$EN_DIS

Definition at line 3442 of file FspUpd.h.

13.38.2.58 PchPmDisableEnergyReport

UINT8 FSP_S_TEST_CONFIG::PchPmDisableEnergyReport

Offset 0x0A76 - PCH Energy Reporting Disable/Enable PCH to CPU energy report feature.

\$EN_DIS

Definition at line 3539 of file FspUpd.h.

13.38.2.59 PchSbAccessUnlock

UINT8 FSP_S_TEST_CONFIG::PchSbAccessUnlock

Offset 0x08DB - PCH Unlock SideBand access The SideBand PortID mask for certain end point (e.g.

PSFx) will be locked before 3rd party code execution. 0: Lock SideBand access; 1: Unlock SideBand access.

\$EN_DIS

Definition at line 3461 of file FspUpd.h.

13.38.2.60 PchUnlockGpioPads

UINT8 FSP_S_TEST_CONFIG::PchUnlockGpioPads

Offset 0x08DA - Unlock all GPIO pads Force all GPIO pads to be unlocked for debug purpose.

\$EN_DIS

Definition at line 3454 of file FspUpd.h.

13.38.2.61 PchXhciOcLock

UINT8 FSP_S_TEST_CONFIG::PchXhciOcLock

Offset 0x0A78 - PCH USB OverCurrent mapping lock enable If this policy option is enabled then BIOS will program OCCFDONE bit in xHCI meaning that OC mapping data will be consumed by xHCI and OC mapping registers will be locked.

\$EN_DIS

Definition at line 3552 of file FspUpd.h.

13.38.2.62 PcieEnablePort8xhDecode

UINT8 FSP_S_TEST_CONFIG::PcieEnablePort8xhDecode

Offset 0x0A74 - PCIE RP Enable Port8xh Decode This member describes whether PCIE root port Port 8xh Decode is enabled.

0: Disable; 1: Enable. \$EN_DIS

Definition at line 3528 of file FspUpd.h.

13.38.2.63 PcieRpDptp

UINT8 FSP_S_TEST_CONFIG::PcieRpDptp[24]

Offset 0x0A5C - PCIE RP Downstream Port Transmitter Preset Used during Gen3 Link Equalization.

Used for all lanes. Default is 7.

Definition at line 3521 of file FspUpd.h.

13.38.2.64 PcieRpSlotPowerLimitScale

UINT8 FSP_S_TEST_CONFIG::PcieRpSlotPowerLimitScale[24]

Offset 0x09FC - PCIE RP Slot Power Limit Scale Specifies scale used for slot power limit value.

Leave as 0 to set to default.

Definition at line 3506 of file FspUpd.h.

13.38.2.65 PcieRpSlotPowerLimitValue

UINT16 FSP_S_TEST_CONFIG::PcieRpSlotPowerLimitValue[24]

Offset 0x0A14 - PCIE RP Slot Power Limit Value Specifies upper limit on power supplied by slot.

Leave as 0 to set to default.

Definition at line 3511 of file FspUpd.h.

13.38.2.66 PcieRpUptp

UINT8 FSP_S_TEST_CONFIG::PcieRpUptp[24]

Offset 0x0A44 - PCIE RP Upstream Port Transmitter Preset Used during Gen3 Link Equalization.

Used for all lanes. Default is 5.

Definition at line 3516 of file FspUpd.h.

13.38.2.67 PkgCStateDemotion

UINT8 FSP_S_TEST_CONFIG::PkgCStateDemotion

Offset 0x0822 - Enable or Disable Package Cstate Demotion Enable or Disable Package Cstate Demotion.

0: Disable; 1: Enable \$EN_DIS

Definition at line 3017 of file FspUpd.h.

13.38.2.68 PkgCStateLimit

UINT8 FSP_S_TEST_CONFIG::PkgCStateLimit

Offset 0x0827 - Set the Max Pkg Cstate Set the Max Pkg Cstate.

Default set to Auto which limits the Max Pkg Cstate to deep C-state. Valid values 0 - C0/C1 , 1 - C2 , 2 - C3 , 3 - C6 , 4 - C7 , 5 - C7S , 6 - C8 , 7 - C9 , 8 - C10 , 254 - CPU Default , 255 - Auto

Definition at line 3048 of file FspUpd.h.

13.38.2.69 PkgCStateUnDemotion

UINT8 FSP_S_TEST_CONFIG::PkgCStateUnDemotion

Offset 0x0823 - Enable or Disable Package Cstate UnDemotion Enable or Disable Package Cstate UnDemotion.

0: Disable; 1: Enable \$EN_DIS

Definition at line 3023 of file FspUpd.h.

13.38.2.70 PmgCstCfgCtrlLock

UINT8 FSP_S_TEST_CONFIG::PmgCstCfgCtrlLock

Offset 0x0820 - Configure C-State Configuration Lock Configure C-State Configuration Lock; 0: Disable; **1: Enable**.

\$EN_DIS

Definition at line 3005 of file FspUpd.h.

13.38.2.71 PowerLimit1

UINT32 FSP_S_TEST_CONFIG::PowerLimit1

Offset 0x087C - Package Long duration turbo mode power limit Package Long duration turbo mode power limit.

Units are based on POWER_MGMT_CONFIG.CustomPowerUnit. Valid Range 0 to 4095875 in Step size of 125

Definition at line 3180 of file FspUpd.h.

13.38.2.72 PowerLimit1Time

UINT8 FSP_S_TEST_CONFIG::PowerLimit1Time

Offset 0x07E4 - Package Long duration turbo mode time Package Long duration turbo mode time window in seconds.

0 = AUTO, uses 28 seconds. Valid values(Unit in seconds) 1 to 8 , 10 , 12 ,14 , 16 , 20 , 24 , 28 , 32 , 40 , 48 , 56 , 64 , 80 , 96 , 112 , 128

Definition at line 2713 of file FspUpd.h.

13.38.2.73 PowerLimit2

UINT8 FSP_S_TEST_CONFIG::PowerLimit2

Offset 0x07E5 - Short Duration Turbo Mode Enable or Disable short duration Turbo Mode.

0 : Disable; **1: Enable** \$EN_DIS

Definition at line 2719 of file FspsUpd.h.

13.38.2.74 PowerLimit2Power

UINT32 FSP_S_TEST_CONFIG::PowerLimit2Power

Offset 0x0880 - Package Short duration turbo mode power limit Package Short duration turbo mode power limit.

Units are based on POWER_MGMT_CONFIG.CustomPowerUnit.Valid Range 0 to 4095875 in Step size of 125

Definition at line 3186 of file FspsUpd.h.

13.38.2.75 PowerLimit3

UINT32 FSP_S_TEST_CONFIG::PowerLimit3

Offset 0x0884 - Package PL3 power limit Package PL3 power limit.

Units are based on POWER_MGMT_CONFIG.CustomPowerUnit.Valid Range 0 to 4095875 in Step size of 125

Definition at line 3192 of file FspsUpd.h.

13.38.2.76 PowerLimit4

UINT32 FSP_S_TEST_CONFIG::PowerLimit4

Offset 0x0888 - Package PL4 power limit Package PL4 power limit.

Units are based on POWER_MGMT_CONFIG.CustomPowerUnit.Valid Range 0 to 1023875 in Step size of 125

Definition at line 3198 of file FspsUpd.h.

13.38.2.77 ProcessorTraceEnable

UINT8 FSP_S_TEST_CONFIG::ProcessorTraceEnable

Offset 0x0805 - Enable or Disable Processor Trace feature Enable or Disable Processor Trace feature; **0: Disable**; 1: Enable.

\$EN_DIS

Definition at line 2909 of file FspsUpd.h.

13.38.2.78 ProcessorTraceMemBase

UINT64 FSP_S_TEST_CONFIG::ProcessorTraceMemBase

Offset 0x0808 - Base of memory region allocated for Processor Trace Base address of memory region allocated for Processor Trace.

Processor Trace requires 2^N alignment and size in bytes per thread, from 4KB to 128MB. **0: Disable**

Definition at line 2919 of file FspsUpd.h.

13.38.2.79 ProcessorTraceMemLength

UINT32 FSP_S_TEST_CONFIG::ProcessorTraceMemLength

Offset 0x0810 - Memory region allocation for Processor Trace Length in bytes of memory region allocated for Processor Trace.

Processor Trace requires 2^N alignment and size in bytes per thread, from 4KB to 128MB. **0: Disable**

Definition at line 2925 of file FspUpd.h.

13.38.2.80 ProcessorTraceOutputScheme

UINT8 FSP_S_TEST_CONFIG::ProcessorTraceOutputScheme

Offset 0x0804 - Control on Processor Trace output scheme Control on Processor Trace output scheme; **0: Single Range Output**; 1: ToPA Output.

0: Single Range Output, 1: ToPA Output

Definition at line 2903 of file FspUpd.h.

13.38.2.81 ProcHotResponse

UINT8 FSP_S_TEST_CONFIG::ProcHotResponse

Offset 0x081B - Enable or Disable PROCHOT# Response Enable or Disable PROCHOT# Response; **0: Disable**; 1: Enable.

\$EN_DIS

Definition at line 2975 of file FspUpd.h.

13.38.2.82 PsysPmax

UINT16 FSP_S_TEST_CONFIG::PsysPmax

Offset 0x086C - Platform Power Pmax PCODE MMIO Mailbox: Platform Power Pmax.

0 - Auto Specified in 1/8 Watt increments. Range 0-1024 Watts. Value of 800 = 100W

Definition at line 3140 of file FspUpd.h.

13.38.2.83 PsysPowerLimit1

UINT8 FSP_S_TEST_CONFIG::PsysPowerLimit1

Offset 0x07FA - PL1 Enable value PL1 Enable value to limit average platform power.

0: Disable; 1: Enable. \$EN_DIS

Definition at line 2842 of file FspUpd.h.

13.38.2.84 PsysPowerLimit1Power

UINT32 FSP_S_TEST_CONFIG::PsysPowerLimit1Power

Offset 0x08A8 - Platform PL1 power Platform PL1 power.

Units are based on POWER_MGMT_CONFIG.CustomPowerUnit.Valid Range 0 to 4095875 in Step size of 125

Definition at line 3246 of file FspUpd.h.

13.38.2.85 PsysPowerLimit1Time

UINT8 FSP_S_TEST_CONFIG::PsysPowerLimit1Time

Offset 0x07FB - PL1 timewindow PL1 timewindow in seconds.

0 = AUTO, uses 28 seconds. Valid values(Unit in seconds) 1 to 8 , 10 , 12 ,14 , 16 , 20 , 24 , 28 , 32 , 40 , 48 , 56 , 64 , 80 , 96 , 112 , 128

Definition at line 2848 of file FspUpd.h.

13.38.2.86 PsysPowerLimit2

UINT8 FSP_S_TEST_CONFIG::PsysPowerLimit2

Offset 0x07FC - PL2 Enable Value PL2 Enable activates the PL2 value to limit average platform power.

0: Disable; 1: Enable. \$EN_DIS

Definition at line 2855 of file FspUpd.h.

13.38.2.87 PsysPowerLimit2Power

UINT32 FSP_S_TEST_CONFIG::PsysPowerLimit2Power

Offset 0x08AC - Platform PL2 power Platform PL2 power.

Units are based on POWER_MGMT_CONFIG.CustomPowerUnit.Valid Range 0 to 4095875 in Step size of 125

Definition at line 3252 of file FspUpd.h.

13.38.2.88 RaceToHalt

UINT8 FSP_S_TEST_CONFIG::RaceToHalt

Offset 0x0831 - Race To Halt Enable/Disable Race To Halt feature.

RTH will dynamically increase CPU frequency in order to enter pkg C-State faster to reduce overall power. (RTH is controlled through MSR 1FC bit 20)Disable; **1: Enable** \$EN_DIS

Definition at line 3109 of file FspUpd.h.

13.38.2.89 SataTestMode

UINT8 FSP_S_TEST_CONFIG::SataTestMode

Offset 0x0A77 - PCH Sata Test Mode Allow entrance to the PCH SATA test modes.

\$EN_DIS

Definition at line 3545 of file FspUpd.h.

13.38.2.90 SevenCoreRatioLimit

UINT8 FSP_S_TEST_CONFIG::SevenCoreRatioLimit

Offset 0x08B4 - 7-Core Ratio Limit 7-Core Ratio Limit: LFM to Fused, For overclocking part: LFM to 255.

This 7-Core Ratio Limit Must be Less than or equal to 1-Core Ratio Limit. Range is 0 to 255 0x0:0xFF

Definition at line 3286 of file FspUpd.h.

13.38.2.91 SixCoreRatioLimit

UINT8 FSP_S_TEST_CONFIG::SixCoreRatioLimit

Offset 0x08B3 - 6-Core Ratio Limit 6-Core Ratio Limit: LFM to Fused, For overclocking part: LFM to 255.

This 6-Core Ratio Limit Must be Less than or equal to 1-Core Ratio Limit. Range is 0 to 255 0x0:0xFF

Definition at line 3279 of file FspUpd.h.

13.38.2.92 StateRatio

UINT8 FSP_S_TEST_CONFIG::StateRatio[40]

Offset 0x0833 - P-state ratios for custom P-state table P-state ratios for custom P-state table.

NumberOfEntries has valid range between 0 to 40. For no. of P-States supported(NumberOfEntries) , State↔Ratio[NumberOfEntries] are configurable. Valid Range of each entry is 0 to 0x7F

Definition at line 3121 of file FspUpd.h.

13.38.2.93 StateRatioMax16

UINT8 FSP_S_TEST_CONFIG::StateRatioMax16[16]

Offset 0x085B - P-state ratios for max 16 version of custom P-state table P-state ratios for max 16 version of custom P-state table.

This table is used for OS versions limited to a max of 16 P-States. If the first entry of this table is 0, or if Number of Entries is 16 or less, then this table will be ignored, and up to the top 16 values of the StateRatio table will be used instead. Valid Range of each entry is 0 to 0x7F

Definition at line 3130 of file FspUpd.h.

13.38.2.94 TccActivationOffset

UINT8 FSP_S_TEST_CONFIG::TccActivationOffset

Offset 0x07EB - TCC Activation Offset TCC Activation Offset.

Offset from factory set TCC activation temperature at which the Thermal Control Circuit must be activated. TCC will be activated at TCC Activation Temperature, in volts. For Y SKU, the recommended default for this policy is **15**, For all other SKUs the recommended default are **0**

Definition at line 2755 of file FspUpd.h.

13.38.2.95 TccOffsetClamp

```
UINT8 FSP_S_TEST_CONFIG::TccOffsetClamp
```

Offset 0x07EC - Tcc Offset Clamp Enable/Disable Tcc Offset Clamp for Runtime Average Temperature Limit (RATL) allows CPU to throttle below P1. For Y SKU, the recommended default for this policy is **1: Enabled**, For all other SKUs the recommended default are **0: Disabled**.

\$EN_DIS

Definition at line 2763 of file FspUpd.h.

13.38.2.96 TccOffsetLock

```
UINT8 FSP_S_TEST_CONFIG::TccOffsetLock
```

Offset 0x07ED - Tcc Offset Lock Tcc Offset Lock for Runtime Average Temperature Limit (RATL) to lock temperature target; **0: Disabled**; 1: Enabled.

\$EN_DIS

Definition at line 2770 of file FspUpd.h.

13.38.2.97 TccOffsetTimeWindowForRatl

```
UINT32 FSP_S_TEST_CONFIG::TccOffsetTimeWindowForRatl
```

Offset 0x088C - Tcc Offset Time Window for RATL Package PL4 power limit.

Units are based on POWER_MGMT_CONFIG.CustomPowerUnit. Valid Range 0 to 1023875 in Step size of 125

Definition at line 3204 of file FspUpd.h.

13.38.2.98 ThreeCoreRatioLimit

```
UINT8 FSP_S_TEST_CONFIG::ThreeCoreRatioLimit
```

Offset 0x07E0 - 3-Core Ratio Limit 3-Core Ratio Limit: LFM to Fused, For overclocking part: LFM to 255.

This 3-Core Ratio Limit Must be Less than or equal to 1-Core Ratio Limit. Range is 0 to 255

Definition at line 2687 of file FspUpd.h.

13.38.2.99 ThreeStrikeCounterDisable

```
UINT8 FSP_S_TEST_CONFIG::ThreeStrikeCounterDisable
```

Offset 0x08B0 - Set Three Strike Counter Disable False (default): Three Strike counter will be incremented and True: Prevents Three Strike counter from incrementing; **0: False**; 1: True.

0: False, 1: True

Definition at line 3259 of file FspUpd.h.

13.38.2.100 TimedMwait

UINT8 FSP_S_TEST_CONFIG::TimedMwait

Offset 0x0825 - Enable or Disable TimedMwait Support.

Enable or Disable TimedMwait Support. **0: Disable**; 1: Enable \$EN_DIS

Definition at line 3035 of file FspUpd.h.

13.38.2.101 TStates

UINT8 FSP_S_TEST_CONFIG::TStates

Offset 0x0818 - Enable or Disable T states Enable or Disable T states; **0: Disable**; 1: Enable.

\$EN_DIS

Definition at line 2957 of file FspUpd.h.

13.38.2.102 TwoCoreRatioLimit

UINT8 FSP_S_TEST_CONFIG::TwoCoreRatioLimit

Offset 0x07DF - 2-Core Ratio Limit 2-Core Ratio Limit: LFM to Fused, For overclocking part: LFM to 255.

This 2-Core Ratio Limit Must be Less than or equal to 1-Core Ratio Limit. Range is 0 to 255

Definition at line 2681 of file FspUpd.h.

The documentation for this struct was generated from the following file:

- [FspUpd.h](#)

13.39 FSP_T_CONFIG Struct Reference

Fsp T Configuration.

```
#include <FsptUpd.h>
```

Public Attributes

- UINT8 [PcdSerialloUartDebugEnabled](#)
Offset 0x0040 - PcdSerialloUartDebugEnabled Enable Seriallo Uart debug library with/without initializing Seriallo Uart device in FSP.
- UINT8 [PcdSerialloUartNumber](#)
Offset 0x0041 - PcdSerialloUartNumber - FSPT Select Seriallo Uart Controller for debug.
- UINT8 [PcdSerialloUartMode](#)
Offset 0x0042 - PcdSerialloUartMode - FSPT Select Seriallo Uart Controller mode 0:SerialloUartDisabled, 1:SerialloUartPci, 2:SerialloUartHidden, 3:SerialloUartCom, 4:SerialloUartSkipInit.

- UINT8 [UnusedUpdSpace0](#)
Offset 0x0043.
- UINT32 [PcdSerialloUartBaudRate](#)
Offset 0x0044 - PcdSerialloUartBaudRate - FSPT Set default BaudRate Supported from 0 - default to 6000000.
- UINT64 [PcdPciExpressBaseAddress](#)
Offset 0x0048 - Pci Express Base Address Base address to be programmed for Pci Express.
- UINT32 [PcdPciExpressRegionLength](#)
Offset 0x0050 - Pci Express Region Length Region Length to be programmed for Pci Express.
- UINT8 [PcdSerialloUartParity](#)
Offset 0x0054 - PcdSerialloUartParity - FSPT Set default Parity.
- UINT8 [PcdSerialloUartDataBits](#)
Offset 0x0055 - PcdSerialloUartDataBits - FSPT Set default word length.
- UINT8 [PcdSerialloUartStopBits](#)
Offset 0x0056 - PcdSerialloUartStopBits - FSPT Set default stop bits.
- UINT8 [PcdSerialloUartAutoFlow](#)
Offset 0x0057 - PcdSerialloUartAutoFlow - FSPT Enables UART hardware flow control, CTS and RTS lines.
- UINT8 [PcdSerialloUartPinMux](#)
Offset 0x0058 - PcdSerialloUartPinMux - FSPT Applies only to UART0 muxed with CNVI 0 = GPIO C8 to C11 1 = GPIO F5 - F7 (PCH LP) J5 - J7 (PCH H) 0: GPIO C8 to C11, 1: GPIO F5 - F7 (PCH LP) J5 - J7 (PCH H)
- UINT8 [PcdLpcUartDebugEnable](#)
Offset 0x0059 - PcdLpcUartDebugEnable Enable to initialize LPC Uart device in FSP.
- UINT8 [PcdDebugInterfaceFlags](#)
Offset 0x005A - Debug Interfaces Debug Interfaces.
- UINT8 [PcdSerialDebugLevel](#)
Offset 0x005B - PcdSerialDebugLevel Serial Debug Message Level.
- UINT8 [PcdIsaSerialUartBase](#)
Offset 0x005C - ISA Serial Base selection Select ISA Serial Base address.
- UINT8 [UnusedUpdSpace1](#) [7]
Offset 0x005D.
- UINT8 [ReservedFsptUpd1](#) [20]
Offset 0x0064.

13.39.1 Detailed Description

Fsp T Configuration.

Definition at line 68 of file FsptUpd.h.

13.39.2 Member Data Documentation

13.39.2.1 PcdDebugInterfaceFlags

UINT8 FSP_T_CONFIG::PcdDebugInterfaceFlags

Offset 0x005A - Debug Interfaces Debug Interfaces.

BIT0-RAM, BIT1-UART, BIT3-USB3, BIT4-Serial IO, BIT5-TraceHub, BIT2 - Not used.

Definition at line 149 of file FsptUpd.h.

13.39.2.2 PcdIsaSerialUartBase

UINT8 FSP_T_CONFIG::PcdIsaSerialUartBase

Offset 0x005C - ISA Serial Base selection Select ISA Serial Base address.

Default is 0x3F8. 0:0x3F8, 1:0x2F8

Definition at line 164 of file FsptUpd.h.

13.39.2.3 PcdLpcUartDebugEnabled

UINT8 FSP_T_CONFIG::PcdLpcUartDebugEnabled

Offset 0x0059 - PcdLpcUartDebugEnabled Enable to initialize LPC Uart device in FSP.

0:Disable, 1:Enable

Definition at line 143 of file FsptUpd.h.

13.39.2.4 PcdSerialDebugLevel

UINT8 FSP_T_CONFIG::PcdSerialDebugLevel

Offset 0x005B - PcdSerialDebugLevel Serial Debug Message Level.

0:Disable, 1:Error Only, 2:Error & Warnings, 3:Load, Error, Warnings & Info, 4:Load, Error, Warnings, Info & Event, 5:Load, Error, Warnings, Info & Verbose. 0:Disable, 1:Error Only, 2:Error and Warnings, 3:Load Error Warnings and Info, 4:Load Error Warnings and Info, 5:Load Error Warnings Info and Verbose

Definition at line 158 of file FsptUpd.h.

13.39.2.5 PcdSerialIoUartAutoFlow

UINT8 FSP_T_CONFIG::PcdSerialIoUartAutoFlow

Offset 0x0057 - PcdSerialIoUartAutoFlow - FSPT Enables UART hardware flow control, CTS and RTS lines.

0: Disable, 1:Enable

Definition at line 130 of file FsptUpd.h.

13.39.2.6 PcdSerialIoUartDataBits

UINT8 FSP_T_CONFIG::PcdSerialIoUartDataBits

Offset 0x0055 - PcdSerialIoUartDataBits - FSPT Set default word length.

0: Default, 5,6,7,8

Definition at line 118 of file FsptUpd.h.

13.39.2.7 PcdSerialIoUartDebugEnabled

UINT8 FSP_T_CONFIG::PcdSerialIoUartDebugEnabled

Offset 0x0040 - PcdSerialIoUartDebugEnabled Enable SerialIo Uart debug library with/without initializing SerialIo Uart device in FSP.

0:Disable, 1:Enable and Initialize, 2:Enable without Initializing

Definition at line 74 of file FsptUpd.h.

13.39.2.8 PcdSerialIoUartNumber

```
UINT8 FSP_T_CONFIG::PcdSerialIoUartNumber
```

Offset 0x0041 - PcdSerialIoUartNumber - FSPT Select SerialIo Uart Controller for debug.

Note: If UART0 is selected as CNVi BT Core interface, it cannot be used for debug purpose. 0:SerialIoUart0, 1:SerialIoUart1, 2:SerialIoUart2

Definition at line 81 of file FsptUpd.h.

13.39.2.9 PcdSerialIoUartParity

```
UINT8 FSP_T_CONFIG::PcdSerialIoUartParity
```

Offset 0x0054 - PcdSerialIoUartParity - FSPT Set default Parity.

0: DefaultParity, 1: NoParity, 2: EvenParity, 3: OddParity

Definition at line 113 of file FsptUpd.h.

13.39.2.10 PcdSerialIoUartStopBits

```
UINT8 FSP_T_CONFIG::PcdSerialIoUartStopBits
```

Offset 0x0056 - PcdSerialIoUartStopBits - FSPT Set default stop bits.

0: DefaultStopBits, 1: OneStopBit, 2: OneFiveStopBits, 3: TwoStopBits

Definition at line 124 of file FsptUpd.h.

The documentation for this struct was generated from the following file:

- [FsptUpd.h](#)

13.40 FSP_T_RESTRICTED_CONFIG Struct Reference

Fsp T Restricted Configuration.

```
#include <FsptUpd.h>
```

Public Attributes

- [UINT32 Signature](#)
Offset 0x0098.
- [UINT8 ReservedFsptRestrictedUpd](#) [12]
Offset 0x009C.

13.40.1 Detailed Description

Fsp T Restricted Configuration.

Definition at line 190 of file FsptUpd.h.

The documentation for this struct was generated from the following file:

- [FsptUpd.h](#)

13.41 FSP_T_TEST_CONFIG Struct Reference

Fsp T Test Configuration.

```
#include <FsptUpd.h>
```

Public Attributes

- UINT32 [Signature](#)
Offset 0x0078.
- UINT8 [ReservedFsptTestUpd](#) [28]
Offset 0x007C.

13.41.1 Detailed Description

Fsp T Test Configuration.

Definition at line 177 of file FsptUpd.h.

The documentation for this struct was generated from the following file:

- [FsptUpd.h](#)

13.42 FSPM_ARCH_CONFIG_PPI Struct Reference

This PPI provides FSP-M Arch Config PPI.

```
#include <FspmArchConfigPpi.h>
```

13.42.1 Detailed Description

This PPI provides FSP-M Arch Config PPI.

Definition at line 31 of file FspmArchConfigPpi.h.

The documentation for this struct was generated from the following file:


- [FspmArchConfigPpi.h](#)

13.43 FSPM_UPD Struct Reference

Fsp M UPD Configuration.

```
#include <FspmUpd.h>
```

Collaboration diagram for FSPM_UPD:

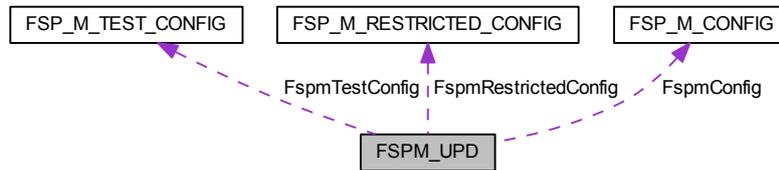

Public Attributes

- FSPM_UPD_HEADER [FspUpdHeader](#)
Offset 0x0000.
- FSPM_ARCH_UPD [FspmArchUpd](#)
Offset 0x0020.
- FSP_M_CONFIG [FspmConfig](#)
Offset 0x0040.
- FSP_M_TEST_CONFIG [FspmTestConfig](#)
Offset 0x0558.
- FSP_M_RESTRICTED_CONFIG [FspmRestrictedConfig](#)
Offset 0x0608.
- UINT8 [UnusedUpdSpace15](#) [6]
Offset 0x0718.
- UINT16 [UpdTerminator](#)
Offset 0x071E.

13.43.1 Detailed Description

Fsp M UPD Configuration.

Definition at line 3833 of file [FspmUpd.h](#).

The documentation for this struct was generated from the following file:


- [FspmUpd.h](#)

13.44 FSPS_UPD Struct Reference

Fsp S UPD Configuration.

```
#include <FspsUpd.h>
```

Collaboration diagram for FSPS_UPD:

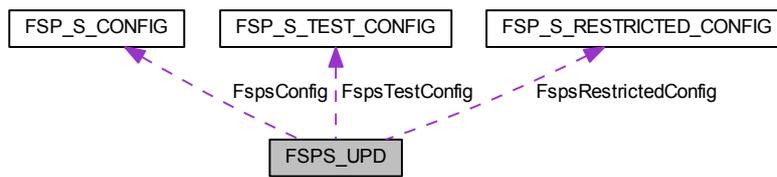

Public Attributes

- `FSP_UPD_HEADER` [FspUpdHeader](#)
Offset 0x0000.
- `FSP_S_CONFIG` [FspConfig](#)
Offset 0x0020.
- `FSP_S_TEST_CONFIG` [FspTestConfig](#)
Offset 0x07C0.
- `FSP_S_RESTRICTED_CONFIG` [FspRestrictedConfig](#)
Offset 0x0AD0.
- `UINT8` [UnusedUpdSpace36](#) [6]
Offset 0x0C80.
- `UINT16` [UpdTerminator](#)
Offset 0x0C86.

13.44.1 Detailed Description

Fsp S UPD Configuration.

Definition at line 4502 of file `FspUpd.h`.

The documentation for this struct was generated from the following file:

- [FspUpd.h](#)

13.45 FSPT_CORE_UPD Struct Reference

Fsp T Core UPD.

```
#include <FsptUpd.h>
```

Public Attributes

- `UINT32` [MicrocodeRegionBase](#)
Offset 0x0020.
- `UINT32` [MicrocodeRegionSize](#)
Offset 0x0024.
- `UINT32` [CodeRegionBase](#)
Offset 0x0028.

- UINT32 [CodeRegionSize](#)
Offset 0x002C.
- UINT8 [Reserved](#) [16]
Offset 0x0030.

13.45.1 Detailed Description

Fsp T Core UPD.

Definition at line 43 of file FsptUpd.h.

The documentation for this struct was generated from the following file:


- [FsptUpd.h](#)

13.46 FSPT_UPD Struct Reference

Fsp T UPD Configuration.

```
#include <FsptUpd.h>
```

Collaboration diagram for FSPT_UPD:

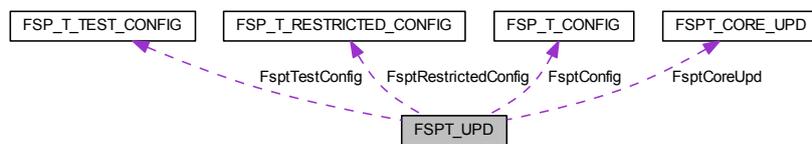

Public Attributes

- FSP_UPD_HEADER [FspUpdHeader](#)
Offset 0x0000.
- FSPT_CORE_UPD [FspCoreUpd](#)
Offset 0x0020.
- FSP_T_CONFIG [FspConfig](#)
Offset 0x0040.
- FSP_T_TEST_CONFIG [FspTestConfig](#)
Offset 0x0078.
- FSP_T_RESTRICTED_CONFIG [FspRestrictedConfig](#)
Offset 0x0098.
- UINT8 [UnusedUpdSpace2](#) [6]
Offset 0x00A8.
- UINT16 [UpdTerminator](#)
Offset 0x00AE.

13.46.1 Detailed Description

Fsp T UPD Configuration.

Definition at line 203 of file FsptUpd.h.

The documentation for this struct was generated from the following file:


- [FsptUpd.h](#)

13.47 FVI_DATA Struct Reference

The string number for ComponentName and VersionString is always calculated dynamically.

```
#include <SiFviLib.h>
```

Collaboration diagram for FVI_DATA:

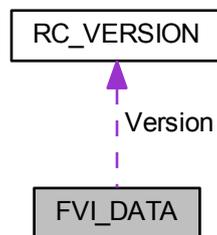

13.47.1 Detailed Description

The string number for ComponentName and VersionString is always calculated dynamically.

The initial value is ignored and should always be TO_BE_FILLED.

Definition at line 86 of file SiFviLib.h.

The documentation for this struct was generated from the following file:

- [SiFviLib.h](#)

13.48 GPIO_CONFIG Struct Reference

GPIO configuration structure used for pin programming.

```
#include <GpioConfig.h>
```

Public Attributes

- UINT32 [PadMode](#): 5
Pad Mode Pad can be set as GPIO or one of its native functions.
 - UINT32 [HostSoftPadOwn](#): 2
-

Host Software Pad Ownership Set pad to ACPI mode or GPIO Driver Mode.

- UINT32 [Direction](#): 6
GPIO Direction Can choose between In, In with inversion, Out, both In and Out, both In with inversion and out or disabling both.
- UINT32 [OutputState](#): 2
Output State Set Pad output value.
- UINT32 [InterruptConfig](#): 9
GPIO Interrupt Configuration Set Pad to cause one of interrupts (IOxAPIC/SCI/SMI/NMI).
- UINT32 [PowerConfig](#): 8
GPIO Power Configuration.
- UINT32 [ElectricalConfig](#): 9
GPIO Electrical Configuration This setting controls pads termination and voltage tolerance.
- UINT32 [LockConfig](#): 4
GPIO Lock Configuration This setting controls pads lock.
- UINT32 [OtherSettings](#): 2
Additional GPIO configuration Refer to definition of GPIO_OTHER_CONFIG for supported settings.
- UINT32 [RsvdBits](#): 17
Reserved bits for future extension.

13.48.1 Detailed Description

GPIO configuration structure used for pin programming.

Structure contains fields that can be used to configure pad.

Definition at line 55 of file GpioConfig.h.

13.48.2 Member Data Documentation

13.48.2.1 Direction

UINT32 GPIO_CONFIG::Direction

GPIO Direction Can choose between In, In with inversion, Out, both In and Out, both In with inversion and out or disabling both.

Refer to definition of GPIO_DIRECTION for supported settings.

Definition at line 76 of file GpioConfig.h.

13.48.2.2 ElectricalConfig

UINT32 GPIO_CONFIG::ElectricalConfig

GPIO Electrical Configuration This setting controls pads termination and voltage tolerance.

Refer to definition of GPIO_ELECTRICAL_CONFIG for supported settings.

Definition at line 102 of file GpioConfig.h.

13.48.2.3 HostSoftPadOwn

UINT32 GPIO_CONFIG::HostSoftPadOwn

Host Software Pad Ownership Set pad to ACPI mode or GPIO Driver Mode.

Refer to definition of GPIO_HOSTSW_OWN.

Definition at line 70 of file GpioConfig.h.

13.48.2.4 InterruptConfig

UINT32 GPIO_CONFIG::InterruptConfig

GPIO Interrupt Configuration Set Pad to cause one of interrupts (IOxAPIC/SCI/SMI/NMI).

This setting is applicable only if GPIO is in GpioMode with input enabled. Refer to definition of GPIO_INT_CONFIG for supported settings.

Definition at line 90 of file GpioConfig.h.

13.48.2.5 LockConfig

UINT32 GPIO_CONFIG::LockConfig

GPIO Lock Configuration This setting controls pads lock.

Refer to definition of GPIO_LOCK_CONFIG for supported settings.

Definition at line 108 of file GpioConfig.h.

13.48.2.6 OutputState

UINT32 GPIO_CONFIG::OutputState

Output State Set Pad output value.

Refer to definition of GPIO_OUTPUT_STATE for supported settings. This setting takes place when output is enabled.

Definition at line 83 of file GpioConfig.h.

13.48.2.7 PadMode

UINT32 GPIO_CONFIG::PadMode

Pad Mode Pad can be set as GPIO or one of its native functions.

When in native mode setting Direction (except Inversion), OutputState, InterruptConfig, Host Software Pad Ownership and OutputStateLock are unnecessary. Refer to definition of GPIO_PAD_MODE. Refer to EDS for each native mode according to the pad.

Definition at line 64 of file GpioConfig.h.

13.48.2.8 PowerConfig

UINT32 GPIO_CONFIG::PowerConfig

GPIO Power Configuration.

This setting controls Pad Reset Configuration. Refer to definition of GPIO_RESET_CONFIG for supported settings.

Definition at line 96 of file GpioConfig.h.

The documentation for this struct was generated from the following file:


- [GpioConfig.h](#)

13.49 HDD_INFO Struct Reference

[HDD_INFO](#).

```
#include <LegacyBios.h>
```

Collaboration diagram for HDD_INFO:

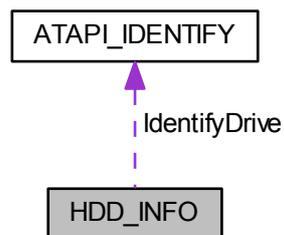

Public Attributes

- [UINT16 Status](#)
Status of IDE device.
- [UINT32 Bus](#)
PCI bus of IDE controller.
- [UINT32 Device](#)
PCI device of IDE controller.
- [UINT32 Function](#)
PCI function of IDE controller.
- [UINT16 CommandBaseAddress](#)
Command ports base address.
- [UINT16 ControlBaseAddress](#)
Control ports base address.
- [UINT16 BusMasterAddress](#)
Bus master address.
- [ATAPI_IDENTIFY IdentifyDrive](#) [2]
Data that identifies the drive data; one per possible attached drive.

13.49.1 Detailed Description

[HDD_INFO](#).

Definition at line 532 of file LegacyBios.h.

13.49.2 Member Data Documentation

13.49.2.1 Status

```
UINT16 HDD_INFO::Status
```

Status of IDE device.

Values are defined below. There is one [HDD_INFO](#) structure per IDE controller. The IdentifyDrive is per drive. Index 0 is master and index 1 is slave.

Definition at line 538 of file LegacyBios.h.

The documentation for this struct was generated from the following file:

- [LegacyBios.h](#)

13.50 LEGACY_DEVICE_FLAGS Struct Reference

[LEGACY_DEVICE_FLAGS](#).

```
#include <LegacyBios.h>
```

Public Attributes

- `UINT32 A20Kybd`: 1
A20 controller by keyboard controller.
- `UINT32 A20Port90`: 1
A20 controlled by port 0x92.
- `UINT32 Reserved`: 30
Reserved for future usage.

13.50.1 Detailed Description

[LEGACY_DEVICE_FLAGS](#).

Definition at line 505 of file LegacyBios.h.

The documentation for this struct was generated from the following file:

- [LegacyBios.h](#)

13.51 PCIE_PORT_EQS Struct Reference

Data structure for passing static equalization data for programming.

```
#include <PcieInitLib.h>
```

13.51.1 Detailed Description

Data structure for passing static equalization data for programming.

Definition at line 111 of file PcieInitLib.h.

The documentation for this struct was generated from the following file:

- [PcieInitLib.h](#)

13.52 PCIE_PORT_SWEQ_DATA Struct Reference

PCIe Root Port description data structure, used as the interface between low level and high level.

```
#include <PcieInitLib.h>
```

13.52.1 Detailed Description

PCIe Root Port description data structure, used as the interface between low level and high level.

Definition at line 76 of file PcieInitLib.h.

The documentation for this struct was generated from the following file:

- [PcieInitLib.h](#)

13.53 PCIE_SWEQ_GPIO_CONFIG Struct Reference

Input Configuration Parameters for Software Equalization Support.

```
#include <PcieInitLib.h>
```

13.53.1 Detailed Description

Input Configuration Parameters for Software Equalization Support.

Definition at line 121 of file PcieInitLib.h.

The documentation for this struct was generated from the following file:

- [PcieInitLib.h](#)

13.54 PCIE_SWEQ_PRESET_SCORE Struct Reference

Data Output from Software Equalization.

```
#include <PcieInitLib.h>
```

13.54.1 Detailed Description

Data Output from Software Equalization.

Definition at line 154 of file PcieInitLib.h.

The documentation for this struct was generated from the following file:

- [PcieInitLib.h](#)
-

13.55 RC_VERSION Struct Reference

This structure contains the RC version details for FVI SMBIOS records.

```
#include <SiFviLib.h>
```

13.55.1 Detailed Description

This structure contains the RC version details for FVI SMBIOS records.

Definition at line 70 of file SiFviLib.h.

The documentation for this struct was generated from the following file:

- [SiFviLib.h](#)

13.56 SI_CONFIG Struct Reference

The Silicon Policy allows the platform code to publish a set of configuration information that the RC drivers will use to configure the silicon hardware.

```
#include <SiConfig.h>
```

Public Attributes

- CONFIG_BLOCK_HEADER [Header](#)
Offset 0 - 27 Config Block Header.
- UINT32 [CsmFlag](#): 1
Offset 44 BIT0: CSM status flag.
- UINT32 [SkipPostBootSai](#): 1
- UINT32 [RsvdBits](#): 30
Reserved.
- UINT32 [TraceHubMemBase](#)
If Trace Hub is enabled and trace to memory is desired, Platform code or BootLoader needs to allocate trace hub memory as reserved, and save allocated memory base to TraceHubMemBase to ensure Trace Hub memory is configured properly.

13.56.1 Detailed Description

The Silicon Policy allows the platform code to publish a set of configuration information that the RC drivers will use to configure the silicon hardware.

Revision 1:

- Initial version. **Revision 2:**
- Added TraceHubMemBase **Revision 3**
- Deprecated SkipPostBootSai

Definition at line 56 of file SiConfig.h.

13.56.2 Member Data Documentation

13.56.2.1 SkipPostBootSai

UINT32 SI_CONFIG::SkipPostBootSai

Deprecated since revision 3

Definition at line 65 of file SiConfig.h.

13.56.2.2 TraceHubMemBase

UINT32 SI_CONFIG::TraceHubMemBase

If Trace Hub is enabled and trace to memory is desired, Platform code or BootLoader needs to allocate trace hub memory as reserved, and save allocated memory base to TraceHubMemBase to ensure Trace Hub memory is configured properly.

To get total trace hub memory size please refer to TraceHubCalculateTotalBufferSize ()

Noted: If EDKII memory service is used to allocate memory, it will require double memory size to support size-aligned memory allocation, so Platform code or FSP Wrapper code should ensure enough memory available for size-aligned TraceHub memory allocation.

Definition at line 78 of file SiConfig.h.

The documentation for this struct was generated from the following file:

- [SiConfig.h](#)

13.57 SI_PCH_DEVICE_INTERRUPT_CONFIG Struct Reference

The PCH_DEVICE_INTERRUPT_CONFIG block describes interrupt pin, IRQ and interrupt mode for PCH device.

```
#include <FspsUpd.h>
```

Public Attributes

- [UINT8 Device](#)
Device number.
- [UINT8 Function](#)
Device function.
- [UINT8 IntX](#)
Interrupt pin: INTA-INTD (see SI_PCH_INT_PIN)
- [UINT8 Irq](#)
IRQ to be set for device.

13.57.1 Detailed Description

The PCH_DEVICE_INTERRUPT_CONFIG block describes interrupt pin, IRQ and interrupt mode for PCH device.

Definition at line 74 of file FspsUpd.h.

The documentation for this struct was generated from the following file:

- [FspsUpd.h](#)
-

13.58 SMM_ATTRIBUTES Struct Reference

[SMM_ATTRIBUTES](#).

```
#include <LegacyBios.h>
```

Public Attributes

- UINT16 [Type](#): 3
Access mechanism used to generate the soft SMI.
- UINT16 [PortGranularity](#): 3
The size of "port" in bits.
- UINT16 [DataGranularity](#): 3
The size of data in bits.
- UINT16 [Reserved](#): 7
Reserved for future use.

13.58.1 Detailed Description

[SMM_ATTRIBUTES](#).

Definition at line 751 of file LegacyBios.h.

13.58.2 Member Data Documentation

13.58.2.1 DataGranularity

```
UINT16 SMM_ATTRIBUTES::DataGranularity
```

The size of data in bits.

Defined values are below.

Definition at line 766 of file LegacyBios.h.

13.58.2.2 PortGranularity

```
UINT16 SMM_ATTRIBUTES::PortGranularity
```

The size of "port" in bits.

Defined values are below.

Definition at line 761 of file LegacyBios.h.

13.58.2.3 Type

```
UINT16 SMM_ATTRIBUTES::Type
```

Access mechanism used to generate the soft SMI.

Defined types are below. The other values are reserved for future usage.

Definition at line 756 of file LegacyBios.h.

The documentation for this struct was generated from the following file:


- [LegacyBios.h](#)

13.59 SMM_ENTRY Struct Reference

This structure assumes both port and data sizes are 1.

```
#include <LegacyBios.h>
```

Collaboration diagram for SMM_ENTRY:

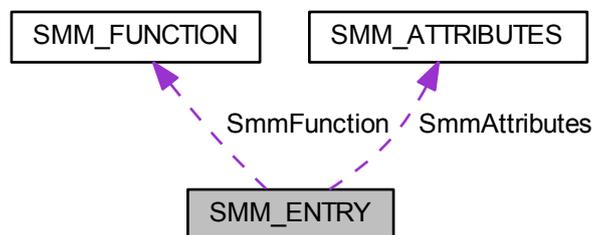

Public Attributes

- [SMM_ATTRIBUTES SmmAttributes](#)
Describes the access mechanism, SmmPort, and SmmData sizes.
- [SMM_FUNCTION SmmFunction](#)
Function Soft SMI is to perform.
- `UINT8` [SmmPort](#)
SmmPort size depends upon SmmAttributes and ranges from 2 bytes to 16 bytes.
- `UINT8` [SmmData](#)
SmmData size depends upon SmmAttributes and ranges from 2 bytes to 16 bytes.

13.59.1 Detailed Description

This structure assumes both port and data sizes are 1.

SmmAttribute must be properly to reflect that assumption.

Definition at line 826 of file LegacyBios.h.

13.59.2 Member Data Documentation

13.59.2.1 SmmAttributes

[SMM_ATTRIBUTES](#) SMM_ENTRY::SmmAttributes

Describes the access mechanism, SmmPort, and SmmData sizes.

Type [SMM_ATTRIBUTES](#) is defined below.

Definition at line 831 of file LegacyBios.h.

13.59.2.2 SmmFunction

[SMM_FUNCTION](#) SMM_ENTRY::SmmFunction

Function Soft SMI is to perform.

Type [SMM_FUNCTION](#) is defined below.

Definition at line 836 of file LegacyBios.h.

The documentation for this struct was generated from the following file:

- [LegacyBios.h](#)

13.60 SMM_FUNCTION Struct Reference

[SMM_FUNCTION](#) & relating constants.

```
#include <LegacyBios.h>
```

13.60.1 Detailed Description

[SMM_FUNCTION](#) & relating constants.

Definition at line 802 of file LegacyBios.h.

The documentation for this struct was generated from the following file:


- [LegacyBios.h](#)

13.61 SMM_TABLE Struct Reference

[SMM_TABLE](#).

```
#include <LegacyBios.h>
```

Collaboration diagram for SMM_TABLE:

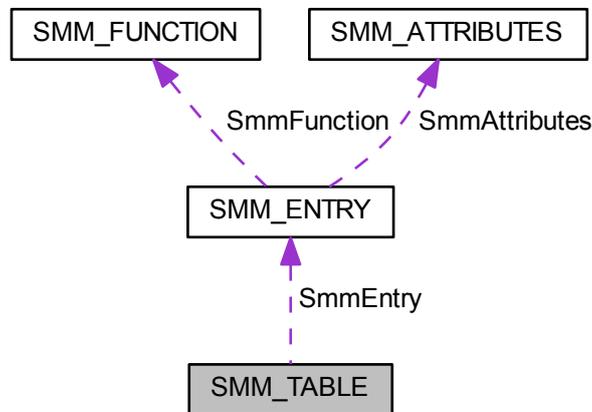

Public Attributes

- `UINT16 NumSmmEntries`
Number of entries represented by SmmEntry.
- `SMM_ENTRY SmmEntry`
One entry per function. Type `SMM_ENTRY` is defined below.

13.61.1 Detailed Description

`SMM_TABLE`.

Definition at line 852 of file LegacyBios.h.

The documentation for this struct was generated from the following file:


- [LegacyBios.h](#)

13.62 SOCKET_LGA_775_SMM_CPU_STATE Union Reference

Union of CPU save-state structures for IA32 and X64.

```
#include <SocketLga775Lib.h>
```

Collaboration diagram for SOCKET_LGA_775_SMM_CPU_STATE:

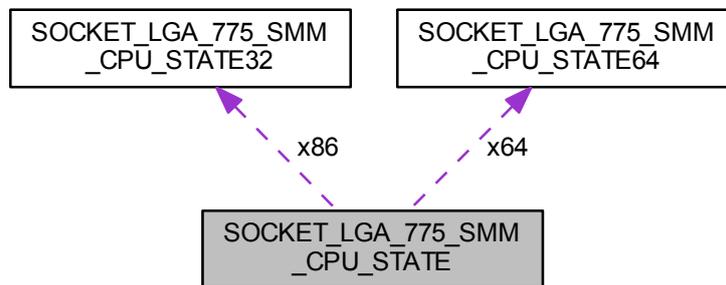

13.62.1 Detailed Description

Union of CPU save-state structures for IA32 and X64.

Definition at line 268 of file SocketLga775Lib.h.

The documentation for this union was generated from the following file:

- [SocketLga775Lib.h](#)

13.63 SOCKET_LGA_775_SMM_CPU_STATE32 Struct Reference

CPU save-state structure for IA32.

```
#include <SocketLga775Lib.h>
```

13.63.1 Detailed Description

CPU save-state structure for IA32.

Definition at line 168 of file SocketLga775Lib.h.

The documentation for this struct was generated from the following file:

- [SocketLga775Lib.h](#)

13.64 SOCKET_LGA_775_SMM_CPU_STATE64 Struct Reference

CPU save-state structure for X64.

```
#include <SocketLga775Lib.h>
```

13.64.1 Detailed Description

CPU save-state structure for X64.

Definition at line 206 of file SocketLga775Lib.h.

The documentation for this struct was generated from the following file:

- [SocketLga775Lib.h](#)

13.65 SVID_SID_VALUE Struct Reference

Subsystem Vendor ID / Subsystem ID.

```
#include <SiConfig.h>
```

13.65.1 Detailed Description

Subsystem Vendor ID / Subsystem ID.

Definition at line 92 of file SiConfig.h.

The documentation for this struct was generated from the following file:


- [SiConfig.h](#)

13.66 UD_TABLE Struct Reference

[UD_TABLE](#).

```
#include <LegacyBios.h>
```

Collaboration diagram for UD_TABLE:

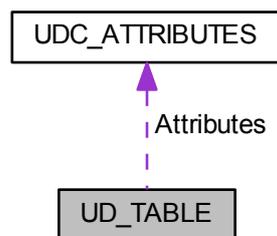

Public Attributes

- [UDC_ATTRIBUTES Attributes](#)
This field contains the bit-mapped attributes of the PARTIES information.
- `UINT8 DeviceNumber`
This field contains the zero-based device on which the selected ServiceDataArea is present.
- `UINT8 BbsTableEntryNumberForParentDevice`
This field contains the zero-based index into the BbsTable for the parent device.
- `UINT8 BbsTableEntryNumberForBoot`

This field contains the zero-based index into the BbsTable for the boot entry.

- UINT8 [BbsTableEntryNumberForHddDiag](#)

This field contains the zero-based index into the BbsTable for the HDD diagnostics entry.

- UINT8 [BeerData](#) [128]

The raw Beer data.

- UINT8 [ServiceAreaData](#) [64]

The raw data of selected service area.

13.66.1 Detailed Description

[UD_TABLE](#).

Definition at line 886 of file LegacyBios.h.

13.66.2 Member Data Documentation

13.66.2.1 Attributes

`UDC_ATTRIBUTES UD_TABLE::Attributes`

This field contains the bit-mapped attributes of the PARTIES information.

Type [UDC_ATTRIBUTES](#) is defined below.

Definition at line 891 of file LegacyBios.h.

13.66.2.2 BbsTableEntryNumberForParentDevice

`UINT8 UD_TABLE::BbsTableEntryNumberForParentDevice`

This field contains the zero-based index into the BbsTable for the parent device.

This index allows the user to reference the parent device information such as PCI bus, device function.

Definition at line 904 of file LegacyBios.h.

13.66.2.3 DeviceNumber

`UINT8 UD_TABLE::DeviceNumber`

This field contains the zero-based device on which the selected ServiceDataArea is present.

It is 0 for master and 1 for the slave device.

Definition at line 897 of file LegacyBios.h.

The documentation for this struct was generated from the following file:

- [LegacyBios.h](#)
-

13.67 UDC_ATTRIBUTES Struct Reference

UDC_ATTRIBUTES.

```
#include <LegacyBios.h>
```

Public Attributes

- UINT8 [DirectoryServiceValidity](#): 1
This bit set indicates that the ServiceAreaData is valid.
- UINT8 [RabcaUsedFlag](#): 1
This bit set indicates to use the Reserve Area Boot Code Address (RACBA) only if DirectoryServiceValidity is 0.
- UINT8 [ExecuteHddDiagnosticsFlag](#): 1
This bit set indicates to execute hard disk diagnostics.
- UINT8 [Reserved](#): 5
Reserved for future use.

13.67.1 Detailed Description

UDC_ATTRIBUTES.

Definition at line 860 of file LegacyBios.h.

13.67.2 Member Data Documentation

13.67.2.1 Reserved

```
UINT8 UDC_ATTRIBUTES::Reserved
```

Reserved for future use.

Set to 0.

Definition at line 880 of file LegacyBios.h.

The documentation for this struct was generated from the following file:

- [LegacyBios.h](#)

13.68 USB2_AFE Struct Reference

This structure configures per USB2 AFE settings.

```
#include <UsbConfig.h>
```

Public Attributes

- UINT8 [Petxiset](#)
Per Port HS Preemphasis Bias (PERPORTPETXISSET) 000b - 0mV 001b - 11.25mV 010b - 16.9mV 011b - 28.15mV 100b - 28.15mV 101b - 39.35mV 110b - 45mV 111b - 56.3mV.
 - UINT8 [Txiset](#)
-

Per Port HS Transmitter Bias (PERPORTTXISET) 000b - 0mV 001b - 11.25mV 010b - 16.9mV 011b - 28.15mV 100b - 28.15mV 101b - 39.35mV 110b - 45mV 111b - 56.3mV.

- UINT8 [Predeemp](#)

Per Port HS Transmitter Emphasis (IUSBTXEMPHASISEN) 00b - Emphasis OFF 01b - De-emphasis ON 10b - Pre-emphasis ON 11b - Pre-emphasis & De-emphasis ON.

- UINT8 [Pehalfbit](#)

Per Port Half Bit Pre-emphasis (PERPORTTXPEHALF) 1b - half-bit pre-emphasis 0b - full-bit pre-emphasis.

13.68.1 Detailed Description

This structure configures per USB2 AFE settings.

It allows to setup the port electrical parameters.

Definition at line 69 of file UsbConfig.h.

The documentation for this struct was generated from the following file:


- [UsbConfig.h](#)

13.69 USB20_PORT_CONFIG Struct Reference

This structure configures per USB2 port physical settings.

```
#include <UsbConfig.h>
```

Collaboration diagram for USB20_PORT_CONFIG:

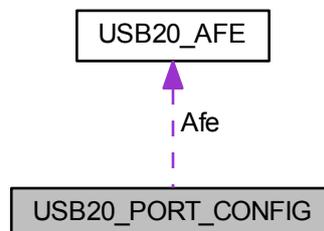

Public Attributes

- UINT32 [OverCurrentPin](#): 8

These members describe the specific over current pin number of USB 2.0 Port N.

- UINT32 [Enable](#): 1

*0: Disable; 1: **Enable**.*

- UINT32 [RsvdBits0](#): 23

Reserved bits.

- [USB20_AFE Afe](#)

Changing this policy values from default ones may require disabling USB2 PHY Sus Well Power Gating through `Usb2PhySusPgEnable` on PCH-LP.

13.69.1 Detailed Description

This structure configures per USB2 port physical settings.

It allows to setup the port location and port length, and configures the port strength accordingly.

Definition at line 112 of file UsbConfig.h.

13.69.2 Member Data Documentation

13.69.2.1 Afe

`USB20_AFE USB20_PORT_CONFIG::Afe`

Changing this policy values from default ones may require disabling USB2 PHY Sus Well Power Gating through `Usb2PhySusPgEnable` on PCH-LP.

USB2 AFE settings

Definition at line 126 of file UsbConfig.h.

13.69.2.2 OverCurrentPin

`UINT32 USB20_PORT_CONFIG::OverCurrentPin`

These members describe the specific over current pin number of USB 2.0 Port N.

It is SW's responsibility to ensure that a given port's bit map is set only for one OC pin Description. USB2 and USB3 on the same combo Port must use the same OC pin (see: `USB_OVERCURRENT_PIN`).

Definition at line 119 of file UsbConfig.h.

The documentation for this struct was generated from the following file:

- [UsbConfig.h](#)

13.70 USB30_PORT_CONFIG Struct Reference

This structure describes whether the USB3 Port N is enabled by platform modules.

```
#include <UsbConfig.h>
```

Public Attributes

- `UINT32 OverCurrentPin`: 8
These members describe the specific over current pin number of USB 3.x Port N.
- `UINT32 HsioTxDownscaleAmp`: 8
*USB 3.0 TX Output Downscale Amplitude Adjustment (orate01margin) HSIO_TX_DWORD8[21:16] **Default = 00h***
- `UINT32 HsioTxDeEmph`: 8
*USB 3.0 TX Output -3.5dB De-Emphasis Adjustment Setting (ow2tapgen2deemph3p5) HSIO_TX_DWORD5[21:16] **Default = 29h** (approximately -3.5dB De-Emphasis)*
- `UINT32 Enable`: 1
*0: Disable; 1: **Enable**.*
- `UINT32 HsioTxDeEmphEnable`: 1

- Enable the write to USB 3.0 TX Output -3.5dB De-Emphasis Adjustment, **0: Disable**; 1: Enable.
- UINT32 [HsioTxDownscaleAmpEnable](#): 1

Enable the write to USB 3.0 TX Output Downscale Amplitude Adjustment, **0: Disable**; 1: Enable.
- UINT32 [RsvdBits0](#): 5

Reserved bits.

13.70.1 Detailed Description

This structure describes whether the USB3 Port N is enabled by platform modules.

Definition at line 132 of file UsbConfig.h.

13.70.2 Member Data Documentation

13.70.2.1 OverCurrentPin

```
UINT32 USB30_PORT_CONFIG::OverCurrentPin
```

These members describe the specific over current pin number of USB 3.x Port N.

It is SW's responsibility to ensure that a given port's bit map is set only for one OC pin Description. USB2 and USB3 on the same combo Port must use the same OC pin (see: [USB_OVERCURRENT_PIN](#)).

Definition at line 139 of file UsbConfig.h.

The documentation for this struct was generated from the following file:


- [UsbConfig.h](#)

13.71 USB_CONFIG Struct Reference

This member describes the expected configuration of the USB controller, Platform modules may need to refer Setup options, schematic, BIOS specification to update this field.

```
#include <UsbConfig.h>
```

Collaboration diagram for USB_CONFIG:

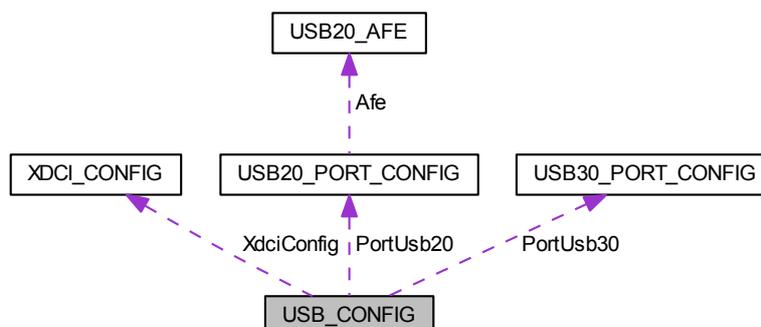

Public Attributes

- CONFIG_BLOCK_HEADER [Header](#)
Config Block Header.
- UUINT32 [EnableComplianceMode](#): 1
This policy setting controls state of Compliance Mode enabling.
- UUINT32 [PdoProgramming](#): 1
This policy option when set will make BIOS program Port Disable Override register during PEI phase.
- UUINT32 [OverCurrentEnable](#): 1
This option allows for control whether USB should program the Overcurrent Pins mapping into xHCI.
- UUINT32 [XhciOcLock](#): 1
(Test) If this policy option is enabled then BIOS will program OCCFDONE bit in xHCI meaning that OC mapping data will be consumed by xHCI and OC mapping registers will be locked.
- UUINT32 [Usb2PhySusPgEnable](#): 1
(Test) This policy option enables USB2 PHY SUS Well Power Gating functionality.
- UUINT32 [LtrOverrideEnable](#): 1
Enabling this feature will allow for overriding LTR values for xHCI controller.
- UUINT32 [RsvdBits0](#): 26
Reserved bits.
- [USB20_PORT_CONFIG PortUsb20](#) [MAX_USB2_PORTS]
These members describe whether the USB2 Port N of PCH is enabled by platform modules.
- [USB30_PORT_CONFIG PortUsb30](#) [MAX_USB3_PORTS]
These members describe whether the USB3 Port N of PCH is enabled by platform modules.
- [XDCI_CONFIG XdciConfig](#)
This member describes whether or not the xDCI controller should be enabled.
- [USB30_HSIO_RX_CONFIG PortUsb30HsioRx](#) [MAX_USB3_PORTS]
This member describes policy options for RX signal tuning in ModPHY.
- UUINT32 [LtrHighIdleTimeOverride](#)
High Idle Time Control override value This setting is used only if LtrOverrideEnable is enabled.
- UUINT32 [LtrMediumIdleTimeOverride](#)
Medium Idle Time Control override value This setting is used only if LtrOverrideEnable is enabled.
- UUINT32 [LtrLowIdleTimeOverride](#)
Low Idle Time Control override value This setting is used only if LtrOverrideEnable is enabled.
- [USB30_HSIO_TX_CONFIG PortUsb30HsioTx](#) [MAX_USB3_PORTS]
This member describes policy options for TX signal tuning in ModPHY.

13.71.1 Detailed Description

This member describes the expected configuration of the USB controller, Platform modules may need to refer Setup options, schematic, BIOS specification to update this field.

The Usb20OverCurrentPins and Usb30OverCurrentPins field must be updated by referring the schematic.

Revision 1:

- Initial version. **Revision 2:**
- USB 3.0 TX Output Unique Transition Bit Scale policies added

Definition at line 305 of file UsbConfig.h.

13.71.2 Member Data Documentation

13.71.2.1 EnableComplianceMode

UINT32 USB_CONFIG::EnableComplianceMode

This policy setting controls state of Compliance Mode enabling.

Compliance Mode can be enabled for testing through this option but default setting is Disabled. **0:Disable**, 1: Enable

Definition at line 312 of file UsbConfig.h.

13.71.2.2 LtrOverrideEnable

UINT32 USB_CONFIG::LtrOverrideEnable

Enabling this feature will allow for overriding LTR values for xHCI controller.

Values used for programming will be taken from this config block and BIOS will disregard recommended ones. **0: disable - do not override recommended LTR values** 1: enable - override recommended LTR values

Definition at line 353 of file UsbConfig.h.

13.71.2.3 OverCurrentEnable

UINT32 USB_CONFIG::OverCurrentEnable

This option allows for control whether USB should program the Overcurrent Pins mapping into xHCI.

Disabling this feature will disable overcurrent detection functionality. Overcurrent Pin mapping data is contained in respective port structures (i.e. [USB30_PORT_CONFIG](#)) in OverCurrentPin field. By default this Overcurrent functionality should be enabled and disabled only for OBS debug usage. **1: Will program USB OC pin mapping in respective xHCI controller registers** 0: Will clear OC pin mapping allow for OBS usage of OC pins

Definition at line 328 of file UsbConfig.h.

13.71.2.4 PdoProgramming

UINT32 USB_CONFIG::PdoProgramming

This policy option when set will make BIOS program Port Disable Override register during PEI phase.

When disabled BIOS will not program the PDO during PEI phase and leave PDO register unlocked for later programming. If this is disabled, platform code MUST set it before booting into OS. **1: Enable**, 0: Disable

Definition at line 319 of file UsbConfig.h.

13.71.2.5 Usb2PhySusPgEnable

UINT32 USB_CONFIG::Usb2PhySusPgEnable

(Test) This policy option enables USB2 PHY SUS Well Power Gating functionality.

Please note this is ignored on PCH H **0: disable USB2 PHY SUS Well Power Gating** 1: enable USB2 PHY SUS Well Power Gating

Definition at line 346 of file UsbConfig.h.

13.71.2.6 XhciOcLock

UINT32 USB_CONFIG::XhciOcLock

(Test) If this policy option is enabled then BIOS will program OCCFDONE bit in xHCI meaning that OC mapping data will be consumed by xHCI and OC mapping registers will be locked.

OverCurrent mapping data is taken from respective port data structure from OverCurrentPin field. If Enable↔ OverCurrent policy is enabled this also should be enabled, otherwise xHCI won't consume OC mapping data. **1: Program OCCFDONE bit and make xHCI consume OverCurrent mapping data** 0: Do not program OCCFDONE bit making it possible to use OBS debug on OC pins.

Definition at line 338 of file UsbConfig.h.

The documentation for this struct was generated from the following file:

- [UsbConfig.h](#)

13.72 XDCI_CONFIG Struct Reference

The [XDCI_CONFIG](#) block describes the configurations of the xDCI Usb Device controller.

```
#include <UsbConfig.h>
```

Public Attributes

- UINT32 [Enable](#): 1
This member describes whether or not the xDCI controller should be enabled.
- UINT32 [RsvdBits0](#): 31
Reserved bits.

13.72.1 Detailed Description

The [XDCI_CONFIG](#) block describes the configurations of the xDCI Usb Device controller.

Definition at line 164 of file UsbConfig.h.

13.72.2 Member Data Documentation

13.72.2.1 Enable

UINT32 XDCI_CONFIG::Enable

This member describes whether or not the xDCI controller should be enabled.

0: Disable; **1: Enable.**

Definition at line 169 of file UsbConfig.h.

The documentation for this struct was generated from the following file:

- [UsbConfig.h](#)
-

Chapter 14


File Documentation

14.1 AcpiS3Context.h File Reference

Definitions for data structures used in S3 resume.

```
#include <Library/BaseLib.h>
```

Include dependency graph for AcpiS3Context.h:

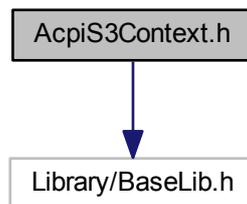

14.1.1 Detailed Description

Definitions for data structures used in S3 resume.

Copyright (c) 2011 - 2012, Intel Corporation. All rights reserved.


This program and the accompanying materials are licensed and made available under the terms and conditions of the BSD License which accompanies this distribution. The full text of the license may be found at <http://opensource.org/licenses/bsd-license.php>

THE PROGRAM IS DISTRIBUTED UNDER THE BSD LICENSE ON AN "AS IS" BASIS, WITHOUT WARRANTIES OR REPRESENTATIONS OF ANY KIND, EITHER EXPRESS OR IMPLIED.

14.2 AslUpdateLib.h File Reference

ASL dynamic update library definitions.

```
#include <IndustryStandard/Acpi.h>
#include <Protocol/AcpiTable.h>
#include <Protocol/AcpiSystemDescriptionTable.h>
Include dependency graph for AslUpdateLib.h:
```

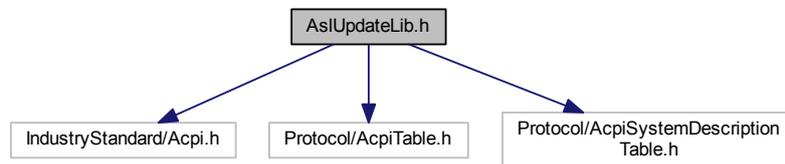

Functions

- EFI_STATUS [InitializeAslUpdateLib](#) (VOID)
Initialize the ASL update library state.
- EFI_STATUS [UpdateNameAslCode](#) (IN UINT32 AslSignature, IN VOID *Buffer, IN UINTN Length)
This procedure will update immediate value assigned to a Name.
- EFI_STATUS [UpdateMethodAslCode](#) (IN UINT32 AslSignature, IN VOID *Buffer, IN UINTN Length)
This procedure will update the name of ASL Method.
- EFI_STATUS [LocateAcpiTableBySignature](#) (IN UINT32 Signature, IN OUT EFI_ACPI_DESCRIPTION_HEADER **Table, IN OUT UINTN *Handle)
This function uses the ACPI support protocol to locate an ACPI table using the .
- EFI_STATUS [LocateAcpiTableByOemTableId](#) (IN UINT8 *TableId, IN UINT8 TableIdSize, IN OUT EFI_ACPI_DESCRIPTION_HEADER **Table, IN OUT UINTN *Handle)
This function uses the ACPI support protocol to locate an ACPI SSDT table.
- EFI_STATUS [AcpiChecksum](#) (IN VOID *Buffer, IN UINTN Size, IN UINTN ChecksumOffset)
This function calculates and updates an UINT8 checksum.

14.2.1 Detailed Description

ASL dynamic update library definitions.

This library provides dynamic update to various ASL structures. There may be different libraries for different environments (PEI, BS, RT, SMM). Make sure you meet the requirements for the library (protocol dependencies, use restrictions, etc).

Copyright

INTEL CONFIDENTIAL Copyright 1999 - 2017 Intel Corporation.

The source code contained or described herein and all documents related to the source code ("Material") are owned by Intel Corporation or its suppliers or licensors. Title to the Material remains with Intel Corporation or its suppliers and licensors. The Material may contain trade secrets and proprietary and confidential information of Intel Corporation and its suppliers and licensors, and is protected by worldwide copyright and trade secret laws and treaty provisions. No part of the Material may be used, copied, reproduced, modified, published, uploaded, posted, transmitted, distributed, or disclosed in any way without Intel's prior express written permission.

No license under any patent, copyright, trade secret or other intellectual property right is granted to or conferred upon you by disclosure or delivery of the Materials, either expressly, by implication, inducement, estoppel or otherwise. Any license under such intellectual property rights must be express and approved by Intel in writing.

Unless otherwise agreed by Intel in writing, you may not remove or alter this notice or any other notice embedded in Materials by Intel or Intel's suppliers or licensors in any way.

This file contains an 'Intel Peripheral Driver' and is uniquely identified as "Intel Reference Module" and is licensed for Intel CPUs and chipsets under the terms of your license agreement with Intel or your vendor. This file may be modified by the user, subject to additional terms of the license agreement.

Specification Reference:

14.2.2 Function Documentation

14.2.2.1 AcpiChecksum()

```
EFI_STATUS AcpiChecksum (
    IN VOID * Buffer,
    IN UINTN Size,
    IN UINTN ChecksumOffset )
```

This function calculates and updates an UINT8 checksum.

Parameters

in	<i>Buffer</i>	Pointer to buffer to checksum
in	<i>Size</i>	Number of bytes to checksum
in	<i>ChecksumOffset</i>	Offset to place the checksum result in

Return values

<i>EFI_SUCCESS</i>	The function completed successfully.
--------------------	--------------------------------------

14.2.2.2 InitializeAslUpdateLib()

```
EFI_STATUS InitializeAslUpdateLib (
    VOID )
```

Initialize the ASL update library state.

This must be called prior to invoking other library functions.

Return values

<i>EFI_SUCCESS</i>	The function completed successfully.
--------------------	--------------------------------------

14.2.2.3 LocateAcpiTableByOemTableId()

```
EFI_STATUS LocateAcpiTableByOemTableId (
```

```

    IN UINT8 * TableId,
    IN UINT8 TableIdSize,
    IN OUT EFI_ACPI_DESCRIPTION_HEADER ** Table,
    IN OUT UINTN * Handle )

```

This function uses the ACPI support protocol to locate an ACPI SSDT table.

The table is located by searching for a matching OEM Table ID field. Partial match searches are supported via the TableIdSize parameter.

Parameters

in	<i>TableId</i>	Pointer to an ASCII string containing the OEM Table ID from the ACPI table header
in	<i>TableIdSize</i>	Length of the TableId to match. Table ID are 8 bytes long, this function will consider it a match if the first TableIdSize bytes match
in, out	<i>Table</i>	Updated with a pointer to the table
in, out	<i>Handle</i>	AcpiSupport protocol table handle for the table found
in, out	<i>Version</i>	See AcpiSupport protocol, GetAcpiTable function for use

Return values

<i>EFI_SUCCESS</i>	The function completed successfully.
--------------------	--------------------------------------

14.2.2.4 LocateAcpiTableBySignature()

```

EFI_STATUS LocateAcpiTableBySignature (
    IN UINT32 Signature,
    IN OUT EFI_ACPI_DESCRIPTION_HEADER ** Table,
    IN OUT UINTN * Handle )

```

This function uses the ACPI support protocol to locate an ACPI table using the .

It is really only useful for finding tables that only have a single instance, e.g. FADT, FACS, MADT, etc. It is not good for locating SSDT, etc. Matches are determined by finding the table with ACPI table that has a matching signature and version.

Parameters

in	<i>Signature</i>	Pointer to an ASCII string containing the Signature to match
in, out	<i>Table</i>	Updated with a pointer to the table
in, out	<i>Handle</i>	AcpiSupport protocol table handle for the table found
in, out	<i>Version</i>	On input, the version of the table desired, on output, the versions the table belongs to

See also

AcpiSupport protocol for details

Return values

<i>EFI_SUCCESS</i>	The function completed successfully.
--------------------	--------------------------------------

14.2.2.5 UpdateMethodAslCode()

```
EFI_STATUS UpdateMethodAslCode (
    IN UINT32 AslSignature,
    IN VOID * Buffer,
    IN UINTN Length )
```

This procedure will update the name of ASL Method.

Parameters

in	<i>AslSignature</i>	- The signature of Operation Region that we want to update.
in	<i>Buffer</i>	- source of data to be written over original aml
in	<i>Length</i>	- length of data to be overwritten

Return values

<i>EFI_SUCCESS</i>	- The function completed successfully.
<i>EFI_NOT_FOUND</i>	- Failed to locate AcpiTable.

14.2.2.6 UpdateNameAslCode()

```
EFI_STATUS UpdateNameAslCode (
    IN UINT32 AslSignature,
    IN VOID * Buffer,
    IN UINTN Length )
```

This procedure will update immediate value assigned to a Name.

Parameters

in	<i>AslSignature</i>	The signature of Operation Region that we want to update.
in	<i>Buffer</i>	source of data to be written over original aml
in	<i>Length</i>	length of data to be overwritten

Return values

<i>EFI_SUCCESS</i>	The function completed successfully.
--------------------	--------------------------------------

14.3 CacheAsRamLib.h File Reference

Copyright (c) 2014, Intel Corporation.

Functions

- VOID [DisableCacheAsRam](#) (IN BOOLEAN DisableCar)

This function disable CAR.

14.3.1 Detailed Description

Copyright (c) 2014, Intel Corporation.

All rights reserved.

This program and the accompanying materials are licensed and made available under the terms and conditions of the BSD License which accompanies this distribution. The full text of the license may be found at <http://opensource.org/licenses/bsd-license.php>.

THE PROGRAM IS DISTRIBUTED UNDER THE BSD LICENSE ON AN "AS IS" BASIS, WITHOUT WARRANTIES OR REPRESENTATIONS OF ANY KIND, EITHER EXPRESS OR IMPLIED.

14.3.2 Function Documentation

14.3.2.1 DisableCacheAsRam()

```
VOID DisableCacheAsRam (
    IN BOOLEAN DisableCar )
```

This function disable CAR.

Parameters

in	<i>DisableCar</i>	TRUE means use INVD, FALSE means use WBINVD
----	-------------------	---

14.4 ConsoleOutDevice.h File Reference

This GUID can be installed to the device handle to specify that the device is the console-out device.

14.4.1 Detailed Description

This GUID can be installed to the device handle to specify that the device is the console-out device.

Copyright (c) 2006 - 2010, Intel Corporation. All rights reserved.


This program and the accompanying materials are licensed and made available under the terms and conditions of the BSD License that accompanies this distribution. The full text of the license may be found at <http://opensource.org/licenses/bsd-license.php>.

THE PROGRAM IS DISTRIBUTED UNDER THE BSD LICENSE ON AN "AS IS" BASIS, WITHOUT WARRANTIES OR REPRESENTATIONS OF ANY KIND, EITHER EXPRESS OR IMPLIED.


14.5 DxeHdaNhl.h File Reference

Header file for DxePchHdaNhlLib - NHLT structure definitions.

```
#include <IndustryStandard/Acpi.h>  
Include dependency graph for DxeHdaNht.h:
```

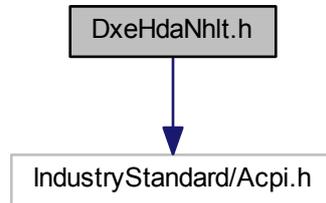

This graph shows which files directly or indirectly include this file:

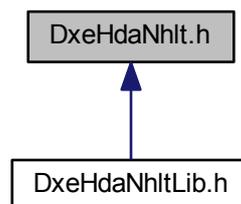

14.5.1 Detailed Description

Header file for DxePchHdaNhtLib - NHLT structure definitions.

Copyright

INTEL CONFIDENTIAL Copyright 2014 - 2020 Intel Corporation.

The source code contained or described herein and all documents related to the source code ("Material") are owned by Intel Corporation or its suppliers or licensors. Title to the Material remains with Intel Corporation or its suppliers and licensors. The Material may contain trade secrets and proprietary and confidential information of Intel Corporation and its suppliers and licensors, and is protected by worldwide copyright and trade secret laws and treaty provisions. No part of the Material may be used, copied, reproduced, modified, published, uploaded, posted, transmitted, distributed, or disclosed in any way without Intel's prior express written permission.

No license under any patent, copyright, trade secret or other intellectual property right is granted to or conferred upon you by disclosure or delivery of the Materials, either expressly, by implication, inducement, estoppel or otherwise. Any license under such intellectual property rights must be express and approved by Intel in writing.

Unless otherwise agreed by Intel in writing, you may not remove or alter this notice or any other notice embedded in Materials by Intel or Intel's suppliers or licensors in any way.

This file contains an 'Intel Peripheral Driver' and is uniquely identified as "Intel Reference Module" and is licensed for Intel CPUs and chipsets under the terms of your license agreement with Intel or your vendor. This file may be modified by the user, subject to additional terms of the license agreement.


Specification Reference:

14.6 DxeHdaNhltLib.h File Reference

Prototype of the DxePchHdaNhltLib library.

```
#include <DxeHdaNhlt.h>
```

Include dependency graph for DxeHdaNhltLib.h:

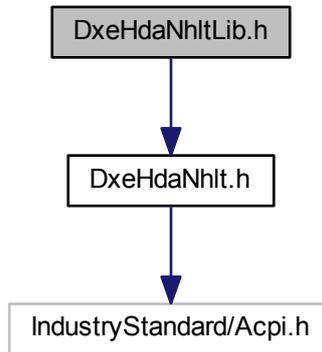

Functions

- `ENDPOINT_DESCRIPTOR *` [GetNhltEndpoint](#) (`IN CONST NHLT_ACPI_TABLE *NhltTable, IN CONST UINT8 EndpointIndex`)
Returns pointer to Endpoint ENDPOINT_DESCRIPTOR structure.
- `SPECIFIC_CONFIG *` [GetNhltEndpointDeviceCapabilities](#) (`IN CONST ENDPOINT_DESCRIPTOR *Endpoint`)
Returns pointer to Endpoint Specific Configuration SPECIFIC_CONFIG structure.
- `FORMATS_CONFIG *` [GetNhltEndpointFormatsConfig](#) (`IN CONST ENDPOINT_DESCRIPTOR *Endpoint`)
Returns pointer to all Formats Configuration FORMATS_CONFIG structure.
- `FORMAT_CONFIG *` [GetNhltEndpointFormat](#) (`IN CONST ENDPOINT_DESCRIPTOR *Endpoint, IN CONST UINT8 FormatIndex`)
Returns pointer to Format Configuration FORMAT_CONFIG structure.
- `DEVICES_INFO *` [GetNhltEndpointDevicesInfo](#) (`IN CONST ENDPOINT_DESCRIPTOR *Endpoint`)
Returns pointer to all Device Information DEVICES_INFO structure.
- `DEVICE_INFO *` [GetNhltEndpointDeviceInfo](#) (`IN CONST ENDPOINT_DESCRIPTOR *Endpoint, IN CONST UINT8 DeviceInfoIndex`)
Returns pointer to Device Information DEVICES_INFO structure.
- `SPECIFIC_CONFIG *` [GetNhltOedConfig](#) (`IN CONST NHLT_ACPI_TABLE *NhltTable`)
Returns pointer to OED Configuration SPECIFIC_CONFIG structure.
- `VOID` [NhltFormatDump](#) (`IN CONST FORMAT_CONFIG *Format`)
Prints Format configuration.
- `VOID` [NhltEndpointDump](#) (`IN CONST ENDPOINT_DESCRIPTOR *Endpoint`)
Prints Endpoint configuration.

- VOID [NhlOedConfigDump](#) (IN CONST SPECIFIC_CONFIG *OedConfig)
Prints OED (Offload Engine Driver) configuration.
- VOID [NhlAcpiTableDump](#) (IN NHLT_ACPI_TABLE *NhlTable)
Prints NHLT (Non HDA-Link Table) to be exposed via ACPI (aka.

14.6.1 Detailed Description

Prototype of the DxePchHdaNhlLib library.

Copyright

INTEL CONFIDENTIAL Copyright 2019 Intel Corporation.

The source code contained or described herein and all documents related to the source code ("Material") are owned by Intel Corporation or its suppliers or licensors. Title to the Material remains with Intel Corporation or its suppliers and licensors. The Material may contain trade secrets and proprietary and confidential information of Intel Corporation and its suppliers and licensors, and is protected by worldwide copyright and trade secret laws and treaty provisions. No part of the Material may be used, copied, reproduced, modified, published, uploaded, posted, transmitted, distributed, or disclosed in any way without Intel's prior express written permission.

No license under any patent, copyright, trade secret or other intellectual property right is granted to or conferred upon you by disclosure or delivery of the Materials, either expressly, by implication, inducement, estoppel or otherwise. Any license under such intellectual property rights must be express and approved by Intel in writing.

Unless otherwise agreed by Intel in writing, you may not remove or alter this notice or any other notice embedded in Materials by Intel or Intel's suppliers or licensors in any way.

This file contains an 'Intel Peripheral Driver' and is uniquely identified as "Intel Reference Module" and is licensed for Intel CPUs and chipsets under the terms of your license agreement with Intel or your vendor. This file may be modified by the user, subject to additional terms of the license agreement.

Specification Reference:

14.6.2 Function Documentation

14.6.2.1 GetNhlEndpoint()

```
ENDPOINT_DESCRIPTOR* GetNhlEndpoint (
    IN CONST NHLT_ACPI_TABLE * NhlTable,
    IN CONST UINT8 EndpointIndex )
```

Returns pointer to Endpoint ENDPOINT_DESCRIPTOR structure.

Parameters

in	*NhlTable	Endpoint for which Format address is retrieved
in	FormatIndex	Index of Format to be retrieved

Return values

Pointer	to ENDPOINT_DESCRIPTOR structure with given index
---------	---

14.6.2.2 GetNhltEndpointDeviceCapabilities()

```
SPECIFIC_CONFIG* GetNhltEndpointDeviceCapabilities (
    IN CONST ENDPOINT_DESCRIPTOR * Endpoint )
```

Returns pointer to Endpoint Specific Configuration SPECIFIC_CONFIG structure.

Parameters

in	*Endpoint	Endpoint for which config address is retrieved
----	-----------	--

Return values

Pointer	to SPECIFIC_CONFIG structure with endpoint's capabilities
---------	---

14.6.2.3 GetNhltEndpointDeviceInfo()

```
DEVICE_INFO* GetNhltEndpointDeviceInfo (
    IN CONST ENDPOINT_DESCRIPTOR * Endpoint,
    IN CONST UINT8 DeviceInfoIndex )
```

Returns pointer to Device Information DEVICES_INFO structure.

Parameters

in	*Endpoint	Endpoint for which Device Info address is retrieved
in	DeviceInfoIndex	Index of Device Info to be retrieved

Return values

Pointer	to DEVICE_INFO structure with given index
---------	---

14.6.2.4 GetNhltEndpointDevicesInfo()

```
DEVICES_INFO* GetNhltEndpointDevicesInfo (
    IN CONST ENDPOINT_DESCRIPTOR * Endpoint )
```

Returns pointer to all Device Information DEVICES_INFO structure.

Parameters

in	*Endpoint	Endpoint for which DevicesInfo address is retrieved
----	-----------	---

Return values

Pointer	to DEVICES_INFO structure
---------	---------------------------

14.6.2.5 GetNhlEndpointFormat()

```
FORMAT_CONFIG* GetNhlEndpointFormat (
    IN CONST ENDPOINT_DESCRIPTOR * Endpoint,
    IN CONST UINT8 FormatIndex )
```

Returns pointer to Format Configuration FORMAT_CONFIG structure.

Parameters

in	*Endpoint	Endpoint for which Format address is retrieved
in	FormatIndex	Index of Format to be retrieved

Return values

Pointer	to FORMAT_CONFIG structure with given index
---------	---

14.6.2.6 GetNhlEndpointFormatsConfig()

```
FORMATS_CONFIG* GetNhlEndpointFormatsConfig (
    IN CONST ENDPOINT_DESCRIPTOR * Endpoint )
```

Returns pointer to all Formats Configuration FORMATS_CONFIG structure.

Parameters

in	*Endpoint	Endpoint for which Formats address is retrieved
----	-----------	---

Return values

Pointer	to FORMATS_CONFIG structure
---------	-----------------------------

14.6.2.7 GetNhlOedConfig()

```
SPECIFIC_CONFIG* GetNhlOedConfig (
    IN CONST NHLT_ACPI_TABLE * NhlTable )
```

Returns pointer to OED Configuration SPECIFIC_CONFIG structure.

Parameters

in	*NhlTable	NHLT table for which OED address is retrieved
----	-----------	---

Return values

Pointer	to SPECIFIC_CONFIG structure with NHLT capabilities
---------	---

14.6.2.8 NhlAcpiTableDump()

```
VOID NhlAcpiTableDump (
    IN NHLT_ACPI_TABLE * NhlTable )
```

Prints NHLT (Non HDA-Link Table) to be exposed via ACPI (aka. OED (Offload Engine Driver) Configuration Table).

Parameters

in	* <i>NhlTable</i>	The NHLT table to print
----	-------------------	-------------------------

Return values

None	
------	--

14.6.2.9 NhlEndpointDump()

```
VOID NhlEndpointDump (
    IN CONST ENDPOINT_DESCRIPTOR * Endpoint )
```

Prints Endpoint configuration.

Parameters

in	* <i>Endpoint</i>	Endpoint to be printed
----	-------------------	------------------------

Return values

None	
------	--

14.6.2.10 NhlFormatDump()

```
VOID NhlFormatDump (
    IN CONST FORMAT_CONFIG * Format )
```

Prints Format configuration.

Parameters

in	* <i>Format</i>	Format to be printed
----	-----------------	----------------------

Return values

None	
------	--

14.6.2.11 NhltoedConfigDump()

```
VOID NhltoedConfigDump (
    IN CONST SPECIFIC_CONFIG * OedConfig )
```

Prints OED (Offload Engine Driver) configuration.

Parameters

in	*OedConfig	OED to be printed
----	------------	-------------------

Return values

None	
------	--

14.7 FspErrorInfo.h File Reference

FSP Error Information HOB to describe errors inside FSP that boot-loader may take some actions to handle those error scenarios.

Classes

- struct [FSP_ERROR_INFO_HOB](#)
FSP Error Information Block.

Macros

- #define [FSP_ERROR_INFO_HOB_GUID](#)
GUID value indicating the FSP error information.

14.7.1 Detailed Description

FSP Error Information HOB to describe errors inside FSP that boot-loader may take some actions to handle those error scenarios.

Copyright

INTEL CONFIDENTIAL Copyright 2019 Intel Corporation.

The source code contained or described herein and all documents related to the source code ("Material") are owned by Intel Corporation or its suppliers or licensors. Title to the Material remains with Intel Corporation or its suppliers and licensors. The Material may contain trade secrets and proprietary and confidential information of Intel Corporation and its suppliers and licensors, and is protected by worldwide copyright and trade secret laws and treaty provisions. No part of the Material may be used, copied, reproduced, modified, published, uploaded, posted, transmitted, distributed, or disclosed in any way without Intel's prior express written permission.

No license under any patent, copyright, trade secret or other intellectual property right is granted to or conferred upon you by disclosure or delivery of the Materials, either expressly, by implication, inducement, estoppel or otherwise. Any license under such intellectual property rights must be express and approved by Intel in writing.

Unless otherwise agreed by Intel in writing, you may not remove or alter this notice or any other notice embedded in Materials by Intel or Intel's suppliers or licensors in any way.

This file contains an 'Intel Peripheral Driver' and is uniquely identified as "Intel Reference Module" and is licensed for Intel CPUs and chipsets under the terms of your license agreement with Intel or your vendor. This file may be modified by the user, subject to additional terms of the license agreement.

Specification Reference:

14.8 FspErrorInfoLib.h File Reference

Library to provide service for sending FSP error information to bootloader.

Functions

- EFI_STATUS [SendFspErrorInfo](#) (IN EFI_GUID CallerId, IN EFI_GUID ErrorType, IN UINT32 Status)
Function attempts to send FSP error information to bootloader by both [FSP_ERROR_INFO_HOB](#) and [ReportStatusCode](#) service.
- EFI_STATUS [SendFspErrorInfoStatusCode](#) (IN EFI_GUID CallerId, IN EFI_GUID ErrorType, IN EFI_STATUS Status)
Function attempts to send FSP error information to bootloader by [ReportStatusCode](#) service.
- EFI_STATUS [DumpFspErrorInfo](#) (IN VOID *HobList)
Function attempts to dump all FSP error information hobs.
- EFI_STATUS [FspErrorStatusCodeReportWorker](#) (IN EFI_STATUS_CODE_TYPE CodeType, IN EFI_STATUS_CODE_VALUE Value, IN UINT32 Instance, IN CONST EFI_GUID *CallerId, IN CONST EFI_STATUS_CODE_DATA *Data OPTIONAL)
ReportStatusCode worker for FSP Error Information.

14.8.1 Detailed Description

Library to provide service for sending FSP error information to bootloader.

Copyright

INTEL CONFIDENTIAL Copyright 2019 Intel Corporation.

The source code contained or described herein and all documents related to the source code ("Material") are owned by Intel Corporation or its suppliers or licensors. Title to the Material remains with Intel Corporation or its suppliers and licensors. The Material may contain trade secrets and proprietary and confidential information of Intel Corporation and its suppliers and licensors, and is protected by worldwide copyright and trade secret laws and treaty provisions. No part of the Material may be used, copied, reproduced, modified, published, uploaded, posted, transmitted, distributed, or disclosed in any way without Intel's prior express written permission.

No license under any patent, copyright, trade secret or other intellectual property right is granted to or conferred upon you by disclosure or delivery of the Materials, either expressly, by implication, inducement, estoppel or otherwise. Any license under such intellectual property rights must be express and approved by Intel in writing.

Unless otherwise agreed by Intel in writing, you may not remove or alter this notice or any other notice embedded in Materials by Intel or Intel's suppliers or licensors in any way.

This file contains an 'Intel Peripheral Driver' and is uniquely identified as "Intel Reference Module" and is licensed for Intel CPUs and chipsets under the terms of your license agreement with Intel or your vendor. This file may be modified by the user, subject to additional terms of the license agreement.

Specification Reference:

14.8.2 Function Documentation

14.8.2.1 DumpFspErrorInfo()

```
EFI_STATUS DumpFspErrorInfo (
    IN VOID * HobList )
```

Function attempts to dump all FSP error information hobs.

Parameters

in	<i>HobList</i>	- Pointer to the HOB data structure.
----	----------------	--------------------------------------

Return values

<i>EFI_SUCCESS</i>	- No FSP_ERROR_INFO_HOB found.
<i>EFI_DEVICE_ERROR</i>	- At least one FSP_ERROR_INFO_HOB found.

14.8.2.2 FspErrorStatusCodeReportWorker()

```
EFI_STATUS FspErrorStatusCodeReportWorker (
    IN EFI_STATUS_CODE_TYPE CodeType,
    IN EFI_STATUS_CODE_VALUE Value,
    IN UINT32 Instance,
    IN CONST EFI_GUID * CallerId,
    IN CONST EFI_STATUS_CODE_DATA *Data OPTIONAL )
```

ReportStatusCode worker for FSP Error Information.

Parameters

<i>CodeType</i>	Always (EFI_ERROR_CODE EFI_ERROR_UNRECOVERED)
<i>Value</i>	Always 0
<i>Instance</i>	Always 0
<i>CallerId</i>	This optional parameter may be used to identify the caller. It may be used to identify which internal component of the FSP was executing at the time of the error.
<i>Data</i>	This data contains FSP error type and status code.

Return values

<i>EFI_SUCCESS</i>	Show error status sent by FSP successfully.
<i>RETURN_ABORTED</i>	Function skipped as unrelated.

14.8.2.3 SendFspErrorInfo()

```
EFI_STATUS SendFspErrorInfo (
```

```

    IN EFI_GUID CallerId,
    IN EFI_GUID ErrorType,
    IN UINT32 Status )

```

Function attempts to send FSP error information to bootloader by both [FSP_ERROR_INFO_HOB](#) and ReportStatusCode service.

Parameters

in	<i>CallerId</i>	- GUID indicates which component is executing.
in	<i>ErrorType</i>	- GUID indicates what error was encountered.
in	<i>Status</i>	- EFI_STATUS code for the error.

Return values

<i>EFI_SUCCESS</i>	- The function always return EFI_SUCCESS.
--------------------	---

14.8.2.4 SendFspErrorInfoStatusCode()

```

EFI_STATUS SendFspErrorInfoStatusCode (
    IN EFI_GUID CallerId,
    IN EFI_GUID ErrorType,
    IN EFI_STATUS Status )

```

Function attempts to send FSP error information to bootloader by ReportStatusCode service.

This typically is used by DXE drivers inside FSP which cannot create hob.

Parameters

in	<i>CallerId</i>	- GUID indicates which component is executing.
in	<i>ErrorType</i>	- GUID indicates what error was encountered.
in	<i>Status</i>	- EFI_STATUS code for the error.

Return values

<i>EFI_SUCCESS</i>	- The function always return EFI_SUCCESS.
--------------------	---

14.9 FspFixedPcds.h File Reference

This file lists all FixedAtBuild PCDs referenced in FSP integration guide.

Macros

- #define [PcdFspAreaBaseAddress](#) 0xFFE30000
FspAreaBaseAddress.
- #define [PcdFspImageIdString](#) \$CMLFSP\$
FspImageIdString.
- #define [PcdSiliconInitVersionMajor](#) 0x09

- *SiliconInitVersionMajor.*
• #define [PcdSiliconInitVersionMinor](#) 0x00
SiliconInitVersionMinor.
- #define [PcdSiliconInitVersionRevision](#) 0x30
SiliconInitVersionRevision.
- #define [PcdSiliconInitVersionBuild](#) 0x50
SiliconInitVersionBuild.
- #define [PcdGlobalDataPointerAddress](#) 0xFED00148
GlobalDataPointerAddress.
- #define [PcdTemporaryRamBase](#) 0xFE000000
TemporaryRamBase.
- #define [PcdTemporaryRamSize](#) 0x00040000
TemporaryRamSize.
- #define [PcdFspReservedBufferSize](#) 0x100
FspReservedBufferSize.

14.9.1 Detailed Description

This file lists all FixedAtBuild PCDs referenced in FSP integration guide.

Those value may vary in different FSP revision to meet different requirements.

14.10 FspInfoHob.h File Reference

Header file for FSP Information HOB.

14.10.1 Detailed Description

Header file for FSP Information HOB.

Copyright

Copyright (c) 2017 - 2019, Intel Corporation. All rights reserved.

This program and the accompanying materials are licensed and made available under the terms and conditions of the BSD License that accompanies this distribution. The full text of the license may be found at <http://opensource.org/licenses/bsd-license.php>. THE PROGRAM IS DISTRIBUTED UNDER THE BSD LICENSE ON AN "AS IS" BASIS, WITHOUT WARRANTIES OR REPRESENTATIONS OF ANY KIND, EITHER EXPRESS OR IMPLIED.

Specification Reference:

14.11 FspmArchConfigPpi.h File Reference

Header file for FSP-M Arch Config PPI.

Classes

- struct [FSPM_ARCH_CONFIG_PPI](#)
This PPI provides FSP-M Arch Config PPI.

Macros

- #define `FSPM_ARCH_CONFIG_GUID`

Global ID for the `FSPM_ARCH_CONFIG_PPI`.

14.11.1 Detailed Description

Header file for FSP-M Arch Config PPI.

Copyright

Copyright (c) 2018 - 2019, Intel Corporation. All rights reserved.

This program and the accompanying materials are licensed and made available under the terms and conditions of the BSD License which accompanies this distribution. The full text of the license may be found at <http://opensource.org/licenses/bsd-license.php>

THE PROGRAM IS DISTRIBUTED UNDER THE BSD LICENSE ON AN "AS IS" BASIS, WITHOUT WARRANTIES OR REPRESENTATIONS OF ANY KIND, EITHER EXPRESS OR IMPLIED.


14.12 FspmUpd.h File Reference

Copyright (c) 2020, Intel Corporation.


```
#include <FspUpd.h>
```

```
#include <MemInfoHob.h>
```

Include dependency graph for FspmUpd.h:

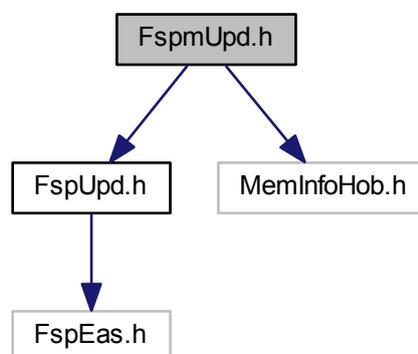

This graph shows which files directly or indirectly include this file:

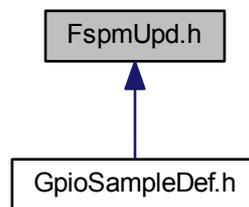

Classes

- struct [CHIPSET_INIT_INFO](#)
The ChipsetInit Info structure provides the information of ME ChipsetInit CRC and BIOS ChipsetInit CRC.
- struct [FSP_M_CONFIG](#)
Fsp M Configuration.
- struct [FSP_M_TEST_CONFIG](#)
Fsp M Test Configuration.
- struct [FSP_M_RESTRICTED_CONFIG](#)
Fsp M Restricted Configuration.
- struct [FSPM_UPD](#)
Fsp M UPD Configuration.

14.12.1 Detailed Description

Copyright (c) 2020, Intel Corporation.

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution. Neither the name of Intel Corporation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.


This file is automatically generated. Please do NOT modify !!!

14.13 FspUpd.h File Reference


Copyright (c) 2020, Intel Corporation.

```
#include <FspUpd.h>
```

Include dependency graph for FspUpd.h:

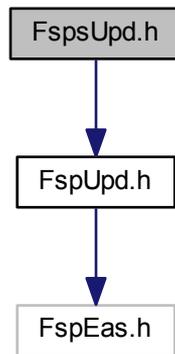

This graph shows which files directly or indirectly include this file:

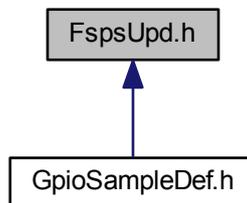

Classes

- struct [AZALIA_HEADER](#)
Azalia Header structure.
 - struct [AUDIO_AZALIA_VERB_TABLE](#)
Audio Azalia Verb Table structure.
 - struct [SI_PCH_DEVICE_INTERRUPT_CONFIG](#)
The PCH_DEVICE_INTERRUPT_CONFIG block describes interrupt pin, IRQ and interrupt mode for PCH device.
 - struct [FSP_S_CONFIG](#)
Fsp S Configuration.
 - struct [FSP_S_TEST_CONFIG](#)
Fsp S Test Configuration.
-

- struct [FSP_S_RESTRICTED_CONFIG](#)
Fsp S Restricted Configuration.
- struct [FSPS_UPD](#)
Fsp S UPD Configuration.

Macros

- `#define` [SI_PCH_MAX_DEVICE_INTERRUPT_CONFIG](#) 64
Number of all PCH devices.

Enumerations

- enum [SI_PCH_INT_PIN](#)
Refer to the definition of PCH_INT_PIN.

14.13.1 Detailed Description

Copyright (c) 2020, Intel Corporation.

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution. Neither the name of Intel Corporation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

This file is automatically generated. Please do NOT modify !!!

14.13.2 Enumeration Type Documentation

14.13.2.1 SI_PCH_INT_PIN

enum [SI_PCH_INT_PIN](#)

Refer to the definition of PCH_INT_PIN.

Enumerator

SiPchNoInt	No Interrupt Pin.
------------	-------------------


Definition at line 64 of file FspUpd.h.

14.14 FspUpd.h File Reference


Copyright (c) 2020, Intel Corporation.

```
#include <FspUpd.h>
```

Include dependency graph for FspUpd.h:

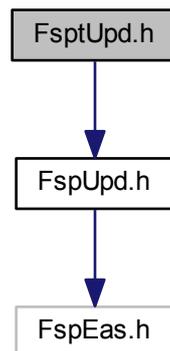

This graph shows which files directly or indirectly include this file:

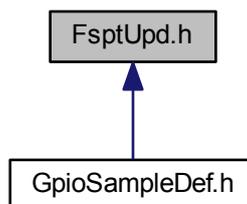

Classes

- struct [FSPT_CORE_UPD](#)
Fsp T Core UPD.
 - struct [FSP_T_CONFIG](#)
Fsp T Configuration.
 - struct [FSP_T_TEST_CONFIG](#)
Fsp T Test Configuration.
 - struct [FSP_T_RESTRICTED_CONFIG](#)
-

Fsp T Restricted Configuration.

- struct [FSPT_UPD](#)

Fsp T UPD Configuration.

14.14.1 Detailed Description

Copyright (c) 2020, Intel Corporation.

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution. Neither the name of Intel Corporation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.


This file is automatically generated. Please do NOT modify !!!

14.15 FspUpd.h File Reference


Copyright (c) 2020, Intel Corporation.

```
#include <FspEas.h>
```

Include dependency graph for FspUpd.h:

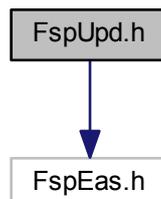

This graph shows which files directly or indirectly include this file:

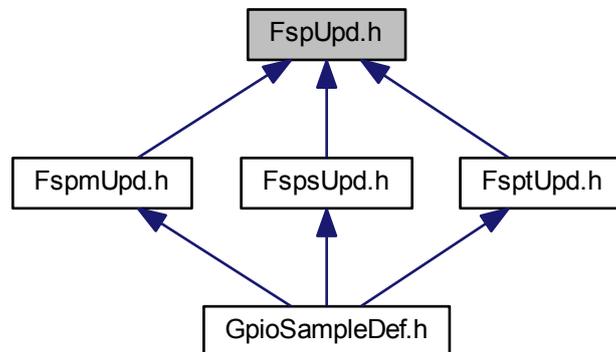

14.15.1 Detailed Description

Copyright (c) 2020, Intel Corporation.

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution. Neither the name of Intel Corporation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

This file is automatically generated. Please do NOT modify !!!

14.16 GetFsptApiParameter.h File Reference

Library to get FSP-T API parameter.

Functions

- UUINT32 [SecGetFsptApiParameter](#) (VOID)
This function gets Fspt API parameter.

14.16.1 Detailed Description

Library to get FSP-T API parameter.

Copyright

INTEL CONFIDENTIAL Copyright 2019 Intel Corporation.

The source code contained or described herein and all documents related to the source code ("Material") are owned by Intel Corporation or its suppliers or licensors. Title to the Material remains with Intel Corporation or its suppliers and licensors. The Material may contain trade secrets and proprietary and confidential information of Intel Corporation and its suppliers and licensors, and is protected by worldwide copyright and trade secret laws and treaty provisions. No part of the Material may be used, copied, reproduced, modified, published, uploaded, posted, transmitted, distributed, or disclosed in any way without Intel's prior express written permission.

No license under any patent, copyright, trade secret or other intellectual property right is granted to or conferred upon you by disclosure or delivery of the Materials, either expressly, by implication, inducement, estoppel or otherwise. Any license under such intellectual property rights must be express and approved by Intel in writing.

Unless otherwise agreed by Intel in writing, you may not remove or alter this notice or any other notice embedded in Materials by Intel or Intel's suppliers or licensors in any way.

This file contains an 'Intel Peripheral Driver' and is uniquely identified as "Intel Reference Module" and is licensed for Intel CPUs and chipsets under the terms of your license agreement with Intel or your vendor. This file may be modified by the user, subject to additional terms of the license agreement.

Specification Reference:

14.16.2 Function Documentation

14.16.2.1 SecGetFsptApiParameter()

```
UINT32 SecGetFsptApiParameter (  
    VOID )
```

This function gets Fspt API parameter.

Returns

The value of Fspt API parameter.

14.17 GpioConfig.h File Reference

Header file for GpioConfig structure used by GPIO library.

Classes

- struct [GPIO_CONFIG](#)

GPIO configuration structure used for pin programming.

Macros

- #define [B_GPIO_INT_CONFIG_INT_SOURCE_MASK](#) 0x1F
Mask for GPIO_INT_CONFIG for interrupt source.
- #define [B_GPIO_INT_CONFIG_INT_TYPE_MASK](#) 0xE0
Mask for GPIO_INT_CONFIG for interrupt type.
- #define [B_GPIO_ELECTRICAL_CONFIG_TERMINATION_MASK](#) 0x1F
Mask for GPIO_ELECTRICAL_CONFIG for termination value.
- #define [B_GPIO_ELECTRICAL_CONFIG_1V8_TOLERANCE_MASK](#) 0x60
Mask for GPIO_ELECTRICAL_CONFIG for 1v8 tolerance setting.
- #define [B_GPIO_LOCK_CONFIG_PAD_CONF_LOCK_MASK](#) 0x3
Mask for GPIO_LOCK_CONFIG for Pad Configuration Lock.
- #define [B_GPIO_LOCK_CONFIG_OUTPUT_LOCK_MASK](#) 0x5
Mask for GPIO_LOCK_CONFIG for Pad Output Lock.
- #define [B_GPIO_OTHER_CONFIG_RXRAW_MASK](#) 0x3
Mask for GPIO_OTHER_CONFIG for RxRaw1 setting.

Typedefs

- typedef UINT32 [GPIO_PAD](#)
For any GpioPad usage in code use GPIO_PAD type.
- typedef UINT32 [GPIO_GROUP](#)
For any GpioGroup usage in code use GPIO_GROUP type.

Enumerations

- enum [GPIO_HARDWARE_DEFAULT](#)
- enum [GPIO_PAD_MODE](#)
GPIO Pad Mode Refer to GPIO documentation on native functions available for certain pad.
- enum [GPIO_HOSTSW_OWN](#)
Host Software Pad Ownership modes This setting affects GPIO interrupt status registers.
- enum [GPIO_DIRECTION](#)
GPIO Direction.
- enum [GPIO_OUTPUT_STATE](#)
GPIO Output State This field is relevant only if output is enabled.
- enum [GPIO_INT_CONFIG](#)
GPIO interrupt configuration This setting is applicable only if pad is in GPIO mode and has input enabled.
- enum [GPIO_RESET_CONFIG](#)
GPIO Power Configuration GPIO_RESET_CONFIG allows to set GPIO Reset type (PADCFG_DW0.PadRstCfg) which will be used to reset certain GPIO settings.
- enum [GPIO_ELECTRICAL_CONFIG](#)
GPIO Electrical Configuration Set GPIO termination and Pad Tolerance (applicable only for some pads) Field from GpioTermNone to GpioTermNative can be OR'ed with GpioTolerance1v8.
- enum [GPIO_LOCK_CONFIG](#)
GPIO LockConfiguration Set GPIO configuration lock and output state lock.
- enum [GPIO_OTHER_CONFIG](#)
Other GPIO Configuration GPIO_OTHER_CONFIG is used for less often settings and for future extensions Supported settings:

14.17.1 Detailed Description

Header file for GpioConfig structure used by GPIO library.

Copyright

INTEL CONFIDENTIAL Copyright 2014 - 2016 Intel Corporation.

The source code contained or described herein and all documents related to the source code ("Material") are owned by Intel Corporation or its suppliers or licensors. Title to the Material remains with Intel Corporation or its suppliers and licensors. The Material may contain trade secrets and proprietary and confidential information of Intel Corporation and its suppliers and licensors, and is protected by worldwide copyright and trade secret laws and treaty provisions. No part of the Material may be used, copied, reproduced, modified, published, uploaded, posted, transmitted, distributed, or disclosed in any way without Intel's prior express written permission.

No license under any patent, copyright, trade secret or other intellectual property right is granted to or conferred upon you by disclosure or delivery of the Materials, either expressly, by implication, inducement, estoppel or otherwise. Any license under such intellectual property rights must be express and approved by Intel in writing.

Unless otherwise agreed by Intel in writing, you may not remove or alter this notice or any other notice embedded in Materials by Intel or Intel's suppliers or licensors in any way.

This file contains an 'Intel Peripheral Driver' and is uniquely identified as "Intel Reference Module" and is licensed for Intel CPUs and chipsets under the terms of your license agreement with Intel or your vendor. This file may be modified by the user, subject to additional terms of the license agreement.

Specification Reference:

14.17.2 Enumeration Type Documentation

14.17.2.1 GPIO_DIRECTION

enum [GPIO_DIRECTION](#)

GPIO Direction.

Enumerator

GpioDirDefault	Leave pad direction setting unmodified.
GpioDirInOut	Set pad for both output and input.
GpioDirInInvOut	Set pad for both output and input with inversion.
GpioDirIn	Set pad for input only.
GpioDirInInv	Set pad for input with inversion.
GpioDirOut	Set pad for output only.
GpioDirNone	Disable both output and input.

Definition at line 167 of file GpioConfig.h.

14.17.2.2 GPIO_ELECTRICAL_CONFIG

enum [GPIO_ELECTRICAL_CONFIG](#)

GPIO Electrical Configuration Set GPIO termination and Pad Tolerance (applicable only for some pads) Field from GpioTermNone to GpioTermNative can be OR'ed with GpioTolerance1v8.

Enumerator

GpioTermDefault	Leave termination setting unmodified.
GpioTermNone	none
GpioTermWpd5K	5kOhm weak pull-down
GpioTermWpd20K	20kOhm weak pull-down
GpioTermWpu1K	1kOhm weak pull-up
GpioTermWpu2K	2kOhm weak pull-up
GpioTermWpu5K	5kOhm weak pull-up
GpioTermWpu20K	20kOhm weak pull-up
GpioTermWpu1K2K	1kOhm & 2kOhm weak pull-up
GpioTermNative	Native function controls pads termination This setting is applicable only to some native modes. Please check EDS to determine which native functionality can control pads termination
GpioNoTolerance1v8	Disable 1.8V pad tolerance.
GpioTolerance1v8	Enable 1.8V pad tolerance.

Definition at line 296 of file GpioConfig.h.

14.17.2.3 GPIO_HARDWARE_DEFAULT

enum [GPIO_HARDWARE_DEFAULT](#)

Enumerator

GpioHardwareDefault	Leave setting unmodified.
---------------------	---------------------------

Definition at line 118 of file GpioConfig.h.

14.17.2.4 GPIO_HOSTSW_OWN

enum [GPIO_HOSTSW_OWN](#)

Host Software Pad Ownership modes This setting affects GPIO interrupt status registers.

Depending on chosen ownership some GPIO Interrupt status register get updated and other masked. Please refer to EDS for HOSTSW_OWN register description.

Enumerator

GpioHostOwnDefault	Leave ownership value unmodified.
GpioHostOwnAcpi	Set HOST ownership to ACPI. Use this setting if pad is not going to be used by GPIO OS driver. If GPIO is configured to generate SCI/SMI/NMI then this setting must be used for interrupts to work
GpioHostOwnGpio	Set HOST ownership to GPIO Driver mode. Use this setting only if GPIO pad should be controlled by GPIO OS Driver. GPIO OS Driver will be able to control the pad if appropriate entry in ACPI exists (refer to ACPI specification for Gpiolo and GpioInt descriptors)

Definition at line 146 of file GpioConfig.h.

14.17.2.5 GPIO_INT_CONFIG

enum [GPIO_INT_CONFIG](#)

GPIO interrupt configuration This setting is applicable only if pad is in GPIO mode and has input enabled.

GPIO_INT_CONFIG allows to choose which interrupt is generated (IOxAPIC/SCI/SMI/NMI) and how it is triggered (edge or level). Refer to PADCFG_DW0 register description in EDS for details on this settings. Field from GpioIntNmi to GpioIntApic can be OR'ed with GpioIntLevel to GpioIntBothEdge to describe an interrupt e.g. GpioIntApic | GpioIntLevel If GPIO is set to cause an SCI then also GPI_GPE_EN is enabled for this pad. If GPIO is set to cause an NMI then also GPI_NMI_EN is enabled for this pad. Not all GPIO are capable of generating an SMI or NMI interrupt. When routing GPIO to cause an IOxAPIC interrupt care must be taken, as this interrupt cannot be shared and its IRQn number is not configurable. Refer to EDS for GPIO pads IRQ numbers (PADCFG_DW1.IntSel) If GPIO is under GPIO OS driver control and appropriate ACPI GpioInt descriptor exist then use only trigger type setting (from GpioIntLevel to GpioIntBothEdge). This type of GPIO Driver interrupt doesn't have any additional routing setting required to be set by BIOS. Interrupt is handled by GPIO OS Driver.

Enumerator

GpioIntDefault	Leave value of interrupt routing unmodified.
GpioIntDis	Disable IOxAPIC/SCI/SMI/NMI interrupt generation.
GpioIntNmi	Enable NMI interrupt only.
GpioIntSmi	Enable SMI interrupt only.
GpioIntSci	Enable SCI interrupt only.
GpioIntApic	Enable IOxAPIC interrupt only.
GpioIntLevel	Set interrupt as level triggered.
GpioIntEdge	Set interrupt as edge triggered (type of edge depends on input inversion)
GpioIntLvlEdgDis	Disable interrupt trigger.
GpioIntBothEdge	Set interrupt as both edge triggered.

Definition at line 207 of file GpioConfig.h.

14.17.2.6 GPIO_LOCK_CONFIG

enum [GPIO_LOCK_CONFIG](#)

GPIO LockConfiguration Set GPIO configuration lock and output state lock.

GpioLockPadConfig and GpioLockOutputState can be OR'ed. Lock settings reset is in Powergood domain. Care must be taken when using this setting as fields it locks may be reset by a different signal and can be controllable by what is in GPIO_RESET_CONFIG (PADCFG_DW0.PadRstCfg). GPIO library provides functions which allow to unlock a GPIO pad.

Enumerator

GpioLockDefault	Leave lock setting unmodified.
GpioPadConfigLock	Lock Pad Configuration.
GpioOutputStateLock	Lock GPIO pad output value.

Definition at line 329 of file GpioConfig.h.

14.17.2.7 GPIO_OTHER_CONFIG

enum [GPIO_OTHER_CONFIG](#)

Other GPIO Configuration `GPIO_OTHER_CONFIG` is used for less often settings and for future extensions Supported settings:

- RX raw override to '1' - allows to override input value to '1' This setting is applicable only if in input mode (both in GPIO and native usage). The override takes place at the internal pad state directly from buffer and before the `RXINV`.

Enumerator

<code>GpioRxRaw1Default</code>	Use default input override value.
<code>GpioRxRaw1Dis</code>	Don't override input.
<code>GpioRxRaw1En</code>	Override input to '1'.

Definition at line 346 of file `GpioConfig.h`.

14.17.2.8 GPIO_OUTPUT_STATE

enum [GPIO_OUTPUT_STATE](#)

GPIO Output State This field is relevant only if output is enabled.

Enumerator

<code>GpioOutDefault</code>	Leave output value unmodified.
<code>GpioOutLow</code>	Set output to low.
<code>GpioOutHigh</code>	Set output to high.

Definition at line 181 of file `GpioConfig.h`.

14.17.2.9 GPIO_PAD_MODE

enum [GPIO_PAD_MODE](#)

GPIO Pad Mode Refer to GPIO documentation on native functions available for certain pad.

If GPIO is set to one of NativeX modes then following settings are not applicable and can be skipped:

- Interrupt related settings
- Host Software Ownership
- Output/Input enabling/disabling
- Output lock

Definition at line 132 of file `GpioConfig.h`.

14.17.2.10 GPIO_RESET_CONFIG

enum `GPIO_RESET_CONFIG`

GPIO Power Configuration `GPIO_RESET_CONFIG` allows to set GPIO Reset type (`PADCFG_DW0.PadRstCfg`) which will be used to reset certain GPIO settings.

Refer to EDS for settings that are controllable by `PadRstCfg`.

Enumerator

<code>GpioResetDefault</code>	Leave value of pad reset unmodified.
<code>GpioResetPwrGood</code>	Deprecated settings. Maintained only for compatibility. GPP: <code>RSMRST</code> ; GPD: <code>DSW_PWROK</code> ; (<code>PadRstCfg = 00b = "Powergood"</code>)
<code>GpioResetDeep</code>	Deep GPIO Reset (<code>PadRstCfg = 01b = "Deep GPIO Reset"</code>)
<code>GpioResetNormal</code>	GPIO Reset (<code>PadRstCfg = 10b = "GPIO Reset"</code>)
<code>GpioResetResume</code>	GPP: Reserved; GPD: <code>RSMRST</code> ; (<code>PadRstCfg = 11b = "Resume Reset"</code>)
<code>GpioResumeReset</code>	New GPIO reset configuration options. Resume Reset (<code>RSMRST</code>) GPP: <code>PadRstCfg = 00b = "Powergood"</code> GPD: <code>PadRstCfg = 11b = "Resume Reset"</code> Pad setting will reset on: <ul style="list-style-type: none"> • DeepSx transition • G3 Pad settings will not reset on: • S3/S4/S5 transition • Warm/Cold/Global reset
<code>GpioHostDeepReset</code>	Host Deep Reset <code>PadRstCfg = 01b = "Deep GPIO Reset"</code> Pad settings will reset on: <ul style="list-style-type: none"> • Warm/Cold/Global reset • DeepSx transition • G3 Pad settings will not reset on: • S3/S4/S5 transition
<code>GpioPlatformReset</code>	Platform Reset (<code>PLTRST</code>) <code>PadRstCfg = 10b = "GPIO Reset"</code> Pad settings will reset on: <ul style="list-style-type: none"> • S3/S4/S5 transition • Warm/Cold/Global reset • DeepSx transition • G3
<code>GpioDswReset</code>	Deep Sleep Well Reset (<code>DSW_PWROK</code>) GPP: not applicable GPD: <code>PadRstCfg = 00b = "Powergood"</code> Pad settings will reset on: <ul style="list-style-type: none"> • G3 Pad settings will not reset on: • S3/S4/S5 transition • Warm/Cold/Global reset • DeepSx transition


Definition at line 229 of file `GpioConfig.h`.

14.18 GpioSampleDef.h File Reference

Sample enum definitions for GPIO table.

```
#include <FsptUpd.h>
#include <FspmUpd.h>
#include <FspSUpd.h>
```

Include dependency graph for GpioSampleDef.h:

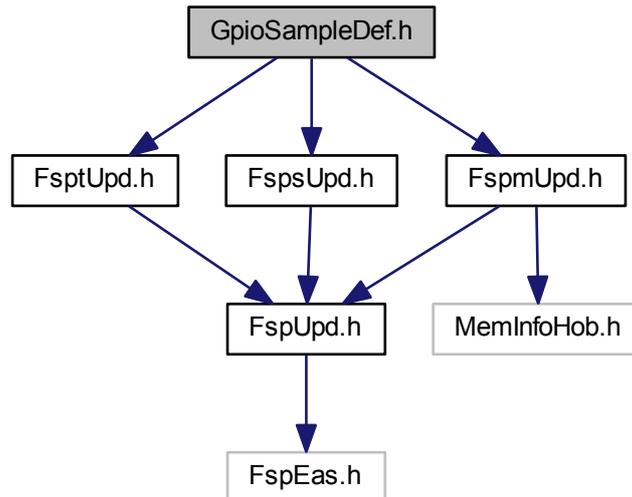

14.18.1 Detailed Description

Sample enum definitions for GPIO table.

Copyright

Copyright (c) 2014 - 2018, Intel Corporation. All rights reserved.

This program and the accompanying materials are licensed and made available under the terms and conditions of the BSD License that accompanies this distribution. The full text of the license may be found at <http://opensource.org/licenses/bsd-license.php>. THE PROGRAM IS DISTRIBUTED UNDER THE BSD LICENSE ON AN "AS IS" BASIS, WITHOUT WARRANTIES OR REPRESENTATIONS OF ANY KIND, EITHER EXPRESS OR IMPLIED.

Specification Reference:

14.19 LegacyBios.h File Reference

The EFI Legacy BIOS Protocol is used to abstract legacy Option ROM usage under EFI and Legacy OS boot.

Classes

- struct [EFI_COMPATIBILITY16_TABLE](#)
There is a table located within the traditional BIOS in either the 0xF000:xxxx or 0xE000:xxxx physical address range.
 - struct [EFI_DISPATCH_OPROM_TABLE](#)
EFI_DISPATCH_OPROM_TABLE.
 - struct [EFI_TO_COMPATIBILITY16_INIT_TABLE](#)
EFI_TO_COMPATIBILITY16_INIT_TABLE.
 - struct [DEVICE_PRODUCER_SERIAL](#)
DEVICE_PRODUCER_SERIAL.
 - struct [DEVICE_PRODUCER_PARALLEL](#)
@)
 - struct [DEVICE_PRODUCER_FLOPPY](#)
DEVICE_PRODUCER_FLOPPY.
 - struct [LEGACY_DEVICE_FLAGS](#)
LEGACY_DEVICE_FLAGS.
 - struct [DEVICE_PRODUCER_DATA_HEADER](#)
DEVICE_PRODUCER_DATA_HEADER.
 - struct [ATAPI_IDENTIFY](#)
ATAPI_IDENTIFY.
 - struct [HDD_INFO](#)
HDD_INFO.
 - struct [BBS_STATUS_FLAGS](#)
BBS_STATUS_FLAGS;.
 - struct [BBS_TABLE](#)
BBS_TABLE, device type values & boot priority values.
 - struct [SMM_ATTRIBUTES](#)
SMM_ATTRIBUTES.
 - struct [SMM_FUNCTION](#)
SMM_FUNCTION & relating constants.
 - struct [SMM_ENTRY](#)
This structure assumes both port and data sizes are 1.
 - struct [SMM_TABLE](#)
SMM_TABLE.
 - struct [UDC_ATTRIBUTES](#)
UDC_ATTRIBUTES.
 - struct [UD_TABLE](#)
UD_TABLE.
 - struct [EFI_TO_COMPATIBILITY16_BOOT_TABLE](#)
EFI_TO_COMPATIBILITY16_BOOT_TABLE.
 - struct [EFI_LEGACY_INSTALL_PCI_HANDLER](#)
EFI_LEGACY_INSTALL_PCI_HANDLER.
 - struct [EFI_EFLAGS_REG](#)
EFI_EFLAGS_REG.
 - struct [EFI_DWORD_REGS](#)
EFI_DWORD_REGS.
 - struct [EFI_FLAGS_REG](#)
EFI_FLAGS_REG.
 - struct [EFI_WORD_REGS](#)
EFI_WORD_REGS.
 - struct [EFI_BYTE_REGS](#)
-

- *EFI_BYTE_REGS.*
- union `EFI_IA32_REGISTER_SET`
EFI_IA32_REGISTER_SET.
- struct `_EFI_LEGACY_BIOS_PROTOCOL`
Abstracts the traditional BIOS from the rest of EFI.

Macros

- #define `HDD_PRIMARY` 0x01
HDD_INFO status bits.
 - #define `NO_ROM` 0x00
Flags returned by CheckPciRom().
 - #define `ROM_WITH_CONFIG` 0x04
Not defined in the Framework CSM Specification.

 - #define `DEVICE_SERIAL_MODE_NORMAL` 0x00
DEVICE_PRODUCER_SERIAL's modes.
 - #define `DEVICE_PARALLEL_MODE_MODE_OUTPUT_ONLY` 0x00
DEVICE_PRODUCER_PARALLEL's modes.

 - #define `BBS_FLOPPY` 0x01
BBS device type values.

 - #define `BBS_DO_NOT_BOOT_FROM` 0xFFFC
BBS boot priority values.

 - #define `STANDARD_IO` 0x00
SMM_ATTRIBUTES type values.

 - #define `PORT_SIZE_8` 0x00
SMM_ATTRIBUTES port size constants.

 - #define `DATA_SIZE_8` 0x00
SMM_ATTRIBUTES data size constants.

 - #define `INT15_D042` 0x0000
SMM_FUNCTION Function constants.
-

- #define `STANDARD_OWNER` 0x0
`SMM_FUNCTION` Owner constants.
- #define `EFI_SEGMENT`(_Adr) (UINT16) ((UINT16) (((UINTN) (_Adr)) >> 4) & 0xf000)
The following macros do not appear in the Framework CSM Specification and are kept for backward compatibility only.

Typedefs

- typedef `BOOLEAN`(* `EFI_LEGACY_BIOS_INT86`) (IN `EFI_LEGACY_BIOS_PROTOCOL` *This, IN `UINT8` BiosInt, IN OUT `EFI_IA32_REGISTER_SET` *Regs)
Think to 16-bit real mode and execute a software interrupt with a vector of BiosInt.
- typedef `BOOLEAN`(* `EFI_LEGACY_BIOS_FARCALL86`) (IN `EFI_LEGACY_BIOS_PROTOCOL` *This, IN `UINT16` Segment, IN `UINT16` Offset, IN `EFI_IA32_REGISTER_SET` *Regs, IN `VOID` *Stack, IN `UINTN` StackSize)
Think to 16-bit real mode and call Segment:Offset.
- typedef `EFI_STATUS`(* `EFI_LEGACY_BIOS_CHECK_ROM`) (IN `EFI_LEGACY_BIOS_PROTOCOL` *This, IN `EFI_HANDLE` PciHandle, OUT `VOID` **RomImage, OPTIONAL OUT `UINTN` *RomSize, OPTIONAL OUT `UINTN` *Flags)
Test to see if a legacy PCI ROM exists for this device.
- typedef `EFI_STATUS`(* `EFI_LEGACY_BIOS_INSTALL_ROM`) (IN `EFI_LEGACY_BIOS_PROTOCOL` *This, IN `EFI_HANDLE` PciHandle, IN `VOID` **RomImage, OUT `UINTN` *Flags, OUT `UINT8` *DiskStart, OPTIONAL OUT `UINT8` *DiskEnd, OPTIONAL OUT `VOID` **RomShadowAddress, OPTIONAL OUT `UINT32` *ShadowedRomSize OPTIONAL)
Load a legacy PC-AT OPROM on the PciHandle device.
- typedef `EFI_STATUS`(* `EFI_LEGACY_BIOS_BOOT`) (IN `EFI_LEGACY_BIOS_PROTOCOL` *This, IN `BBS_DEVICE_PATH` *BootOption, IN `UINT32` LoadOptionsSize, IN `VOID` *LoadOptions)
This function attempts to traditionally boot the specified BootOption.
- typedef `EFI_STATUS`(* `EFI_LEGACY_BIOS_UPDATE_KEYBOARD_LED_STATUS`) (IN `EFI_LEGACY_BIOS_PROTOCOL` *This, IN `UINT8` Leds)
This function takes the Leds input parameter and sets/resets the BDA accordingly.
- typedef `EFI_STATUS`(* `EFI_LEGACY_BIOS_GET_BBS_INFO`) (IN `EFI_LEGACY_BIOS_PROTOCOL` *This, OUT `UINT16` *HddCount, OUT `HDD_INFO` **HddInfo, OUT `UINT16` *BbsCount, IN OUT `BBS_TABLE` **BbsTable)
Retrieve legacy BBS info and assign boot priority.
- typedef `EFI_STATUS`(* `EFI_LEGACY_BIOS_PREPARE_TO_BOOT_EFI`) (IN `EFI_LEGACY_BIOS_PROTOCOL` *This, OUT `UINT16` *BbsCount, OUT `BBS_TABLE` **BbsTable)
Assign drive number to legacy HDD drives prior to booting an EFI aware OS so the OS can access drives without an EFI driver.
- typedef `EFI_STATUS`(* `EFI_LEGACY_BIOS_BOOT_UNCONVENTIONAL_DEVICE`) (IN `EFI_LEGACY_BIOS_PROTOCOL` *This, IN `UDC_ATTRIBUTES` Attributes, IN `UINTN` BbsEntry, IN `VOID` *BeerData, IN `VOID` *ServiceAreaData)
To boot from an unconventional device like parties and/or execute HDD diagnostics.
- typedef `EFI_STATUS`(* `EFI_LEGACY_BIOS_SHADOW_ALL_LEGACY_OPROMS`) (IN `EFI_LEGACY_BIOS_PROTOCOL` *This)
Shadow all legacy16 OPROMs that haven't been shadowed.
- typedef `EFI_STATUS`(* `EFI_LEGACY_BIOS_GET_LEGACY_REGION`) (IN `EFI_LEGACY_BIOS_PROTOCOL` *This, IN `UINTN` LegacyMemorySize, IN `UINTN` Region, IN `UINTN` Alignment, OUT `VOID` **LegacyMemoryAddress)
Get a region from the LegacyBios for S3 usage.

- typedef EFI_STATUS(* [EFI_LEGACY_BIOS_COPY_LEGACY_REGION](#)) (IN [EFI_LEGACY_BIOS_PROTOCOL](#) *This, IN UINTN LegacyMemorySize, IN VOID *LegacyMemoryAddress, IN VOID *LegacyMemorySourceAddress)

Get a region from the LegacyBios for Tiano usage.

Enumerations

- enum [EFI_COMPATIBILITY_FUNCTIONS](#)

Functions provided by the CSM binary which communicate between the EfiCompatibility and Compatability16 code.

14.19.1 Detailed Description

The EFI Legacy BIOS Protocol is used to abstract legacy Option ROM usage under EFI and Legacy OS boot.

This file also includes all the related COMPATIBILITY16 structures and definitions.

Note: The names for [EFI_IA32_REGISTER_SET](#) elements were picked to follow well known naming conventions.

Thunk is the code that switches from 32-bit protected environment into the 16-bit real-mode environment. Reverse thunk is the code that does the opposite.

Copyright (c) 2007 - 2015, Intel Corporation. All rights reserved.

This program and the accompanying materials are licensed and made available under the terms and conditions of the BSD License that accompanies this distribution. The full text of the license may be found at <http://opensource.org/licenses/bsd-license.php>.

THE PROGRAM IS DISTRIBUTED UNDER THE BSD LICENSE ON AN "AS IS" BASIS, WITHOUT WARRANTIES OR REPRESENTATIONS OF ANY KIND, EITHER EXPRESS OR IMPLIED.

Revision Reference:

This protocol is defined in Framework for EFI Compatibility Support Module spec Version 0.98.

14.19.2 Macro Definition Documentation

14.19.2.1 EFI_SEGMENT

```
#define EFI_SEGMENT(
    _Adr ) (UINT16) ((UINT16) (((UINTN) (_Adr)) >> 4) & 0xf000)
```

The following macros do not appear in the Framework CSM Specification and are kept for backward compatibility only.

They convert 32-bit address (_Adr) to Segment:Offset 16-bit form.

Definition at line 1016 of file LegacyBios.h.

14.19.3 Typedef Documentation

14.19.3.1 EFI_LEGACY_BIOS_BOOT

```
typedef EFI_STATUS( * EFI_LEGACY_BIOS_BOOT) (IN EFI\_LEGACY\_BIOS\_PROTOCOL *This, IN BBS_BBS_DEVICE_PATH *BootOption, IN UINT32 LoadOptionsSize, IN VOID *LoadOptions)
```

This function attempts to traditionally boot the specified BootOption.

If the EFI context has been compromised, this function will not return. This procedure is not used for loading an EFI-aware OS off a traditional device. The following actions occur:

- Get EFI SMBIOS data structures, convert them to a traditional format, and copy to Compatibility16.
- Get a pointer to ACPI data structures and copy the Compatibility16 RSD PTR to F0000 block.
- Find the traditional SMI handler from a firmware volume and register the traditional SMI handler with the EFI SMI handler.
- Build onboard IDE information and pass this information to the Compatibility16 code.
- Make sure all PCI Interrupt Line registers are programmed to match 8259.
- Reconfigure SIO devices from EFI mode (polled) into traditional mode (interrupt driven).
- Shadow all PCI ROMs.
- Set up BDA and EBDA standard areas before the legacy boot.
- Construct the Compatibility16 boot memory map and pass it to the Compatibility16 code.
- Invoke the Compatibility16 table function Compatibility16PrepareToBoot(). This invocation causes a thunk into the Compatibility16 code, which sets all appropriate internal data structures. The boot device list is a parameter.
- Invoke the Compatibility16 Table function Compatibility16Boot(). This invocation causes a thunk into the Compatibility16 code, which does an INT19.
- If the Compatibility16Boot() function returns, then the boot failed in a graceful manner—meaning that the EFI code is still valid. An ungraceful boot failure causes a reset because the state of EFI code is unknown.

Parameters

in	<i>This</i>	The protocol instance pointer.
in	<i>BootOption</i>	The EFI Device Path from BootXXXX variable.
in	<i>LoadOptionSize</i>	The size of LoadOption in size.
in	<i>LoadOption</i>	LThe oadOption from BootXXXX variable.

Return values

<i>EFI_DEVICE_ERROR</i>	Failed to boot from any boot device and memory is uncorrupted. Note: This function normally does not returns. It will either boot the OS or reset the system if memory has been "corrupted" by loading a boot sector and passing control to it.
-------------------------	---

Definition at line 1287 of file LegacyBios.h.

14.19.3.2 EFI_LEGACY_BIOS_BOOT_UNCONVENTIONAL_DEVICE

```
typedef EFI_STATUS( * EFI_LEGACY_BIOS_BOOT_UNCONVENTIONAL_DEVICE)( IN EFI_LEGACY_BIOS_PROTOCOL
*This, IN UDC_ATTRIBUTES Attributes, IN UINTN BbsEntry, IN VOID *BeerData, IN VOID *Service←
AreaData)
```

To boot from an unconventional device like parties and/or execute HDD diagnostics.

Parameters

in	<i>This</i>	The protocol instance pointer.
in	<i>Attributes</i>	How to interpret the other input parameters.
in	<i>BbsEntry</i>	The 0-based index into the BbsTable for the parent device.
in	<i>BeerData</i>	A pointer to the 128 bytes of ram BEER data.
in	<i>ServiceAreaData</i>	A pointer to the 64 bytes of raw Service Area data. The caller must provide a pointer to the specific Service Area and not the start all Service Areas.

Return values

<i>EFI_INVALID_PARAMETER</i>	If error. Does NOT return if no error.
------------------------------	--

Definition at line 1376 of file LegacyBios.h.

14.19.3.3 EFI_LEGACY_BIOS_CHECK_ROM

```
typedef EFI_STATUS( * EFI_LEGACY_BIOS_CHECK_ROM) (IN EFI_LEGACY_BIOS_PROTOCOL *This, IN EFI_HANDLE PciHandle, OUT VOID **RomImage, OPTIONAL OUT UINTN *RomSize, OPTIONAL OUT UINTN *Flags)
```

Test to see if a legacy PCI ROM exists for this device.

Optionally return the Legacy ROM instance for this PCI device.

Parameters

in	<i>This</i>	The protocol instance pointer.
in	<i>PciHandle</i>	The PCI PC-AT OPROM from this devices ROM BAR will be loaded
out	<i>RomImage</i>	Return the legacy PCI ROM for this device.
out	<i>RomSize</i>	The size of ROM Image.
out	<i>Flags</i>	Indicates if ROM found and if PC-AT. Multiple bits can be set as follows: <ul style="list-style-type: none"> • 00 = No ROM. • 01 = ROM Found. • 02 = ROM is a valid legacy ROM.

Return values

<i>EFI_SUCCESS</i>	The Legacy Option ROM available for this device
<i>EFI_UNSUPPORTED</i>	The Legacy Option ROM is not supported.

Definition at line 1206 of file LegacyBios.h.

14.19.3.4 EFI_LEGACY_BIOS_COPY_LEGACY_REGION

```
typedef EFI_STATUS( * EFI_LEGACY_BIOS_COPY_LEGACY_REGION) (IN EFI_LEGACY_BIOS_PROTOCOL *This, IN UINTN LegacyMemorySize, IN VOID *LegacyMemoryAddress, IN VOID *LegacyMemorySourceAddress)
```

Get a region from the LegacyBios for Tiano usage.

Can only be invoked once.

Parameters

in	<i>This</i>	The protocol instance pointer.
in	<i>LegacyMemorySize</i>	The size of data to copy.
in	<i>LegacyMemoryAddress</i>	The Legacy Region destination address. Note: must be in region assigned by LegacyBiosGetLegacyRegion.
in	<i>LegacyMemorySourceAddress</i>	The source of the data to copy.

Return values

<i>EFI_SUCCESS</i>	The Region assigned.
<i>EFI_ACCESS_DENIED</i>	Destination was outside an assigned region.

Definition at line 1445 of file LegacyBios.h.

14.19.3.5 EFI_LEGACY_BIOS_FARCALL86

```
typedef BOOLEAN( * EFI_LEGACY_BIOS_FARCALL86) (IN EFI_LEGACY_BIOS_PROTOCOL *This, IN UINT16 Segment, IN UINT16 Offset, IN EFI_IA32_REGISTER_SET *Regs, IN VOID *Stack, IN UINTN StackSize)
```

Thunk to 16-bit real mode and call Segment:Offset.

Regs will contain the 16-bit register context on entry and exit. Arguments can be passed on the Stack argument

Parameters

in	<i>This</i>	The protocol instance pointer.
in	<i>Segment</i>	The segment of 16-bit mode call.
in	<i>Offset</i>	The offset of 16-bit mode call.
in	<i>Reg</i>	Register context passed into (and returned) from thunk to 16-bit mode.
in	<i>Stack</i>	The caller allocated stack used to pass arguments.
in	<i>StackSize</i>	The size of Stack in bytes.

Return values

<i>FALSE</i>	Thunk completed with no BIOS errors in the target code. See Regs for status.
<i>TRUE</i>	There was a BIOS error in the target code.

Definition at line 1178 of file LegacyBios.h.

14.19.3.6 EFI_LEGACY_BIOS_GET_BBS_INFO

```
typedef EFI_STATUS( * EFI_LEGACY_BIOS_GET_BBS_INFO) (IN EFI_LEGACY_BIOS_PROTOCOL *This, OUT UINT16 *HddCount, OUT HDD_INFO **HddInfo, OUT UINT16 *BbsCount, IN OUT BBS_TABLE **BbsTable)
```

Retrieve legacy BBS info and assign boot priority.

Parameters

in	<i>This</i>	The protocol instance pointer.
out	<i>HddCount</i>	The number of HDD_INFO structures.
out	<i>HddInfo</i>	Onboard IDE controller information.
out	<i>BbsCount</i>	The number of BBS_TABLE structures.
in, out	<i>BbsTable</i>	Points to List of BBS_TABLE .

Return values

<i>EFI_SUCCESS</i>	Tables were returned.
--------------------	-----------------------

Definition at line 1331 of file LegacyBios.h.

14.19.3.7 EFI_LEGACY_BIOS_GET_LEGACY_REGION

```
typedef EFI_STATUS( * EFI_LEGACY_BIOS_GET_LEGACY_REGION) (IN EFI\_LEGACY\_BIOS\_PROTOCOL *This, IN
UINTN LegacyMemorySize, IN UINTN Region, IN UINTN Alignment, OUT VOID **LegacyMemoryAddress)
```

Get a region from the LegacyBios for S3 usage.

Parameters

in	<i>This</i>	The protocol instance pointer.
in	<i>LegacyMemorySize</i>	The size of required region.
in	<i>Region</i>	The region to use. 00 = Either 0xE0000 or 0xF0000 block. <ul style="list-style-type: none"> • Bit0 = 1 0xF0000 block. • Bit1 = 1 0xE0000 block.
in	<i>Alignment</i>	Address alignment. Bit mapped. The first non-zero bit from right is alignment.
out	<i>LegacyMemoryAddress</i>	The Region Assigned

Return values

<i>EFI_SUCCESS</i>	The Region was assigned.
<i>EFI_ACCESS_DENIED</i>	The function was previously invoked.
<i>Other</i>	The Region was not assigned.

Definition at line 1421 of file LegacyBios.h.

14.19.3.8 EFI_LEGACY_BIOS_INSTALL_ROM

```
typedef EFI_STATUS( * EFI_LEGACY_BIOS_INSTALL_ROM) (IN EFI\_LEGACY\_BIOS\_PROTOCOL *This, IN EFI\_HANDLE PciHandle, IN VOID **RomImage, OUT UINTN *Flags, OUT UINT8 *DiskStart, OPTIONAL OUT
UINT8 *DiskEnd, OPTIONAL OUT VOID **RomShadowAddress, OPTIONAL OUT UINT32 *ShadowedRomSize OPTIONAL)
```

Load a legacy PC-AT OPROM on the PciHandle device.

Return information about how many disks were added by the OPROM and the shadow address and size. DiskStart & DiskEnd are INT 13h drive letters. Thus 0x80 is C:

Parameters

in	<i>This</i>	The protocol instance pointer.
in	<i>PciHandle</i>	The PCI PC-AT OPROM from this devices ROM BAR will be loaded. This value is NULL if RomImage is non-NULL. This is the normal case.
in	<i>RomImage</i>	A PCI PC-AT ROM image. This argument is non-NULL if there is no hardware associated with the ROM and thus no PciHandle, otherwise it must be NULL. Example is PXE base code.
out	<i>Flags</i>	The type of ROM discovered. Multiple bits can be set, as follows: <ul style="list-style-type: none"> • 00 = No ROM. • 01 = ROM found. • 02 = ROM is a valid legacy ROM.
out	<i>DiskStart</i>	The disk number of first device hooked by the ROM. If DiskStart is the same as DiskEnd no disks were hooked.
out	<i>DiskEnd</i>	disk number of the last device hooked by the ROM.
out	<i>RomShadowAddress</i>	Shadow address of PC-AT ROM.
out	<i>RomShadowSize</i>	Size of RomShadowAddress in bytes.

Return values

<i>EFI_SUCCESS</i>	Thunk completed, see Regs for status.
<i>EFI_INVALID_PARAMETER</i>	PciHandle not found

Definition at line 1243 of file LegacyBios.h.

14.19.3.9 EFI_LEGACY_BIOS_INT86

```
typedef BOOLEAN( * EFI_LEGACY_BIOS_INT86) (IN EFI_LEGACY_BIOS_PROTOCOL *This, IN UINT8 BiosInt,
IN OUT EFI_IA32_REGISTER_SET *Regs)
```

Thunk to 16-bit real mode and execute a software interrupt with a vector of BiosInt.

Regs will contain the 16-bit register context on entry and exit.

Parameters

in	<i>This</i>	The protocol instance pointer.
in	<i>BiosInt</i>	The processor interrupt vector to invoke.
in, out	<i>Reg</i>	Register context passed into (and returned) from thunk to 16-bit mode.

Return values

<i>TRUE</i>	Thunk completed with no BIOS errors in the target code. See Regs for status.
<i>FALSE</i>	There was a BIOS error in the target code.

Definition at line 1155 of file LegacyBios.h.

14.19.3.10 EFI_LEGACY_BIOS_PREPARE_TO_BOOT_EFI

```
typedef EFI_STATUS( * EFI_LEGACY_BIOS_PREPARE_TO_BOOT_EFI) (IN EFI_LEGACY_BIOS_PROTOCOL *This,
OUT UINT16 *BbsCount, OUT BBS_TABLE **BbsTable)
```

Assign drive number to legacy HDD drives prior to booting an EFI aware OS so the OS can access drives without an EFI driver.

Parameters

in	<i>This</i>	The protocol instance pointer.
out	<i>BbsCount</i>	The number of BBS_TABLE structures
out	<i>BbsTable</i>	List of BBS entries

Return values

<i>EFI_SUCCESS</i>	Drive numbers assigned.
--------------------	-------------------------

Definition at line 1352 of file LegacyBios.h.

14.19.3.11 EFI_LEGACY_BIOS_SHADOW_ALL_LEGACY_OPROMS

```
typedef EFI_STATUS( * EFI_LEGACY_BIOS_SHADOW_ALL_LEGACY_OPROMS) (IN EFI_LEGACY_BIOS_PROTOCOL
*This)
```

Shadow all legacy16 OPROMs that haven't been shadowed.

Warning: Use this with caution. This routine disconnects all EFI drivers. If used externally, then the caller must re-connect EFI drivers.

Parameters

in	<i>This</i>	The protocol instance pointer.
----	-------------	--------------------------------

Return values

<i>EFI_SUCCESS</i>	OPROMs were shadowed.
--------------------	-----------------------

Definition at line 1397 of file LegacyBios.h.

14.19.3.12 EFI_LEGACY_BIOS_UPDATE_KEYBOARD_LED_STATUS

```
typedef EFI_STATUS( * EFI_LEGACY_BIOS_UPDATE_KEYBOARD_LED_STATUS) (IN EFI_LEGACY_BIOS_PROTOCOL
*This, IN UINT8 Leds)
```

This function takes the Leds input parameter and sets/resets the BDA accordingly.

Leds is also passed to Compatibility16 code, in case any special processing is required. This function is normally called from EFI Setup drivers that handle user-selectable keyboard options such as boot with NUM LOCK on/off. This function does not touch the keyboard or keyboard LEDs but only the BDA.

Parameters

in	<i>This</i>	The protocol instance pointer.
in	<i>Leds</i>	The status of current Scroll, Num & Cap lock LEDS: <ul style="list-style-type: none"> • Bit 0 is Scroll Lock 0 = Not locked. • Bit 1 is Num Lock. • Bit 2 is Caps Lock.

Return values

<code>EFI_SUCCESS</code>	The BDA was updated successfully.
--------------------------	-----------------------------------

Definition at line 1312 of file LegacyBios.h.

14.19.4 Enumeration Type Documentation

14.19.4.1 EFI_COMPATIBILITY_FUNCTIONS

enum `EFI_COMPATIBILITY_FUNCTIONS`

Functions provided by the CSM binary which communicate between the EfiCompatibility and Compatibility16 code.

Inconsistent with the specification here: The member's name started with "Compatibility16" [defined in Intel Framework Compatibility Support Module Specification / 0.97 version] has been changed to "Legacy16" since keeping backward compatible.

Enumerator

Legacy16InitializeYourself	Causes the Compatibility16 code to do any internal initialization required. Input: AX = Compatibility16InitializeYourself ES:BX = Pointer to EFI_TO_COMPATIBILITY16_INIT_TABLE Return: AX = Return Status codes
Legacy16UpdateBbs	Causes the Compatibility16 BIOS to perform any drive number translations to match the boot sequence. Input: AX = Compatibility16UpdateBbs ES:BX = Pointer to EFI_TO_COMPATIBILITY16_BOOT_TABLE Return: AX = Returned status codes
Legacy16PrepareToBoot	Allows the Compatibility16 code to perform any final actions before booting. The Compatibility16 code is read/write. Input: AX = Compatibility16PrepareToBoot ES:BX = Pointer to EFI_TO_COMPATIBILITY16_BOOT_TABLE structure Return: AX = Returned status codes
Legacy16Boot	Causes the Compatibility16 BIOS to boot. The Compatibility16 code is Read/Only. Input: AX = Compatibility16Boot Output: AX = Returned status codes
Legacy16RetrieveLastBootDevice	Allows the Compatibility16 code to get the last device from which a boot was attempted. This is stored in CMOS and is the priority number of the last attempted boot device. Input: AX = Compatibility16RetrieveLastBootDevice Output: AX = Returned status codes BX = Priority number of the boot device.

Enumerator

Legacy16DispatchOprom	Allows the Compatibility16 code rehook INT13, INT18, and/or INT19 after dispatching a legacy OpROM. Input: AX = Compatibility16DispatchOprom ES:BX = Pointer to EFI_DISPATCH_OPRON_TABLE Output: AX = Returned status codes BX = Number of non-BBS-compliant devices found. Equals 0 if BBS compliant.
Legacy16GetTableAddress	Finds a free area in the 0xFxxxx or 0xExxxx region of the specified length and returns the address of that region. Input: AX = Compatibility16GetTableAddress BX = Allocation region 00 = Allocate from either 0xE0000 or 0xF0000 64 KB blocks. Bit 0 = 1 Allocate from 0xF0000 64 KB block Bit 1 = 1 Allocate from 0xE0000 64 KB block CX = Requested length in bytes. DX = Required address alignment. Bit mapped. First non-zero bit from the right is the alignment. Output: AX = Returned status codes DS:BX = Address of the region
Legacy16SetKeyboardLeds	Enables the EfiCompatibility module to do any nonstandard processing of keyboard LEDs or state. Input: AX = Compatibility16SetKeyboardLeds CL = LED status. Bit 0 Scroll Lock 0 = Off Bit 1 NumLock Bit 2 Caps Lock Output: AX = Returned status codes
Legacy16InstallPciHandler	Enables the EfiCompatibility module to install an interrupt handler for PCI mass media devices that do not have an OpROM associated with them. An example is SATA. Input: AX = Compatibility16InstallPciHandler ES:BX = Pointer to EFI_LEGACY_INSTALL_PCI_HANDLER structure Output: AX = Returned status codes

Definition at line 267 of file LegacyBios.h.

14.20 LegacyInterrupt.h File Reference

This protocol abstracts the PIRQ programming from the generic EFI Compatibility Support Modules (CSMs).

Typedefs

- typedef EFI_STATUS(* [EFI_LEGACY_INTERRUPT_GET_NUMBER_PIRQS](#)) (IN EFI_LEGACY_INTERRUPT_PROTOCOL *This, OUT UINT8 *NumberPirqs)
Get the number of PIRQs this hardware supports.
- typedef EFI_STATUS(* [EFI_LEGACY_INTERRUPT_GET_LOCATION](#)) (IN EFI_LEGACY_INTERRUPT_PROTOCOL *This, OUT UINT8 *Bus, OUT UINT8 *Device, OUT UINT8 *Function)
Gets the PCI location associated with this protocol.
- typedef EFI_STATUS(* [EFI_LEGACY_INTERRUPT_READ_PIRQ](#)) (IN EFI_LEGACY_INTERRUPT_PROTOCOL *This, IN UINT8 PirqNumber, OUT UINT8 *PirqData)
Read the PIRQ register and return the data.
- typedef EFI_STATUS(* [EFI_LEGACY_INTERRUPT_WRITE_PIRQ](#)) (IN EFI_LEGACY_INTERRUPT_PROTOCOL *This, IN UINT8 PirqNumber, IN UINT8 PirqData)
Write the specified PIRQ register with the given data.

14.20.1 Detailed Description

This protocol abstracts the PIRQ programming from the generic EFI Compatibility Support Modules (CSMs).

Copyright (c) 2007 - 2017, Intel Corporation. All rights reserved.

This program and the accompanying materials are licensed and made available under the terms and conditions

of the BSD License that accompanies this distribution. The full text of the license may be found at <http://opensource.org/licenses/bsd-license.php>.

THE PROGRAM IS DISTRIBUTED UNDER THE BSD LICENSE ON AN "AS IS" BASIS, WITHOUT WARRANTIES OR REPRESENTATIONS OF ANY KIND, EITHER EXPRESS OR IMPLIED.

Revision Reference:

This protocol is defined in Framework for the EFI Compatibility Support Module specification. Version 0.97.

14.20.2 Typedef Documentation

14.20.2.1 EFI_LEGACY_INTERRUPT_GET_LOCATION

```
typedef EFI_STATUS( * EFI_LEGACY_INTERRUPT_GET_LOCATION) (IN EFI_LEGACY_INTERRUPT_PROTOCOL
*This, OUT UINT8 *Bus, OUT UINT8 *Device, OUT UINT8 *Function)
```

Gets the PCI location associated with this protocol.

Parameters

<i>This</i>	The Protocol instance pointer.
<i>Bus</i>	The PCI Bus.
<i>Device</i>	The PCI Device.
<i>Function</i>	The PCI Function.

Return values

<i>EFI_SUCCESS</i>	The Bus, Device, and Function were returned successfully.
--------------------	---

Definition at line 59 of file LegacyInterrupt.h.

14.20.2.2 EFI_LEGACY_INTERRUPT_GET_NUMBER_PIRQS

```
typedef EFI_STATUS( * EFI_LEGACY_INTERRUPT_GET_NUMBER_PIRQS) (IN EFI_LEGACY_INTERRUPT_PROTOCOL
*This, OUT UINT8 *NumberPirqs)
```

Get the number of PIRQs this hardware supports.

Parameters

<i>This</i>	The protocol instance pointer.
<i>NumberPirqs</i>	The number of PIRQs that are supported.

Return values

<i>EFI_SUCCESS</i>	The number of PIRQs was returned successfully.
--------------------	--

Definition at line 41 of file LegacyInterrupt.h.

14.20.2.3 EFI_LEGACY_INTERRUPT_READ_PIRQ

```
typedef EFI_STATUS( * EFI_LEGACY_INTERRUPT_READ_PIRQ) (IN EFI_LEGACY_INTERRUPT_PROTOCOL *This,
IN UINT8 PirqNumber, OUT UINT8 *PirqData)
```

Read the PIRQ register and return the data.

Parameters

<i>This</i>	The protocol instance pointer.
<i>PirqNumber</i>	The PIRQ register to read.
<i>PirqData</i>	The data read.

Return values

<i>EFI_SUCCESS</i>	The data was read.
<i>EFI_INVALID_PARAMETER</i>	Invalid PIRQ number.
<i>EFI_DEVICE_ERROR</i>	Operation was unsuccessful

Definition at line 79 of file LegacyInterrupt.h.

14.20.2.4 EFI_LEGACY_INTERRUPT_WRITE_PIRQ

```
typedef EFI_STATUS( * EFI_LEGACY_INTERRUPT_WRITE_PIRQ) (IN EFI_LEGACY_INTERRUPT_PROTOCOL *This,
IN UINT8 PirqNumber, IN UINT8 PirqData)
```

Write the specified PIRQ register with the given data.

Parameters

<i>This</i>	The protocol instance pointer.
<i>PirqNumber</i>	A PIRQ register to read.
<i>PirqData</i>	The data to write.

Return values

<i>EFI_SUCCESS</i>	The PIRQ was programmed.
<i>EFI_INVALID_PARAMETER</i>	Invalid PIRQ number.
<i>EFI_DEVICE_ERROR</i>	Operation was unsuccessful

Definition at line 98 of file LegacyInterrupt.h.

14.21 MemoryTypeInfoInformation.h File Reference

This file defines: Memory Type Information GUID for HOB and Variable.

14.21.1 Detailed Description

This file defines: Memory Type Information GUID for HOB and Variable.

Memory Type Information Variable Name. Memory Type Information GUID HOB data structure.

The memory type information HOB and variable can be used to store the information for each memory type in Variable or HOB.

Copyright (c) 2006 - 2010, Intel Corporation. All rights reserved.

This program and the accompanying materials are licensed and made available under the terms and conditions of the BSD License that accompanies this distribution. The full text of the license may be found at <http://opensource.org/licenses/bsd-license.php>.

THE PROGRAM IS DISTRIBUTED UNDER THE BSD LICENSE ON AN "AS IS" BASIS, WITHOUT WARRANTIES OR REPRESENTATIONS OF ANY KIND, EITHER EXPRESS OR IMPLIED.

14.22 MmPciLib.h File Reference

Get Pci Express address library implementation.

Functions

- UINTN [MmPciBase](#) (IN UINT32 Bus, IN UINT32 Device, IN UINT32 Function)
This procedure will get PCIE address.

14.22.1 Detailed Description

Get Pci Express address library implementation.

Copyright

INTEL CONFIDENTIAL Copyright 2013 - 2018 Intel Corporation.

The source code contained or described herein and all documents related to the source code ("Material") are owned by Intel Corporation or its suppliers or licensors. Title to the Material remains with Intel Corporation or its suppliers and licensors. The Material may contain trade secrets and proprietary and confidential information of Intel Corporation and its suppliers and licensors, and is protected by worldwide copyright and trade secret laws and treaty provisions. No part of the Material may be used, copied, reproduced, modified, published, uploaded, posted, transmitted, distributed, or disclosed in any way without Intel's prior express written permission.

No license under any patent, copyright, trade secret or other intellectual property right is granted to or conferred upon you by disclosure or delivery of the Materials, either expressly, by implication, inducement, estoppel or otherwise. Any license under such intellectual property rights must be express and approved by Intel in writing.

Unless otherwise agreed by Intel in writing, you may not remove or alter this notice or any other notice embedded in Materials by Intel or Intel's suppliers or licensors in any way.

This file contains an 'Intel Peripheral Driver' and is uniquely identified as "Intel Reference Module" and is licensed for Intel CPUs and chipsets under the terms of your license agreement with Intel or your vendor. This file may be modified by the user, subject to additional terms of the license agreement.

Specification Reference:

14.22.2 Function Documentation

14.22.2.1 MmPciBase()

```
UINTN MmPciBase (
    IN UINT32 Bus,
    IN UINT32 Device,
    IN UINT32 Function )
```

This procedure will get PCIE address.

Parameters

in	<i>Bus</i>	Pci Bus Number
in	<i>Device</i>	Pci Device Number
in	<i>Function</i>	Pci Function Number

Return values


$P \leftrightarrow$ <i>CIE</i>	address
-----------------------------------	---------

14.23 PciInitLib.h File Reference

PCIe Initialization Library header file.

```
#include <Uefi/UefiBaseType.h>
#include <Library/DebugLib.h>
#include <Library/BaseLib.h>
#include <Library/BaseMemoryLib.h>
#include <Library/PostCodeLib.h>
#include <Library/HobLib.h>
#include <Library/IoLib.h>
#include <Library/TimerLib.h>
#include <Library/PeiServicesLib.h>
#include <IndustryStandard/Pci30.h>
#include <Library/PciSegmentLib.h>
#include <Library/GpioLib.h>
#include <SaRegs.h>
```

Include dependency graph for PciInitLib.h:

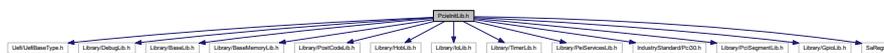

Classes

- struct [PCIE_PORT_SWEQ_DATA](#)
PCIe Root Port description data structure, used as the interface between low level and high level.
- struct [PCIE_PORT_EQS](#)
Data structure for passing static equalization data for programming.
- struct [PCIE_SWEQ_GPIO_CONFIG](#)
Input Configuration Parameters for Software Equalization Support.
- struct [PCIE_SWEQ_PRESET_SCORE](#)
Data Output from Software Equalization.

Typedefs

- typedef VOID(* [PCIE_DETECT_ENDPOINT_PRESENCE](#)) (IN PCIE_SI_LOW_LEVEL_FUNCTION_CALLS *This, IN PCIE_PORT_INFO *PciePorts, IN UINT8 PciePortsLength)
PCIe Initialization Library Generic Low Level Function Calls All of these functions can be implemented using only PCIe specification level details.
- typedef UINT8(* [PCIE_GET_PCIE_CAP_OFFSET](#)) (IN PCIE_SI_LOW_LEVEL_FUNCTION_CALLS *This, IN PCIE_PORT_INFO *PciePort)
Gets the PCIe Capability Structure Pointer.
- typedef BOOLEAN(* [PCIE_DATA_LINK_LAYER_LINK_ACTIVE](#)) (IN PCIE_SI_LOW_LEVEL_FUNCTION_CALLS *This, IN PCIE_PORT_INFO *PciePort)
Checks if the Data Link Layer is in DL_Active state on the given root port.
- typedef BOOLEAN(* [PCIE_GET_SLOT_PRESENCE_DETECT](#)) (IN PCIE_SI_LOW_LEVEL_FUNCTION_CALLS *This, IN PCIE_PORT_INFO *PciePort)
Returns the current value of the PCIe Slot Status Presence Detect bit.
- typedef VOID(* [PCIE_SET_LINK_DISABLE](#)) (IN PCIE_SI_LOW_LEVEL_FUNCTION_CALLS *This, IN PCIE_PORT_INFO *PciePort, IN BOOLEAN LinkDisable)
Set the Link Disable bit in the PCIe Link Control Register.
- typedef VOID(* [PCIE_RETRAIN_LINK](#)) (IN PCIE_SI_LOW_LEVEL_FUNCTION_CALLS *This, IN PCIE_PORT_INFO *PciePort)
Retrain the PCIe link.
- typedef UINT8(* [PCIE_GET_NEGOTIATED_WIDTH](#)) (IN PCIE_SI_LOW_LEVEL_FUNCTION_CALLS *This, IN PCIE_PORT_INFO *PciePort)
Get Negotiated Link Width.
- typedef UINT8(* [PCIE_GET_CURRENT_LINK_SPEED](#)) (IN PCIE_SI_LOW_LEVEL_FUNCTION_CALLS *This, IN PCIE_PORT_INFO *PciePort)
Get Current Link Speed.
- typedef BOOLEAN(* [PCIE_EXISTS](#)) (IN PCIE_SI_LOW_LEVEL_FUNCTION_CALLS *This)
PCIe Initialization Library Silicon Specific Low Level Function Calls Enables Abstraction of Silicon details keeping this library generic.
- typedef VOID(* [PCIE_GET_ROOT_PORTS](#)) (IN PCIE_SI_LOW_LEVEL_FUNCTION_CALLS *This, OUT PCIE_PORT_INFO *PciePorts, OUT UINT8 *PciePortsLength)
This function determines the topology of the PCIe bus interface that is being initialized using silicon defined mechanisms.
- typedef VOID(* [PCIE_PROGRAM_STATIC_GEN3_EQ](#)) (IN PCIE_SI_LOW_LEVEL_FUNCTION_CALLS *This, IN PCIE_PORT_EQS *PciePortEqs, IN UINT8 PciePortEqsLength)
Programs static equalization settings for the given list of PCIe root ports.
- typedef EFI_STATUS(* [PCIE_SET_GEN3_PHASE2_BYPASS](#)) (IN PCIE_SI_LOW_LEVEL_FUNCTION_CALLS *This, IN PCIE_PORT_INFO *PciePorts, IN UINT8 PciePortsLength, IN BOOLEAN BypassPhase2)
Sets Gen3 Equalization Phase 2 Bypass for all given Root Ports.
- typedef VOID(* [PCIE_REPORT_LINK_STATUS](#)) (IN PCIE_SI_LOW_LEVEL_FUNCTION_CALLS *This, IN PCIE_PORT_INFO *PciePort)
This function reports a PCIe controller's link status.
- typedef EFI_STATUS(* [PCIE_WAIT_FOR_L0](#)) (IN PCIE_SI_LOW_LEVEL_FUNCTION_CALLS *This, IN PCIE_PORT_INFO *PciePort)
PCIe Link Recovery Functions.
- typedef UINT8(* [PCIE_GET_TARGET_LINK_SPEED](#)) (IN PCIE_SI_LOW_LEVEL_FUNCTION_CALLS *This, IN PCIE_PORT_INFO *PciePort)
Get Target Link Speed.
- typedef VOID(* [PCIE_SET_TARGET_LINK_SPEED](#)) (IN PCIE_SI_LOW_LEVEL_FUNCTION_CALLS *This, IN PCIE_PORT_INFO *PciePort, IN UINT8 TargetLinkSpeed)
Set Target Link Speed.
- typedef EFI_STATUS(* [PCIE_RESET_ENDPOINT_PERST](#)) (IN PCIE_SI_LOW_LEVEL_FUNCTION_CALLS *This, IN PCIE_PORT_INFO *PciePort, IN PCIE_SWEQ_INPUT_PARAMETERS *InputParameters)

Resets the endpoint connected to the given root port by directly pulsing the PERST# signal.

- typedef EFI_STATUS(* [PCIE_SET_PERST](#)) (IN PCIE_SI_LOW_LEVEL_FUNCTION_CALLS *This, IN PCIE_PORT_INFO *PciePort, IN PCIE_SWEQ_INPUT_PARAMETERS *InputParameters, IN BOOLEAN AssertPerst)

This function asserts/deasserts a GPIO that controls PERST#.

- typedef EFI_STATUS(* [PCIE_RECOVER_LINK_WIDTH](#)) (IN PCIE_SI_LOW_LEVEL_FUNCTION_CALLS *This, IN PCIE_PORT_INFO *PciePort, IN UINT8 OriginalLinkWidth)

Recovers a link width downgrade back to the original width.

- typedef EFI_STATUS(* [PCIE_SET_PCH_GPIO](#)) (IN PCIE_SI_LOW_LEVEL_FUNCTION_CALLS *This, IN GPIO_PAD GpioPad, IN UINT8 Level)

This function sets a GPIO to a particular level.

- typedef EFI_STATUS(* [PCIE_ENSURE_LINK_IS_HEALTHY](#)) (IN PCIE_SI_LOW_LEVEL_FUNCTION_CALLS *This, IN PCIE_SWEQ_INPUT_PARAMETERS *InputParameters, IN PCIE_PORT_INFO *PciePort, IN UINT8 OriginalLinkSpeed, IN UINT8 OriginalLinkWidth, OUT BOOLEAN *DeferredPlatformResetRequired)

Check the status of the given PCIe link, detect and correct and downgrades.

- typedef UINT32(* [PCIE_OPEN_MONITOR](#)) (IN PCIE_SI_LOW_LEVEL_FUNCTION_CALLS *This)

PCIe Error Counting Functions.

- typedef VOID(* [PCIE_CLOSE_MONITOR](#)) (IN PCIE_SI_LOW_LEVEL_FUNCTION_CALLS *This, IN UINT32 MonitorPort)

Close port for monitor.

- typedef UINT32(* [PCIE_GET_ERROR_COUNT](#)) (IN PCIE_SI_LOW_LEVEL_FUNCTION_CALLS *This, IN UINT32 MonitorPort, IN PCIE_PORT_INFO *PciePort)

Get Current Error Count.

- typedef VOID(* [PCIE_CLEAR_ERROR_COUNT](#)) (IN PCIE_SI_LOW_LEVEL_FUNCTION_CALLS *This, IN UINT32 MonitorPort)

Clear Current Error Count for all Root Ports.

- typedef EFI_STATUS(* [PCIE_POLLING_COMPLIANCE_MODE](#)) (IN PCIE_SI_LOW_LEVEL_FUNCTION_CALLS *This, IN PCIE_PORT_INFO *PciePorts, IN UINT8 PciePortsLength, IN BOOLEAN Enable)

Enable or Disable Polling Compliance Mode.

- typedef VOID(* [PCIE_PROGRAM_PORT_PHASE3_TXEQ](#)) (IN PCIE_SI_LOW_LEVEL_FUNCTION_CALLS *This, IN PCIE_PORT_INFO *PciePort, IN UINT8 *Presets)

Program TxEQs on the endpoint attached to the given root port.

- typedef VOID(* [PCIE_PROGRAM_UNIFORM_PORT_PHASE3_TXEQ](#)) (IN PCIE_SI_LOW_LEVEL_FUNCTION_CALLS *This, IN PCIE_PORT_INFO *PciePort, IN UINT8 Preset)

Program the same TxEQ to all lanes on the endpoint attached to the given root port.

- typedef EFI_STATUS(* [PCIE_RUN_MARGIN_TEST](#)) (IN PCIE_SI_LOW_LEVEL_FUNCTION_CALLS *This, IN PCIE_PORT_INFO *PciePorts, IN UINT8 PciePortsLength, IN PCIE_SWEQ_INPUT_PARAMETERS *InputParameters, IN UINT32 MonitorPort, IN MARGIN_TEST_TYPE MarginTest, OUT PCIE_SWEQ_PORT_OUTPUT *MarginData, OUT BOOLEAN *DeferredPlatformResetRequired)

Runs a Margin Test on the specified root ports.

Functions

- VOID [PcieGen3SoftwareEqualization](#) (IN PCIE_SI_LOW_LEVEL_FUNCTION_CALLS *PcieAccess, IN PCIE_PORT_INFO *PciePorts, IN UINT8 PciePortsLength, IN PCIE_SWEQ_INPUT_PARAMETERS *InputParameters, OUT PCIE_SWEQ_OUTPUT *OutputData)

PCIe Initialization Library Generic High Level Function Calls.

- VOID [WaitForDataLinkLayerLinkActiveOnAllPorts](#) (IN PCIE_SI_LOW_LEVEL_FUNCTION_CALLS *PcieAccess, IN PCIE_PORT_INFO *PciePorts, IN UINT8 PciePortsLength, IN BOOLEAN ForceCheck, IN OUT UINT32 *FailMask)

Waits for the Data Link Layer on all given root ports to reach the DL_Active state.

- VOID [WaitForDataLinkLayerLinkActive](#) (IN PCIE_SI_LOW_LEVEL_FUNCTION_CALLS *PcieAccess, IN PCIE_PORT_INFO *PciePort)

This function prints the time required for DL_Active to be set.
- VOID [GetCoefficientsFromPreset](#) (IN UINT8 Preset, IN UINT8 FullSwing, OUT UINT8 *PreCursor, OUT U←INT8 *Cursor, OUT UINT8 *PostCursor)

Computes the Pre-Cursor, Cursor, and Post-Cursor from a preset.
- BOOLEAN [LinkIsDowngraded](#) (IN PCIE_SI_LOW_LEVEL_FUNCTION_CALLS *PcieAccess, IN PCIE_P←ORT_INFO *PciePort, IN UINT8 OriginalLinkSpeed, IN UINT8 OriginalLinkWidth)

Checks for link speed and width downgrades.
- UINT32 [PcieLibFindCapId](#) (IN UINT8 Segment, IN UINT8 Bus, IN UINT8 Device, IN UINT8 Function, IN UINT8 CapId)

Find the Offset to a given Capabilities ID CAPID list:
- EFI_STATUS [GetGenericPcieLowLevelFunctionCalls](#) (OUT PCIE_SI_LOW_LEVEL_FUNCTION_CALLS *PcieLowLevelFunctionCalls)

This function gets the table of generic low level function calls for the PCIe interface.

14.23.1 Detailed Description

PCIe Initialization Library header file.

Copyright

INTEL CONFIDENTIAL Copyright 2014 - 2017 Intel Corporation.

The source code contained or described herein and all documents related to the source code ("Material") are owned by Intel Corporation or its suppliers or licensors. Title to the Material remains with Intel Corporation or its suppliers and licensors. The Material may contain trade secrets and proprietary and confidential information of Intel Corporation and its suppliers and licensors, and is protected by worldwide copyright and trade secret laws and treaty provisions. No part of the Material may be used, copied, reproduced, modified, published, uploaded, posted, transmitted, distributed, or disclosed in any way without Intel's prior express written permission.

No license under any patent, copyright, trade secret or other intellectual property right is granted to or conferred upon you by disclosure or delivery of the Materials, either expressly, by implication, inducement, estoppel or otherwise. Any license under such intellectual property rights must be express and approved by Intel in writing.

Unless otherwise agreed by Intel in writing, you may not remove or alter this notice or any other notice embedded in Materials by Intel or Intel's suppliers or licensors in any way.

This file contains an 'Intel Peripheral Driver' and is uniquely identified as "Intel Reference Module" and is licensed for Intel CPUs and chipsets under the terms of your license agreement with Intel or your vendor. This file may be modified by the user, subject to additional terms of the license agreement.

Specification

14.23.2 Typedef Documentation

14.23.2.1 PCIE_CLEAR_ERROR_COUNT

```
typedef VOID( * PCIE_CLEAR_ERROR_COUNT) (IN PCIE_SI_LOW_LEVEL_FUNCTION_CALLS *This, IN UINT32 MonitorPort)
```

Clear Current Error Count for all Root Ports.

Parameters

in	<i>This</i>	- Low level function table
in	<i>MonitorPort</i>	- Monitor Port

Definition at line 705 of file PcieInitLib.h.

14.23.2.2 PCIE_CLOSE_MONITOR

```
typedef VOID( * PCIE_CLOSE_MONITOR) (IN PCIE_SI_LOW_LEVEL_FUNCTION_CALLS *This, IN UINT32
MonitorPort)
```

Close port for monitor.

Parameters

in	<i>This</i>	- Low level function table
in	<i>MonitorPort</i>	- Monitor Port

Definition at line 677 of file PcieInitLib.h.

14.23.2.3 PCIE_DATA_LINK_LAYER_LINK_ACTIVE

```
typedef BOOLEAN( * PCIE_DATA_LINK_LAYER_LINK_ACTIVE) (IN PCIE_SI_LOW_LEVEL_FUNCTION_CALLS
*This, IN PCIE_PORT_INFO *PciePort)
```

Checks if the Data Link Layer is in DL_Active state on the given root port.

Parameters

in	<i>This</i>	- Low level function table
in	<i>PciePort</i>	- Root Port to check for DL_Active

Return values

<i>TRUE</i>	- Data Link Layer is in DL_Active state
<i>FALSE</i>	- Data Link Layer is NOT in DL_Active state

Definition at line 327 of file PcieInitLib.h.

14.23.2.4 PCIE_DETECT_ENDPOINT_PRESENCE

```
typedef VOID( * PCIE_DETECT_ENDPOINT_PRESENCE) (IN PCIE_SI_LOW_LEVEL_FUNCTION_CALLS *This, IN
PCIE_PORT_INFO *PciePorts, IN UINT8 PciePortsLength)
```

PCIe Initialization Library Generic Low Level Function Calls All of these functions can be implemented using only PCIe specification level details.

However, it is possible to override the default implementation provided by this library with a Silicon Specific one if needed This function detects if an endpoint is attached to each given root port and if so, reads data from the

endpoint and fills in the remaining fields of the PCIE_PORT_INFO structure that could not be filled before initial link training

Parameters

in	<i>This</i>	- Low level function table
out	<i>PciePorts</i>	- Array of PCIe Root Ports
out	<i>PciePortsLength</i>	- Length of the PciePorts array

Definition at line 295 of file PciInitLib.h.

14.23.2.5 PCIE_ENSURE_LINK_IS_HEALTHY

```
typedef EFI_STATUS( * PCIE_ENSURE_LINK_IS_HEALTHY) (IN PCIE_SI_LOW_LEVEL_FUNCTION_CALLS *This,
IN PCIE_SWEQ_INPUT_PARAMETERS *InputParameters, IN PCIE_PORT_INFO *PciePort, IN UINT8 OriginalLinkSpeed, IN UINT8 OriginalLinkWidth, OUT BOOLEAN *DeferredPlatformResetRequired)
```

Check the status of the given PCIe link, detect and correct and downgrades.

Parameters

in	<i>This</i>	- Low level function table
in	<i>InputParameters</i>	- SW EQ Input Parameters
in	<i>PciePort</i>	- PCIe Root Port
in	<i>OriginalLinkSpeed</i>	- Expected speed of the PCIe link
in	<i>OriginalLinkWidth</i>	- Expected width of the PCIe link
out	<i>DeferredPlatformResetRequired</i>	- A platform reset is needed after saving Eq data to NVRAM

Return values

<i>EFI_SUCCESS</i>	- Link is running at the correct speed/width
<i>EFI_UNSUPPORTED</i>	- Unable to correct failure due to lack of GPIO PERST# support
<i>EFI_INVALID_PARAMETER</i>	- Unable to correct failure because the GPIO pin number is invalid
<i>EFI_DEVICE_ERROR</i>	- Unable to correct link downgrade
<i>EFI_TIMEOUT</i>	- Link did not successfully retrain

Definition at line 643 of file PciInitLib.h.

14.23.2.6 PCIE_EXISTS

```
typedef BOOLEAN( * PCIE_EXISTS) (IN PCIE_SI_LOW_LEVEL_FUNCTION_CALLS *This)
```

PCIe Initialization Library Silicon Specific Low Level Function Calls Enables Abstraction of Silicon details keeping this library generic.

This function determines if the silicon implements the PCIe bus interface that this instance of PCIE_SI_LOW_LEVEL_FUNCTION_CALLS is intended for.

Return values

<i>TRUE</i>	- Silicon supports the bus interface
-------------	--------------------------------------

Return values

<i>FALSE</i>	- otherwise
--------------	-------------

Definition at line 415 of file PcieInitLib.h.

14.23.2.7 PCIE_GET_CURRENT_LINK_SPEED

```
typedef UINT8( * PCIE_GET_CURRENT_LINK_SPEED) (IN PCIE_SI_LOW_LEVEL_FUNCTION_CALLS *This, IN
PCIE_PORT_INFO *PciePort)
```

Get Current Link Speed.

Parameters

in	<i>This</i>	- Low level function table
in	<i>PciePort</i>	- PCIe Root Port

Definition at line 396 of file PcieInitLib.h.

14.23.2.8 PCIE_GET_ERROR_COUNT

```
typedef UINT32( * PCIE_GET_ERROR_COUNT) (IN PCIE_SI_LOW_LEVEL_FUNCTION_CALLS *This, IN UINT32
MonitorPort, IN PCIE_PORT_INFO *PciePort)
```

Get Current Error Count.

Parameters

in	<i>This</i>	- Low level function table
in	<i>MonitorPort</i>	- Monitor Port
in	<i>PciePort</i>	- PCIe Root Port

Definition at line 691 of file PcieInitLib.h.

14.23.2.9 PCIE_GET_NEGOTIATED_WIDTH

```
typedef UINT8( * PCIE_GET_NEGOTIATED_WIDTH) (IN PCIE_SI_LOW_LEVEL_FUNCTION_CALLS *This, IN PCIE_PORT_INFO *PciePort)
```

Get Negotiated Link Width.

Parameters

in	<i>This</i>	- Low level function table
in	<i>PciePort</i>	- PCIe Root Port

Definition at line 383 of file PcieInitLib.h.

14.23.2.10 PCIE_GET_PCIE_CAP_OFFSET

```
typedef UINT8( * PCIE_GET_PCIE_CAP_OFFSET) (IN PCIE_SI_LOW_LEVEL_FUNCTION_CALLS *This, IN PCI↔
E_PORT_INFO *PciePort)
```

Gets the PCIe Capability Structure Pointer.

Parameters

in	<i>This</i>	- Low level function table
in	<i>PciePort</i>	- PCIe Root Port

Return values

<i>Offset</i>	to the PCIe Capability Structure
---------------	----------------------------------

Definition at line 311 of file PciInitLib.h.

14.23.2.11 PCIE_GET_ROOT_PORTS

```
typedef VOID( * PCIE_GET_ROOT_PORTS) (IN PCIE_SI_LOW_LEVEL_FUNCTION_CALLS *This, OUT PCIE_POR↔
T_INFO *PciePorts, OUT UINT8 *PciePortsLength)
```

This function determines the topology of the PCIe bus interface that is being initialized using silicon defined mechanisms.

The PciePorts pointer must point to a pre-allocated array which is capable of containing the maximum number of root ports that this function will return. Generally this is done by a component specific entrypoint that can allocate the array on the stack using a fixed size appropriate for the HW. If this needs to be called from generic code, the generic code must allocate a buffer that can contain 256 entries (which should be avoided.)

Parameters

in	<i>This</i>	- Low level function table
out	<i>PciePorts</i>	- Array of Detected PCIe Root Ports
out	<i>PciePortsLength</i>	- Length of the PciePorts array

Definition at line 435 of file PciInitLib.h.

14.23.2.12 PCIE_GET_SLOT_PRESENCE_DETECT

```
typedef BOOLEAN( * PCIE_GET_SLOT_PRESENCE_DETECT) (IN PCIE_SI_LOW_LEVEL_FUNCTION_CALLS *This,
IN PCIE_PORT_INFO *PciePort)
```

Returns the current value of the PCIe Slot Status Presence Detect bit.

Parameters

in	<i>This</i>	- Low level function table
in	<i>PciePort</i>	- PCIe Root Port

Return values

<i>Slot</i>	Presence Detect bit state
-------------	---------------------------

Definition at line 342 of file PciInitLib.h.

14.23.2.13 PCIE_GET_TARGET_LINK_SPEED

```
typedef UINT8( * PCIE_GET_TARGET_LINK_SPEED) (IN PCIE_SI_LOW_LEVEL_FUNCTION_CALLS *This, IN PCIE_PORT_INFO *PciePort)
```

Get Target Link Speed.

Parameters

in	<i>This</i>	- Low level function table
in	<i>PciePort</i>	- PCIe Root Port

Definition at line 521 of file PciInitLib.h.

14.23.2.14 PCIE_OPEN_MONITOR

```
typedef UINT32( * PCIE_OPEN_MONITOR) (IN PCIE_SI_LOW_LEVEL_FUNCTION_CALLS *This)
```

PCIe Error Counting Functions.

Open port for monitor

Parameters

in	<i>This</i>	- Low level function table
----	-------------	----------------------------

Return values

<i>Monitor</i>	Port
----------------	------

Definition at line 665 of file PciInitLib.h.

14.23.2.15 PCIE_POLLING_COMPLIANCE_MODE

```
typedef EFI_STATUS( * PCIE_POLLING_COMPLIANCE_MODE) (IN PCIE_SI_LOW_LEVEL_FUNCTION_CALLS *This, IN PCIE_PORT_INFO *PciePorts, IN UINT8 PciePortsLength, IN BOOLEAN Enable)
```

Enable or Disable Polling Compliance Mode.

Parameters

in	<i>This</i>	- Low level function table
in	<i>PciePorts</i>	- PCIe Root Ports
in	<i>PciePortsLength</i>	- Length of PciePorts array

Parameters

in	<i>Enable</i>	- TRUE to enable, FALSE to disable
----	---------------	------------------------------------

Definition at line 720 of file PciInitLib.h.

14.23.2.16 PCIE_PROGRAM_PORT_PHASE3_TXEQ

```
typedef VOID( * PCIE_PROGRAM_PORT_PHASE3_TXEQ) (IN PCIE_SI_LOW_LEVEL_FUNCTION_CALLS *This, IN PCIE_PORT_INFO *PciePort, IN UINT8 *Presets)
```

Program TxEQs on the endpoint attached to the given root port.

Parameters

in	<i>This</i>	- Low level function table
in	<i>PciePort</i>	- PCIe Root Port
in	<i>Presets</i>	- Array of presets to program per lane must be of sufficient length to program all lanes

Definition at line 737 of file PciInitLib.h.

14.23.2.17 PCIE_PROGRAM_STATIC_GEN3_EQ

```
typedef VOID( * PCIE_PROGRAM_STATIC_GEN3_EQ) (IN PCIE_SI_LOW_LEVEL_FUNCTION_CALLS *This, IN PCIE_PORT_EQS *PciePortEqs, IN UINT8 PciePortEqsLength)
```

Programs static equalization settings for the given list of PCIe root ports.

The PCIE_PORT_EQS structure is laid out such that the Root Port preset for PHYSICAL lane number PciePortEqs->PciePort->MaxPortLaneList[0] is PciePortEqs->RootPortPresets[0]. Note that physical lane numbers may not start at or include zero. Package pin 0 may not be mapped to a given Root Port

Parameters

in	<i>This</i>	- Low level function table
in	<i>PciePortEqs</i>	- Array of Root Ports + Eqs to program
in	<i>PciePortEqsLength</i>	- Number of Root Ports to program

Definition at line 454 of file PciInitLib.h.

14.23.2.18 PCIE_PROGRAM_UNIFORM_PORT_PHASE3_TXEQ

```
typedef VOID( * PCIE_PROGRAM_UNIFORM_PORT_PHASE3_TXEQ) (IN PCIE_SI_LOW_LEVEL_FUNCTION_CALLS *This, IN PCIE_PORT_INFO *PciePort, IN UINT8 Preset)
```

Program the same TxEQ to all lanes on the endpoint attached to the given root port.

Parameters

in	<i>This</i>	- Low level function table
in	<i>PciePort</i>	- PCIe Root Port

Parameters

in	<i>Preset</i>	- Preset to program
----	---------------	---------------------

Definition at line 752 of file PciInitLib.h.

14.23.2.19 PCIE_RECOVER_LINK_WIDTH

```
typedef EFI_STATUS( * PCIE_RECOVER_LINK_WIDTH) (IN PCIE_SI_LOW_LEVEL_FUNCTION_CALLS *This, IN
PCIE_PORT_INFO *PciePort, IN UINT8 OriginalLinkWidth)
```

Recovers a link width downgrade back to the original width.

Generally this doesn't need to be called directly since EnsureLinksHealthy() checks link width in addition to other link health checks.

Parameters

in	<i>This</i>	- Low level function table
in	<i>PciePort</i>	- PCIe Root Port
in	<i>OriginalLinkWidth</i>	- Original Link Width

Return values

<i>EFI_SUCCESS</i>	- Link is running at the correct width
<i>EFI_DEVICE_ERROR</i>	- Unable to correct link width downgrade
<i>EFI_TIMEOUT</i>	- Link did not successfully retrain

Definition at line 600 of file PciInitLib.h.

14.23.2.20 PCIE_REPORT_LINK_STATUS

```
typedef VOID( * PCIE_REPORT_LINK_STATUS) (IN PCIE_SI_LOW_LEVEL_FUNCTION_CALLS *This, IN PCIE_↔
PORT_INFO *PciePort)
```

This function reports a PCIe controller's link status.

Parameters

in	<i>This</i>	- Low level function table
in	<i>PciePort</i>	- PCIe Root Port

Definition at line 488 of file PciInitLib.h.

14.23.2.21 PCIE_RESET_ENDPOINT_PERST

```
typedef EFI_STATUS( * PCIE_RESET_ENDPOINT_PERST) (IN PCIE_SI_LOW_LEVEL_FUNCTION_CALLS *This, IN
PCIE_PORT_INFO *PciePort, IN PCIE_SWEQ_INPUT_PARAMETERS *InputParameters)
```

Resets the endpoint connected to the given root port by directly pulsing the PERST# signal.

The minimum assertion time, T_PERST (100 usec), is defined in the PCIe CEM Specification.

Parameters

in	<i>This</i>	- Low level function table
in	<i>PciePort</i>	- PCIe Root Port
in	<i>InputParameters</i>	- SW EQ Input Parameters

Return values

<i>EFI_SUCCESS</i>	- GPIO set successfully
<i>EFI_UNSUPPORTED</i>	- GPIO is not supported
<i>EFI_INVALID_PARAMETER</i>	- GPIO pin number is invalid
<i>EFI_TIMEOUT</i>	- Link did not train after pulsing PERST#

Definition at line 557 of file PciInitLib.h.

14.23.2.22 PCIE_RETRAIN_LINK

```
typedef VOID( * PCIE_RETRAIN_LINK) (IN PCIE_SI_LOW_LEVEL_FUNCTION_CALLS *This, IN PCIE_PORT_INFO *PciePort)
```

Retrain the PCIe link.

Parameters

in	<i>This</i>	- Low level function table
in	<i>PciePort</i>	- PCIe Root Port

Definition at line 370 of file PciInitLib.h.

14.23.2.23 PCIE_RUN_MARGIN_TEST

```
typedef EFI_STATUS( * PCIE_RUN_MARGIN_TEST) (IN PCIE_SI_LOW_LEVEL_FUNCTION_CALLS *This, IN PCIE_PORT_INFO *PciePorts, IN UINT8 PciePortsLength, IN PCIE_SWEQ_INPUT_PARAMETERS *InputParameters, IN UINT32 MonitorPort, IN MARGIN_TEST_TYPE MarginTest, OUT PCIE_SWEQ_PORT_OUTPUT *MarginData, OUT BOOLEAN *DeferredPlatformResetRequired)
```

Runs a Margin Test on the specified root ports.

The MarginData parameter must be an array with capacity of PciePortsLength elements or more.

Parameters

in	<i>This</i>	- Low level function table
in	<i>PciePorts</i>	- PCIe Root Ports to margin
in	<i>PciePortsLength</i>	- Length of the PciePorts array
in	<i>InputParameters</i>	- SW EQ Input Parameters
in	<i>MonitorPort</i>	- Monitor Port
in	<i>MarginTest</i>	- Type of Margin Test to Run
out	<i>MarginData</i>	- Margin Data, must be array of size >= PciePortsLength

Parameters

out	<i>DeferredPlatformResetRequired</i>	- A platform reset is needed after saving Eq data to NVRAM
-----	--------------------------------------	--

Return values

<i>EFI_SUCCESS</i>	- Margin Data Generated Successfully
--------------------	--------------------------------------

Definition at line 775 of file PciInitLib.h.

14.23.2.24 PCIE_SET_GEN3_PHASE2_BYPASS

```
typedef EFI_STATUS( * PCIE_SET_GEN3_PHASE2_BYPASS) (IN PCIE_SI_LOW_LEVEL_FUNCTION_CALLS *This,
IN PCIE_PORT_INFO *PciePorts, IN UINT8 PciePortsLength, IN BOOLEAN BypassPhase2)
```

Sets Gen3 Equalization Phase 2 Bypass for all given Root Ports.

Parameters

in	<i>This</i>	- Low level function table
in	<i>PciePorts</i>	- PCIe Root Ports to program Phase2 for
in	<i>PciePortsLength</i>	- Length of the PciePorts array
in	<i>BypassPhase2</i>	- TRUE to enable Phase2 bypass, FALSE otherwise

Return values

<i>EFI_SUCCESS</i>	- Phase 2 bypass was successful
<i>EFI_UNSUPPORTED</i>	- Hardware does not support the given Phase2 bypass request

Definition at line 473 of file PciInitLib.h.

14.23.2.25 PCIE_SET_LINK_DISABLE

```
typedef VOID( * PCIE_SET_LINK_DISABLE) (IN PCIE_SI_LOW_LEVEL_FUNCTION_CALLS *This, IN PCIE_PORT_INFO *PciePort, IN BOOLEAN LinkDisable)
```

Set the Link Disable bit in the PCIe Link Control Register.

Parameters

in	<i>This</i>	- Low level function table
in	<i>PciePort</i>	- PCIe Root Port
in	<i>LinkDisable</i>	- New value for link disable bit

Definition at line 356 of file PciInitLib.h.

14.23.2.26 PCIE_SET_PCH_GPIO

```
typedef EFI_STATUS( * PCIE_SET_PCH_GPIO) (IN PCIE_SI_LOW_LEVEL_FUNCTION_CALLS *This, IN GPIO_↔
PAD GpioPad, IN UINT8 Level)
```

This function sets a GPIO to a particular level.

Parameters

in	<i>This</i>	- Low level function table
in	<i>GpioPad</i>	- PCH GPIO Pad
in	<i>Level</i>	- 0 = Low, 1 = High

Return values

<i>EFI_SUCCESS</i>	- GPIO set successfully
<i>EFI_UNSUPPORTED</i>	- GPIO is not supported
<i>EFI_INVALID_PARAMETER</i>	- GPIO pin number is invalid

Definition at line 619 of file PciInitLib.h.

14.23.2.27 PCIE_SET_PERST

```
typedef EFI_STATUS( * PCIE_SET_PERST) (IN PCIE_SI_LOW_LEVEL_FUNCTION_CALLS *This, IN PCIE_POR↔
T_INFO *PciePort, IN PCIE_SWEQ_INPUT_PARAMETERS *InputParameters, IN BOOLEAN AssertPerst)
```

This function asserts/deasserts a GPIO that controls PERST#.

The minimum assertion time, T_PERST (100 usec), is defined in the PCIe CEM Specification.

Parameters

in	<i>This</i>	- Low level function table
in	<i>PciePort</i>	- PCIe Root Port
in	<i>InputParameters</i>	- SW EQ Input Parameters
in	<i>AssertPerst</i>	- TRUE to assert PERST#, FALSE to deassert

Return values

<i>EFI_SUCCESS</i>	- GPIO set successfully
<i>EFI_UNSUPPORTED</i>	- GPIO is not supported
<i>EFI_INVALID_PARAMETER</i>	- GPIO pin number is invalid

Definition at line 578 of file PciInitLib.h.

14.23.2.28 PCIE_SET_TARGET_LINK_SPEED

```
typedef VOID( * PCIE_SET_TARGET_LINK_SPEED) (IN PCIE_SI_LOW_LEVEL_FUNCTION_CALLS *This, IN PC↔
IE_PORT_INFO *PciePort, IN UINT8 TargetLinkSpeed)
```

Set Target Link Speed.

Parameters

in	<i>This</i>	- Low level function table
in	<i>PciePort</i>	- PCIe Root Port
in	<i>TargetLinkSpeed</i>	- Target Link Speed

Definition at line 535 of file PciInitLib.h.

14.23.2.29 PCIE_WAIT_FOR_L0

```
typedef EFI_STATUS( * PCIE_WAIT_FOR_L0) (IN PCIE_SI_LOW_LEVEL_FUNCTION_CALLS *This, IN PCIE_PORT_INFO *PciePort)
```

PCIe Link Recovery Functions.

Wait until link is up.

Parameters

in	<i>This</i>	- Low level function table
in	<i>PciePort</i>	- PCIe Root Port

Return values

<i>EFI_SUCCESS</i>	- Completed successfully before timeout
<i>EFI_TIMEOUT</i>	- Timed out

Definition at line 508 of file PciInitLib.h.

14.23.3 Function Documentation

14.23.3.1 GetCoefficientsFromPreset()

```
VOID GetCoefficientsFromPreset (
    IN UINT8 Preset,
    IN UINT8 FullSwing,
    OUT UINT8 * PreCursor,
    OUT UINT8 * Cursor,
    OUT UINT8 * PostCursor )
```

Computes the Pre-Cursor, Cursor, and Post-Cursor from a preset.

Parameters

in	<i>Preset</i>	- Preset to compute coefficients for
in	<i>FullSwing</i>	- The full swing of the transmitter
out	<i>PreCursor</i>	- Computed Pre-Cursor
out	<i>Cursor</i>	- Computed Cursor

Parameters

out	<i>PostCursor</i>	- Computed Post-Cursor
-----	-------------------	------------------------

14.23.3.2 GetGenericPcieLowLevelFunctionCalls()

```
EFI_STATUS GetGenericPcieLowLevelFunctionCalls (
    OUT PCIE_SI_LOW_LEVEL_FUNCTION_CALLS * PcieLowLevelFunctionCalls )
```

This function gets the table of generic low level function calls for the PCIe interface.

These function calls use PCIe spec defined mechanisms and can be overridden by a silicon specific implementation if needed.

Parameters

out	<i>PcieLowLevel</i>	- Table of function calls for PCIe
-----	---------------------	------------------------------------

Return values

<i>EFI_SUCCESS</i>	- Table of function calls returned successfully
--------------------	---

14.23.3.3 LinkIsDowngraded()

```
BOOLEAN LinkIsDowngraded (
    IN PCIE_SI_LOW_LEVEL_FUNCTION_CALLS * PcieAccess,
    IN PCIE_PORT_INFO * PciePort,
    IN UINT8 OriginalLinkSpeed,
    IN UINT8 OriginalLinkWidth )
```

Checks for link speed and width downgrades.

Parameters

in	<i>PcieAccess</i>	- Low level function table
in	<i>PciePort</i>	- PCIe Root Port
in	<i>OriginalLinkSpeed</i>	- Original Speed of the Link
in	<i>OriginalLinkWidth</i>	- Original Width of the Link

14.23.3.4 PcieGen3SoftwareEqualization()

```
VOID PcieGen3SoftwareEqualization (
    IN PCIE_SI_LOW_LEVEL_FUNCTION_CALLS * PcieAccess,
    IN PCIE_PORT_INFO * PciePorts,
    IN UINT8 PciePortsLength,
    IN PCIE_SWEQ_INPUT_PARAMETERS * InputParameters,
    OUT PCIE_SWEQ_OUTPUT * OutputData )
```

PCIe Initialization Library Generic High Level Function Calls.

The PCIe Software Equalization algorithm. Provides an adaptive EQ Phase 3 implementation in software.

Parameters

in	<i>PcieAccess</i>	- Low level function table
in	<i>PciePorts</i>	- PCIe Root Ports to wait for
in	<i>PciePortsLength</i>	- Length of the PciePorts array
in	<i>InputParameters</i>	- Configuration options for SW EQ
out	<i>OutputData</i>	- The data that the algorithm generated

14.23.3.5 PcieLibFindCapId()

```

UINT32 PcieLibFindCapId (
    IN UINT8 Segment,
    IN UINT8 Bus,
    IN UINT8 Device,
    IN UINT8 Function,
    IN UINT8 CapId )

```

Find the Offset to a given Capabilities ID CAPID list:

- 0x01 = PCI Power Management Interface
- 0x04 = Slot Identification
- 0x05 = MSI Capability
- 0x10 = PCI Express Capability

Parameters

in	<i>Segment</i>	- Pci Segment Number
in	<i>Bus</i>	- PCI Bus Number
in	<i>Device</i>	- PCI Device Number
in	<i>Function</i>	- PCI Function Number
in	<i>CapId</i>	- CAPID to search for

Return values

0	- CAPID not found
Other	- CAPID found, Offset of desired CAPID

14.23.3.6 WaitForDataLinkLayerLinkActive()

```

VOID WaitForDataLinkLayerLinkActive (
    IN PCIE_SI_LOW_LEVEL_FUNCTION_CALLS * PcieAccess,
    IN PCIE_PORT_INFO * PciePort )

```

This function prints the time required for DL_Active to be set.

Quits after 100 msec.

Parameters

in	<i>This</i>	- Low level function table
in	<i>PciePort</i>	- PCIe Root Port

14.23.3.7 WaitForDataLinkLayerLinkActiveOnAllPorts()

```
VOID WaitForDataLinkLayerLinkActiveOnAllPorts (
    IN PCIE_SI_LOW_LEVEL_FUNCTION_CALLS * PcieAccess,
    IN PCIE_PORT_INFO * PciePorts,
    IN UINT8 PciePortsLength,
    IN BOOLEAN ForceCheck,
    IN OUT UINT32 * FailMask )
```

Waits for the Data Link Layer on all given root ports to reach the DL_Active state.

The user passes a fail mask that indicates which root ports to check. The function will update the fail mask to indicate which root ports successfully trained.

The fail mask is a bitmap based on PciePorts array indices. The array must be of length 8 or greater since the PciePorts array can have at most 256 entries.

Parameters

in	<i>PcieAccess</i>	- Low level function table
in	<i>PciePorts</i>	- PCIe Root Ports to wait for
in	<i>PciePortsLength</i>	- Length of the PciePorts array
in	<i>ForceCheck</i>	- TRUE to ignore current FailMask and check all root ports
in, out	<i>FailMask</i>	- Bitmap of root ports to check. Returns bitmap indicating which root ports failed to reach DL_Active. Array must be of length 8 or greater!


Parameters

<i>FailMask</i>	[PCIE_ROOT_PORT_BITMAP_LENGTH]
-----------------	--------------------------------

14.24 PcieRegs.h File Reference

Register names for PCIE standard register.

```
#include <IndustryStandard/Pci30.h>
Include dependency graph for PcieRegs.h:
```

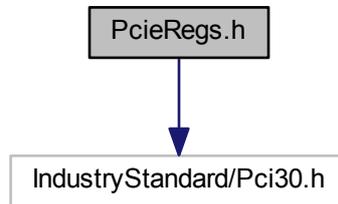

Macros

- #define [R_PCI_BRIDGE_BNUM](#) 0x18
Bus Number Register.
 - #define [B_PCI_BRIDGE_BNUM_SBBN](#) 0x00FF0000
Subordinate Bus Number.
 - #define [B_PCI_BRIDGE_BNUM_SCBN](#) 0x0000FF00
Secondary Bus Number.
 - #define [B_PCI_BRIDGE_BNUM_PBN](#) 0x000000FF
Primary Bus Number.
 - #define [R_PCI_BRIDGE_IOBL](#) 0x1C
I/O Base and Limit Register.
 - #define [R_PCI_BRIDGE_MBL](#) 0x20
Memory Base and Limit Register.
 - #define [B_PCI_BRIDGE_MBL_ML](#) 0xFFFF0000
Memory Limit.
 - #define [B_PCI_BRIDGE_MBL_MB](#) 0x0000FFF0
Memory Base.
 - #define [R_PCI_BRIDGE_PMBL](#) 0x24
Prefetchable Memory Base and Limit Register.
 - #define [B_PCI_BRIDGE_PMBL_PML](#) 0xFFFF0000
Prefetchable Memory Limit.
 - #define [B_PCI_BRIDGE_PMBL_I64L](#) 0x000F0000
64-bit Indicator
 - #define [B_PCI_BRIDGE_PMBL_PMB](#) 0x0000FFF0
Prefetchable Memory Base.
 - #define [B_PCI_BRIDGE_PMBL_I64B](#) 0x0000000F
64-bit Indicator
 - #define [R_PCI_BRIDGE_PMBU32](#) 0x28
Prefetchable Memory Base Upper 32-Bit Register.
 - #define [R_PCI_BRIDGE_PMLU32](#) 0x2C
Prefetchable Memory Limit Upper 32-Bit Register.
 - #define [R_PCIE_CAP_ID_OFFSET](#) 0x00
Capability ID.
-

- #define [R_PCIE_CAP_NEXT_PRT_OFFSET](#) 0x01
Next Capability Capability ID Pointer.
 - #define [R_PCIE_XCAP_OFFSET](#) 0x02
PCI Express Capabilities Register (Offset 02h)
 - #define [B_PCIE_XCAP_SI](#) BIT8
Slot Implemented.
 - #define [B_PCIE_XCAP_DT](#) (BIT7 | BIT6 | BIT5 | BIT4)
Device/Port Type.
 - #define [R_PCIE_DCAP_OFFSET](#) 0x04
Device Capabilities Register (Offset 04h)
 - #define [B_PCIE_DCAP_RBER](#) BIT15
Role-Based Error Reporting.
 - #define [B_PCIE_DCAP_E1AL](#) (BIT11 | BIT10 | BIT9)
Endpoint L1 Acceptable Latency.
 - #define [B_PCIE_DCAP_E0AL](#) (BIT8 | BIT7 | BIT6)
Endpoint L0s Acceptable Latency.
 - #define [B_PCIE_DCAP_MPS](#) (BIT2 | BIT1 | BIT0)
Max_Payload_Size Supported.
 - #define [R_PCIE_DCTL_OFFSET](#) 0x08
Device Control Register (Offset 08h)
 - #define [B_PCIE_DCTL_MPS](#) (BIT7 | BIT6 | BIT5)
Max_Payload_Size.
 - #define [B_PCIE_DCTL_URE](#) BIT3
Unsupported Request Reporting Enable.
 - #define [B_PCIE_DCTL_FEE](#) BIT2
Fatal Error Reporting Enable.
 - #define [B_PCIE_DCTL_NFE](#) BIT1
Non-Fatal Error Reporting Enable.
 - #define [B_PCIE_DCTL_CEE](#) BIT0
Correctable Error Reporting Enable.
 - #define [R_PCIE_DSTS_OFFSET](#) 0x0A
Device Status Register (Offset 0Ah)
 - #define [B_PCIE_DSTS_TDP](#) BIT5
Transactions Pending.
 - #define [B_PCIE_DSTS_APD](#) BIT4
AUX Power Detected.
 - #define [B_PCIE_DSTS_URD](#) BIT3
Unsupported Request Detected.
 - #define [B_PCIE_DSTS_FED](#) BIT2
Fatal Error Detected.
 - #define [B_PCIE_DSTS_NFED](#) BIT1
Non-Fatal Error Detected.
 - #define [B_PCIE_DSTS_CED](#) BIT0
Correctable Error Detected.
 - #define [R_PCIE_LCAP_OFFSET](#) 0x0C
Link Capabilities Register (Offset 0Ch)
 - #define [B_PCIE_LCAP_ASPMOC](#) BIT22
ASPM Optionality Compliance.
 - #define [B_PCIE_LCAP_CPM](#) BIT18
Clock Power Management.
 - #define [B_PCIE_LCAP_EL1](#) (BIT17 | BIT16 | BIT15)
-

- L1 Exit Latency.*

 - #define `B_PCIE_LCAP_ELO` (BIT14 | BIT13 | BIT12)
- L0s Exit Latency.*

 - #define `B_PCIE_LCAP_APMS` (BIT11 | BIT10)

Active State Power Management (ASPM) Support.

 - #define `B_PCIE_LCAP_MLW` 0x000003F0

Maximum Link Width.

 - #define `B_PCIE_LCAP_MLS` (BIT3 | BIT2 | BIT1 | BIT0)

Max Link Speed.

 - #define `R_PCIE_LCTL_OFFSET` 0x10

Link Control Register (Offset 10h)

 - #define `B_PCIE_LCTL_ECPM` BIT8

Enable Clock Power Management.

 - #define `B_PCIE_LCTL_ES` BIT7

Extended Synch.

 - #define `B_PCIE_LCTL_CCC` BIT6

Common Clock Configuration.

 - #define `B_PCIE_LCTL_RL` BIT5

Retrain Link.

 - #define `B_PCIE_LCTL_LD` BIT4

Link Disable.

 - #define `B_PCIE_LCTL_ASPM` (BIT1 | BIT0)

Active State Power Management (ASPM) Control.

 - #define `R_PCIE_LSTS_OFFSET` 0x12

Link Status Register (Offset 12h)

 - #define `B_PCIE_LSTS_LA` BIT13

Data Link Layer Link Active.

 - #define `B_PCIE_LSTS_SCC` BIT12

Slot Clock Configuration.

 - #define `B_PCIE_LSTS_LT` BIT11

Link Training.

 - #define `B_PCIE_LSTS_NLW` 0x03F0

Negotiated Link Width.

 - #define `B_PCIE_LSTS_CLS` 0x000F

Current Link Speed.

 - #define `R_PCIE_SLCAP_OFFSET` 0x14

Slot Capabilities Register (Offset 14h)

 - #define `B_PCIE_SLCAP_PSN` 0xFFF80000

Physical Slot Number.

 - #define `N_PCIE_SLCAP_PSN` 19

Physical Slot Number.

 - #define `B_PCIE_SLCAP_SLS` 0x00018000

Slot Power Limit Scale.

 - #define `N_PCIE_SLCAP_SLS` 15

Slot Power Limit Scale.

 - #define `B_PCIE_SLCAP_SLV` 0x00007F80

Slot Power Limit Value.

 - #define `N_PCIE_SLCAP_SLV` 7

Slot Power Limit Value.

 - #define `B_PCIE_SLCAP_HPC` BIT6

Hot-Plug Capable.

- #define [B_PCIE_SLCAP_HPS](#) BIT5
Hot-Plug Surprise.
 - #define [R_PCIE_SLCTL_OFFSET](#) 0x18
Slot Control Register (Offset 18h)
 - #define [B_PCIE_SLCTL_HPE](#) BIT5
Hot Plug Interrupt Enable.
 - #define [B_PCIE_SLCTL_PDE](#) BIT3
Presence Detect Changed Enable.
 - #define [R_PCIE_SLSTS_OFFSET](#) 0x1A
Slot Status Register (Offset 1Ah)
 - #define [B_PCIE_SLSTS_PDS](#) BIT6
Presence Detect State.
 - #define [B_PCIE_SLSTS_PDC](#) BIT3
Presence Detect Changed.
 - #define [R_PCIE_RCTL_OFFSET](#) 0x1C
Root Control Register (Offset 1Ch)
 - #define [B_PCIE_RCTL_PIE](#) BIT3
PME Interrupt Enable.
 - #define [B_PCIE_RCTL_SFE](#) BIT2
System Error on Fatal Error Enable.
 - #define [B_PCIE_RCTL_SNE](#) BIT1
System Error on Non-Fatal Error Enable.
 - #define [B_PCIE_RCTL_SCE](#) BIT0
System Error on Correctable Error Enable.
 - #define [R_PCIE_RSTS_OFFSET](#) 0x20
Root Status Register (Offset 20h)
 - #define [R_PCIE_DCAP2_OFFSET](#) 0x24
Device Capabilities 2 Register (Offset 24h)
 - #define [B_PCIE_DCAP2_OBFFS](#) (BIT19 | BIT18)
OBFF Supported.
 - #define [B_PCIE_DCAP2_LTRMS](#) BIT11
LTR Mechanism Supported.
 - #define [R_PCIE_DCTL2_OFFSET](#) 0x28
Device Control 2 Register (Offset 28h)
 - #define [B_PCIE_DCTL2_OBFFEN](#) (BIT14 | BIT13)
OBFF Enable.
 - #define [V_PCIE_DCTL2_OBFFEN_DIS](#) 0
Disabled.
 - #define [V_PCIE_DCTL2_OBFFEN_WAKE](#) 3
Enabled using WAKE# signaling.
 - #define [B_PCIE_DCTL2_LTREN](#) BIT10
LTR Mechanism Enable.
 - #define [B_PCIE_DCTL2_CTD](#) BIT4
Completion Timeout Disable.
 - #define [B_PCIE_DCTL2_CTV](#) (BIT3 | BIT2 | BIT1 | BIT0)
Completion Timeout Value.
 - #define [R_PCIE_LCTL2_OFFSET](#) 0x30
Link Control 2 Register (Offset 30h)
 - #define [B_PCIE_LCTL2_SD](#) BIT6
Selectable de-emphasis (0 = -6dB, 1 = -3.5dB)
 - #define [B_PCIE_LCTL2_TLS](#) (BIT3 | BIT2 | BIT1 | BIT0)
-

- *Target Link Speed.*
 - #define R_PCIE_LSTS2_OFFSET 0x32
Link Status 2 Register (Offset 32h)
 - #define B_PCIE_LSTS2_LER BIT5
Link Equalization Request.
 - #define B_PCIE_LSTS2_EQP3S BIT4
Equalization Phase 3 Successful.
 - #define B_PCIE_LSTS2_EQP2S BIT3
Equalization Phase 2 Successful.
 - #define B_PCIE_LSTS2_EQP1S BIT2
Equalization Phase 1 Successful.
 - #define B_PCIE_LSTS2_EC BIT1
Equalization Complete.
 - #define B_PCIE_LSTS2_CDL BIT0
Current De-emphasis Level.
 - #define R_PCIE_PMC_OFFSET 0x02
Power Management Capabilities Register.
 - #define B_PCIE_PMC_PMES (BIT15 | BIT14 | BIT13 | BIT12 | BIT11)
PME Support.
 - #define B_PCIE_PMC_PMEC BIT3
PME Clock.
 - #define R_PCIE_PMCS_OFFST 0x04
Power Management Status/Control Register.
 - #define B_PCIE_PMCS_BPCE BIT23
Bus Power/Clock Control Enable.
 - #define B_PCIE_PMCS_B23S BIT22
B2/B3 Support.
 - #define B_PCIE_PMCS_PMES BIT15
PME_Status.
 - #define B_PCIE_PMCS_PMEE BIT8
PME Enable.
 - #define B_PCIE_PMCS_NSR BIT3
No Soft Reset.
 - #define B_PCIE_PMCS_PS (BIT1 | BIT0)
Power State.
 - #define B_PCIE_EXCAP_NCO 0xFFF00000
Next Capability Offset.
 - #define B_PCIE_EXCAP_CV 0x000F0000
Capability Version.
 - #define B_PCIE_EXCAP_CID 0x0000FFFF
Capability ID.
 - #define V_PCIE_EX_AEC_CID 0x0001
Capability ID.
 - #define R_PCIE_EX_UEM_OFFSET 0x08
Uncorrectable Error Mask Register.
 - #define B_PCIE_EX_UEM_CT BIT14
Completion Timeout Mask.
 - #define B_PCIE_EX_UEM_UC BIT16
Unexpected Completion.
 - #define V_PCIE_EX_ACS_CID 0x000D
Capability ID.
-

- #define [R_PCIE_EX_ACSCAPR_OFFSET](#) 0x04
ACS Capability Register.
 - #define [V_PCIE_EX_SPE_CID](#) 0x0019
Capability ID.
 - #define [R_PCIE_EX_LCTL3_OFFSET](#) 0x04
Link Control 3 Register.
 - #define [B_PCIE_EX_LCTL3_PE](#) BIT0
Perform Equalization.
 - #define [R_PCIE_EX_LES_OFFSET](#) 0x08
Lane Error Status.
 - #define [R_PCIE_EX_L01EC_OFFSET](#) 0x0C
Lane 0 and Lan 1 Equalization Control Register (Offset 0Ch)
 - #define [B_PCIE_EX_L01EC_UPL1TP](#) 0x0F000000
Upstream Port Lane 1 Transmitter Preset.
 - #define [B_PCIE_EX_L01EC_DPL1TP](#) 0x000F0000
Downstream Port Lane 1 Transmitter Preset.
 - #define [B_PCIE_EX_L01EC_UPL0TP](#) 0x00000F00
Upstream Port Transmitter Preset.
 - #define [B_PCIE_EX_L01EC_DPL0TP](#) 0x0000000F
Downstream Port Transmitter Preset.
 - #define [R_PCIE_EX_L23EC_OFFSET](#) 0x10
Lane 2 and Lane 3 Equalization Control Register (Offset 10h)
 - #define [B_PCIE_EX_L23EC_UPL3TP](#) 0x0F000000
Upstream Port Lane 3 Transmitter Preset.
 - #define [B_PCIE_EX_L23EC_DPL3TP](#) 0x000F0000
Downstream Port Lane 3 Transmitter Preset.
 - #define [B_PCIE_EX_L23EC_UPL2TP](#) 0x00000F00
Upstream Port Lane 2 Transmitter Preset.
 - #define [B_PCIE_EX_L23EC_DPL2TP](#) 0x0000000F
Downstream Port Lane 2 Transmitter Preset.
 - #define [V_PCIE_EX_DPC_CID](#) 0x001D
Capability ID.
 - #define [V_PCIE_EX_L1S_CID](#) 0x001E
Capability ID.
 - #define [R_PCIE_EX_L1SCAP_OFFSET](#) 0x04
L1 Sub-States Capabilities.
 - #define [B_PCIE_EX_L1SCAP_L1PSS](#) BIT4
L1 PM substates supported.
 - #define [B_PCIE_EX_L1SCAP_AL1SS](#) BIT3
ASPM L1.1 supported.
 - #define [B_PCIE_EX_L1SCAP_AL12S](#) BIT2
ASPM L1.2 supported.
 - #define [B_PCIE_EX_L1SCAP_PPL11S](#) BIT1
PCI-PM L1.1 supported.
 - #define [B_PCIE_EX_L1SCAP_PPL12S](#) BIT0
PCI-PM L1.2 supported.
 - #define [R_PCIE_EX_L1SCTL1_OFFSET](#) 0x08
L1 Sub-States Control 1.
 - #define [B_PCIE_EX_L1SCTL1_L12LTRTLV](#) 0xE0000000
L1.2 LTR Threshold Latency Scale Value.
 - #define [B_PCIE_EX_L1SCTL1_L12LTRLV](#) 0x03FF0000
-

- L1.2 LTR Threshold Latency Value.*
- #define `R_PCIE_EX_L1SCTL2_OFFSET` 0x0C
 - L1 Sub-States Control 2.*
- #define `V_PCIE_EX_PTM_CID` 0x001F
 - Capability ID.*
- #define `R_PCIE_EX_PTMCAP_OFFSET` 0x04
 - PTM Capabilities.*
- #define `B_PCIE_EX_PTMCAP_PTMRC` BIT2
 - PTM Root Capable.*
- #define `B_PCIE_EX_PTMCAP_PTMRSPC` BIT1
 - PTM Responder Capable.*
- #define `R_BASE_ADDRESS_OFFSET_0` 0x0010
 - Base Address Register 0.*
- #define `R_BASE_ADDRESS_OFFSET_1` 0x0014
 - Base Address Register 1.*
- #define `R_BASE_ADDRESS_OFFSET_2` 0x0018
 - Base Address Register 2.*
- #define `R_BASE_ADDRESS_OFFSET_3` 0x001C
 - Base Address Register 3.*
- #define `R_BASE_ADDRESS_OFFSET_4` 0x0020
 - Base Address Register 4.*
- #define `R_BASE_ADDRESS_OFFSET_5` 0x0024
 - Base Address Register 5.*

14.24.1 Detailed Description

Register names for PCIE standard register.

Conventions:

- Prefixes: Definitions beginning with "R_" are registers Definitions beginning with "B_" are bits within registers Definitions beginning with "V_" are meaningful values within the bits Definitions beginning with "S_" are register sizes Definitions beginning with "N_" are the bit position

Copyright

INTEL CONFIDENTIAL Copyright 2014 - 2017 Intel Corporation.

The source code contained or described herein and all documents related to the source code ("Material") are owned by Intel Corporation or its suppliers or licensors. Title to the Material remains with Intel Corporation or its suppliers and licensors. The Material may contain trade secrets and proprietary and confidential information of Intel Corporation and its suppliers and licensors, and is protected by worldwide copyright and trade secret laws and treaty provisions. No part of the Material may be used, copied, reproduced, modified, published, uploaded, posted, transmitted, distributed, or disclosed in any way without Intel's prior express written permission.

No license under any patent, copyright, trade secret or other intellectual property right is granted to or conferred upon you by disclosure or delivery of the Materials, either expressly, by implication, inducement, estoppel or otherwise. Any license under such intellectual property rights must be express and approved by Intel in writing.

Unless otherwise agreed by Intel in writing, you may not remove or alter this notice or any other notice embedded in Materials by Intel or Intel's suppliers or licensors in any way.

This file contains an 'Intel Peripheral Driver' and is uniquely identified as "Intel Reference Module" and is licensed for Intel CPUs and chipsets under the terms of your license agreement with Intel or your vendor. This file may be modified by the user, subject to additional terms of the license agreement.

Specification Reference:

14.25 PeiCpuAndPchTraceHubLib.h File Reference

Header file for CPU and PCH TraceHub Lib.

Functions

- UUINT64 [GetTraceHubPciBase](#) (IN TRACE_HUB_DEVICE TraceHubDevice)
Get Trace Hub PCI address.
- UUINT32 [GetTraceHubMtbBar](#) (IN TRACE_HUB_DEVICE TraceHubDevice)
Get Trace Hub MTB Bar.
- VOID [ConfigureMscForTraceHub](#) (IN TRACE_HUB_DEVICE TraceHubDevice, IN UUINT32 Msc0Base, IN UUINT32 Msc0Size, IN UUINT32 Msc1Base, IN UUINT32 Msc1Size)
Configure Trace Hub Msc operational region regarding to buffer base and size.
- VOID [ConfigureMscForCpuAndPchTraceHub](#) (IN UUINT32 TraceHubMemBase)
This function performs CPU and PCH Trace Hub Buffer initialization.
- BOOLEAN [IsDebuggerInUse](#) (IN TRACE_HUB_DEVICE TraceHubDevice)
Check if debugger is in use.

14.25.1 Detailed Description

Header file for CPU and PCH TraceHub Lib.

Copyright

INTEL CONFIDENTIAL Copyright 2016 - 2017 Intel Corporation.

The source code contained or described herein and all documents related to the source code ("Material") are owned by Intel Corporation or its suppliers or licensors. Title to the Material remains with Intel Corporation or its suppliers and licensors. The Material may contain trade secrets and proprietary and confidential information of Intel Corporation and its suppliers and licensors, and is protected by worldwide copyright and trade secret laws and treaty provisions. No part of the Material may be used, copied, reproduced, modified, published, uploaded, posted, transmitted, distributed, or disclosed in any way without Intel's prior express written permission.

No license under any patent, copyright, trade secret or other intellectual property right is granted to or conferred upon you by disclosure or delivery of the Materials, either expressly, by implication, inducement, estoppel or otherwise. Any license under such intellectual property rights must be express and approved by Intel in writing.

Unless otherwise agreed by Intel in writing, you may not remove or alter this notice or any other notice embedded in Materials by Intel or Intel's suppliers or licensors in any way.

This file contains an 'Intel Peripheral Driver' and is uniquely identified as "Intel Reference Module" and is licensed for Intel CPUs and chipsets under the terms of your license agreement with Intel or your vendor. This file may be modified by the user, subject to additional terms of the license agreement.

Specification Reference:

14.25.2 Function Documentation

14.25.2.1 ConfigureMscForCpuAndPchTraceHub()

```
VOID ConfigureMscForCpuAndPchTraceHub (
    IN UINT32 TraceHubMemBase )
```

This function performs CPU and PCH Trace Hub Buffer initialization.

Trace memory buffers need to be allocated as reserved memory with UC attribute.

Parameters

in	<i>TraceHubMemBase</i>	Allocated Trace Hub memory base address
----	------------------------	---

14.25.2.2 ConfigureMscForTraceHub()

```
VOID ConfigureMscForTraceHub (
    IN TRACE_HUB_DEVICE TraceHubDevice,
    IN UINT32 Msc0Base,
    IN UINT32 Msc0Size,
    IN UINT32 Msc1Base,
    IN UINT32 Msc1Size )
```

Configure Trace Hub Msc operational region regarding to buffer base and size.

Parameters

in	<i>TraceHubDevice</i>	Specify CPU or PCH trace hub device
in	<i>Msc0Base</i>	Base Address of MSC0BAR
in	<i>Msc0Size</i>	Size of MSC0Size
in	<i>Msc1Base</i>	Base Address of MSC1BAR
in	<i>Msc1Size</i>	Size of MSC1Size

14.25.2.3 GetTraceHubMtbBar()

```
UINT32 GetTraceHubMtbBar (
    IN TRACE_HUB_DEVICE TraceHubDevice )
```

Get Trace Hub MTB Bar.

Parameters

in	<i>TraceHubDevice</i>	Specify CPU or PCH trace hub device
----	-----------------------	-------------------------------------

Return values

<i>UINT32</i>	Trace Hub MTB bar
---------------	-------------------

14.25.2.4 GetTraceHubPciBase()

```
UINT64 GetTraceHubPciBase (
    IN TRACE_HUB_DEVICE TraceHubDevice )
```

Get Trace Hub PCI address.

Parameters

in	<i>TraceHubDevice</i>	Specify CPU or PCH trace hub device
----	-----------------------	-------------------------------------

Return values

<i>UINT64</i>	Trace Hub Pci address
---------------	-----------------------

14.25.2.5 IsDebuggerInUse()

```
BOOLEAN IsDebuggerInUse (
    IN TRACE_HUB_DEVICE TraceHubDevice )
```

Check if debugger is in use.

Parameters

in	<i>TraceHubDevice</i>	Specify CPU or PCH trace hub device
----	-----------------------	-------------------------------------

Return values

<i>TRUE</i>	debugger is in use
<i>FALSE</i>	debugger is NOT in use

14.26 PeiPreMemSiDefaultPolicy.h File Reference

This file defines the function to initialize default silicon policy PPI.

Classes

- struct [_PEI_PREMEM_SI_DEFAULT_POLICY_INIT_PPI](#)
This PPI provides function to install default silicon policy.

Typedefs

- typedef EFI_STATUS(* [PEI_PREMEM_POLICY_INIT](#)) (VOID)
Initialize and install default silicon policy PPI.

14.26.1 Detailed Description

This file defines the function to initialize default silicon policy PPI.

Copyright

INTEL CONFIDENTIAL Copyright 2019 Intel Corporation.

The source code contained or described herein and all documents related to the source code ("Material") are owned by Intel Corporation or its suppliers or licensors. Title to the Material remains with Intel Corporation or its suppliers and licensors. The Material may contain trade secrets and proprietary and confidential information of Intel Corporation and its suppliers and licensors, and is protected by worldwide copyright and trade secret laws and treaty provisions. No part of the Material may be used, copied, reproduced, modified, published, uploaded, posted, transmitted, distributed, or disclosed in any way without Intel's prior express written permission.

No license under any patent, copyright, trade secret or other intellectual property right is granted to or conferred upon you by disclosure or delivery of the Materials, either expressly, by implication, inducement, estoppel or otherwise. Any license under such intellectual property rights must be express and approved by Intel in writing.

Unless otherwise agreed by Intel in writing, you may not remove or alter this notice or any other notice embedded in Materials by Intel or Intel's suppliers or licensors in any way.

This file contains an 'Intel Peripheral Driver' and is uniquely identified as "Intel Reference Module" and is licensed for Intel CPUs and chipsets under the terms of your license agreement with Intel or your vendor. This file may be modified by the user, subject to additional terms of the license agreement.

Specification Reference:

14.27 PeiSiDefaultPolicy.h File Reference

This file defines the function to initialize default silicon policy PPI.

Classes

- [struct _PEI_SI_DEFAULT_POLICY_INIT_PPI](#)
This PPI provides function to install default silicon policy.

Typedefs

- [typedef EFI_STATUS>\(* PEI_POLICY_INIT\)](#) (VOID)
Initialize and install default silicon policy PPI.

14.27.1 Detailed Description

This file defines the function to initialize default silicon policy PPI.

Copyright

INTEL CONFIDENTIAL Copyright 2019 Intel Corporation.

The source code contained or described herein and all documents related to the source code ("Material") are owned by Intel Corporation or its suppliers or licensors. Title to the Material remains with Intel Corporation or its suppliers and licensors. The Material may contain trade secrets and proprietary and confidential information of Intel Corporation and its suppliers and licensors, and is protected by worldwide copyright and trade secret laws and treaty provisions. No part of the Material may be used, copied, reproduced, modified, published, uploaded, posted, transmitted, distributed, or disclosed in any way without Intel's prior express written permission.

No license under any patent, copyright, trade secret or other intellectual property right is granted to or conferred upon you by disclosure or delivery of the Materials, either expressly, by implication, inducement, estoppel or otherwise. Any license under such intellectual property rights must be express and approved by Intel in writing.

Unless otherwise agreed by Intel in writing, you may not remove or alter this notice or any other notice embedded in Materials by Intel or Intel's suppliers or licensors in any way.

This file contains an 'Intel Peripheral Driver' and is uniquely identified as "Intel Reference Module" and is licensed for Intel CPUs and chipsets under the terms of your license agreement with Intel or your vendor. This file may be modified by the user, subject to additional terms of the license agreement.


Specification Reference:

14.28 PeiSiPolicyUpdateLib.h File Reference

Header file for PEI SiPolicyUpdate Library.

```
#include <Ppi/SiPolicy.h>
```

Include dependency graph for PeiSiPolicyUpdateLib.h:

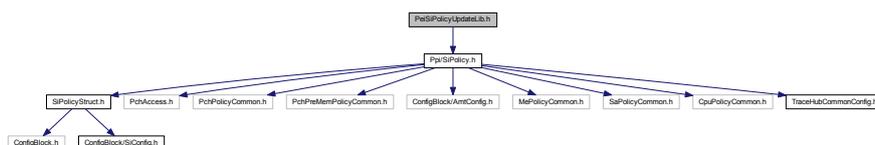

Functions

- EFI_STATUS [UpdatePeiSiPolicy](#) (IN OUT [SI_POLICY_PPI](#) *SiPolicy)
This function performs Silicon PEI Policy initialization.
- EFI_STATUS [UpdatePeiCpuPolicy](#) (IN OUT [SI_POLICY_PPI](#) *SiPolicyPpi)
This function performs CPU PEI Policy initialization in Post-memory.
- EFI_STATUS [UpdatePeiSaPolicy](#) (IN OUT [SI_POLICY_PPI](#) *SiPolicyPpi)
This function performs SI PEI Policy initialization.
- EFI_STATUS [UpdatePeiSaPolicyPreMem](#) (IN OUT [SI_PREMEM_POLICY_PPI](#) *SiPreMemPolicyPpi)
This function performs SA PEI Policy initialization for PreMem.
- EFI_STATUS [UpdatePeiPchPolicy](#) (IN OUT [SI_POLICY_PPI](#) *SiPolicy)
This function performs PCH PEI Policy initialization.
- EFI_STATUS [UpdatePeiPchPolicyPreMem](#) (IN OUT [SI_PREMEM_POLICY_PPI](#) *SiPreMemPolicy)
This function performs PCH PEI Policy initialization.
- EFI_STATUS [UpdatePeiMePolicy](#) (IN OUT [SI_POLICY_PPI](#) *SiPolicy)
Update the ME Policy Library.
- EFI_STATUS [UpdatePeiMePolicyPreMem](#) (IN OUT [SI_PREMEM_POLICY_PPI](#) *SiPreMemPolicy)
Update the ME Policy Library.
- EFI_STATUS [UpdatePeiAmtPolicy](#) (IN OUT [SI_POLICY_PPI](#) *SiPolicyPpi)
Install the Active Management Policy Ppi Library.

14.28.1 Detailed Description

Header file for PEI SiPolicyUpdate Library.

Copyright

INTEL CONFIDENTIAL Copyright 2014 - 2019 Intel Corporation.

The source code contained or described herein and all documents related to the source code ("Material") are owned by Intel Corporation or its suppliers or licensors. Title to the Material remains with Intel Corporation or its suppliers and licensors. The Material may contain trade secrets and proprietary and confidential information of Intel Corporation and its suppliers and licensors, and is protected by worldwide copyright and trade secret laws and treaty provisions. No part of the Material may be used, copied, reproduced, modified, published, uploaded, posted, transmitted, distributed, or disclosed in any way without Intel's prior express written permission.

No license under any patent, copyright, trade secret or other intellectual property right is granted to or conferred upon you by disclosure or delivery of the Materials, either expressly, by implication, inducement, estoppel or otherwise. Any license under such intellectual property rights must be express and approved by Intel in writing.

Unless otherwise agreed by Intel in writing, you may not remove or alter this notice or any other notice embedded in Materials by Intel or Intel's suppliers or licensors in any way.

This file contains an 'Intel Peripheral Driver' and is uniquely identified as "Intel Reference Module" and is licensed for Intel CPUs and chipsets under the terms of your license agreement with Intel or your vendor. This file may be modified by the user, subject to additional terms of the license agreement.

Specification Reference:

14.28.2 Function Documentation

14.28.2.1 UpdatePeiAmtPolicy()

```
EFI_STATUS UpdatePeiAmtPolicy (
    IN OUT SI_POLICY_PPI * SiPolicyPpi )
```

Install the Active Management Policy Ppi Library.

Parameters

in, out	SiPolicyPpi	PEI Si Policy
---------	-------------	---------------

Return values

<i>EFI_SUCCESS</i>	Initialization complete.
<i>EFI_UNSUPPORTED</i>	The chipset is unsupported by this driver.
<i>EFI_OUT_OF_RESOURCES</i>	Do not have enough resources to initialize the driver.
<i>EFI_DEVICE_ERROR</i>	Device error, driver exits abnormally.

14.28.2.2 UpdatePeiCpuPolicy()

```
EFI_STATUS UpdatePeiCpuPolicy (
    IN OUT SI_POLICY_PPI * SiPolicyPpi )
```

This function performs CPU PEI Policy initialization in Post-memory.

Parameters

in, out	<i>SiPolicyPpi</i>	The SI Policy PPI instance
---------	--------------------	----------------------------

Return values

<i>EFI_SUCCESS</i>	The PPI is installed and initialized.
<i>EFI</i>	ERRORS The PPI is not successfully installed.
<i>EFI_OUT_OF_RESOURCES</i>	Do not have enough resources to initialize the driver

14.28.2.3 UpdatePeiMePolicy()

```
EFI_STATUS UpdatePeiMePolicy (
    IN OUT SI_POLICY_PPI * SiPolicy )
```

Update the ME Policy Library.

Parameters

in, out	<i>SiPolicyPpi</i>	The pointer to SiPolicyPpi
---------	--------------------	----------------------------

Return values

<i>EFI_SUCCESS</i>	Update complete.
<i>Others</i>	Update unsuccessful.

14.28.2.4 UpdatePeiMePolicyPreMem()

```
EFI_STATUS UpdatePeiMePolicyPreMem (
    IN OUT SI_PREMEM_POLICY_PPI * SiPreMemPolicy )
```

Update the ME Policy Library.

Parameters

in, out	<i>SiPreMemPolicy</i>	The SI PreMem Policy PPI instance
---------	-----------------------	-----------------------------------

Return values

<i>EFI_SUCCESS</i>	Update complete.
--------------------	------------------

14.28.2.5 UpdatePeiPchPolicy()

```
EFI_STATUS UpdatePeiPchPolicy (
    IN OUT SI_POLICY_PPI * SiPolicy )
```

This function performs PCH PEI Policy initialization.

Parameters

in, out	<i>SiPolicy</i>	The SI Policy PPI instance
---------	-----------------	----------------------------

Return values

<i>EFI_SUCCESS</i>	The PPI is installed and initialized.
<i>EFI</i>	ERRORS The PPI is not successfully installed.
<i>EFI_OUT_OF_RESOURCES</i>	Do not have enough resources to initialize the driver

14.28.2.6 UpdatePeiPchPolicyPreMem()

```
EFI_STATUS UpdatePeiPchPolicyPreMem (
    IN OUT SI_PREMEM_POLICY_PPI * SiPreMemPolicy )
```

This function performs PCH PEI Policy initialization.

Parameters

in, out	<i>SiPreMemPolicy</i>	The SI PreMem Policy PPI instance
---------	-----------------------	-----------------------------------

Return values

<i>EFI_SUCCESS</i>	The PPI is installed and initialized.
<i>EFI</i>	ERRORS The PPI is not successfully installed.
<i>EFI_OUT_OF_RESOURCES</i>	Do not have enough resources to initialize the driver

14.28.2.7 UpdatePeiSaPolicy()

```
EFI_STATUS UpdatePeiSaPolicy (
    IN OUT SI_POLICY_PPI * SiPolicyPpi )
```

This function performs SI PEI Policy initialization.

Parameters

in, out	<i>SiPolicyPpi</i>	The SA Policy PPI instance
---------	--------------------	----------------------------

Return values

<i>EFI_SUCCESS</i>	The PPI is installed and initialized.
--------------------	---------------------------------------

14.28.2.8 UpdatePeiSaPolicyPreMem()

```
EFI_STATUS UpdatePeiSaPolicyPreMem (
    IN OUT SI_PREMEM_POLICY_PPI * SiPreMemPolicyPpi )
```

This function performs SA PEI Policy initialization for PreMem.

Parameters

<i>in, out</i>	<i>SiPreMemPolicyPpi</i>	The SI PreMem Policy PPI instance
----------------	--------------------------	-----------------------------------

Return values

<i>EFI_SUCCESS</i>	Update complete.
--------------------	------------------

14.28.2.9 UpdatePeiSiPolicy()

```
EFI_STATUS UpdatePeiSiPolicy (
    IN OUT SI_POLICY_PPI * SiPolicy )
```

This function performs Silicon PEI Policy initialization.

Parameters

<i>in, out</i>	<i>SiPolicy</i>	The Silicon Policy PPI instance
----------------	-----------------	---------------------------------


Return values

<i>EFI_SUCCESS</i>	The function completed successfully
--------------------	-------------------------------------

14.29 PlatformSpecificResetHandler.h File Reference

This PPI provides services to register a platform specific handler for ResetSystem().

```
#include <Protocol/ResetNotification.h>  
Include dependency graph for Ppi/PlatformSpecificResetHandler.h:
```

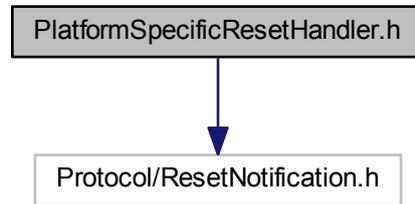

14.29.1 Detailed Description

This PPI provides services to register a platform specific handler for `ResetSystem()`.

The registered handlers are processed after `EDKII_PLATFORM_SPECIFIC_RESET_NOTIFICATION_PPI` notifications.

Copyright (c) 2017 - 2018 Intel Corporation. All rights reserved.


This program and the accompanying materials are licensed and made available under the terms and conditions of the BSD License that accompanies this distribution. The full text of the license may be found at <http://opensource.org/licenses/bsd-license.php>.

THE PROGRAM IS DISTRIBUTED UNDER THE BSD LICENSE ON AN "AS IS" BASIS, WITHOUT WARRANTIES OR REPRESENTATIONS OF ANY KIND, EITHER EXPRESS OR IMPLIED.

14.30 PlatformSpecificResetHandler.h File Reference

This protocol provides services to register a platform specific handler for `ResetSystem()`.

```
#include <Protocol/ResetNotification.h>  
Include dependency graph for Protocol/PlatformSpecificResetHandler.h:
```

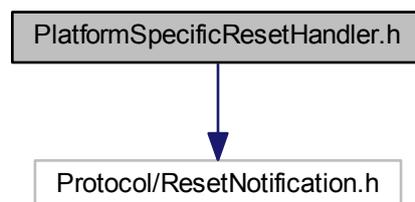

14.30.1 Detailed Description

This protocol provides services to register a platform specific handler for ResetSystem().

The registered handlers are called after the UEFI 2.7 Reset Notifications are processed

Copyright (c) 2017 Intel Corporation. All rights reserved.

This program and the accompanying materials are licensed and made available under the terms and conditions of the BSD License that accompanies this distribution. The full text of the license may be found at <http://opensource.org/licenses/bsd-license.php>.


THE PROGRAM IS DISTRIBUTED UNDER THE BSD LICENSE ON AN "AS IS" BASIS, WITHOUT WARRANTIES OR REPRESENTATIONS OF ANY KIND, EITHER EXPRESS OR IMPLIED.

14.31 PlatformSpecificResetNotification.h File Reference

This PPI provides services to register a platform specific notification callback for ResetSystem().

```
#include <Protocol/ResetNotification.h>
```

Include dependency graph for PlatformSpecificResetNotification.h:

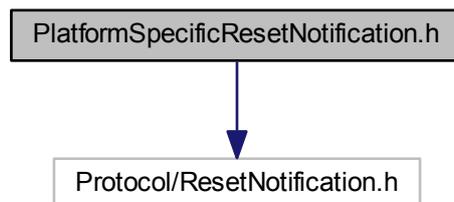

14.31.1 Detailed Description

This PPI provides services to register a platform specific notification callback for ResetSystem().

The registered handlers are processed after EDKII_PLATFORM_SPECIFIC_RESET_FILTER_PPI notifications and before EDKII_PLATFORM_SPECIFIC_RESET_HANDLER_PPI notifications.

Copyright (c) 2017 - 2018 Intel Corporation. All rights reserved.

Copyright (c) 2017 Microsoft Corporation. All rights reserved.


This program and the accompanying materials are licensed and made available under the terms and conditions of the BSD License that accompanies this distribution. The full text of the license may be found at <http://opensource.org/licenses/bsd-license.php>.

THE PROGRAM IS DISTRIBUTED UNDER THE BSD LICENSE ON AN "AS IS" BASIS, WITHOUT WARRANTIES OR REPRESENTATIONS OF ANY KIND, EITHER EXPRESS OR IMPLIED.

14.32 ProcessorTraceMemoryAllocationLib.h File Reference

Prototype of Intel Processor Trace memory allocation library.

```
#include <PiPei.h>  
Include dependency graph for ProcessorTraceMemoryAllocationLib.h:
```

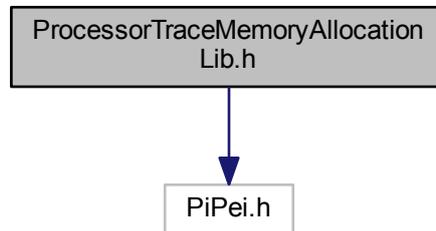

Enumerations

- enum [PROCESSOR_TRACE_MEM_SIZE](#)
Processor trace buffer size selection.

Functions

- EFI_STATUS [ProcessorTraceAllocateMemory](#) (IN [PROCESSOR_TRACE_MEM_SIZE](#) RequestedMemSize, OUT EFI_PHYSICAL_ADDRESS *BaseAddress, OUT UINT32 *LengthInBytes)
Allocate memory region for Processor Trace, based on requested size per thread.

14.32.1 Detailed Description

Prototype of Intel Processor Trace memory allocation library.

Copyright

INTEL CONFIDENTIAL Copyright 2017 Intel Corporation.

The source code contained or described herein and all documents related to the source code ("Material") are owned by Intel Corporation or its suppliers or licensors. Title to the Material remains with Intel Corporation or its suppliers and licensors. The Material may contain trade secrets and proprietary and confidential information of Intel Corporation and its suppliers and licensors, and is protected by worldwide copyright and trade secret laws and treaty provisions. No part of the Material may be used, copied, reproduced, modified, published, uploaded, posted, transmitted, distributed, or disclosed in any way without Intel's prior express written permission.

No license under any patent, copyright, trade secret or other intellectual property right is granted to or conferred upon you by disclosure or delivery of the Materials, either expressly, by implication, inducement, estoppel or otherwise. Any license under such intellectual property rights must be express and approved by Intel in writing.

Unless otherwise agreed by Intel in writing, you may not remove or alter this notice or any other notice embedded in Materials by Intel or Intel's suppliers or licensors in any way.

This file contains a 'Sample Driver' and is licensed as such under the terms of your license agreement with Intel or your vendor. This file may be modified by the user, subject to the additional terms of the license agreement.

Specification Reference:

14.32.2 Function Documentation

14.32.2.1 ProcessorTraceAllocateMemory()

```
EFI_STATUS ProcessorTraceAllocateMemory (
    IN PROCESSOR_TRACE_MEM_SIZE RequestedMemSize,
    OUT EFI_PHYSICAL_ADDRESS * BaseAddress,
    OUT UINT32 * LengthInBytes )
```

Allocate memory region for Processor Trace, based on requested size per thread.

Parameters

in	<i>RequestedMemSize</i>	Requested size per thread, specified using PROCESSOR_TRACE_MEM_SIZE encoding
out	<i>*BaseAddress</i>	Outputs a pointer to the base address of the allocated memory region. Base address is NULL on a failure.
out	<i>*LengthInBytes</i>	Outputs a pointer to the size of the allocated memory region, in bytes.

Return values

<i>EFI_SUCCESS</i>	Successfully allocated the memory region
<i>EFI_INVALID_PARAMETER</i>	Invalid value for RequestedMemSize
<i>EFI_OUT_OF_RESOURCES</i>	AllocatePages failed to allocate the memory region

14.33 PttPTPInstanceGuid.h File Reference

GUID definition for the PTT device instance.

14.33.1 Detailed Description

GUID definition for the PTT device instance.

Copyright

INTEL CONFIDENTIAL Copyright 2012 - 2016 Intel Corporation.

The source code contained or described herein and all documents related to the source code ("Material") are owned by Intel Corporation or its suppliers or licensors. Title to the Material remains with Intel Corporation or its suppliers and licensors. The Material may contain trade secrets and proprietary and confidential information of Intel Corporation and its suppliers and licensors, and is protected by worldwide copyright and trade secret laws and treaty provisions. No part of the Material may be used, copied, reproduced, modified, published, uploaded, posted, transmitted, distributed, or disclosed in any way without Intel's prior express written permission.

No license under any patent, copyright, trade secret or other intellectual property right is granted to or conferred upon you by disclosure or delivery of the Materials, either expressly, by implication, inducement, estoppel or otherwise. Any license under such intellectual property rights must be express and approved by Intel in writing.

Unless otherwise agreed by Intel in writing, you may not remove or alter this notice or any other notice embedded in Materials by Intel or Intel's suppliers or licensors in any way.

This file contains an 'Intel Peripheral Driver' and is uniquely identified as "Intel Reference Module" and is licensed for Intel CPUs and chipsets under the terms of your license agreement with Intel or your vendor. This file may be modified by the user, subject to additional terms of the license agreement.

Specification

14.34 RegsUsb.h File Reference

Register names for USB Host and device controller.

Macros

- #define [N_XHCI_CFG_XHCC2_UNPPA](#) 14
Upstream Non-Posted Pre-Allocation.
 - #define [R_XHCI_CFG_XHCC3](#) 0xFC
XHC System Bus Configuration 3.
 - #define [R_XHCI_MEM_USBCMD](#) 0x80
USB Command.
 - #define [B_XHCI_MEM_USBCMD_RS](#) BIT0
Run/Stop.
 - #define [B_XHCI_MEM_USBCMD_RST](#) BIT1
Host Controller Reset.
 - #define [R_XHCI_MEM_USBSTS](#) 0x84
USB Status.
 - #define [B_XHCI_MEM_USBSTS_HCH](#) BIT0
Host Controller Halted.
 - #define [R_XHCI_MEM_PORTSC_START_OFFSET](#) 0x480
Port Status and Control Registers base offset.
 - #define [S_XHCI_MEM_PORTSC_PORT_SPACING](#) 0x10
Size of space between PortSC register for each port.
 - #define [B_XHCI_MEM_PORTSCXUSB2_WPR](#) BIT31
Warm Port Reset.
 - #define [B_XHCI_MEM_PORTSCXUSB2_CEC](#) BIT23
Port Config Error Change.
 - #define [B_XHCI_MEM_PORTSCXUSB2_PLG](#) BIT22
Port Link State Change.
 - #define [B_XHCI_MEM_PORTSCXUSB2_PRC](#) BIT21
Port Reset Change.
 - #define [B_XHCI_MEM_PORTSCXUSB2_OCC](#) BIT20
Over-current Change.
 - #define [B_XHCI_MEM_PORTSCXUSB2_WRC](#) BIT19
Warm Port Reset Change.
 - #define [B_XHCI_MEM_PORTSCXUSB2_PEC](#) BIT18
Port Enabled Disabled Change.
 - #define [B_XHCI_MEM_PORTSCXUSB2_CSC](#) BIT17
Connect Status Change.
 - #define [B_XHCI_MEM_PORTSCXUSB2_LWS](#) BIT16
Port Link State Write Strobe.
 - #define [B_XHCI_MEM_PORTSCXUSB2_PLS](#) (BIT5 | BIT6 | BIT7 | BIT8)
-

- Port Link State.*
- #define [B_XHCI_MEM_PORTSCXUSB2_PR](#) BIT4
- Port Reset.*
- #define [B_XHCI_MEM_PORTSCXUSB2_PED](#) BIT1
- Port Enable/Disabled.*
- #define [B_XHCI_MEM_PORTSCXUSB2_CCS](#) BIT0
- Current Connect Status.*
- #define [B_XHCI_MEM_PORTPMSCXUSB2_PTC](#) (BIT28 | BIT29 | BIT30 | BIT31)
- Port Test Control.*
- #define [B_XHCI_MEM_PORTSCXUSB3_WPR](#) BIT31
- Warm Port Reset.*
- #define [B_XHCI_MEM_PORTSCXUSB3_CAS](#) BIT24
- Cold Attach Status.*
- #define [B_XHCI_MEM_PORTSCXUSB3_CEC](#) BIT23
- Port Config Error Change.*
- #define [B_XHCI_MEM_PORTSCXUSB3_PLC](#) BIT22
- Port Link State Change.*
- #define [B_XHCI_MEM_PORTSCXUSB3_PRC](#) BIT21
- Port Reset Change.*
- #define [B_XHCI_MEM_PORTSCXUSB3_OCC](#) BIT20
- Over-current Change.*
- #define [B_XHCI_MEM_PORTSCXUSB3_WRC](#) BIT19
- Warm Port Reset Change.*
- #define [B_XHCI_MEM_PORTSCXUSB3_PEC](#) BIT18
- Port Enabled Disabled Change.*
- #define [B_XHCI_MEM_PORTSCXUSB3_CSC](#) BIT17
- Connect Status Change.*
- #define [B_XHCI_MEM_PORTSCXUSB3_LWS](#) BIT16
- Port Link State Write Strobe.*
- #define [B_XHCI_MEM_PORTSCXUSB3_PP](#) BIT9
- Port Power.*
- #define [B_XHCI_MEM_PORTSCXUSB3_PLS](#) (BIT8 | BIT7 | BIT6 | BIT5)
- Port Link State.*
- #define [V_XHCI_MEM_PORTSCXUSB3_PLS_POLLING](#) 0x000000E0
- Link is in the Polling State.*
- #define [V_XHCI_MEM_PORTSCXUSB3_PLS_RXDETECT](#) 0x000000A0
- Link is in the RxDetect State.*
- #define [V_XHCI_MEM_PORTSCXUSB3_PLS_DISABLED](#) 0x00000080
- Link is in the RxDetect State.*
- #define [B_XHCI_MEM_PORTSCXUSB3_PR](#) BIT4
- Port Reset.*
- #define [B_XHCI_MEM_PORTSCXUSB3_PED](#) BIT1
- Port Enable/Disabled.*
- #define [B_XHCI_MEM_XECP_SUPP_USBX_2_CPC](#) 0xFF00
- Mask for Compatible Port Count in Capability.*
- #define [N_XHCI_MEM_XECP_SUPP_USBX_2_CPC](#) 8
- Shift for Compatible Port Count.*
- #define [R_XHCI_MEM_HOST_CTRL_ODMA_REG](#) 0x8098
- Host Control ODMA Register.*
- #define [B_XHCI_MEM_PMCTRL_SSU3LFPS_DET](#) 0xFF00
- SS U3 LFPS Detection Threshold Mask.*

- #define `N_XHCI_MEM_PMCTRL_SSU3LPFS_DET` 8
SS U3 LFPS Detection Threshold position.
 - #define `R_XHCI_MEM_PGCBCTRL` 0x80A8
PGCB Control.
 - #define `R_XHCI_MEM_HOST_CTRL_MISC_REG` 0x80B0
Host Controller Misc Reg.
 - #define `R_XHCI_MEM_HOST_CTRL_MISC_REG_2` 0x80B4
Host Controller Misc Reg 2.
 - #define `R_XHCI_MEM_SSPE` 0x80B8
Super Speed Port Enables.
 - #define `R_XHCI_MEM_AUX_CTRL_REG` 0x80C0
AUX_CTRL_REG - AUX Reset Control.
 - #define `R_XHCI_MEM_HOST_BW_OV_HS_REG` 0x80C8
HOST_BW_OV_HS_REG - High Speed TT Bandwidth Overhead.
 - #define `B_XHCI_MEM_HOST_BW_OV_HS_REG_OVHD_HSTTBW` 0x0FFF
Mask for Overhead per packet for HS-TT BW calculations value.
 - #define `B_XHCI_MEM_HOST_BW_OV_HS_REG_OVHD_HSBW` 0xFFFF00
Mask for Overhead per packet for HS BW calculations value.
 - #define `R_XHCI_MEM_HOST_CTRL_PORT_LINK_REG` 0x80EC
SuperSpeed Port Link Control.
 - #define `R_XHCI_MEM_USB2_LINK_MGR_CTRL_REG1_DW1` 0x80F0
USB2_LINK_MGR_CTRL_REG1 - USB2 Port Link Control 1, 2, 3, 4.
 - #define `R_XHCI_MEM_USB2_LINK_MGR_CTRL_REG1_DW2` 0x80F4
USB2_LINK_MGR_CTRL_REG1 - USB2 Port Link Control 1, 2, 3, 4.
 - #define `R_XHCI_MEM_USB2_LINK_MGR_CTRL_REG1_DW3` 0x80F8
USB2_LINK_MGR_CTRL_REG1 - USB2 Port Link Control 1, 2, 3, 4.
 - #define `R_XHCI_MEM_USB2_LINK_MGR_CTRL_REG1_DW4` 0x80FC
USB2_LINK_MGR_CTRL_REG1 - USB2 Port Link Control 1, 2, 3, 4.
 - #define `R_XHCI_MEM_HOST_CTRL_BW_CTRL_REG` 0x8100
HOST_CTRL_BW_CTRL_REG - Host Controller Bandwidth Control Register.
 - #define `R_XHCI_MEM_HOST_IF_CTRL_REG` 0x8108
HOST_IF_CTRL_REG - Host Controller Interface Control Register.
 - #define `R_XHCI_MEM_HOST_CTRL_TRM_REG2` 0x8110
HOST_CTRL_TRM_REG2 - Host Controller Transfer Manager Control 2.
 - #define `R_XHCI_MEM_HOST_CTRL_BW_MAX_REG` 0x8128
HOST_CTRL_BW_MAX_REG - Max BW Control Reg 4.
 - #define `B_XHCI_MEM_HOST_CTRL_BW_MAX_REG_MAX_HS_BW` 0xFFFF00
HOST_CTRL_BW_MAX_REG - Max. Number of BW units for HS ports.
 - #define `N_XHCI_MEM_HOST_CTRL_BW_MAX_REG_MAX_HS_BW` 12
HOST_CTRL_BW_MAX_REG - Max. Number of BW units for HS ports position.
 - #define `R_XHCI_MEM_HOST_IF_PWR_CTRL_REG0` 0x8140
HOST_IF_PWR_CTRL_REG0 - Power Scheduler Control 0.
 - #define `B_XHCI_MEM_HOST_IF_PWR_CTRL_REG0_AW` 0xFFFF00
Advance Wake (AW)
 - #define `R_XHCI_MEM_HOST_IF_PWR_CTRL_REG1` 0x8144
HOST_IF_PWR_CTRL_REG1 - Power Scheduler Control 1.
 - #define `R_XHCI_MEM_AUX_CTRL_REG2` 0x8154
AUX_CTRL_REG2 - Aux PM Control Register 2.
 - #define `R_XHCI_MEM_USB2PHYPM` 0x8164
USB2 PHY Power Management Control.
 - #define `R_XHCI_MEM_AUXCLKCTL` 0x816C
-

- xHCI Aux Clock Control Register*
 - #define [R_XHCI_MEM_USBLPM](#) 0x8170
 - USB LPM Parameters.*
 - #define [B_XHCI_MEM_USBLPM_MIN_U2_ELFPS_D](#) (BIT18 | BIT17 | BIT16)
 - Min U2 Exit LFPS Duration.*
 - #define [R_XHCI_MEM_XHCLTVCTL](#) 0x8174
 - xHC Latency Tolerance Parameters - LTV Control*
 - #define [B_XHCI_MEM_XHCLTVCTL_USB2_PLO_LTV](#) 0xFF
 - USB2 Port L0 LTV.*
 - #define [R_XHCI_MEM_LTVHIT](#) 0x817C
 - xHC Latency Tolerance Parameters - High Idle Time Control*
 - #define [R_XHCI_MEM_LTVMIT](#) 0x8180
 - xHC Latency Tolerance Parameters - Medium Idle Time Control*
 - #define [R_XHCI_MEM_LTVLIT](#) 0x8184
 - xHC Latency Tolerance Parameters - Low Idle Time Control*
 - #define [R_XHCI_MEM_XECP_CMDM_CTRL_REG1](#) 0x818C
 - Command Manager Control 1.*
 - #define [R_XHCI_MEM_XECP_CMDM_CTRL_REG2](#) 0x8190
 - Command Manager Control 2.*
 - #define [R_XHCI_MEM_XECP_CMDM_CTRL_REG3](#) 0x8194
 - Command Manager Control 3.*
 - #define [R_XHCI_MEM_PDDIS](#) 0x8198
 - xHC Pulldown Disable Control*
 - #define [R_XHCI_MEM_THROTT](#) 0x819C
 - XHCI Throttle Control.*
 - #define [R_XHCI_MEM_LFPSPM](#) 0x81A0
 - LFPS PM Control.*
 - #define [R_XHCI_MEM_THROTT2](#) 0x81B4
 - XHCI Throttle.*
 - #define [R_XHCI_MEM_LFPSONCOUNT](#) 0x81B8
 - LFPS On Count.*
 - #define [R_XHCI_MEM_D0I2CTRL](#) 0x81BC
 - D0I2 Control Register.*
 - #define [B_XHCI_MEM_D0I2CTRL](#) 0x3FDFFFF0
 - D0I2 Control Register Mask.*
 - #define [B_XHCI_MEM_D0I2CTRL_MSI_IDLE_THRESHOLD](#) 0xFFFF0
 - Bitmask for MSI Idle Threshold.*
 - #define [N_XHCI_MEM_D0I2CTRL_MSI_IDLE_THRESHOLD](#) 4
 - Bitshift for MSI Idle Threshold.*
 - #define [N_XHCI_MEM_D0I2CTRL_MSID0I2PWT](#) 16
 - Bitshift for MSI D0i2 Pre Wake Time.*
 - #define [N_XHCI_MEM_D0I2CTRL_D0I2_ENTRY_HYSTERESIS_TIMER](#) 22
 - Bitshift for D0i2 Entry Hysteresis Timer.*
 - #define [N_XHCI_MEM_D0I2CTRL_D0I2_MIN_RESIDENCY](#) 26
 - Bitshift for D0i2 Minimum Residency.*
 - #define [R_XHCI_MEM_D0I2SCH_ALARM_CTRL](#) 0x81C0
 - D0i2 Scheduler Alarm Control Register.*
 - #define [B_XHCI_MEM_D0I2SCH_ALARM_CTRL](#) 0x1FFF1FFF
 - Bitmask for D0i2 Scheduler Alarm Control Register.*
 - #define [N_XHCI_MEM_D0I2SCH_ALARM_CTRL_D0I2IT](#) 16
 - Bitshift for D0i2 Idle Time.*
-

- #define [R_XHCI_MEM_USB2PMCTRL](#) 0x81C4
USB2 Power Management Control.
 - #define [R_XHCI_MEM_AUX_CTRL_REG3](#) 0x81C8
Aux PM Control 3 Register.
 - #define [R_XHCI_MEM_TRBPRFCTRLREG1](#) 0x81D0
TRB Prefetch Control Register 1.
 - #define [R_XHCI_MEM_TRBPRFCACHEINVREG](#) 0x81D8
TRB Prefetch Cache Invalidation Register 1.
 - #define [B_XHCI_MEM_TRBPRFCACHEINVREG_EN_TRB_FLUSH](#) 0x7F
TRB Flushing for various commands.
 - #define [N_XHCI_MEM_TRBPRFCACHEINVREG_EN_TRB_FLUSH](#) 17
Enable TRB flushing for various command.
 - #define [R_XHCI_MEM_DBGDEV_CTRL_REG1](#) 0x8754
Debug Device Control Register 1.
 - #define [R_XHCI_MEM_PMCTRL2](#) 0x8468
PMCTRL2 - Power Management Control 2.
 - #define [R_XHCI_MEM_MULT_IN_SCH_POLICY](#) 0x82A0
Multiple IN Scheduler Policy Register.
 - #define [R_XHCI_MEM_MULT_IN_FAIRNESS_POLICY_1](#) 0x82A4
Fairness Policy Register 1.
 - #define [R_XHCI_MEM_PMREQ_CTRL_REG](#) 0x83D0
PMREQ Control Register.
 - #define [R_XHCI_MEM_ENH_CLK_GATE_CTRL](#) 0x83D8
Enhanced Clock Gate Control Policy Register.
 - #define [R_XHCI_MEM_USBLEGCTLSTS](#) 0x8470
USB Legacy Support Control Status.
 - #define [B_XHCI_MEM_USBLEGCTLSTS_SMIBAR](#) BIT31
SMI on BAR Status.
 - #define [B_XHCI_MEM_USBLEGCTLSTS_SMIPCIB](#) BIT30
SMI on PCI Command Status.
 - #define [B_XHCI_MEM_USBLEGCTLSTS_SMIOSC](#) BIT29
SMI on OS Ownership Change Status.
 - #define [B_XHCI_MEM_USBLEGCTLSTS_SMIBARE](#) BIT15
SMI on BAR Enable.
 - #define [B_XHCI_MEM_USBLEGCTLSTS_SMIPCICE](#) BIT14
SMI on PCI Command Enable.
 - #define [B_XHCI_MEM_USBLEGCTLSTS_SMIOSE](#) BIT13
SMI on OS Ownership Enable.
 - #define [B_XHCI_MEM_USBLEGCTLSTS_SMIHSEE](#) BIT4
SMI on Host System Error Enable.
 - #define [B_XHCI_MEM_USBLEGCTLSTS_USBSMIE](#) BIT0
USB SMI Enable.
 - #define [R_PCH_XHCI_MEM_USB2PDO](#) 0x84F8
USB2 Port Disable Override register.
 - #define [R_PCH_XHCI_MEM_USB3PDO](#) 0x84FC
USB3 Port Disable Override register.
 - #define [B_XHCI_MEM_SOCHWSTSAVE1_CMD_SSV](#) BIT31
CMD save indication that scratchpad data is valid.
 - #define [R_XHCI_MEM_AUDIO_OFFLOAD_CTR](#) 0x91F4
Audio Offload Control.
 - #define [B_XHCI_MEM_CAPABILITY_ID](#) 0xFF
-

- Capability ID.*

 - #define [B_XHCI_MEM_CAPABILITY_NEXT_CAP_PTR](#) 0xFF00

Next Capability Pointer.
- #define [N_XHCI_MEM_CAPABILITY_NEXT_CAP_PTR](#) 8

Byte shift for next capability pointer.
- #define [V_XHCI_MEM_DBC_DCID](#) 0x0A

Debug Capability ID.
- #define [R_XHCI_MEM_DBC_DCCTRL](#) 0x20

Debug Capability Control Register (DCCTRL)
- #define [B_XHCI_MEM_DBC_DCCTRL_DCR](#) BIT0

Debug Capability - DbC Run (DCR)
- #define [R_XHCI_MEM_DBC_DCST](#) 0x24

Debug Capability Status Register (DCST)
- #define [B_XHCI_MEM_DBC_DCST_DBG_PORT_NUMBER](#) 0xFF

Debug Port Number Mask.
- #define [N_XHCI_MEM_DBC_DCST_DBG_PORT_NUMBER](#) 24

Debug Port Number Offset in DCST register.
- #define [R_XHCI_MEM_DBC_DBCCTL](#) 0x8760

DBCCTL - DbC Control.
- #define [B_XHCI_MEM_DBC_DBCCTL_DISC_RXD_CNT](#) 0x1F

Soft Disconnect RX Detect Count mask.
- #define [N_XHCI_MEM_DBC_DBCCTL_DISC_RXD_CNT](#) 2

Soft Disconnect RX Detect Count bitshift.
- #define [R_XHCI_MEM_U2OCM](#) 0x90A4

XHC USB2 Overcurrent Pin N Mapping.
- #define [R_XHCI_MEM_U3OCM](#) 0x9124

XHC USB3 Overcurrent Pin N Mapping.
- #define [R_XHCI_PCR_DAP_USB2PORT_STATUS_0](#) 0x508

DAP USB2 Port0 Status 0 Register.
- #define [B_XHCI_PCR_DAP_USB2PORT_STATUS_0_OS](#) 0xFF

Operation State (OS) in DAP USB2 Port<N> Status 0 Register.
- #define [V_XHCI_PCR_DAP_USB2PORT_STATUS_0_OS_DBC](#) 0x40

DBC Operation State.
- #define [R_XDCI_CFG_PMCSR](#) 0x84

Power Management Control and Status Register.
- #define [R_XDCI_CFG_GENERAL_PURPOSER_REG1](#) 0xA0

General Purpose PCI RW Register1.
- #define [R_XDCI_CFG_CPGE](#) 0xA2

Chassis Power Gate Enable.
- #define [R_XDCI_CFG_GENERAL_PURPOSER_REG4](#) 0xAC

General Purpose PCI RW Register4.
- #define [R_XDCI_CFG_GENERAL_INPUT_REG](#) 0xC0

General Input Register.
- #define [R_XDCI_MEM_GCTL](#) 0xC110

Xhci Global Ctrl.
- #define [B_XDCI_MEM_GCTL_GHIBEREN](#) BIT1

Hibernation enable.
- #define [R_XDCI_MEM_GUSB2PHYCFG](#) 0xC200

Global USB2 PHY Configuration Register.
- #define [B_XDCI_MEM_GUSB2PHYCFG_SUSPHY](#) BIT6

Suspend USB2.0 HS/FS/LS PHY.

- #define `R_XDCI_MEM_GUSB3PIPECTL0` 0xC2C0
Global USB3 PIPE Control Register 0.
 - #define `B_XDCI_MEM_GUSB3PIPECTL0_SUSPEN_EN` BIT17
Suspend USB3.0 SS PHY (Suspend_en)
 - #define `B_XDCI_MEM_GUSB3PIPECTL0_UX_IN_PX` BIT27
Ux Exit in Px.
 - #define `R_USB2_PCR_GLOBAL_PORT` 0x4001
USB2 GLOBAL PORT.
 - #define `R_USB2_PCR_PP_LANE_BASE_ADDR` 0x4000
PP LANE base address.
 - #define `V_USB2_PCR_PER_PORT` 0x00
USB2 PER PORT Addr[7:2] = 0x00.
 - #define `V_USB2_PCR_PER_PORT_RXISET` 0x04
PERPORTRXISET bits value in USB2 PER PORT register.
 - #define `V_USB2_PCR_UTMI_MISC_PER_PORT` 0x08
UTMI MISC REG PER PORT Addr[7:2] = 0x08.
 - #define `V_USB2_PCR_PER_PORT_2` 0x26
USB2 PER PORT 2 Addr[7:2] = 0x26.
 - #define `V_USB2_PCR_PER_PORT_2_HSSKEWSEL` 0x01
HSSKEWSEL bits value USB2 PER PORT2 register.
 - #define `V_USB2_PCR_PER_PORT_2_SKEWDELAY` 0x03
HSNPREDRVSEL bits value USB2 PER PORT2 register.
 - #define `R_USB2_PCR_GLB_ADP_VBUS_REG` 0x402B
GLB ADP VBUS REG.
 - #define `R_USB2_PCR_GLOBAL_PORT_2` 0x402C
USB2 GLOBAL PORT 2.
 - #define `R_USB2_PCR_PLLDIVRATIOS_0` 0x7000
PLLDIVRATIOS_0.
 - #define `R_USB2_PCR_CONFIG_0` 0x7008
CONFIG_0.
 - #define `R_USB2_PCR_CONFIG_3` 0x7014
CONFIG_3.
 - #define `R_USB2_PCR_DFT_1` 0x7024
DFT_1.
 - #define `R_USB2_PCR_SFRCONFIG_0` 0x702C
SFRCONFIG_0.
 - #define `R_USB2_PCR_PLL1` 0x7F02
USB2 PLL1.
 - #define `R_USB2_PCR_PLL2` 0x7F03
USB2 PLL2.
 - #define `B_USB2_PCR_PLL2_FORCE_PLL_CYCLE` BIT26
Force PLL Cycle.
 - #define `B_USB2_PCR_PLL2_USB_PLL_LOCK` BIT27
USB PLL Lock.
 - #define `R_USB2_PCR_CFG_COMPBG` 0x7F04
USB2 COMPBG.
 - #define `R_XHCI_MEM_SSIC_CONF_REG2_PORT_1` 0x880C
SSIC Configuration Register 2 Port 1.
 - #define `R_XHCI_MEM_SSIC_CONF_REG2_PORT_2` 0x883C
SSIC Configuration Register 2 Port 2.
-

14.34.1 Detailed Description

Register names for USB Host and device controller.

Conventions:

- Register definition format: Prefix_[GenerationName]_[ComponentName]_SubsystemName_Register↔Space_RegisterName
- Prefix: Definitions beginning with "R_" are registers Definitions beginning with "B_" are bits within registers Definitions beginning with "V_" are meaningful values within the bits Definitions beginning with "S_" are register size Definitions beginning with "N_" are the bit position
- [GenerationName]: Three letter acronym of the generation is used (e.g. SKL,KBL,CNL etc.). Register name without GenerationName applies to all generations.
- [ComponentName]: This field indicates the component name that the register belongs to (e.g. PCH, SA etc.) Register name without ComponentName applies to all components. Register that is specific to -H denoted by "_PCH_H_" in component name. Register that is specific to -LP denoted by "_PCH_LP_" in component name.
- SubsystemName: This field indicates the subsystem name of the component that the register belongs to (e.g. PCIE, USB, SATA, GPIO, PMC etc.).
- RegisterSpace: MEM - MMIO space register of subsystem. IO - IO space register of subsystem. PCR - Private configuration register of subsystem. CFG - PCI configuration space register of subsystem.
- RegisterName: Full register name.

Copyright

INTEL CONFIDENTIAL Copyright 1999 - 2019 Intel Corporation.

The source code contained or described herein and all documents related to the source code ("Material") are owned by Intel Corporation or its suppliers or licensors. Title to the Material remains with Intel Corporation or its suppliers and licensors. The Material may contain trade secrets and proprietary and confidential information of Intel Corporation and its suppliers and licensors, and is protected by worldwide copyright and trade secret laws and treaty provisions. No part of the Material may be used, copied, reproduced, modified, published, uploaded, posted, transmitted, distributed, or disclosed in any way without Intel's prior express written permission.

No license under any patent, copyright, trade secret or other intellectual property right is granted to or conferred upon you by disclosure or delivery of the Materials, either expressly, by implication, inducement, estoppel or otherwise. Any license under such intellectual property rights must be express and approved by Intel in writing.

Unless otherwise agreed by Intel in writing, you may not remove or alter this notice or any other notice embedded in Materials by Intel or Intel's suppliers or licensors in any way.

This file contains an 'Intel Peripheral Driver' and is uniquely identified as "Intel Reference Module" and is licensed for Intel CPUs and chipsets under the terms of your license agreement with Intel or your vendor. This file may be modified by the user, subject to additional terms of the license agreement.

Specification Reference:

14.35 ResetSystemLib.h File Reference

System reset Library Services.

Functions

- VOID [ResetCold](#) (VOID)
This function causes a system-wide reset (cold reset), in which all circuitry within the system returns to its initial state.
- VOID [ResetWarm](#) (VOID)
This function causes a system-wide initialization (warm reset), in which all processors are set to their initial state.
- VOID [ResetShutdown](#) (VOID)
This function causes the system to enter a power state equivalent to the ACPI G2/S5 or G3 states.
- VOID [EnterS3WithImmediateWake](#) (VOID)
This function causes the system to enter S3 and then wake up immediately.
- VOID [ResetPlatformSpecific](#) (IN UINTN DataSize, IN VOID *ResetData)
This function causes a systemwide reset.

14.35.1 Detailed Description

System reset Library Services.

This library class defines a set of methods that reset the whole system.

Copyright (c) 2005 - 2016, Intel Corporation. All rights reserved.

This program and the accompanying materials are licensed and made available under the terms and conditions of the BSD License that accompanies this distribution. The full text of the license may be found at <http://opensource.org/licenses/bsd-license.php>.

THE PROGRAM IS DISTRIBUTED UNDER THE BSD LICENSE ON AN "AS IS" BASIS, WITHOUT WARRANTIES OR REPRESENTATIONS OF ANY KIND, EITHER EXPRESS OR IMPLIED.

14.35.2 Function Documentation

14.35.2.1 EnterS3WithImmediateWake()

```
VOID EnterS3WithImmediateWake (
    VOID )
```

This function causes the system to enter S3 and then wake up immediately.

If this function returns, it means that the system does not support S3 feature.

14.35.2.2 ResetCold()

```
VOID ResetCold (
    VOID )
```

This function causes a system-wide reset (cold reset), in which all circuitry within the system returns to its initial state.

This type of reset is asynchronous to system operation and operates without regard to cycle boundaries.

If this function returns, it means that the system does not support cold reset.

14.35.2.3 ResetPlatformSpecific()

```
VOID ResetPlatformSpecific (
    IN UINTN DataSize,
    IN VOID * ResetData )
```

This function causes a systemwide reset.

The exact type of the reset is defined by the EFI_GUID that follows the Null-terminated Unicode string passed into ResetData. If the platform does not recognize the EFI_GUID in ResetData the platform must pick a supported reset type to perform. The platform may optionally log the parameters from any non-normal reset that occurs.

Parameters

in	<i>DataSize</i>	The size, in bytes, of ResetData.
in	<i>ResetData</i>	The data buffer starts with a Null-terminated string, followed by the EFI_GUID.

14.35.2.4 ResetShutdown()

```
VOID ResetShutdown (
    VOID )
```

This function causes the system to enter a power state equivalent to the ACPI G2/S5 or G3 states.

If this function returns, it means that the system does not support shutdown reset.

14.35.2.5 ResetWarm()

```
VOID ResetWarm (
    VOID )
```

This function causes a system-wide initialization (warm reset), in which all processors are set to their initial state.

Pending cycles are not corrupted.

If this function returns, it means that the system does not support warm reset.


14.36 SecPlatformLib.h File Reference

Prototype of SEC Platform hook library.

```
#include <Ppi/SecPlatformInformation.h>
```

```
#include <Ppi/SecPerformance.h>
```

Include dependency graph for SecPlatformLib.h:

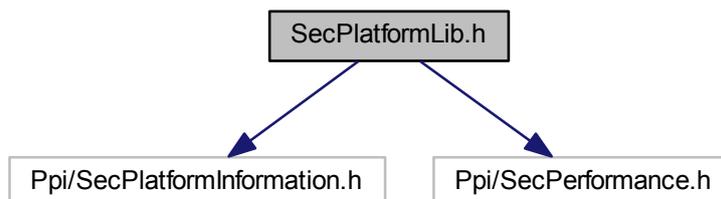

Functions

- EFI_PEI_PPI_DESCRIPTOR * [SecPlatformMain](#) (IN OUT EFI_SEC_PEI_HAND_OFF *SecCoreData)
A developer supplied function to perform platform specific operations.
- EFI_STATUS [SecPlatformInformation](#) (IN CONST EFI_PEI_SERVICES **PeiServices, IN OUT UINT64 *StructureSize, OUT EFI_SEC_PLATFORM_INFORMATION_RECORD *PlatformInformationRecord)
This interface conveys state information out of the Security (SEC) phase into PEI.
- EFI_STATUS [SecGetPerformance](#) (IN CONST EFI_PEI_SERVICES **PeiServices, IN PEI_SEC_PERFORMANCE_PPI *This, OUT FIRMWARE_SEC_PERFORMANCE *Performance)
This interface conveys performance information out of the Security (SEC) phase into PEI.

14.36.1 Detailed Description

Prototype of SEC Platform hook library.

Copyright

INTEL CONFIDENTIAL Copyright 2008 - 2016 Intel Corporation.

The source code contained or described herein and all documents related to the source code ("Material") are owned by Intel Corporation or its suppliers or licensors. Title to the Material remains with Intel Corporation or its suppliers and licensors. The Material may contain trade secrets and proprietary and confidential information of Intel Corporation and its suppliers and licensors, and is protected by worldwide copyright and trade secret laws and treaty provisions. No part of the Material may be used, copied, reproduced, modified, published, uploaded, posted, transmitted, distributed, or disclosed in any way without Intel's prior express written permission.

No license under any patent, copyright, trade secret or other intellectual property right is granted to or conferred upon you by disclosure or delivery of the Materials, either expressly, by implication, inducement, estoppel or otherwise. Any license under such intellectual property rights must be express and approved by Intel in writing.

Unless otherwise agreed by Intel in writing, you may not remove or alter this notice or any other notice embedded in Materials by Intel or Intel's suppliers or licensors in any way.

This file contains a 'Sample Driver' and is licensed as such under the terms of your license agreement with Intel or your vendor. This file may be modified by the user, subject to the additional terms of the license agreement.

Specification Reference:

14.36.2 Function Documentation

14.36.2.1 SecGetPerformance()

```
EFI_STATUS SecGetPerformance (
    IN CONST EFI_PEI_SERVICES ** PeiServices,
    IN PEI_SEC_PERFORMANCE_PPI * This,
    OUT FIRMWARE_SEC_PERFORMANCE * Performance )
```

This interface conveys performance information out of the Security (SEC) phase into PEI.

This service is published by the SEC phase. The SEC phase handoff has an optional EFI_PEI_PPI_DESCRIPTOR list as its final argument when control is passed from SEC into the PEI Foundation. As such, if the platform supports collecting performance data in SEC, this information is encapsulated into the data structure abstracted by this service. This information is collected for the boot-strap processor (BSP) on IA-32.

Parameters

in	<i>PeiServices</i>	The pointer to the PEI Services Table.
in	<i>This</i>	The pointer to this instance of the PEI_SEC_PERFORMANCE_PPI.
out	<i>Performance</i>	The pointer to performance data collected in SEC phase.

Return values

<i>EFI_SUCCESS</i>	The data was successfully returned.
--------------------	-------------------------------------

14.36.2.2 SecPlatformInformation()

```
EFI_STATUS SecPlatformInformation (
    IN CONST EFI_PEI_SERVICES ** PeiServices,
    IN OUT UINT64 * StructureSize,
    OUT EFI_SEC_PLATFORM_INFORMATION_RECORD * PlatformInformationRecord )
```

This interface conveys state information out of the Security (SEC) phase into PEI.

Parameters

<i>PeiServices</i>	Pointer to the PEI Services Table.
<i>StructureSize</i>	Pointer to the variable describing size of the input buffer.
<i>PlatformInformationRecord</i>	Pointer to the EFI_SEC_PLATFORM_INFORMATION_RECORD.

Return values

<i>EFI_SUCCESS</i>	The data was successfully returned.
<i>EFI_BUFFER_TOO_SMALL</i>	The buffer was too small.

14.36.2.3 SecPlatformMain()

```
EFI_PEI_PPI_DESCRIPTOR* SecPlatformMain (
    IN OUT EFI_SEC_PEI_HAND_OFF * SecCoreData )
```

A developer supplied function to perform platform specific operations.

It's a developer supplied function to perform any operations appropriate to a given platform. It's invoked just before passing control to PEI core by SEC core. Platform developer may modify the SecCoreData passed to PEI Core. It returns a platform specific PPI list that platform wishes to pass to PEI core. The Generic SEC core module will merge this list to join the final list passed to PEI core.

Parameters

<i>SecCoreData</i>	The same parameter as passing to PEI core. It could be overridden by this function.
--------------------	---


Returns

The platform specific PPI list to be passed to PEI core or NULL if there is no need of such platform specific PPI list.

14.37 SiConfig.h File Reference

Si Config Block.

This graph shows which files directly or indirectly include this file:

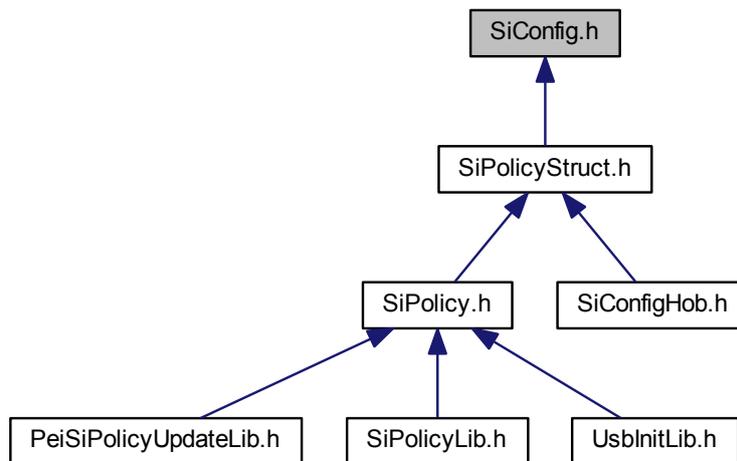**Classes**

- struct [SI_CONFIG](#)

The Silicon Policy allows the platform code to publish a set of configuration information that the RC drivers will use to configure the silicon hardware.

- struct [SVID_SID_VALUE](#)

Subsystem Vendor ID / Subsystem ID.

14.37.1 Detailed Description

Si Config Block.

Copyright

INTEL CONFIDENTIAL Copyright 2016 - 2017 Intel Corporation.

The source code contained or described herein and all documents related to the source code ("Material") are owned by Intel Corporation or its suppliers or licensors. Title to the Material remains with Intel Corporation or its suppliers and licensors. The Material may contain trade secrets and proprietary and confidential information of Intel Corporation and its suppliers and licensors, and is protected by worldwide copyright and trade secret laws and treaty provisions. No part of the Material may be used, copied, reproduced, modified, published, uploaded, posted, transmitted, distributed, or disclosed in any way without Intel's prior express written permission.

No license under any patent, copyright, trade secret or other intellectual property right is granted to or conferred upon you by disclosure or delivery of the Materials, either expressly, by implication, inducement, estoppel or otherwise. Any license under such intellectual property rights must be express and approved by Intel in writing.

Unless otherwise agreed by Intel in writing, you may not remove or alter this notice or any other notice embedded in Materials by Intel or Intel's suppliers or licensors in any way.

This file contains an 'Intel Peripheral Driver' and is uniquely identified as "Intel Reference Module" and is licensed for Intel CPUs and chipsets under the terms of your license agreement with Intel or your vendor. This file may be modified by the user, subject to additional terms of the license agreement.

Specification Reference:

14.38 SiConfigBlockLib.h File Reference

Prototype of the SiConfigBlockLib library.

Functions

- UINIT16 [GetComponentConfigBlockTotalSize](#) (IN COMPONENT_BLOCK_ENTRY *ComponentBlocks, IN UINIT16 TotalBlockCount)

GetComponentConfigBlockTotalSize get config block table total size.

- EFI_STATUS [AddComponentConfigBlocks](#) (IN VOID *ConfigBlockTableAddress, IN COMPONENT_BLOCK_ENTRY *ComponentBlocks, IN UINIT16 TotalBlockCount)

AddComponentConfigBlocks add all config blocks.

14.38.1 Detailed Description

Prototype of the SiConfigBlockLib library.

Copyright

INTEL CONFIDENTIAL Copyright 2015 - 2016 Intel Corporation.

The source code contained or described herein and all documents related to the source code ("Material") are owned by Intel Corporation or its suppliers or licensors. Title to the Material remains with Intel Corporation or its suppliers and licensors. The Material may contain trade secrets and proprietary and confidential information of Intel Corporation and its suppliers and licensors, and is protected by worldwide copyright and trade secret laws and treaty provisions. No part of the Material may be used, copied, reproduced, modified, published, uploaded, posted, transmitted, distributed, or disclosed in any way without Intel's prior express written permission.

No license under any patent, copyright, trade secret or other intellectual property right is granted to or conferred upon you by disclosure or delivery of the Materials, either expressly, by implication, inducement, estoppel or otherwise. Any license under such intellectual property rights must be express and approved by Intel in writing.

Unless otherwise agreed by Intel in writing, you may not remove or alter this notice or any other notice embedded in Materials by Intel or Intel's suppliers or licensors in any way.

This file contains an 'Intel Peripheral Driver' and is uniquely identified as "Intel Reference Module" and is licensed for Intel CPUs and chipsets under the terms of your license agreement with Intel or your vendor. This file may be modified by the user, subject to additional terms of the license agreement.

Specification Reference:

14.38.2 Function Documentation

14.38.2.1 AddComponentConfigBlocks()

```
EFI_STATUS AddComponentConfigBlocks (
    IN VOID * ConfigBlockTableAddress,
    IN COMPONENT_BLOCK_ENTRY * ComponentBlocks,
    IN UINT16 TotalBlockCount )
```

AddComponentConfigBlocks add all config blocks.

Parameters

in	<i>ConfigBlockTableAddress</i>	The pointer to add config blocks
in	<i>ComponentBlocks</i>	Config blocks array
in	<i>TotalBlockCount</i>	Number of blocks

Return values

<i>EFI_SUCCESS</i>	The policy default is initialized.
<i>EFI_OUT_OF_RESOURCES</i>	Insufficient resources to create buffer

14.38.2.2 GetComponentConfigBlockTotalSize()

```
UINT16 GetComponentConfigBlockTotalSize (
    IN COMPONENT_BLOCK_ENTRY * ComponentBlocks,
    IN UINT16 TotalBlockCount )
```

GetComponentConfigBlockTotalSize get config block table total size.

Parameters

in	<i>ComponentBlocks</i>	Component blocks array
in	<i>TotalBlockCount</i>	Number of blocks


Return values

Size	of config block table
------	-----------------------

14.39 SiConfigHob.h File Reference

Silicon Config HOB is used for gathering platform related Intel silicon information and config setting.

```
#include <SiPolicyStruct.h>  
Include dependency graph for SiConfigHob.h:
```

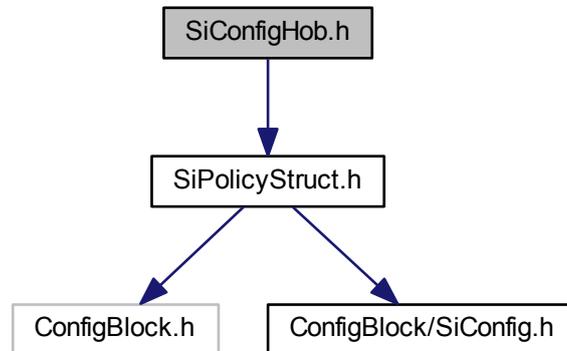

14.39.1 Detailed Description

Silicon Config HOB is used for gathering platform related Intel silicon information and config setting.

Copyright

INTEL CONFIDENTIAL Copyright 2016 - 2017 Intel Corporation.

The source code contained or described herein and all documents related to the source code ("Material") are owned by Intel Corporation or its suppliers or licensors. Title to the Material remains with Intel Corporation or its suppliers and licensors. The Material may contain trade secrets and proprietary and confidential information of Intel Corporation and its suppliers and licensors, and is protected by worldwide copyright and trade secret laws and treaty provisions. No part of the Material may be used, copied, reproduced, modified, published, uploaded, posted, transmitted, distributed, or disclosed in any way without Intel's prior express written permission.

No license under any patent, copyright, trade secret or other intellectual property right is granted to or conferred upon you by disclosure or delivery of the Materials, either expressly, by implication, inducement, estoppel or otherwise. Any license under such intellectual property rights must be express and approved by Intel in writing.

Unless otherwise agreed by Intel in writing, you may not remove or alter this notice or any other notice embedded in Materials by Intel or Intel's suppliers or licensors in any way.

This file contains an 'Intel Peripheral Driver' and is uniquely identified as "Intel Reference Module" and is licensed for Intel CPUs and chipsets under the terms of your license agreement with Intel or your vendor. This file may be modified by the user, subject to additional terms of the license agreement.

Specification Reference:

14.40 SiFvi.h File Reference

Header file for Reference code Firmware Version Info Init Lib implementation.

Macros

- #define `TO_BE_FILLED` 0
Non-static SMBIOS table data to be filled later with a dynamically generated value.
- #define `TO_BE_FILLED_STRING` " "
Initial value should not be NULL.
- #define `NO_STRING_AVAILABLE` 0
String references in SMBIOS tables.
- #define `DEFAULT_FVI_DATA`()
The string number for ComponentName and VersionString is always calculated dynamically.
- #define `CPU_FVI_STRING` "Reference Code - CPU"
CPU Data definitions.
- #define `ME_FVI_STRING` "Reference Code - ME"
ME Data definitions.
- #define `PCH_FVI_STRING` "Reference Code - CML PCH"
PCH Data definitions.
- #define `SA_FVI_STRING` "Reference Code - SA - System Agent"
SA Data definitions.

Enumerations

- enum `ME_FVI_INDEX`

Functions

- VOID `BuildFviInfoHob` (VOID)
Function definitions.
- EFI_STATUS `UpdateFviInfo` (IN UINT8 SmbiosOemType)
Update All Smbios FVI OEM Type Data.

14.40.1 Detailed Description

Header file for Reference code Firmware Version Info Init Lib implementation.

Copyright

INTEL CONFIDENTIAL Copyright 2017 - 2019 Intel Corporation.

The source code contained or described herein and all documents related to the source code ("Material") are owned by Intel Corporation or its suppliers or licensors. Title to the Material remains with Intel Corporation or its suppliers and licensors. The Material may contain trade secrets and proprietary and confidential information of Intel Corporation and its suppliers and licensors, and is protected by worldwide copyright and trade secret laws and treaty provisions. No part of the Material may be used, copied, reproduced, modified, published, uploaded, posted, transmitted, distributed, or disclosed in any way without Intel's prior express written permission.

No license under any patent, copyright, trade secret or other intellectual property right is granted to or conferred upon you by disclosure or delivery of the Materials, either expressly, by implication, inducement, estoppel or otherwise. Any license under such intellectual property rights must be express and approved by Intel in writing.

Unless otherwise agreed by Intel in writing, you may not remove or alter this notice or any other notice embedded in Materials by Intel or Intel's suppliers or licensors in any way.

This file contains an 'Intel Peripheral Driver' and is uniquely identified as "Intel Reference Module" and is licensed for Intel CPUs and chipsets under the terms of your license agreement with Intel or your vendor. This file may be modified by the user, subject to additional terms of the license agreement.

Specification Reference:

14.40.2 Macro Definition Documentation

14.40.2.1 DEFAULT_FVI_DATA

```
#define DEFAULT_FVI_DATA( )
```

Value:

```
{ \
  TO_BE_FILLED, \
  TO_BE_FILLED, \
  { \
    TO_BE_FILLED, \
    TO_BE_FILLED, \
    TO_BE_FILLED, \
    TO_BE_FILLED, \
  } \
}
```

The string number for ComponentName and VersionString is always calculated dynamically.

The initial value is ignored and should always be TO_BE_FILLED.

Definition at line 65 of file SiFvi.h.

14.40.2.2 NO_STRING_AVAILABLE

```
#define NO_STRING_AVAILABLE 0
```

String references in SMBIOS tables.

This eliminates the need for pointers. See the DMTF SMBIOS Specification v2.7.1, section 6.1.3.

Definition at line 48 of file SiFvi.h.

14.40.3 Enumeration Type Documentation

14.40.3.1 ME_FVI_INDEX

```
enum ME_FVI_INDEX
```

Enumerator

EnumMeRc	ME Reference Code Version.
EnumMebx	MEBx Version.
EnumMeFw	ME FW Version.

Definition at line 119 of file SiFvi.h.

14.40.4 Function Documentation

14.40.4.1 BuildFviInfoHob()

```
VOID BuildFviInfoHob (
    VOID )
```

Function definitions.

Initialize all Smbios FVI OEM Type Data Hob

14.40.4.2 UpdateFviInfo()

```
EFI_STATUS UpdateFviInfo (
    IN UINT8 SmbiosOemType )
```

Update All Smbios FVI OEM Type Data.

Parameters

<i>SmbiosOemType</i>	- SMBIOS OEM Type
----------------------	-------------------

Return values


<i>EFI_UNSUPPORTED</i>	- Could not locate SMBIOS protocol
<i>EFI_SUCCESS</i>	- Successfully update FVI data

14.41 SiFviLib.h File Reference

Header file for Reference code Firmware Version Info Interface Lib implementation.

```
#include <IndustryStandard/SmBios.h>
```

Include dependency graph for SiFviLib.h:

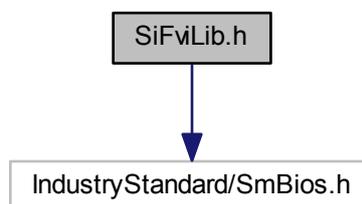

Classes

- struct [RC_VERSION](#)

This structure contains the RC version details for FVI SMBIOS records.

- struct [FVI_DATA](#)

The string number for ComponentName and VersionString is always calculated dynamically.

Macros

- #define [TO_BE_FILLED](#) 0

Non-static SMBIOS table data to be filled later with a dynamically generated value.

- #define [TO_BE_FILLED_STRING](#) " "

Initial value should not be NULL.

- #define [NO_STRING_AVAILABLE](#) 0

String references in SMBIOS tables.

Functions

- EFI_STATUS [AddFviEntry](#) (IN FVI_HEADER Header, IN [FVI_DATA](#) *Data, IN FVI_STRINGS *Strings)

Create the Reference code version info as per Firmware Version Info (FVI) Interface Spec v0.8 and add the SMBIOS table using the SMBIOS protocol.

14.41.1 Detailed Description

Header file for Reference code Firmware Version Info Interface Lib implementation.

Copyright

INTEL CONFIDENTIAL Copyright 2011 - 2016 Intel Corporation.

The source code contained or described herein and all documents related to the source code ("Material") are owned by Intel Corporation or its suppliers or licensors. Title to the Material remains with Intel Corporation or its suppliers and licensors. The Material may contain trade secrets and proprietary and confidential information of Intel Corporation and its suppliers and licensors, and is protected by worldwide copyright and trade secret laws and treaty provisions. No part of the Material may be used, copied, reproduced, modified, published, uploaded, posted, transmitted, distributed, or disclosed in any way without Intel's prior express written permission.

No license under any patent, copyright, trade secret or other intellectual property right is granted to or conferred upon you by disclosure or delivery of the Materials, either expressly, by implication, inducement, estoppel or otherwise. Any license under such intellectual property rights must be express and approved by Intel in writing.

Unless otherwise agreed by Intel in writing, you may not remove or alter this notice or any other notice embedded in Materials by Intel or Intel's suppliers or licensors in any way.

This file contains an 'Intel Peripheral Driver' and is uniquely identified as "Intel Reference Module" and is licensed for Intel CPUs and chipsets under the terms of your license agreement with Intel or your vendor. This file may be modified by the user, subject to additional terms of the license agreement.

Specification Reference:

14.41.2 Macro Definition Documentation

14.41.2.1 NO_STRING_AVAILABLE

```
#define NO_STRING_AVAILABLE 0
```

String references in SMBIOS tables.

This eliminates the need for pointers. See the DMTF SMBIOS Specification v2.7.1, section 6.1.3.

Definition at line 51 of file SiFviLib.h.

14.41.3 Function Documentation

14.41.3.1 AddFviEntry()

```
EFI_STATUS AddFviEntry (
    IN FVI_HEADER Header,
    IN FVI_DATA * Data,
    IN FVI_STRINGS * Strings )
```

Create the Reference code version info as per Firmware Version Info (FVI) Interface Spec v0.8 and add the SMBIOS table using the SMBIOS protocol.

Invoke this routine to add the table entry when all the Fvi data is finalized.

Precondition

- – EFI_SMBIOS_PROTOCOL in Native mode

Parameters

in	<i>Header</i>	The expanded header includes the standard SMBIOS table header, plus the Count of the number of elements in the Data and Strings arrays.
in	<i>*Data</i>	Pointer to an array of Data blocks.
in	<i>*Strings</i>	Pointer to an array of Strings. There are FVI_NUMBER_OF_STRINGS * Count strings total.

Return values

<i>EFI_SUCCESS</i>	- if the data is successfully reported.
<i>EFI_OUT_OF_RESOURCES</i>	- if not able to get resources.
<i>EFI_UNSUPPORTED</i>	- if required DataHub or SMBIOS protocol is not available.

14.42 SiMtrrLib.h File Reference

Header file for Silicon code Mtrr Lib implementation.

Functions

- EFI_STATUS [MtrrTransfer2DefaultWB](#) (OUT MTRR_SETTINGS *MtrrSetting)

Function attempts to transfer MTRRs default WriteBack and update MTRRs Setting.

14.42.1 Detailed Description

Header file for Silicon code Mtrr Lib implementation.

Copyright

INTEL CONFIDENTIAL Copyright 2018 Intel Corporation.

The source code contained or described herein and all documents related to the source code ("Material") are owned by Intel Corporation or its suppliers or licensors. Title to the Material remains with Intel Corporation or its suppliers and licensors. The Material may contain trade secrets and proprietary and confidential information of Intel Corporation and its suppliers and licensors, and is protected by worldwide copyright and trade secret laws and treaty provisions. No part of the Material may be used, copied, reproduced, modified, published, uploaded, posted, transmitted, distributed, or disclosed in any way without Intel's prior express written permission.

No license under any patent, copyright, trade secret or other intellectual property right is granted to or conferred upon you by disclosure or delivery of the Materials, either expressly, by implication, inducement, estoppel or otherwise. Any license under such intellectual property rights must be express and approved by Intel in writing.

Unless otherwise agreed by Intel in writing, you may not remove or alter this notice or any other notice embedded in Materials by Intel or Intel's suppliers or licensors in any way.

This file contains an 'Intel Peripheral Driver' and is uniquely identified as "Intel Reference Module" and is licensed for Intel CPUs and chipsets under the terms of your license agreement with Intel or your vendor. This file may be modified by the user, subject to additional terms of the license agreement.

Specification Reference:

14.42.2 Function Documentation

14.42.2.1 MtrrTransfer2DefaultWB()

```
EFI_STATUS MtrrTransfer2DefaultWB (
    OUT MTRR_SETTINGS * MtrrSetting )
```

Function attempts to transfer MTRRs default WriteBack and update MTRRs Setting.

Parameters

out	<i>MtrrSetting</i>	- A buffer holding all MTRRs content.
-----	--------------------	---------------------------------------

Return values


<i>EFI_SUCCESS</i>	- The function completed successfully. <i>EFI_UNSUPPORTED</i> - Mtrr is not supported. <i>EFI_INVALID_PARAMETER</i> - MtrrSetting is NULL.
--------------------	--

14.43 SiPolicy.h File Reference


Silicon Policy PPI is used for specifying platform related Intel silicon information and policy setting.

```
#include <SiPolicyStruct.h>
#include <PchAccess.h>
#include <PchPolicyCommon.h>
#include <PchPreMemPolicyCommon.h>
#include <ConfigBlock/AmtConfig.h>
#include <MePolicyCommon.h>
#include <SaPolicyCommon.h>
#include <CpuPolicyCommon.h>
#include <TraceHubCommonConfig.h>
```

Include dependency graph for SiPolicy.h:

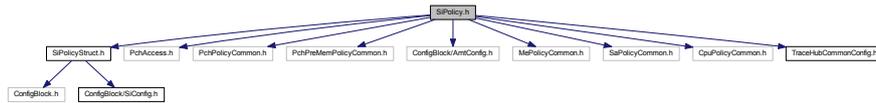

This graph shows which files directly or indirectly include this file:

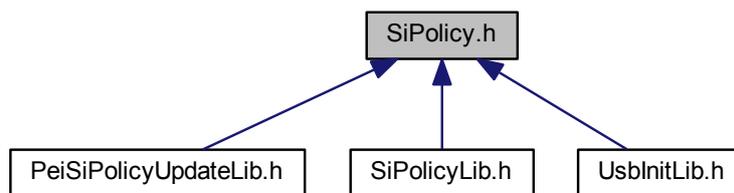

14.43.1 Detailed Description

Silicon Policy PPI is used for specifying platform related Intel silicon information and policy setting.

This PPI is consumed by the silicon PEI modules and carried over to silicon DXE modules.

Copyright

INTEL CONFIDENTIAL Copyright 2014 - 2017 Intel Corporation.

The source code contained or described herein and all documents related to the source code ("Material") are owned by Intel Corporation or its suppliers or licensors. Title to the Material remains with Intel Corporation or its suppliers and licensors. The Material may contain trade secrets and proprietary and confidential information of Intel Corporation and its suppliers and licensors, and is protected by worldwide copyright and trade secret laws and treaty provisions. No part of the Material may be used, copied, reproduced, modified, published, uploaded, posted, transmitted, distributed, or disclosed in any way without Intel's prior express written permission.

No license under any patent, copyright, trade secret or other intellectual property right is granted to or conferred upon you by disclosure or delivery of the Materials, either expressly, by implication, inducement, estoppel or otherwise. Any license under such intellectual property rights must be express and approved by Intel in writing.

Unless otherwise agreed by Intel in writing, you may not remove or alter this notice or any other notice embedded in Materials by Intel or Intel's suppliers or licensors in any way.

This file contains an 'Intel Peripheral Driver' and is uniquely identified as "Intel Reference Module" and is licensed

for Intel CPUs and chipsets under the terms of your license agreement with Intel or your vendor. This file may be modified by the user, subject to additional terms of the license agreement.


Specification Reference:

14.44 SiPolicyLib.h File Reference

Prototype of the SiPolicyLib library.

```
#include <Ppi/SiPolicy.h>
```

Include dependency graph for SiPolicyLib.h:

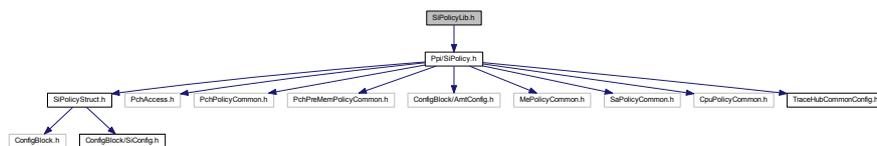

Functions

- VOID [SiPreMemPrintPolicyPpi](#) (IN [SI_PREMEM_POLICY_PPI](#) *SiPreMemPolicyPpi)
Print whole SI_PREMEM_POLICY_PPI and serial out.
- VOID [SiPrintPolicyPpi](#) (IN [SI_POLICY_PPI](#) *SiPolicyPpi)
Print whole SI_POLICY_PPI and serial out.
- EFI_STATUS [SiCreatePreMemConfigBlocks](#) (OUT [SI_PREMEM_POLICY_PPI](#) **SiPreMemPolicyPpi)
SiCreatePreMemConfigBlocks creates the config blocksg of Silicon Policy.
- EFI_STATUS [SiCreateConfigBlocks](#) (OUT [SI_POLICY_PPI](#) **SiPolicyPpi)
SiCreateConfigBlocks creates the config blocksg of Silicon Policy.
- EFI_STATUS [SiPreMemInstallPolicyPpi](#) (IN [SI_PREMEM_POLICY_PPI](#) *SiPreMemPolicyPpi)
SiPreMemInstallPolicyPpi installs SiPreMemPolicyPpi.
- EFI_STATUS [SiInstallPolicyPpi](#) (IN [SI_POLICY_PPI](#) *SiPolicyPpi)
SiInstallPolicyPpi installs SiPolicyPpi.
- VOID [DumpSiPolicy](#) (IN [SI_POLICY_PPI](#) *SiPolicyPpi)
Print out all silicon policy information.
- UINT32 [TraceHubCalculateTotalBufferSize](#) (IN [SI_PREMEM_POLICY_PPI](#) *SiPreMemPolicyPpi)
Calculate total trace buffer size and make it power of two, eliminate the total size within 512MB Please ensure CPU and PCH trace hub policy are configured before calling.
- EFI_STATUS [SiPreMemInstallPolicyReadyPpi](#) (VOID)
SiPreMemInstallPolicyReadyPpi installs SiPreMemPolicyReadyPpi.
- EFI_STATUS [SiInstallPolicyReadyPpi](#) (VOID)
SiInstallPolicyReadyPpi installs SiPolicyReadyPpi.

14.44.1 Detailed Description

Prototype of the SiPolicyLib library.

Copyright

INTEL CONFIDENTIAL Copyright 2014 - 2019 Intel Corporation.

The source code contained or described herein and all documents related to the source code ("Material") are owned by Intel Corporation or its suppliers or licensors. Title to the Material remains with Intel Corporation or its suppliers and licensors. The Material may contain trade secrets and proprietary and confidential information of Intel Corporation and its suppliers and licensors, and is protected by worldwide copyright and trade secret laws and treaty provisions. No part of the Material may be used, copied, reproduced, modified, published, uploaded, posted, transmitted, distributed, or disclosed in any way without Intel's prior express written permission.

No license under any patent, copyright, trade secret or other intellectual property right is granted to or conferred upon you by disclosure or delivery of the Materials, either expressly, by implication, inducement, estoppel or otherwise. Any license under such intellectual property rights must be express and approved by Intel in writing.

Unless otherwise agreed by Intel in writing, you may not remove or alter this notice or any other notice embedded in Materials by Intel or Intel's suppliers or licensors in any way.

This file contains an 'Intel Peripheral Driver' and is uniquely identified as "Intel Reference Module" and is licensed for Intel CPUs and chipsets under the terms of your license agreement with Intel or your vendor. This file may be modified by the user, subject to additional terms of the license agreement.

Specification Reference:**14.44.2 Function Documentation****14.44.2.1 DumpSiPolicy()**

```
VOID DumpSiPolicy (
    IN SI_POLICY_PPI * SiPolicyPpi )
```

Print out all silicon policy information.

Parameters

in	<i>SiPolicyPpi</i>	The pointer to Silicon Policy PPI instance
----	--------------------	--

Return values

<i>none</i>	
-------------	--

14.44.2.2 SiCreateConfigBlocks()

```
EFI_STATUS SiCreateConfigBlocks (
    OUT SI_POLICY_PPI ** SiPolicyPpi )
```

SiCreateConfigBlocks creates the config blocksg of Silicon Policy.

It allocates and zero out buffer, and fills in the Intel default settings.

Parameters

out	<i>SiPolicyPpi</i>	The pointer to get Silicon Policy PPI instance
-----	--------------------	--

Return values

<i>EFI_SUCCESS</i>	The policy default is initialized.
<i>EFI_OUT_OF_RESOURCES</i>	Insufficient resources to create buffer

14.44.2.3 SiCreatePreMemConfigBlocks()

```
EFI_STATUS SiCreatePreMemConfigBlocks (
    OUT SI_PREMEM_POLICY_PPI ** SiPreMemPolicyPpi )
```

SiCreatePreMemConfigBlocks creates the config blocksg of Silicon Policy.

It allocates and zero out buffer, and fills in the Intel default settings.

Parameters

out	<i>SiPreMemPolicyPpi</i>	The pointer to get Silicon PREMEM Policy PPI instance
-----	--------------------------	---

Return values

<i>EFI_SUCCESS</i>	The policy default is initialized.
<i>EFI_OUT_OF_RESOURCES</i>	Insufficient resources to create buffer

14.44.2.4 SiInstallPolicyPpi()

```
EFI_STATUS SiInstallPolicyPpi (
    IN SI_POLICY_PPI * SiPolicyPpi )
```

SiInstallPolicyPpi installs SiPolicyPpi.

While installed, RC assumes the Policy is ready and finalized. So please update and override any setting before calling this function.

Parameters

in	<i>SiPolicyPpi</i>	The pointer to Silicon Policy PPI instance
----	--------------------	--

Return values

<i>EFI_SUCCESS</i>	The policy is installed.
<i>EFI_OUT_OF_RESOURCES</i>	Insufficient resources to create buffer

14.44.2.5 SiInstallPolicyReadyPpi()

```
EFI_STATUS SiInstallPolicyReadyPpi (
    VOID )
```

SiInstallPolicyReadyPpi installs SiPolicyReadyPpi.

While installed, RC assumes the Policy is ready and finalized. So please update and override any setting before calling this function.

Return values

<i>EFI_SUCCESS</i>	The policy is installed.
<i>EFI_OUT_OF_RESOURCES</i>	Insufficient resources to create buffer

14.44.2.6 SiPreMemInstallPolicyPpi()

```
EFI_STATUS SiPreMemInstallPolicyPpi (
    IN SI_PREMEM_POLICY_PPI * SiPreMemPolicyPpi )
```

SiPreMemInstallPolicyPpi installs SiPreMemPolicyPpi.

While installed, RC assumes the Policy is ready and finalized. So please update and override any setting before calling this function.

Parameters

in	<i>SiPreMemPolicyPpi</i>	The pointer to Silicon PREMEM Policy PPI instance
----	--------------------------	---

Return values

<i>EFI_SUCCESS</i>	The policy is installed.
<i>EFI_OUT_OF_RESOURCES</i>	Insufficient resources to create buffer

14.44.2.7 SiPreMemInstallPolicyReadyPpi()

```
EFI_STATUS SiPreMemInstallPolicyReadyPpi (
    VOID )
```

SiPreMemInstallPolicyReadyPpi installs SiPreMemPolicyReadyPpi.

While installed, RC assumes the Policy is ready and finalized. So please update and override any setting before calling this function.

Return values

<i>EFI_SUCCESS</i>	The policy is installed.
<i>EFI_OUT_OF_RESOURCES</i>	Insufficient resources to create buffer

14.44.2.8 SiPreMemPrintPolicyPpi()

```
VOID SiPreMemPrintPolicyPpi (
    IN SI_PREMEM_POLICY_PPI * SiPreMemPolicyPpi )
```

Print whole SI_PREMEM_POLICY_PPI and serial out.

Parameters

in	<i>SiPreMemPolicyPpi</i>	The RC PREMEM Policy PPI instance
----	--------------------------	-----------------------------------

14.44.2.9 SiPrintPolicyPpi()

```
VOID SiPrintPolicyPpi (
    IN SI_POLICY_PPI * SiPolicyPpi )
```

Print whole SI_POLICY_PPI and serial out.

Parameters

in	<i>SiPolicyPpi</i>	The RC Policy PPI instance
----	--------------------	----------------------------

14.44.2.10 TraceHubCalculateTotalBufferSize()

```
UINT32 TraceHubCalculateTotalBufferSize (
    IN SI_PREMEM_POLICY_PPI * SiPreMemPolicyPpi )
```

Calculate total trace buffer size and make it power of two, eliminate the total size within 512MB Please ensure CPU and PCH trace hub policy are configured before calling.

Parameters

in	<i>SiPreMemPolicyPpi</i>	The pointer to get Silicon Policy PPI instance
----	--------------------------	--


Return values

<i>UINT32</i>	Total size of trace buffers
---------------	-----------------------------

14.45 SiPolicyProtocol.h File Reference

Protocol used for specifying platform related Silicon information and policy setting.

```
#include <IndustryStandard/Hsti.h>  
Include dependency graph for SiPolicyProtocol.h:
```

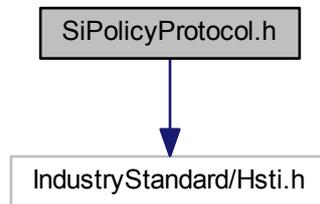

Classes

- struct [DXE_SI_POLICY_PROTOCOL](#)

The protocol allows the platform code to publish a set of configuration information that the Silicon drivers will use to configure the processor in the DXE phase.

14.45.1 Detailed Description

Protocol used for specifying platform related Silicon information and policy setting.

Copyright

INTEL CONFIDENTIAL Copyright 2015 - 2017 Intel Corporation.

The source code contained or described herein and all documents related to the source code ("Material") are owned by Intel Corporation or its suppliers or licensors. Title to the Material remains with Intel Corporation or its suppliers and licensors. The Material may contain trade secrets and proprietary and confidential information of Intel Corporation and its suppliers and licensors, and is protected by worldwide copyright and trade secret laws and treaty provisions. No part of the Material may be used, copied, reproduced, modified, published, uploaded, posted, transmitted, distributed, or disclosed in any way without Intel's prior express written permission.

No license under any patent, copyright, trade secret or other intellectual property right is granted to or conferred upon you by disclosure or delivery of the Materials, either expressly, by implication, inducement, estoppel or otherwise. Any license under such intellectual property rights must be express and approved by Intel in writing.

Unless otherwise agreed by Intel in writing, you may not remove or alter this notice or any other notice embedded in Materials by Intel or Intel's suppliers or licensors in any way.

This file contains an 'Intel Peripheral Driver' and is uniquely identified as "Intel Reference Module" and is licensed for Intel CPUs and chipsets under the terms of your license agreement with Intel or your vendor. This file may be modified by the user, subject to additional terms of the license agreement.


Specification

14.46 SiPolicyStruct.h File Reference


Intel reference code configuration policies.

```
#include <ConfigBlock.h>
#include <ConfigBlock/SiConfig.h>
```

Include dependency graph for SiPolicyStruct.h:

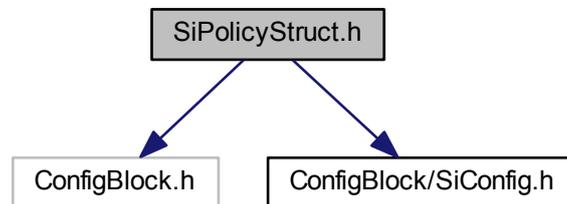

This graph shows which files directly or indirectly include this file:

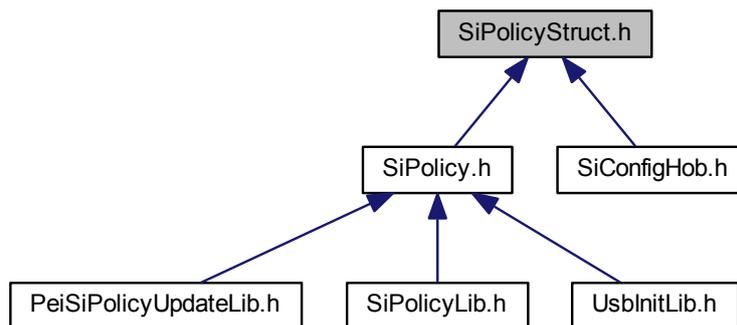

Classes

- [struct _SI_PREMEM_POLICY_STRUCT](#)
SI Policy PPI in Pre-Mem
All SI config block change history will be listed here
- [struct _SI_POLICY_STRUCT](#)
SI Policy PPI
All SI config block change history will be listed here

Macros

- [#define SI_POLICY_REVISION 1](#)
Silicon Policy revision number Any change to this structure will result in an update in the revision number.

- `#define SI_PREMEM_POLICY_REVISION 1`

Silicon pre-memory Policy revision number Any change to this structure will result in an update in the revision number.

14.46.1 Detailed Description

Intel reference code configuration policies.

Copyright

INTEL CONFIDENTIAL Copyright 2014 - 2016 Intel Corporation.

The source code contained or described herein and all documents related to the source code ("Material") are owned by Intel Corporation or its suppliers or licensors. Title to the Material remains with Intel Corporation or its suppliers and licensors. The Material may contain trade secrets and proprietary and confidential information of Intel Corporation and its suppliers and licensors, and is protected by worldwide copyright and trade secret laws and treaty provisions. No part of the Material may be used, copied, reproduced, modified, published, uploaded, posted, transmitted, distributed, or disclosed in any way without Intel's prior express written permission.

No license under any patent, copyright, trade secret or other intellectual property right is granted to or conferred upon you by disclosure or delivery of the Materials, either expressly, by implication, inducement, estoppel or otherwise. Any license under such intellectual property rights must be express and approved by Intel in writing.

Unless otherwise agreed by Intel in writing, you may not remove or alter this notice or any other notice embedded in Materials by Intel or Intel's suppliers or licensors in any way.

This file contains an 'Intel Peripheral Driver' and is uniquely identified as "Intel Reference Module" and is licensed for Intel CPUs and chipsets under the terms of your license agreement with Intel or your vendor. This file may be modified by the user, subject to additional terms of the license agreement.

Specification Reference:

14.46.2 Macro Definition Documentation

14.46.2.1 SI_POLICY_REVISION

```
#define SI_POLICY_REVISION 1
```

Silicon Policy revision number Any change to this structure will result in an update in the revision number.

This member specifies the revision of the Silicon Policy. This field is used to indicate change to the policy structure.

Revision 1:

- Initial version.

Definition at line 51 of file SiPolicyStruct.h.

14.46.2.2 SI_PREMEM_POLICY_REVISION

```
#define SI_PREMEM_POLICY_REVISION 1
```

Silicon pre-memory Policy revision number Any change to this structure will result in an update in the revision number.

Revision 1:

- Initial version.

Definition at line 60 of file SiPolicyStruct.h.

14.47 SmmAccess.h File Reference

EFI SMM Access PPI definition.

Classes

- struct [_PEI_SMM_ACCESS_PPI](#)

EFI SMM Access PPI is used to control the visibility of the SMRAM on the platform.

Typedefs

- typedef EFI_STATUS(* [PEI_SMM_OPEN](#)) (IN EFI_PEI_SERVICES **PeiServices, IN [PEI_SMM_ACCESS_PPI](#) *This, IN UINTN DescriptorIndex)
Opens the SMRAM area to be accessible by a PEIM driver.
- typedef EFI_STATUS(* [PEI_SMM_CLOSE](#)) (IN EFI_PEI_SERVICES **PeiServices, IN [PEI_SMM_ACCESS_PPI](#) *This, IN UINTN DescriptorIndex)
Inhibits access to the SMRAM.
- typedef EFI_STATUS(* [PEI_SMM_LOCK](#)) (IN EFI_PEI_SERVICES **PeiServices, IN [PEI_SMM_ACCESS_PPI](#) *This, IN UINTN DescriptorIndex)
Inhibits access to the SMRAM.
- typedef EFI_STATUS(* [PEI_SMM_CAPABILITIES](#)) (IN EFI_PEI_SERVICES **PeiServices, IN [PEI_SMM_ACCESS_PPI](#) *This, IN OUT UINTN *SmramMapSize, IN OUT EFI_SMRAM_DESCRIPTOR *SmramMap)
Queries the memory controller for the possible regions that will support SMRAM.

14.47.1 Detailed Description

EFI SMM Access PPI definition.

This PPI is used to control the visibility of the SMRAM on the platform. It abstracts the location and characteristics of SMRAM. The expectation is that the north bridge or memory controller would publish this PPI.

The principal functionality found in the memory controller includes the following:

- Exposing the SMRAM to all non-SMM agents, or the "open" state
- Shrouding the SMRAM to all but the SMM agents, or the "closed" state
- Preserving the system integrity, or "locking" the SMRAM, such that the settings cannot be perturbed by either boot service or runtime agents

Copyright (c) 2010, Intel Corporation. All rights reserved.

This program and the accompanying materials are licensed and made available under the terms and conditions of the BSD License which accompanies this distribution. The full text of the license may be found at <http://opensource.org/licenses/bsd-license.php>

THE PROGRAM IS DISTRIBUTED UNDER THE BSD LICENSE ON AN "AS IS" BASIS, WITHOUT WARRANTIES OR REPRESENTATIONS OF ANY KIND, EITHER EXPRESS OR IMPLIED.

14.47.2 Typedef Documentation

14.47.2.1 PEI_SMM_CAPABILITIES

```
typedef EFI_STATUS( * PEI_SMM_CAPABILITIES) (IN EFI_PEI_SERVICES **PeiServices, IN PEI_SMM_ACCESS_PPI *This, IN OUT UINTN *SmmMapSize, IN OUT EFI_SMRAM_DESCRIPTOR *SmmMap)
```

Queries the memory controller for the possible regions that will support SMRAM.

Parameters

<i>PeiServices</i>	General purpose services available to every PEIM.
<i>This</i>	The pointer to the SmmAccessPpi Interface.
<i>SmmMapSize</i>	The pointer to the variable containing size of the buffer to contain the description information.
<i>SmmMap</i>	The buffer containing the data describing the Smm region descriptors.

Return values

<i>EFI_BUFFER_TOO_SMALL</i>	The user did not provide a sufficient buffer.
<i>EFI_SUCCESS</i>	The user provided a sufficiently-sized buffer.

Definition at line 122 of file SmmAccess.h.

14.47.2.2 PEI_SMM_CLOSE

```
typedef EFI_STATUS( * PEI_SMM_CLOSE) (IN EFI_PEI_SERVICES **PeiServices, IN PEI_SMM_ACCESS_PPI *This, IN UINTN DescriptorIndex)
```

Inhibits access to the SMRAM.

This function "closes" SMRAM so that it is not visible while outside of SMM. The function should return *EFI_UNSUPPORTED* if the hardware does not support hiding of SMRAM.

Parameters

<i>PeiServices</i>	General purpose services available to every PEIM.
<i>This</i>	The pointer to the SMM Access Interface.
<i>DescriptorIndex</i>	The region of SMRAM to Close.

Return values

<i>EFI_SUCCESS</i>	The region was successfully closed.
<i>EFI_DEVICE_ERROR</i>	The region could not be closed because locked by chipset.
<i>EFI_INVALID_PARAMETER</i>	The descriptor index was out of bounds.

Definition at line 76 of file SmmAccess.h.

14.47.2.3 PEI_SMM_LOCK

```
typedef EFI_STATUS( * PEI_SMM_LOCK) (IN EFI_PEI_SERVICES **PeiServices, IN PEI_SMM_ACCESS_PPI
*This, IN UINTN DescriptorIndex)
```

Inhibits access to the SMRAM.

This function prohibits access to the SMRAM region. This function is usually implemented such that it is a write-once operation.

Parameters

<i>PeiServices</i>	General purpose services available to every PEIM.
<i>This</i>	The pointer to the SMM Access Interface.
<i>DescriptorIndex</i>	The region of SMRAM to Close.

Return values

<i>EFI_SUCCESS</i>	The region was successfully locked.
<i>EFI_DEVICE_ERROR</i>	The region could not be locked because at least one range is still open.
<i>EFI_INVALID_PARAMETER</i>	The descriptor index was out of bounds.

Definition at line 100 of file SmmAccess.h.

14.47.2.4 PEI_SMM_OPEN

```
typedef EFI_STATUS( * PEI_SMM_OPEN) (IN EFI_PEI_SERVICES **PeiServices, IN PEI_SMM_ACCESS_PPI
*This, IN UINTN DescriptorIndex)
```

Opens the SMRAM area to be accessible by a PEIM driver.

This function "opens" SMRAM so that it is visible while not inside of SMM. The function should return `EFI_UNSUPPORTED` if the hardware does not support hiding of SMRAM. The function should return `EFI_DEVICE_ERROR` if the SMRAM configuration is locked.

Parameters

<i>PeiServices</i>	General purpose services available to every PEIM.
<i>This</i>	The pointer to the SMM Access Interface.
<i>DescriptorIndex</i>	The region of SMRAM to Open.

Return values

<i>EFI_SUCCESS</i>	The region was successfully opened.
<i>EFI_DEVICE_ERROR</i>	The region could not be opened because locked by chipset.
<i>EFI_INVALID_PARAMETER</i>	The descriptor index was out of bounds.

Definition at line 53 of file SmmAccess.h.

14.48 SmmControl.h File Reference

EFI SMM Control PPI definition.

Classes

- struct [_PEI_SMM_CONTROL_PPI](#)
PEI SMM Control PPI is used to initiate SMI/PMI activations.

Typedefs

- typedef EFI_STATUS(* [PEI_SMM_ACTIVATE](#)) (IN EFI_PEI_SERVICES **PeiServices, IN [PEI_SMM_CONTROL_PPI](#) *This, IN OUT INT8 *ArgumentBuffer OPTIONAL, IN OUT UINTN *ArgumentBufferSize OPTIONAL, IN BOOLEAN Periodic OPTIONAL, IN UINTN ActivationInterval OPTIONAL)
Invokes SMI activation from either the preboot or runtime environment.
- typedef EFI_STATUS(* [PEI_SMM_DEACTIVATE](#)) (IN EFI_PEI_SERVICES **PeiServices, IN [PEI_SMM_CONTROL_PPI](#) *This, IN BOOLEAN Periodic OPTIONAL)
Clears any system state that was created in response to the Active call.

14.48.1 Detailed Description

EFI SMM Control PPI definition.

This PPI is used to initiate SMI/PMI activations. This protocol could be published by either:

- A processor driver to abstract the SMI/PMI IPI
- The driver that abstracts the ASIC that is supporting the APM port, such as the ICH in an Intel chipset. Because of the possibility of performing SMI or PMI IPI transactions, the ability to generate this event from a platform chipset agent is an optional capability for both IA-32 and Itanium-based systems.

Copyright (c) 2010, Intel Corporation. All rights reserved.

This program and the accompanying materials are licensed and made available under the terms and conditions of the BSD License which accompanies this distribution. The full text of the license may be found at <http://opensource.org/licenses/bsd-license.php>

THE PROGRAM IS DISTRIBUTED UNDER THE BSD LICENSE ON AN "AS IS" BASIS, WITHOUT WARRANTIES OR REPRESENTATIONS OF ANY KIND, EITHER EXPRESS OR IMPLIED.

14.48.2 Typedef Documentation

14.48.2.1 PEI_SMM_ACTIVATE

```
typedef EFI_STATUS( * PEI_SMM_ACTIVATE) (IN EFI_PEI_SERVICES **PeiServices, IN PEI\_SMM\_CONTROL\_PPI *This, IN OUT INT8 *ArgumentBuffer OPTIONAL, IN OUT UINTN *ArgumentBufferSize OPTIONAL, IN BOOLEAN Periodic OPTIONAL, IN UINTN ActivationInterval OPTIONAL)
```

Invokes SMI activation from either the preboot or runtime environment.

Parameters

<i>PeiServices</i>	General purpose services available to every PEIM.
--------------------	---

Parameters

<i>This</i>	The PEI_SMM_CONTROL_PPI instance.
<i>ArgumentBuffer</i>	The optional sized data to pass into the protocol activation.
<i>ArgumentBufferSize</i>	The optional size of the data.
<i>Periodic</i>	An optional mechanism to periodically repeat activation.
<i>ActivationInterval</i>	An optional parameter to repeat at this period one time or, if the Periodic Boolean is set, periodically.

Return values

<i>EFI_SUCCESS</i>	The SMI/PMI has been engendered.
<i>EFI_DEVICE_ERROR</i>	The timing is unsupported.
<i>EFI_INVALID_PARAMETER</i>	The activation period is unsupported.
<i>EFI_NOT_STARTED</i>	The SMM base service has not been initialized.

Definition at line 53 of file SmmControl.h.

14.48.2.2 PEI_SMM_DEACTIVATE

```
typedef EFI_STATUS( * PEI_SMM_DEACTIVATE) (IN EFI_PEI_SERVICES **PeiServices, IN PEI_SMM_CONTROL_PPI *This, IN BOOLEAN Periodic OPTIONAL)
```

Clears any system state that was created in response to the Active call.

Parameters

<i>PeiServices</i>	General purpose services available to every PEIM.
<i>This</i>	The PEI_SMM_CONTROL_PPI instance.
<i>Periodic</i>	Optional parameter to repeat at this period one time or, if the Periodic Boolean is set, periodically.

Return values

<i>EFI_SUCCESS</i>	The SMI/PMI has been engendered.
<i>EFI_DEVICE_ERROR</i>	The source could not be cleared.
<i>EFI_INVALID_PARAMETER</i>	The service did not support the Periodic input argument.

Definition at line 77 of file SmmControl.h.

14.49 SmmVariable.h File Reference

EFI SMM Variable Protocol is related to EDK II-specific implementation of variables and intended for use as a means to store data in the EFI SMM environment.

Classes

- struct [_EFI_SMM_VARIABLE_PROTOCOL](#)

EFI SMM Variable Protocol is intended for use as a means to store data in the EFI SMM environment.

14.49.1 Detailed Description

EFI SMM Variable Protocol is related to EDK II-specific implementation of variables and intended for use as a means to store data in the EFI SMM environment.

Copyright (c) 2010, Intel Corporation. All rights reserved.

This program and the accompanying materials are licensed and made available under the terms and conditions of the BSD License which accompanies this distribution. The full text of the license may be found at <http://opensource.org/licenses/bsd-license.php>

THE PROGRAM IS DISTRIBUTED UNDER THE BSD LICENSE ON AN "AS IS" BASIS, WITHOUT WARRANTIES OR REPRESENTATIONS OF ANY KIND, EITHER EXPRESS OR IMPLIED.

14.50 SocketLga775Lib.h File Reference

Public include file for CPU definitions and CPU library functions that apply to CPUs that fit into an LGA775 socket.

Classes

- struct [SOCKET_LGA_775_SMM_CPU_STATE32](#)
CPU save-state structure for IA32.
- struct [SOCKET_LGA_775_SMM_CPU_STATE64](#)
CPU save-state structure for X64.
- union [SOCKET_LGA_775_SMM_CPU_STATE](#)
Union of CPU save-state structures for IA32 and X64.

Macros

- #define [SMM_IO_LENGTH_BYTE](#) 0x01
SMM Save State IOMisc related defines.

14.50.1 Detailed Description

Public include file for CPU definitions and CPU library functions that apply to CPUs that fit into an LGA775 socket.

Module Name: [SocketLga775Lib.h](#)

Copyright

INTEL CONFIDENTIAL Copyright 2010 - 2017 Intel Corporation.

The source code contained or described herein and all documents related to the source code ("Material") are owned by Intel Corporation or its suppliers or licensors. Title to the Material remains with Intel Corporation or its suppliers and licensors. The Material may contain trade secrets and proprietary and confidential information of Intel Corporation and its suppliers and licensors, and is protected by worldwide copyright and trade secret laws and treaty provisions. No part of the Material may be used, copied, reproduced, modified, published, uploaded, posted, transmitted, distributed, or disclosed in any way without Intel's prior express written permission.

No license under any patent, copyright, trade secret or other intellectual property right is granted to or conferred upon you by disclosure or delivery of the Materials, either expressly, by implication, inducement, estoppel or otherwise. Any license under such intellectual property rights must be express and approved by Intel in writing.

Unless otherwise agreed by Intel in writing, you may not remove or alter this notice or any other notice embedded in Materials by Intel or Intel's suppliers or licensors in any way.

This file contains an 'Intel Peripheral Driver' and is uniquely identified as "Intel Reference Module" and is licensed for Intel CPUs and chipsets under the terms of your license agreement with Intel or your vendor. This file may be modified by the user, subject to additional terms of the license agreement.

Specification

14.51 StallPpiLib.h File Reference

Header file for a library to install StallPpi.

Functions

- `EFI_STATUS InstallStallPpi (VOID)`
This function is to install StallPpi.

14.51.1 Detailed Description

Header file for a library to install StallPpi.

Copyright

INTEL CONFIDENTIAL Copyright 2017 Intel Corporation.

The source code contained or described herein and all documents related to the source code ("Material") are owned by Intel Corporation or its suppliers or licensors. Title to the Material remains with Intel Corporation or its suppliers and licensors. The Material may contain trade secrets and proprietary and confidential information of Intel Corporation and its suppliers and licensors, and is protected by worldwide copyright and trade secret laws and treaty provisions. No part of the Material may be used, copied, reproduced, modified, published, uploaded, posted, transmitted, distributed, or disclosed in any way without Intel's prior express written permission.

No license under any patent, copyright, trade secret or other intellectual property right is granted to or conferred upon you by disclosure or delivery of the Materials, either expressly, by implication, inducement, estoppel or otherwise. Any license under such intellectual property rights must be express and approved by Intel in writing.

Unless otherwise agreed by Intel in writing, you may not remove or alter this notice or any other notice embedded in Materials by Intel or Intel's suppliers or licensors in any way.

This file contains an 'Intel Peripheral Driver' and is uniquely identified as "Intel Reference Module" and is licensed for Intel CPUs and chipsets under the terms of your license agreement with Intel or your vendor. This file may be modified by the user, subject to additional terms of the license agreement.

Specification Reference:

14.51.2 Function Documentation

14.51.2.1 InstallStallPpi()

```
EFI_STATUS InstallStallPpi (  
    VOID )
```

This function is to install StallPpi.

Return values

<code>EFI_SUCCESS</code>	if Ppi is installed successfully.
--------------------------	-----------------------------------

14.52 TempRamExitPpi.h File Reference

This file defines the Silicon Temp Ram Exit PPI which implements the MTRR values initialization.

Classes

- struct [_FSP_TEMP_RAM_EXIT_PPI](#)
This PPI provides function to program MTRR values.

Macros

- #define [FSP_TEMP_RAM_EXIT_GUID](#)
Global ID for the FSP_TEMP_RAM_EXIT_PPI.

Typedefs

- typedef `EFI_STATUS>(* FSP_TEMP_RAM_EXIT) (IN VOID *TempRamExitParamPtr)`
Program MTRR values and print MTRRs.

14.52.1 Detailed Description

This file defines the Silicon Temp Ram Exit PPI which implements the MTRR values initialization.

Copyright

INTEL CONFIDENTIAL Copyright 2018 Intel Corporation.

The source code contained or described herein and all documents related to the source code ("Material") are owned by Intel Corporation or its suppliers or licensors. Title to the Material remains with Intel Corporation or its suppliers and licensors. The Material may contain trade secrets and proprietary and confidential information of Intel Corporation and its suppliers and licensors, and is protected by worldwide copyright and trade secret laws and treaty provisions. No part of the Material may be used, copied, reproduced, modified, published, uploaded, posted, transmitted, distributed, or disclosed in any way without Intel's prior express written permission.

No license under any patent, copyright, trade secret or other intellectual property right is granted to or conferred upon you by disclosure or delivery of the Materials, either expressly, by implication, inducement, estoppel or otherwise. Any license under such intellectual property rights must be express and approved by Intel in writing.

Unless otherwise agreed by Intel in writing, you may not remove or alter this notice or any other notice embedded in Materials by Intel or Intel's suppliers or licensors in any way.

This file contains an 'Intel Peripheral Driver' and is uniquely identified as "Intel Reference Module" and is licensed for Intel CPUs and chipsets under the terms of your license agreement with Intel or your vendor. This file may be modified by the user, subject to additional terms of the license agreement.

Specification Reference:

14.53 TpmInitialized.h File Reference

Tag GUID that must be installed by the TPM PEIM after the TPM hardware is initialized.

Macros

- #define [PEI_TPM_INITIALIZED_PPI_GUID](#)
Global ID for the PEI_TPM_INITIALIZED_PPI which always uses a NULL interface.
- #define [PEI_TPM_INITIALIZATION_DONE_PPI_GUID](#)
Global ID for the PEI_TPM_INITIALIZATION_DONE_PPI which always uses a NULL interface.

14.53.1 Detailed Description

Tag GUID that must be installed by the TPM PEIM after the TPM hardware is initialized.

PEIMs that must execute after TPM hardware initialization may use this GUID in their dependency expressions.

Copyright (c) 2008 - 2015, Intel Corporation. All rights reserved.


This program and the accompanying materials are licensed and made available under the terms and conditions of the BSD License which accompanies this distribution. The full text of the license may be found at <http://opensource.org/licenses/bsd-license.php>

THE PROGRAM IS DISTRIBUTED UNDER THE BSD LICENSE ON AN "AS IS" BASIS, WITHOUT WARRANTIES OR REPRESENTATIONS OF ANY KIND, EITHER EXPRESS OR IMPLIED.

14.54 TraceHubCommonConfig.h File Reference

Common configurations for CPU and PCH trace hub.

This graph shows which files directly or indirectly include this file:

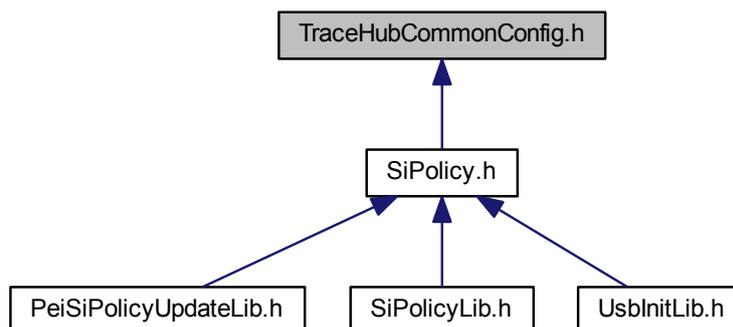

Enumerations

- enum [TRACE_HUB_ENABLE_MODE](#)
The TRACE_HUB_ENABLE_MODE describes the desired TraceHub mode of operation.
- enum [TRACE_BUFFER_SIZE](#)
The TRACE_BUFFER_SIZE describes the desired TraceHub buffer size.

14.54.1 Detailed Description

Common configurations for CPU and PCH trace hub.

Copyright

INTEL CONFIDENTIAL Copyright 2017 Intel Corporation.

The source code contained or described herein and all documents related to the source code ("Material") are owned by Intel Corporation or its suppliers or licensors. Title to the Material remains with Intel Corporation or its suppliers and licensors. The Material may contain trade secrets and proprietary and confidential information of Intel Corporation and its suppliers and licensors, and is protected by worldwide copyright and trade secret laws and treaty provisions. No part of the Material may be used, copied, reproduced, modified, published, uploaded, posted, transmitted, distributed, or disclosed in any way without Intel's prior express written permission.

No license under any patent, copyright, trade secret or other intellectual property right is granted to or conferred upon you by disclosure or delivery of the Materials, either expressly, by implication, inducement, estoppel or otherwise. Any license under such intellectual property rights must be express and approved by Intel in writing.

Unless otherwise agreed by Intel in writing, you may not remove or alter this notice or any other notice embedded in Materials by Intel or Intel's suppliers or licensors in any way.

This file contains an 'Intel Peripheral Driver' and is uniquely identified as "Intel Reference Module" and is licensed for Intel CPUs and chipsets under the terms of your license agreement with Intel or your vendor. This file may be modified by the user, subject to additional terms of the license agreement.

Specification Reference:

14.54.2 Enumeration Type Documentation

14.54.2.1 TRACE_HUB_ENABLE_MODE

enum [TRACE_HUB_ENABLE_MODE](#)

The TRACE_HUB_ENABLE_MODE describes the desired TraceHub mode of operation.

Enumerator

TraceHubModeDisabled	TraceHub Disabled.
TraceHubModeTargetDebugger	TraceHub Target Debugger mode, debug on target device itself, config to PCI mode.
TraceHubModeHostDebugger	TraceHub Host Debugger mode, debugged by host with cable attached, config to ACPI mode.

Definition at line 41 of file TraceHubCommonConfig.h.

14.55 UsbConfig.h File Reference

Common USB policy shared between PCH and CPU Contains general features settings for xHCI and xDCI.

Classes

- struct [USB20_AFE](#)
This structure configures per USB2 AFE settings.
- struct [USB20_PORT_CONFIG](#)
This structure configures per USB2 port physical settings.
- struct [USB30_PORT_CONFIG](#)
This structure describes whether the USB3 Port N is enabled by platform modules.
- struct [XDCI_CONFIG](#)
The [XDCI_CONFIG](#) block describes the configurations of the xDCI Usb Device controller.
- struct [USB_CONFIG](#)
This member describes the expected configuration of the USB controller, Platform modules may need to refer Setup options, schematic, BIOS specification to update this field.

Macros

- #define [PCH_USB_OC_PINS_MAX](#) 8
Maximal possible number of USB Over Current pins.
- #define [B_XHCI_HSIO_CTRL_ADAPT_OFFSET_CFG_EN](#) BIT0
Enable the write to Signed Magnatude number added to the CTLE code bit.
- #define [B_XHCI_HSIO_FILTER_SELECT_N_EN](#) BIT1
Enable the write to LFPS filter select for n.
- #define [B_XHCI_HSIO_FILTER_SELECT_P_EN](#) BIT2
Enable the write to LFPS filter select for p.
- #define [B_XHCI_HSIO_LFPS_CFG_PULLUP_DWN_RES_EN](#) BIT3
Enable the write to olfpscfcgpullupdwnres.

Enumerations

- enum [USB_OVERCURRENT_PIN](#)
Overcurrent pins, the values match the setting of EDS, please refer to EDS for more details.

14.55.1 Detailed Description

Common USB policy shared between PCH and CPU Contains general features settings for xHCI and xDCI.

Copyright

INTEL CONFIDENTIAL Copyright 2017 - 2019 Intel Corporation.

The source code contained or described herein and all documents related to the source code ("Material") are owned by Intel Corporation or its suppliers or licensors. Title to the Material remains with Intel Corporation or its suppliers and licensors. The Material may contain trade secrets and proprietary and confidential information of Intel Corporation and its suppliers and licensors, and is protected by worldwide copyright and trade secret laws and treaty provisions. No part of the Material may be used, copied, reproduced, modified, published, uploaded, posted, transmitted, distributed, or disclosed in any way without Intel's prior express written permission.

No license under any patent, copyright, trade secret or other intellectual property right is granted to or conferred upon you by disclosure or delivery of the Materials, either expressly, by implication, inducement, estoppel or otherwise. Any license under such intellectual property rights must be express and approved by Intel in writing.

Unless otherwise agreed by Intel in writing, you may not remove or alter this notice or any other notice embedded in Materials by Intel or Intel's suppliers or licensors in any way.

This file contains an 'Intel Peripheral Driver' and is uniquely identified as "Intel Reference Module" and is licensed for Intel CPUs and chipsets under the terms of your license agreement with Intel or your vendor. This file may be modified by the user, subject to additional terms of the license agreement.


Specification Reference:

14.56 UsbInitLib.h File Reference

Header file for USB initialization library.

```
#include <Ppi/SiPolicy.h>
```

Include dependency graph for UsbInitLib.h:

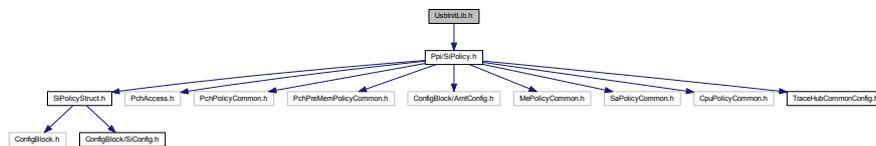

Functions

- VOID [XdcConfigure](#) (IN [USB_CONFIG](#) *UsbConfig, IN UINT64 XhciPciMmBase)
Common entry point for PCH and CPU xDCI controller.
- VOID [XhciConfigure](#) (IN [USB_CONFIG](#) *UsbConfig, IN UINT64 XhciPciMmBase)
Common entry point for PCH and CPU xHCI controller.
- VOID [XhciConfigureAfterInit](#) (IN [USB_CONFIG](#) *UsbConfig, IN UINT64 XhciPciMmBase)
Configure xHCI after initialization.
- VOID [XhciLockConfiguration](#) (IN [USB_CONFIG](#) *UsbConfig, IN UINT64 XhciPciBase)
Locks xHCI configuration by setting the proper lock bits in controller.
- VOID [Usb2AfeProgramming](#) (IN [USB_CONFIG](#) *UsbConfig)
Tune the USB 2.0 high-speed signals quality.

14.56.1 Detailed Description

Header file for USB initialization library.

Copyright

INTEL CONFIDENTIAL Copyright 2017 - 2018 Intel Corporation.

The source code contained or described herein and all documents related to the source code ("Material") are owned by Intel Corporation or its suppliers or licensors. Title to the Material remains with Intel Corporation or its suppliers and licensors. The Material may contain trade secrets and proprietary and confidential information of Intel Corporation and its suppliers and licensors, and is protected by worldwide copyright and trade secret laws and treaty provisions. No part of the Material may be used, copied, reproduced, modified, published, uploaded, posted, transmitted, distributed, or disclosed in any way without Intel's prior express written permission.

No license under any patent, copyright, trade secret or other intellectual property right is granted to or conferred upon you by disclosure or delivery of the Materials, either expressly, by implication, inducement, estoppel or otherwise. Any license under such intellectual property rights must be express and approved by Intel in writing.

Unless otherwise agreed by Intel in writing, you may not remove or alter this notice or any other notice embedded in Materials by Intel or Intel's suppliers or licensors in any way.

This file contains an 'Intel Peripheral Driver' and is uniquely identified as "Intel Reference Module" and is licensed for Intel CPUs and chipsets under the terms of your license agreement with Intel or your vendor. This file may be modified by the user, subject to additional terms of the license agreement.

Specification Reference:

14.56.2 Function Documentation

14.56.2.1 Usb2AfeProgramming()

```
VOID Usb2AfeProgramming (
    IN USB_CONFIG * UsbConfig )
```

Tune the USB 2.0 high-speed signals quality.

Parameters

in	<i>UsbConfig</i>	The USB_CONFIG policy instance
----	------------------	--

14.56.2.2 XdciConfigure()

```
VOID XdciConfigure (
    IN USB_CONFIG * UsbConfig,
    IN UINT64 XhciPciMmBase )
```

Common entry point for PCH and CPU xDCI controller.

Parameters

in	<i>UsbConfig</i>	The USB_CONFIG policy instance
in	<i>XdciPciMmBase</i>	xDCI PCI config space address

14.56.2.3 XhciConfigure()

```
VOID XhciConfigure (
    IN USB_CONFIG * UsbConfig,
    IN UINT64 XhciPciMmBase )
```

Common entry point for PCH and CPU xHCI controller.

Parameters

in	<i>UsbConfig</i>	The USB_CONFIG policy instance
in	<i>XhciPciMmBase</i>	xHCI PCI config space address

14.56.2.4 XhciConfigureAfterInit()

```
VOID XhciConfigureAfterInit (
    IN USB_CONFIG * UsbConfig,
    IN UINT64 XhciPciMmBase )
```

Configure xHCI after initialization.

Parameters

in	<i>UsbConfig</i>	The USB_CONFIG policy instance
in	<i>XhciPciMmBase</i>	XHCI PCI CFG Base Address

14.56.2.5 XhciLockConfiguration()

```
VOID XhciLockConfiguration (
    IN USB_CONFIG * UsbConfig,
    IN UINT64 XhciPciBase )
```

Locks xHCI configuration by setting the proper lock bits in controller.

Parameters


in	<i>UsbConfig</i>	The USB_CONFIG policy instance
in	<i>XhciPciBase</i>	xHCI PCI config space address

14.57 UsbLib.h File Reference

Header file of available functions in general USB Library.

```
#include <Uefi/UefiBaseType.h>
```

Include dependency graph for UsbLib.h:

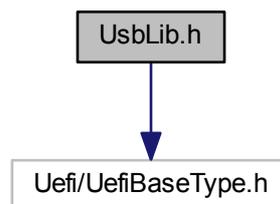

14.57.1 Detailed Description

Header file of available functions in general USB Library.

Copyright

INTEL CONFIDENTIAL Copyright 2017 Intel Corporation.

The source code contained or described herein and all documents related to the source code ("Material") are owned by Intel Corporation or its suppliers or licensors. Title to the Material remains with Intel Corporation or its suppliers and licensors. The Material may contain trade secrets and proprietary and confidential information of Intel Corporation and its suppliers and licensors, and is protected by worldwide copyright and trade secret laws and treaty provisions. No part of the Material may be used, copied, reproduced, modified, published, uploaded, posted, transmitted, distributed, or disclosed in any way without Intel's prior express written permission.

No license under any patent, copyright, trade secret or other intellectual property right is granted to or conferred upon you by disclosure or delivery of the Materials, either expressly, by implication, inducement, estoppel or otherwise. Any license under such intellectual property rights must be express and approved by Intel in writing.

Unless otherwise agreed by Intel in writing, you may not remove or alter this notice or any other notice embedded in Materials by Intel or Intel's suppliers or licensors in any way.

This file contains an 'Intel Peripheral Driver' and is uniquely identified as "Intel Reference Module" and is licensed for Intel CPUs and chipsets under the terms of your license agreement with Intel or your vendor. This file may be modified by the user, subject to additional terms of the license agreement.

Specification Reference:

Index

- [_EFI_LEGACY_BIOS_PROTOCOL, 41](#)
 - [Int86, 42](#)
 - [PrepareToBootEfi, 42](#)
- [_EFI_SMM_VARIABLE_PROTOCOL, 42](#)
- [_FSP_TEMP_RAM_EXIT_PPI, 43](#)
- [_PEI_PREMEM_SI_DEFAULT_POLICY_INIT_PPI, 43](#)
- [_PEI_SI_DEFAULT_POLICY_INIT_PPI, 43](#)
- [_PEI_SMM_ACCESS_PPI, 44](#)
- [_PEI_SMM_CONTROL_PPI, 44](#)
- [_SI_POLICY_STRUCT, 45](#)
- [_SI_PREMEM_POLICY_STRUCT, 45](#)

- [ATAPI_IDENTIFY, 46](#)
- [AUDIO_AZALIA_VERB_TABLE, 46](#)
- [AZALIA_HEADER, 47](#)
- [AcLoadline](#)
 - [FSP_S_CONFIG, 166](#)
- [AcousticNoiseMitigation](#)
 - [FSP_S_CONFIG, 167](#)
- [AcpiChecksum](#)
 - [AslUpdateLib.h, 289](#)
- [AcpiRsdPtrPointer](#)
 - [EFI_COMPATIBILITY16_TABLE, 58](#)
- [AcpiS3Context.h, 287](#)
- [ActiveCoreCount](#)
 - [FSP_M_CONFIG, 88](#)
- [AddComponentConfigBlocks](#)
 - [SiConfigBlockLib.h, 386](#)
- [AddFviEntry](#)
 - [SiFviLib.h, 392](#)
- [AdditionalIrq13Handler](#)
 - [BBS_TABLE, 50](#)
- [AdditionalIrq18Handler](#)
 - [BBS_TABLE, 50](#)
- [AdditionalIrq19Handler](#)
 - [BBS_TABLE, 50](#)
- [AdditionalIrq40Handler](#)
 - [BBS_TABLE, 50](#)
- [Afe](#)
 - [USB20_PORT_CONFIG, 282](#)
- [AmtEnabled](#)
 - [FSP_S_CONFIG, 167](#)
- [AmtKvmEnabled](#)
 - [FSP_S_CONFIG, 167](#)
- [AmtSolEnabled](#)
 - [FSP_S_CONFIG, 167](#)
- [AplIdleManner](#)
 - [FSP_S_TEST_CONFIG, 237](#)
- [ApStartupBase](#)
 - [FSP_M_CONFIG, 88](#)

- [ApertureSize](#)
 - [FSP_M_CONFIG, 88](#)
- [AslUpdateLib.h, 287](#)
 - [AcpiChecksum, 289](#)
 - [InitializeAslUpdateLib, 289](#)
 - [LocateAcpiTableByOemTableId, 289](#)
 - [LocateAcpiTableBySignature, 290](#)
 - [UpdateMethodAslCode, 290](#)
 - [UpdateNameAslCode, 291](#)
- [Attributes](#)
 - [UD_TABLE, 279](#)
- [AutoEasyOverclock](#)
 - [FSP_M_CONFIG, 89](#)
- [AutoThermalReporting](#)
 - [FSP_S_TEST_CONFIG, 238](#)
- [Avx2RatioOffset](#)
 - [FSP_M_CONFIG, 89](#)
- [Avx3RatioOffset](#)
 - [FSP_M_CONFIG, 89](#)

- [BBS_STATUS_FLAGS, 47](#)
 - [Failed, 48](#)
 - [MediaPresent, 48](#)
- [BBS_TABLE, 48](#)
 - [AdditionalIrq13Handler, 50](#)
 - [AdditionalIrq18Handler, 50](#)
 - [AdditionalIrq19Handler, 50](#)
 - [AdditionalIrq40Handler, 50](#)
 - [BootPriority, 51](#)
 - [DeviceType, 51](#)
 - [StatusFlags, 51](#)
- [BbsTableEntryNumberForParentDevice](#)
 - [UD_TABLE, 279](#)
- [BclkAdaptiveVoltage](#)
 - [FSP_M_CONFIG, 89](#)
- [BdatEnable](#)
 - [FSP_M_TEST_CONFIG, 135](#)
- [BdatTestType](#)
 - [FSP_M_TEST_CONFIG, 135](#)
- [BiosAcmBase](#)
 - [FSP_M_CONFIG, 89](#)
- [BiosAcmSize](#)
 - [FSP_M_CONFIG, 89](#)
- [BiosGuard](#)
 - [FSP_M_CONFIG, 90](#)
- [BiosLessThan1MB](#)
 - [EFI_TO_COMPATIBILITY16_INIT_TABLE, 67](#)
- [BiosSize](#)
 - [FSP_M_TEST_CONFIG, 136](#)
- [BistOnReset](#)

- FSP_M_CONFIG, 90
- BootFrequency
 - FSP_M_CONFIG, 90
- BootPriority
 - BBS_TABLE, 51
- BuildFviInfoHob
 - SiFvi.h, 390
- C1StateAutoDemotion
 - FSP_S_TEST_CONFIG, 238
- C1StateUnDemotion
 - FSP_S_TEST_CONFIG, 238
- C1e
 - FSP_S_TEST_CONFIG, 238
- C3StateAutoDemotion
 - FSP_S_TEST_CONFIG, 238
- C3StateUnDemotion
 - FSP_S_TEST_CONFIG, 239
- CHIPSET_INIT_INFO, 51
- CStatePreWake
 - FSP_S_TEST_CONFIG, 239
- CacheAsRamLib.h, 291
 - DisableCacheAsRam, 292
- ChHashEnable
 - FSP_M_CONFIG, 90
- ChHashInterleaveBit
 - FSP_M_CONFIG, 90
- ChHashMask
 - FSP_M_CONFIG, 91
- CkeRankMapping
 - FSP_M_CONFIG, 91
- CleanMemory
 - FSP_M_CONFIG, 91
- CmdRanksTerminated
 - FSP_M_CONFIG, 91
- CnviBtAudioOffload
 - FSP_S_CONFIG, 167
- CnviBtCore
 - FSP_S_CONFIG, 168
- CnviMode
 - FSP_S_CONFIG, 168
- ConfigTdpBios
 - FSP_S_TEST_CONFIG, 239
- ConfigureMscForCpuAndPchTraceHub
 - PeiCpuAndPchTraceHubLib.h, 359
- ConfigureMscForTraceHub
 - PeiCpuAndPchTraceHubLib.h, 360
- ConsoleOutDevice.h, 292
- CoreMaxOcRatio
 - FSP_M_CONFIG, 91
- CorePllVoltageOffset
 - FSP_M_CONFIG, 92
- CoreVfPointOffset
 - FSP_M_CONFIG, 92
- CoreVfPointOffsetMode
 - FSP_M_CONFIG, 92
- CoreVfPointOffsetPrefix
 - FSP_M_CONFIG, 92
- CoreVoltageAdaptive
 - FSP_M_CONFIG, 92
- CoreVoltageMode
 - FSP_M_CONFIG, 93
- CoreVoltageOverride
 - FSP_M_CONFIG, 93
- CpuMpHob
 - FSP_S_CONFIG, 168
- CpuRatio
 - FSP_M_CONFIG, 93
- CpuTraceHubMemReg0Size
 - FSP_M_CONFIG, 93
- CpuTraceHubMemReg1Size
 - FSP_M_CONFIG, 93
- CpuTraceHubMode
 - FSP_M_CONFIG, 94
- CpuWakeUpTimer
 - FSP_S_TEST_CONFIG, 239
- CstCfgCtrlIoMwaitRedirection
 - FSP_S_TEST_CONFIG, 239
- Custom1ConfigTdpControl
 - FSP_S_TEST_CONFIG, 240
- Custom1PowerLimit1
 - FSP_S_TEST_CONFIG, 240
- Custom1PowerLimit1Time
 - FSP_S_TEST_CONFIG, 240
- Custom1PowerLimit2
 - FSP_S_TEST_CONFIG, 240
- Custom1TurboActivationRatio
 - FSP_S_TEST_CONFIG, 240
- Custom2ConfigTdpControl
 - FSP_S_TEST_CONFIG, 240
- Custom2PowerLimit1
 - FSP_S_TEST_CONFIG, 241
- Custom2PowerLimit1Time
 - FSP_S_TEST_CONFIG, 241
- Custom2PowerLimit2
 - FSP_S_TEST_CONFIG, 241
- Custom2TurboActivationRatio
 - FSP_S_TEST_CONFIG, 241
- Custom3ConfigTdpControl
 - FSP_S_TEST_CONFIG, 241
- Custom3PowerLimit1
 - FSP_S_TEST_CONFIG, 242
- Custom3PowerLimit1Time
 - FSP_S_TEST_CONFIG, 242
- Custom3PowerLimit2
 - FSP_S_TEST_CONFIG, 242
- Custom3TurboActivationRatio
 - FSP_S_TEST_CONFIG, 242
- Cx
 - FSP_S_TEST_CONFIG, 242
- DEFAULT_FVI_DATA
 - SiFvi.h, 389
- DEVICE_PRODUCER_DATA_HEADER, 52
- DEVICE_PRODUCER_FLOPPY, 53
- DEVICE_PRODUCER_PARALLEL, 53
- DEVICE_PRODUCER_SERIAL, 54
- DXE_SI_POLICY_PROTOCOL, 54

- Hsti, [55](#)
- Revision, [55](#)
- SmbiosOemTypeFirmwareVersionInfo, [55](#)
- DataGranularity
 - SMM_ATTRIBUTES, [273](#)
- DcLoadline
 - FSP_S_CONFIG, [168](#)
- DciUsb3TypecUfpDbg
 - FSP_M_CONFIG, [94](#)
- Ddr4Mixed2Dpclimit
 - FSP_M_CONFIG, [94](#)
- Ddr4SkipRefreshEn
 - FSP_M_CONFIG, [94](#)
- DdrFreqLimit
 - FSP_M_CONFIG, [94](#)
- DebugInterfaceEnable
 - FSP_S_TEST_CONFIG, [243](#)
- DebugInterfaceLockEnable
 - FSP_S_TEST_CONFIG, [243](#)
- DeltaT12PowerCycleDelayPreMem
 - FSP_M_TEST_CONFIG, [136](#)
- DevIntConfigPtr
 - FSP_S_CONFIG, [168](#)
- DeviceNumber
 - UD_TABLE, [279](#)
- DeviceType
 - BBS_TABLE, [51](#)
- Direction
 - GPIO_CONFIG, [266](#)
- DisableCacheAsRam
 - CacheAsRamLib.h, [292](#)
- DisableDimmChannel0
 - FSP_M_CONFIG, [95](#)
- DisableDimmChannel1
 - FSP_M_CONFIG, [95](#)
- DisableMessageCheck
 - FSP_M_TEST_CONFIG, [136](#)
- DisableMtrrProgram
 - FSP_M_CONFIG, [95](#)
- DisableProcHotOut
 - FSP_S_TEST_CONFIG, [243](#)
- DisableVrThermalAlert
 - FSP_S_TEST_CONFIG, [243](#)
- DmiDeEmphasis
 - FSP_M_CONFIG, [95](#)
- DmiGen3EndPointHint
 - FSP_M_CONFIG, [95](#)
- DmiGen3EndPointPreset
 - FSP_M_CONFIG, [96](#)
- DmiGen3EqPh2Enable
 - FSP_M_TEST_CONFIG, [136](#)
- DmiGen3EqPh3Method
 - FSP_M_TEST_CONFIG, [136](#)
- DmiGen3ProgramStaticEq
 - FSP_M_CONFIG, [96](#)
- DmiGen3RootPortPreset
 - FSP_M_CONFIG, [96](#)
- DmiSuggestedSetting
 - FSP_S_CONFIG, [169](#)
- DmiTS0TW
 - FSP_S_CONFIG, [169](#)
- DmiTS1TW
 - FSP_S_CONFIG, [169](#)
- DmiTS2TW
 - FSP_S_CONFIG, [169](#)
- DmiTS3TW
 - FSP_S_CONFIG, [169](#)
- DualDimmPerChannelBoardType
 - FSP_M_CONFIG, [96](#)
- DualTauBoost
 - FSP_S_TEST_CONFIG, [243](#)
- DumpFspErrorInfo
 - FspErrorInfoLib.h, [301](#)
- DumpSiPolicy
 - SiPolicyLib.h, [396](#)
- DxeHdaNhl.h, [292](#)
- DxeHdaNhlLib.h, [294](#)
 - GetNhlEndpoint, [295](#)
 - GetNhlEndpointDeviceCapabilities, [296](#)
 - GetNhlEndpointDeviceInfo, [296](#)
 - GetNhlEndpointDevicesInfo, [296](#)
 - GetNhlEndpointFormat, [297](#)
 - GetNhlEndpointFormatsConfig, [297](#)
 - GetNhlOedConfig, [297](#)
 - NhlAcpiTableDump, [298](#)
 - NhlEndpointDump, [298](#)
 - NhlFormatDump, [298](#)
 - NhlOedConfigDump, [299](#)
- E820Pointer
 - EFI_COMPATIBILITY16_TABLE, [58](#)
- EFI_BYTE_REGS, [56](#)
- EFI_COMPATIBILITY16_TABLE, [56](#)
 - AcpiRsdPtrPointer, [58](#)
 - E820Pointer, [58](#)
 - EfiSystemTable, [58](#)
 - HiPermanentMemoryAddress, [58](#)
 - HiPermanentMemorySize, [58](#)
 - IrqRoutingTablePointer, [59](#)
 - MpTablePtr, [59](#)
 - OemIdStringPointer, [59](#)
 - OemRevision, [59](#)
 - PciExpressBase, [59](#)
 - Signature, [60](#)
 - UmaAddress, [60](#)
 - UmaSize, [60](#)
- EFI_COMPATIBILITY_FUNCTIONS
 - LegacyBios.h, [329](#)
- EFI_DISPATCH_OPROM_TABLE, [60](#)
 - NumberBbsEntries, [61](#)
 - RuntimeSegment, [61](#)
- EFI_DWORD_REGS, [61](#)
- EFI_EFLAGS_REG, [62](#)
- EFI_FLAGS_REG, [62](#)
- EFI_IA32_REGISTER_SET, [63](#)
- EFI_LEGACY_BIOS_BOOT_UNCONVENTIONAL_D↔EVICE

- LegacyBios.h, 323
- EFI_LEGACY_BIOS_BOOT
 - LegacyBios.h, 322
- EFI_LEGACY_BIOS_CHECK_ROM
 - LegacyBios.h, 324
- EFI_LEGACY_BIOS_COPY_LEGACY_REGION
 - LegacyBios.h, 324
- EFI_LEGACY_BIOS_FARCALL86
 - LegacyBios.h, 325
- EFI_LEGACY_BIOS_GET_BBS_INFO
 - LegacyBios.h, 325
- EFI_LEGACY_BIOS_GET_LEGACY_REGION
 - LegacyBios.h, 326
- EFI_LEGACY_BIOS_INSTALL_ROM
 - LegacyBios.h, 326
- EFI_LEGACY_BIOS_INT86
 - LegacyBios.h, 327
- EFI_LEGACY_BIOS_PREPARE_TO_BOOT_EFI
 - LegacyBios.h, 328
- EFI_LEGACY_BIOS_SHADOW_ALL_LEGACY_OP↔
ROMS
 - LegacyBios.h, 328
- EFI_LEGACY_BIOS_UPDATE_KEYBOARD_LED_S↔
TATUS
 - LegacyBios.h, 328
- EFI_LEGACY_INSTALL_PCI_HANDLER, 63
- EFI_LEGACY_INTERRUPT_GET_LOCATION
 - LegacyInterrupt.h, 331
- EFI_LEGACY_INTERRUPT_GET_NUMBER_PIRQS
 - LegacyInterrupt.h, 331
- EFI_LEGACY_INTERRUPT_READ_PIRQ
 - LegacyInterrupt.h, 332
- EFI_LEGACY_INTERRUPT_WRITE_PIRQ
 - LegacyInterrupt.h, 332
- EFI_SEGMENT
 - LegacyBios.h, 322
- EFI_TO_COMPATIBILITY16_BOOT_TABLE, 64
 - NumberE820Entries, 65
 - OsMemoryAbove1Mb, 65
 - UnconventionalDeviceTable, 66
- EFI_TO_COMPATIBILITY16_INIT_TABLE, 66
 - BiosLessThan1MB, 67
 - ThunkStart, 67
- EFI_WORD_REGS, 67
- EcCmdLock
 - FSP_S_CONFIG, 169
- EcCmdProvisionEav
 - FSP_S_CONFIG, 170
- EfiSystemTable
 - EFI_COMPATIBILITY16_TABLE, 58
- EightCoreRatioLimit
 - FSP_S_TEST_CONFIG, 244
- Eist
 - FSP_S_TEST_CONFIG, 244
- ElectricalConfig
 - GPIO_CONFIG, 266
- EnBER
 - FSP_M_CONFIG, 97
- EnCmdRate
 - FSP_M_CONFIG, 97
- Enable
 - XDCI_CONFIG, 286
- Enable8254ClockGating
 - FSP_S_CONFIG, 170
- Enable8254ClockGatingOnS3
 - FSP_S_CONFIG, 170
- EnableC6Dram
 - FSP_M_CONFIG, 96
- EnableComplianceMode
 - USB_CONFIG, 284
- EnableIltbm
 - FSP_S_TEST_CONFIG, 244
- EnableIltbmDriver
 - FSP_S_TEST_CONFIG, 244
- EnableSgx
 - FSP_M_CONFIG, 97
- EnableTcoTimer
 - FSP_S_CONFIG, 170
- EndOfPostMessage
 - FSP_S_TEST_CONFIG, 244
- EnergyEfficientPState
 - FSP_S_TEST_CONFIG, 245
- EnergyEfficientTurbo
 - FSP_S_TEST_CONFIG, 245
- EnforceEDebugMode
 - FSP_S_TEST_CONFIG, 245
- EnterS3WithImmediateWake
 - ResetSystemLib.h, 380
- EpgEnable
 - FSP_M_CONFIG, 97
- EsataSpeedLimit
 - FSP_S_CONFIG, 170
- FClkFrequency
 - FSP_M_CONFIG, 98
- FSP_ERROR_INFO_HOB, 68
- FSP_M_CONFIG, 68
 - ActiveCoreCount, 88
 - ApStartupBase, 88
 - ApertureSize, 88
 - AutoEasyOverclock, 89
 - Avx2RatioOffset, 89
 - Avx3RatioOffset, 89
 - BclkAdaptiveVoltage, 89
 - BiosAcmBase, 89
 - BiosAcmSize, 89
 - BiosGuard, 90
 - BistOnReset, 90
 - BootFrequency, 90
 - ChHashEnable, 90
 - ChHashInterleaveBit, 90
 - ChHashMask, 91
 - CkeRankMapping, 91
 - CleanMemory, 91
 - CmdRanksTerminated, 91
 - CoreMaxOcRatio, 91
 - CorePIIVoltageOffset, 92

- CoreVfPointOffset, [92](#)
- CoreVfPointOffsetMode, [92](#)
- CoreVfPointOffsetPrefix, [92](#)
- CoreVoltageAdaptive, [92](#)
- CoreVoltageMode, [93](#)
- CoreVoltageOverride, [93](#)
- CpuRatio, [93](#)
- CpuTraceHubMemReg0Size, [93](#)
- CpuTraceHubMemReg1Size, [93](#)
- CpuTraceHubMode, [94](#)
- DciUsb3TypecUfpDbg, [94](#)
- Ddr4Mixed2DpcLimit, [94](#)
- Ddr4SkipRefreshEn, [94](#)
- DdrFreqLimit, [94](#)
- DisableDimmChannel0, [95](#)
- DisableDimmChannel1, [95](#)
- DisableMtrrProgram, [95](#)
- DmiDeEmphasis, [95](#)
- DmiGen3EndPointHint, [95](#)
- DmiGen3EndPointPreset, [96](#)
- DmiGen3ProgramStaticEq, [96](#)
- DmiGen3RootPortPreset, [96](#)
- DualDimmPerChannelBoardType, [96](#)
- EnBER, [97](#)
- EnCmdRate, [97](#)
- EnableC6Dram, [96](#)
- EnableSgx, [97](#)
- EpgEnable, [97](#)
- FClkFrequency, [98](#)
- FastBootRmt, [97](#)
- FivrEfficiency, [98](#)
- FivrFaults, [98](#)
- ForceOltmOrRefresh2x, [98](#)
- FreqSaGvLow, [98](#)
- GdxcEnable, [99](#)
- GmAdr, [99](#)
- GtPllVoltageOffset, [99](#)
- GtPsmiSupport, [99](#)
- GttMmAdr, [99](#)
- HobBufferSize, [100](#)
- HotThresholdCh0Dimm0, [100](#)
- HotThresholdCh0Dimm1, [100](#)
- HotThresholdCh1Dimm0, [100](#)
- HotThresholdCh1Dimm1, [100](#)
- Idd3n, [101](#)
- Idd3p, [101](#)
- IgdDvmt50PreAlloc, [101](#)
- ImrRpSelection, [101](#)
- InitPcieAspmAfterOprom, [101](#)
- InternalGfx, [102](#)
- IsvtloPort, [102](#)
- JtagC10PowerGateDisable, [102](#)
- LpddrDramOdt, [102](#)
- MarginLimitCheck, [102](#)
- McPllVoltageOffset, [102](#)
- MemoryTrace, [103](#)
- MmioSize, [103](#)
- OcLock, [103](#)
- PcdDebugInterfaceFlags, [103](#)
- PcdIlsaSerialUartBase, [103](#)
- PcdSerialDebugBaudRate, [104](#)
- PcdSerialDebugLevel, [104](#)
- PchHdaAudioLinkDmic0, [104](#)
- PchHdaAudioLinkDmic1, [104](#)
- PchHdaAudioLinkHda, [104](#)
- PchHdaAudioLinkSndw1, [105](#)
- PchHdaAudioLinkSndw2, [105](#)
- PchHdaAudioLinkSndw3, [105](#)
- PchHdaAudioLinkSndw4, [105](#)
- PchHdaAudioLinkSsp0, [105](#)
- PchHdaAudioLinkSsp1, [105](#)
- PchHdaAudioLinkSsp2, [106](#)
- PchHdaDspEnable, [106](#)
- PchHdaDspUaaCompliance, [106](#)
- PchHdaSndwBufferRcomp, [106](#)
- PchHdaVcType, [106](#)
- PchLpcEnhancePort8xhDecoding, [107](#)
- PchNumRsvdSmbusAddresses, [107](#)
- PchPort80Route, [107](#)
- PchSmbAlertEnable, [107](#)
- PchTraceHubMemReg0Size, [107](#)
- PchTraceHubMemReg1Size, [108](#)
- PchTraceHubMode, [108](#)
- PcieImrSize, [108](#)
- PcieRpEnableMask, [108](#)
- PeciC10Reset, [108](#)
- PeciSxReset, [109](#)
- PegDataPtr, [109](#)
- PegDisableSpreadSpectrumClocking, [109](#)
- PerCoreHtDisable, [109](#)
- PlatformDebugConsent, [109](#)
- ProbelessTrace, [110](#)
- PwdwnIdleCounter, [110](#)
- RMTLoopCount, [113](#)
- RMT, [113](#)
- RankInterleave, [110](#)
- Ratio, [110](#)
- RcompResistor, [110](#)
- RcompTarget, [111](#)
- RealtimeMemoryTiming, [111](#)
- RefClk, [111](#)
- RhSolution, [111](#)
- RingDownBin, [111](#)
- RingMaxOcRatio, [112](#)
- RingPllVoltageOffset, [112](#)
- RingVoltageAdaptive, [112](#)
- RingVoltageMode, [112](#)
- RingVoltageOffset, [112](#)
- RingVoltageOverride, [112](#)
- RmtPerTask, [113](#)
- SaGv, [113](#)
- SaPllVoltageOffset, [114](#)
- SafeMode, [113](#)
- ScramblerSupport, [114](#)
- SerialDebugMrcLevel, [114](#)
- SerialUartDebugAutoFlow, [114](#)

- SerialIoUartDebugBaudRate, 114
- SerialIoUartDebugControllerNumber, 115
- SerialIoUartDebugDataBits, 115
- SerialIoUartDebugParity, 115
- SerialIoUartDebugStopBits, 115
- SinitMemorySize, 115
- SkipMplnit, 116
- SmbusArpEnable, 116
- SmbusEnable, 116
- SpdAddress Table, 116
- SpdProfileSelected, 116
- tRTP, 117
- TgaSize, 117
- ThrtCkeMinTmr, 117
- ThrtCkeMinTmrLpddr, 117
- TjMaxOffset, 117
- TrainTrace, 117
- TsegSize, 118
- TsodAlarmwindowLockBit, 118
- TsodCriticalEventOnly, 118
- TsodCriticaltripLockBit, 118
- TsodEventMode, 118
- TsodEventOutputControl, 119
- TsodEventPolarity, 119
- TsodManualEnable, 119
- TsodShutdownMode, 119
- TsodTcritMax, 119
- TvbRatioClipping, 120
- TvbVoltageOptimization, 120
- Txt, 120
- TxtDprMemoryBase, 120
- TxtDprMemorySize, 120
- TxtHeapMemorySize, 121
- TxtImplemented, 121
- TxtLcpPdBase, 121
- TxtLcpPdSize, 121
- UserBudgetEnable, 121
- UserThresholdEnable, 122
- VddVoltage, 122
- VmxEnable, 122
- WarmThresholdCh0Dimm0, 122
- WarmThresholdCh0Dimm1, 122
- WarmThresholdCh1Dimm0, 123
- WarmThresholdCh1Dimm1, 123
- FSP_M_RESTRICTED_CONFIG, 123
 - HeciCommunication, 129
 - HeciCommunication3, 130
 - LowMemChannel, 130
 - MsegSize, 130
 - PchHdaTestPowerClockGating, 130
 - PchTestDmiMeUmaRootSpaceCheck, 130
 - PpvBtrEnable, 131
 - SrefCfgIdleTmr, 131
 - StrongWkLeaker, 131
 - TestMenuDprLock, 131
- FSP_M_TEST_CONFIG, 132
 - BdatEnable, 135
 - BdatTestType, 135
 - BiosSize, 136
 - DeltaT12PowerCycleDelayPreMem, 136
 - DisableMessageCheck, 136
 - DmiGen3EqPh2Enable, 136
 - DmiGen3EqPh3Method, 136
 - Gen3SwEqAlwaysAttempt, 137
 - Gen3SwEqEnableVocTest, 137
 - Gen3SwEqJitterDwellTime, 137
 - Gen3SwEqJitterErrorTarget, 137
 - Gen3SwEqNumberOfPresets, 137
 - Gen3SwEqVocDwellTime, 138
 - Gen3SwEqVocErrorTarget, 138
 - HeciCommunication2, 138
 - KtDeviceEnable, 138
 - LockPTMregs, 139
 - OemT12DelayOverride, 139
 - PanelPowerEnable, 139
 - Peg0Gen3EqPh2Enable, 139
 - Peg0Gen3EqPh3Method, 139
 - Peg1Gen3EqPh2Enable, 140
 - Peg1Gen3EqPh3Method, 140
 - Peg2Gen3EqPh2Enable, 140
 - Peg2Gen3EqPh3Method, 140
 - Peg3Gen3EqPh2Enable, 140
 - Peg3Gen3EqPh3Method, 141
 - PegGen3EndPointHint, 141
 - PegGen3EndPointPreset, 141
 - PegGen3ProgramStaticEq, 141
 - PegGen3RootPortPreset, 141
 - PegGenerateBdatMarginTable, 142
 - PegRxCemLoopbackLane, 142
 - PegRxCemNonProtocolAwareness, 142
 - ScanExtGfxForLegacyOpRom, 142
 - SkipMbpHob, 142
 - SmbusDynamicPowerGating, 143
 - SmbusSpdWriteDisable, 143
 - tRRD_L, 145
 - tRRD_S, 145
 - tRd2RdDD, 143
 - tRd2RdDG, 143
 - tRd2RdDR, 144
 - tRd2RdSG, 144
 - tRd2WrDD, 144
 - tRd2WrDG, 144
 - tRd2WrDR, 144
 - tRd2WrSG, 144
 - tWTR_L, 146
 - tWTR_S, 147
 - tWr2RdDD, 145
 - tWr2RdDG, 145
 - tWr2RdDR, 145
 - tWr2RdSG, 146
 - tWr2WrDD, 146
 - tWr2WrDG, 146
 - tWr2WrDR, 146
 - tWr2WrSG, 146
 - TotalFlashSize, 143
 - TxtAcheckRequest, 147

- WdtDisableAndLock, 147
 - FSP_S_CONFIG, 147
 - AcLoadline, 166
 - AcousticNoiseMitigation, 167
 - AmtEnabled, 167
 - AmtKvmEnabled, 167
 - AmtSolEnabled, 167
 - CnviBtAudioOffload, 167
 - CnviBtCore, 168
 - CnviMode, 168
 - CpuMpHob, 168
 - DcLoadline, 168
 - DevIntConfigPtr, 168
 - DmiSuggestedSetting, 169
 - DmiTS0TW, 169
 - DmiTS1TW, 169
 - DmiTS2TW, 169
 - DmiTS3TW, 169
 - EcCmdLock, 169
 - EcCmdProvisionEav, 170
 - Enable8254ClockGating, 170
 - Enable8254ClockGatingOnS3, 170
 - EnableTcoTimer, 170
 - EsataSpeedLimit, 170
 - FastPkgCRampDisableFivr, 171
 - FastPkgCRampDisableGt, 171
 - FastPkgCRampDisableIela, 171
 - FastPkgCRampDisableSa, 171
 - FivrRfiFrequency, 171
 - FivrSpreadSpectrum, 172
 - ForcMebxSyncUp, 172
 - FwProgress, 172
 - GpioIrqRoute, 172
 - Heci1Disabled, 172
 - Heci3Enabled, 173
 - IccMax, 173
 - ImonOffset1, 173
 - ImonSlope, 173
 - ImonSlope1, 173
 - IsIVrCmd, 174
 - ManageabilityMode, 174
 - McivrrfiFrequencyAdjust, 174
 - McivrrfiFrequencyPrefix, 174
 - McivrrfiSpreadSpectrum, 174
 - MeUnconfigOnRtcClear, 175
 - NumOfDevIntConfig, 175
 - PchCrid, 175
 - PchDmiAspmCtrl, 175
 - PchDmiTsawEn, 175
 - PchEnableComplianceMode, 175
 - PchEnableDbcObs, 176
 - PchHdaAudioLinkDmic0, 176
 - PchHdaAudioLinkDmic1, 176
 - PchHdaAudioLinkHda, 176
 - PchHdaAudioLinkSndw1, 176
 - PchHdaAudioLinkSndw2, 177
 - PchHdaAudioLinkSndw3, 177
 - PchHdaAudioLinkSndw4, 177
 - PchHdaAudioLinkSsp0, 177
 - PchHdaAudioLinkSsp1, 177
 - PchHdaAudioLinkSsp2, 177
 - PchHdaDspEnable, 178
 - PchHdaDspUaaCompliance, 178
 - PchHdaDispCodecDisconnect, 178
 - PchHdaDispLinkFrequency, 178
 - PchHdaDispLinkTmode, 178
 - PchHdaLinkFrequency, 179
 - PchHdaPme, 179
 - PchHdaSndwBufferRcomp, 179
 - PchHdaSndwLinkIoControlEnabled, 179
 - PchHdaVcType, 179
 - PchHotEnable, 180
 - PchIoApicEntry24_119, 180
 - PchIoApicId, 180
 - PchIshGp0GpioAssign, 180
 - PchIshGp1GpioAssign, 180
 - PchIshGp2GpioAssign, 180
 - PchIshGp3GpioAssign, 181
 - PchIshGp4GpioAssign, 181
 - PchIshGp5GpioAssign, 181
 - PchIshGp6GpioAssign, 181
 - PchIshGp7GpioAssign, 181
 - PchIshI2c0GpioAssign, 182
 - PchIshI2c1GpioAssign, 182
 - PchIshI2c2GpioAssign, 182
 - PchIshPdtUnlock, 182
 - PchIshSpiGpioAssign, 182
 - PchIshUart0GpioAssign, 182
 - PchIshUart1GpioAssign, 183
 - PchLanEnable, 183
 - PchLanLtrEnable, 183
 - PchLegacyIoLowLatency, 183
 - PchLockDownBiosLock, 183
 - PchLockDownRtcMemoryLock, 184
 - PchMemoryThrottlingEnable, 184
 - PchPcieDeviceOverrideTablePtr, 184
 - PchPmDeepSxPol, 184
 - PchPmDisableDsxAcPresentPulldown, 184
 - PchPmDisableNativePowerButton, 185
 - PchPmLanWakeFromDeepSx, 185
 - PchPmLpcClockRun, 185
 - PchPmMeWakeSts, 185
 - PchPmPciePIISsc, 185
 - PchPmPcieWakeFromDeepSx, 186
 - PchPmPmeB0S5Dis, 186
 - PchPmPwrBtnOverridePeriod, 186
 - PchPmPwrCycDur, 186
 - PchPmSlpAMinAssert, 186
 - PchPmSlpLanLowDc, 186
 - PchPmSlpS0Enable, 187
 - PchPmSlpS0Vm070VSupport, 187
 - PchPmSlpS0Vm075VSupport, 187
 - PchPmSlpS0VmRuntimeControl, 187
 - PchPmSlpS3MinAssert, 187
 - PchPmSlpS4MinAssert, 188
 - PchPmSlpStrchSusUp, 188
-

- PchPmSlpSusMinAssert, 188
- PchPmVrAlert, 188
- PchPmWoWlanDeepSxEnable, 189
- PchPmWoWlanEnable, 189
- PchPmWolEnableOverride, 188
- PchPmWolOvrWkSts, 189
- PchPwrOptEnable, 189
- PchScsEmmcHs400TuningRequired, 189
- PchSerialIoI2cPadsTermination, 189
- PchSirqEnable, 190
- PchSirqMode, 190
- PchStartFramePulse, 190
- PchTTEnable, 190
- PchTTLock, 191
- PchTTState13Enable, 191
- PchTsmicLock, 190
- PchUsbHsioFilterSel, 191
- PchUsbHsioRxTuningEnable, 191
- PcieComplianceTestMode, 191
- PcieDisableRootPortClockGating, 192
- PcieEnablePeerMemoryWrite, 192
- PcieEqPh3LaneParamCm, 192
- PcieEqPh3LaneParamCp, 192
- PcieRpAspm, 192
- PcieRpCompletionTimeout, 193
- PcieRpDpcExtensionsMask, 193
- PcieRpDpcMask, 193
- PcieRpFunctionSwap, 193
- PcieRpGen3EqPh3Method, 193
- PcieRpImrEnabled, 194
- PcieRpL1Substates, 194
- PcieRpPcieSpeed, 194
- PcieRpPhysicalSlotNumber, 194
- PcieRpPtmMask, 194
- PcieSwEqCoeffListCm, 194
- PcieSwEqCoeffListCp, 195
- PmcCpuC10GatePinEnable, 195
- PmcDbgMsgEn, 195
- PmcModPhySusPgEnable, 195
- PmcPowerButtonDebounce, 195
- PortUsb20Enable, 196
- PortUsb30Enable, 196
- PreWake, 196
- PsOnEnable, 197
- Psi1Threshold, 196
- Psi2Threshold, 196
- Psi3Enable, 197
- Psi3Threshold, 197
- PsysOffset, 197
- PsysSlope, 197
- PxRcConfig, 198
- RemoteAssistance, 198
- SataEnable, 198
- SataLedEnable, 198
- SataMode, 198
- SataP0TDispFinit, 199
- SataP1TDispFinit, 199
- SataPortsDevSlp, 199
- SataPortsDevSlpResetConfig, 199
- SataPortsDmVal, 199
- SataPortsEnable, 200
- SataPwrOptEnable, 200
- SataRstHddUnlock, 200
- SataRstInterrupt, 200
- SataRstIrrt, 200
- SataRstIrrtOnly, 200
- SataRstLedLocate, 201
- SataRstOromUiBanner, 201
- SataRstPcieDeviceResetDelay, 201
- SataRstRaid0, 201
- SataRstRaid1, 201
- SataRstRaid10, 202
- SataRstRaid5, 202
- SataRstRaidDeviceId, 202
- SataRstSmartStorage, 202
- SataSalpSupport, 202
- SataThermalSuggestedSetting, 202
- ScilrqSelect, 203
- ScsEmmcEnabled, 203
- ScsEmmcHs400Enabled, 203
- ScsSdCardEnabled, 203
- ScsSdCardWpPinEnabled, 203
- ScsUfsEnabled, 204
- SendEcCmd, 204
- SendVrMbxCmd, 204
- SerialIoDebugUartNumber, 204
- SerialIoI2cMode, 204
- SerialIoSpi0CsEnable, 205
- SerialIoSpi0CsPolarity, 205
- SerialIoSpi1CsEnable, 205
- SerialIoSpi1CsPolarity, 205
- SerialIoSpi2CsEnable, 205
- SerialIoSpi2CsPolarity, 206
- SerialIoSpiDefaultCsOutput, 206
- SerialIoSpiMode, 206
- SerialIoUartDataBits, 206
- SerialIoUartDmaEnable, 206
- SerialIoUartMode, 206
- SerialIoUartParity, 207
- SerialIoUartPowerGating, 207
- SerialIoUartStopBits, 207
- ShowSpiController, 207
- SiCsmFlag, 207
- SiNumberOfSsidTableEntry, 208
- SiSsidTablePtr, 208
- SkipMplnitDeprecated, 208
- SlowSlewRateForFivr, 208
- SlowSlewRateForGt, 208
- SlowSlewRateForIa, 209
- SlowSlewRateForSa, 209
- SlpS0DisQForDebug, 209
- SlpS0Override, 209
- SlpS0WithGbeSupport, 209
- SpiFlashCfgLockDown, 210
- TTsuggestedSetting, 211
- TcolrqSelect, 210

- TdcPowerLimit, 210
- TdcTimeWindow, 210
- TetonGlacierCR, 210
- TetonGlacierMode, 211
- TurboMode, 211
- TxtEnable, 211
- Usb2AfePehalfbit, 211
- Usb2AfePetxiset, 212
- Usb2AfePredeemp, 212
- Usb2AfeTxiset, 212
- Usb3HsioTxDeEmph, 212
- Usb3HsioTxDeEmphEnable, 212
- Usb3HsioTxDownscaleAmp, 213
- Usb3HsioTxDownscaleAmpEnable, 213
- Usb3HsioTxRate0UniqTran, 213
- Usb3HsioTxRate0UniqTranEnable, 213
- Usb3HsioTxRate1UniqTran, 213
- Usb3HsioTxRate1UniqTranEnable, 214
- Usb3HsioTxRate2UniqTran, 214
- Usb3HsioTxRate2UniqTranEnable, 214
- Usb3HsioTxRate3UniqTran, 214
- Usb3HsioTxRate3UniqTranEnable, 214
- UsbPdoProgramming, 215
- VrPowerDeliveryDesign, 215
- VrVoltageLimit, 215
- WatchDogEnabled, 215
- WatchDogTimerBios, 215
- WatchDogTimerOs, 215
- XdciEnable, 216
- FSP_S_RESTRICTED_CONFIG, 216
 - PchDmiTestClientObffEn, 223
 - PchDmiTestDelayEnDmiAspm, 223
 - PchDmiTestDmiSecureRegLock, 223
 - PchDmiTestExternalObffEn, 223
 - PchDmiTestInternalObffEn, 223
 - PchDmiTestMemCloseStateEn, 224
 - PchDmiTestOpiPIIPowerGating, 224
 - PchDmiTestPchTcLockDown, 224
 - PchHdaTestConfigLockdown, 224
 - PchHdaTestLowFreqLinkClkSrc, 224
 - PchHdaTestPowerClockGating, 225
 - PchLanTestPchWOLFastSupport, 225
 - PchLockDownTestSmiUnlock, 225
 - PchPmTestPchClearPowerSts, 225
 - PchTestClkGatingXhci, 225
 - PchTestPhlcLock, 226
 - PchTestTscLock, 226
 - PchTestTselLock, 226
 - PchTestUnlockUsbForSvNoa, 226
 - SataTestRstPcieStorageDeviceInterface, 226
 - SiSvPolicyEnable, 226
 - TestCnviLteCoex, 227
 - TestCnviSharedXtalClocking, 227
 - TestCnviWifiLtrEn, 227
 - TestPchPmErDebugMode, 227
 - TestPchPmLatchEventsC10Exit, 227
 - TestPcieMpcSecureRegisterLock, 228
 - TestSkipPostBootSai, 228
- FSP_S_TEST_CONFIG, 228
 - ApIdleManner, 237
 - AutoThermalReporting, 238
 - C1StateAutoDemotion, 238
 - C1StateUnDemotion, 238
 - C1e, 238
 - C3StateAutoDemotion, 238
 - C3StateUnDemotion, 239
 - CStatePreWake, 239
 - ConfigTdpBios, 239
 - CpuWakeUpTimer, 239
 - CstCfgCtrlMwaitRedirection, 239
 - Custom1ConfigTdpControl, 240
 - Custom1PowerLimit1, 240
 - Custom1PowerLimit1Time, 240
 - Custom1PowerLimit2, 240
 - Custom1TurboActivationRatio, 240
 - Custom2ConfigTdpControl, 240
 - Custom2PowerLimit1, 241
 - Custom2PowerLimit1Time, 241
 - Custom2PowerLimit2, 241
 - Custom2TurboActivationRatio, 241
 - Custom3ConfigTdpControl, 241
 - Custom3PowerLimit1, 242
 - Custom3PowerLimit1Time, 242
 - Custom3PowerLimit2, 242
 - Custom3TurboActivationRatio, 242
 - Cx, 242
 - DebugInterfaceEnable, 243
 - DebugInterfaceLockEnable, 243
 - DisableProcHotOut, 243
 - DisableVrThermalAlert, 243
 - DualTauBoost, 243
 - EightCoreRatioLimit, 244
 - Eist, 244
 - EnableIltbm, 244
 - EnableIltbmDriver, 244
 - EndOfPostMessage, 244
 - EnergyEfficientPState, 245
 - EnergyEfficientTurbo, 245
 - EnforceEDebugMode, 245
 - FiveCoreRatioLimit, 245
 - FourCoreRatioLimit, 245
 - HdcControl, 246
 - Hwp, 246
 - HwpInterruptControl, 246
 - IltbmPeriodicSmmTimer, 246
 - MachineCheckEnable, 246
 - MaxRingRatioLimit, 247
 - MctpBroadcastCycle, 247
 - MinRingRatioLimit, 247
 - MlcStreamerPrefetcher, 247
 - MonitorMwaitEnable, 247
 - NumberOfEntries, 247
 - OneCoreRatioLimit, 248
 - PchHdaResetWaitTimer, 248
 - PchLockDownBiosInterface, 248
 - PchLockDownGlobalSmi, 248

- PchPmDisableEnergyReport, 248
- PchSbAccessUnlock, 249
- PchUnlockGpioPads, 249
- PchXhciOclLock, 249
- PcieEnablePort8xhDecode, 249
- PcieRpDptp, 249
- PcieRpSlotPowerLimitScale, 250
- PcieRpSlotPowerLimitValue, 250
- PcieRpUptp, 250
- PkgCStateDemotion, 250
- PkgCStateLimit, 250
- PkgCStateUnDemotion, 251
- PmgCstCfgCtrlLock, 251
- PowerLimit1, 251
- PowerLimit1 Time, 251
- PowerLimit2, 251
- PowerLimit2Power, 252
- PowerLimit3, 252
- PowerLimit4, 252
- ProcHotResponse, 253
- ProcessorTraceEnable, 252
- ProcessorTraceMemBase, 252
- ProcessorTraceMemLength, 252
- ProcessorTraceOutputScheme, 253
- PsysPmax, 253
- PsysPowerLimit1, 253
- PsysPowerLimit1Power, 253
- PsysPowerLimit1Time, 254
- PsysPowerLimit2, 254
- PsysPowerLimit2Power, 254
- RaceToHalt, 254
- SataTestMode, 254
- SevenCoreRatioLimit, 255
- SixCoreRatioLimit, 255
- StateRatio, 255
- StateRatioMax16, 255
- TStates, 257
- TccActivationOffset, 255
- TccOffsetClamp, 256
- TccOffsetLock, 256
- TccOffsetTimeWindowForRatl, 256
- ThreeCoreRatioLimit, 256
- ThreeStrikeCounterDisable, 256
- TimedMwait, 257
- TwoCoreRatioLimit, 257
- FSP_T_CONFIG, 257
 - PcdDebugInterfaceFlags, 258
 - PcdIlsaSerialUartBase, 258
 - PcdLpcUartDebugEnable, 259
 - PcdSerialDebugLevel, 259
 - PcdSerialloUartAutoFlow, 259
 - PcdSerialloUartDataBits, 259
 - PcdSerialloUartDebugEnable, 259
 - PcdSerialloUartNumber, 260
 - PcdSerialloUartParity, 260
 - PcdSerialloUartStopBits, 260
- FSP_T_RESTRICTED_CONFIG, 260
- FSP_T_TEST_CONFIG, 261
 - FSPM_ARCH_CONFIG_PPI, 261
 - FSPM_UPD, 261
 - FSPS_UPD, 262
 - FSPT_CORE_UPD, 263
 - FSPT_UPD, 264
 - FVI_DATA, 265
 - Failed
 - BBS_STATUS_FLAGS, 48
 - FastBootRmt
 - FSP_M_CONFIG, 97
 - FastPkgCRampDisableFivr
 - FSP_S_CONFIG, 171
 - FastPkgCRampDisableGt
 - FSP_S_CONFIG, 171
 - FastPkgCRampDisableIa
 - FSP_S_CONFIG, 171
 - FastPkgCRampDisableSa
 - FSP_S_CONFIG, 171
 - FiveCoreRatioLimit
 - FSP_S_TEST_CONFIG, 245
 - FivrEfficiency
 - FSP_M_CONFIG, 98
 - FivrFaults
 - FSP_M_CONFIG, 98
 - FivrRfiFrequency
 - FSP_S_CONFIG, 171
 - FivrSpreadSpectrum
 - FSP_S_CONFIG, 172
 - ForcMebxSyncUp
 - FSP_S_CONFIG, 172
 - ForceOltmOrRefresh2x
 - FSP_M_CONFIG, 98
 - FourCoreRatioLimit
 - FSP_S_TEST_CONFIG, 245
 - FreqSaGvLow
 - FSP_M_CONFIG, 98
 - FspErrorInfo.h, 299
 - FspErrorInfoLib.h, 300
 - DumpFspErrorInfo, 301
 - FspErrorStatusCodeReportWorker, 301
 - SendFspErrorInfo, 301
 - SendFspErrorInfoStatusCode, 302
 - FspErrorStatusCodeReportWorker
 - FspErrorInfoLib.h, 301
 - FspFixedPcds.h, 302
 - FspInfoHob.h, 303
 - FspUpd.h, 309
 - FspmArchConfigPpi.h, 303
 - FspmUpd.h, 304
 - FspsUpd.h, 306
 - SI_PCH_INT_PIN, 307
 - FsptUpd.h, 308
 - FwProgress
 - FSP_S_CONFIG, 172
 - GPIO_CONFIG, 265
 - Direction, 266
 - ElectricalConfig, 266
 - HostSoftPadOwn, 266

- InterruptConfig, [267](#)
- LockConfig, [267](#)
- OutputState, [267](#)
- PadMode, [267](#)
- PowerConfig, [267](#)
- GPIO_DIRECTION
 - GpioConfig.h, [313](#)
- GPIO_ELECTRICAL_CONFIG
 - GpioConfig.h, [313](#)
- GPIO_HARDWARE_DEFAULT
 - GpioConfig.h, [314](#)
- GPIO_HOSTSW_OWN
 - GpioConfig.h, [314](#)
- GPIO_INT_CONFIG
 - GpioConfig.h, [315](#)
- GPIO_LOCK_CONFIG
 - GpioConfig.h, [315](#)
- GPIO_OTHER_CONFIG
 - GpioConfig.h, [316](#)
- GPIO_OUTPUT_STATE
 - GpioConfig.h, [316](#)
- GPIO_PAD_MODE
 - GpioConfig.h, [316](#)
- GPIO_RESET_CONFIG
 - GpioConfig.h, [316](#)
- GdxcEnable
 - FSP_M_CONFIG, [99](#)
- Gen3SwEqAlwaysAttempt
 - FSP_M_TEST_CONFIG, [137](#)
- Gen3SwEqEnableVocTest
 - FSP_M_TEST_CONFIG, [137](#)
- Gen3SwEqJitterDwellTime
 - FSP_M_TEST_CONFIG, [137](#)
- Gen3SwEqJitterErrorTarget
 - FSP_M_TEST_CONFIG, [137](#)
- Gen3SwEqNumberOfPresets
 - FSP_M_TEST_CONFIG, [137](#)
- Gen3SwEqVocDwellTime
 - FSP_M_TEST_CONFIG, [138](#)
- Gen3SwEqVocErrorTarget
 - FSP_M_TEST_CONFIG, [138](#)
- GetCoefficientsFromPreset
 - PciInitLib.h, [348](#)
- GetComponentConfigBlockTotalSize
 - SiConfigBlockLib.h, [386](#)
- GetFsptApiParameter.h, [310](#)
 - SecGetFsptApiParameter, [311](#)
- GetGenericPcieLowLevelFunctionCalls
 - PciInitLib.h, [349](#)
- GetNhlEndpoint
 - DxeHdaNhlLib.h, [295](#)
- GetNhlEndpointDeviceCapabilities
 - DxeHdaNhlLib.h, [296](#)
- GetNhlEndpointDeviceInfo
 - DxeHdaNhlLib.h, [296](#)
- GetNhlEndpointDevicesInfo
 - DxeHdaNhlLib.h, [296](#)
- GetNhlEndpointFormat
 - DxeHdaNhlLib.h, [297](#)
- GetNhlEndpointFormatsConfig
 - DxeHdaNhlLib.h, [297](#)
- GetNhlOedConfig
 - DxeHdaNhlLib.h, [297](#)
- GetTraceHubMtbBar
 - PeiCpuAndPchTraceHubLib.h, [360](#)
- GetTraceHubPciBase
 - PeiCpuAndPchTraceHubLib.h, [360](#)
- GmAdr
 - FSP_M_CONFIG, [99](#)
- GpioConfig.h, [311](#)
 - GPIO_DIRECTION, [313](#)
 - GPIO_ELECTRICAL_CONFIG, [313](#)
 - GPIO_HARDWARE_DEFAULT, [314](#)
 - GPIO_HOSTSW_OWN, [314](#)
 - GPIO_INT_CONFIG, [315](#)
 - GPIO_LOCK_CONFIG, [315](#)
 - GPIO_OTHER_CONFIG, [316](#)
 - GPIO_OUTPUT_STATE, [316](#)
 - GPIO_PAD_MODE, [316](#)
 - GPIO_RESET_CONFIG, [316](#)
- GpioIrqRoute
 - FSP_S_CONFIG, [172](#)
- GpioSampleDef.h, [318](#)
- GtPllVoltageOffset
 - FSP_M_CONFIG, [99](#)
- GtPsmiSupport
 - FSP_M_CONFIG, [99](#)
- GttMmAdr
 - FSP_M_CONFIG, [99](#)
- HDD_INFO, [268](#)
 - Status, [269](#)
- HdcControl
 - FSP_S_TEST_CONFIG, [246](#)
- Heci1Disabled
 - FSP_S_CONFIG, [172](#)
- Heci3Enabled
 - FSP_S_CONFIG, [173](#)
- HeciCommunication
 - FSP_M_RESTRICTED_CONFIG, [129](#)
- HeciCommunication2
 - FSP_M_TEST_CONFIG, [138](#)
- HeciCommunication3
 - FSP_M_RESTRICTED_CONFIG, [130](#)
- HiPermanentMemoryAddress
 - EFI_COMPATIBILITY16_TABLE, [58](#)
- HiPermanentMemorySize
 - EFI_COMPATIBILITY16_TABLE, [58](#)
- HobBufferSize
 - FSP_M_CONFIG, [100](#)
- HostSoftPadOwn
 - GPIO_CONFIG, [266](#)
- HotThresholdCh0Dimm0
 - FSP_M_CONFIG, [100](#)
- HotThresholdCh0Dimm1
 - FSP_M_CONFIG, [100](#)
- HotThresholdCh1Dimm0

- FSP_M_CONFIG, 100
- HotThresholdCh1Dimm1
 - FSP_M_CONFIG, 100
- Hsti
 - DXE_SI_POLICY_PROTOCOL, 55
- Hwp
 - FSP_S_TEST_CONFIG, 246
- HwpInterruptControl
 - FSP_S_TEST_CONFIG, 246
- IccMax
 - FSP_S_CONFIG, 173
- Idd3n
 - FSP_M_CONFIG, 101
- Idd3p
 - FSP_M_CONFIG, 101
- IgdDvmt50PreAlloc
 - FSP_M_CONFIG, 101
- ImonOffset1
 - FSP_S_CONFIG, 173
- ImonSlope
 - FSP_S_CONFIG, 173
- ImonSlope1
 - FSP_S_CONFIG, 173
- ImrRpSelection
 - FSP_M_CONFIG, 101
- InitPcieAspmAfterOprom
 - FSP_M_CONFIG, 101
- InitializeAslUpdateLib
 - AslUpdateLib.h, 289
- InstallStallPpi
 - StallPpiLib.h, 409
- Int86
 - _EFI_LEGACY_BIOS_PROTOCOL, 42
- InternalGfx
 - FSP_M_CONFIG, 102
- InterruptConfig
 - GPIO_CONFIG, 267
- IrqRoutingTablePointer
 - EFI_COMPATIBILITY16_TABLE, 59
- IsDebuggerInUse
 - PeiCpuAndPchTraceHubLib.h, 361
- IsIvrCmd
 - FSP_S_CONFIG, 174
- IsvtIoPort
 - FSP_M_CONFIG, 102
- ItbmPeriodicSmmTimer
 - FSP_S_TEST_CONFIG, 246
- JtagC10PowerGateDisable
 - FSP_M_CONFIG, 102
- KtDeviceEnable
 - FSP_M_TEST_CONFIG, 138
- LEGACY_DEVICE_FLAGS, 269
- LegacyBios.h, 318
 - EFI_COMPATIBILITY_FUNCTIONS, 329
- EFI_LEGACY_BIOS_BOOT_UNCONVENTIONAL_DEVICE, 323
- EFI_LEGACY_BIOS_BOOT, 322
- EFI_LEGACY_BIOS_CHECK_ROM, 324
- EFI_LEGACY_BIOS_COPY_LEGACY_REGION, 324
- EFI_LEGACY_BIOS_FARCALL86, 325
- EFI_LEGACY_BIOS_GET_BBS_INFO, 325
- EFI_LEGACY_BIOS_GET_LEGACY_REGION, 326
- EFI_LEGACY_BIOS_INSTALL_ROM, 326
- EFI_LEGACY_BIOS_INT86, 327
- EFI_LEGACY_BIOS_PREPARE_TO_BOOT_EFI, 328
- EFI_LEGACY_BIOS_SHADOW_ALL_LEGACY_OPROMS, 328
- EFI_LEGACY_BIOS_UPDATE_KEYBOARD_LED_STATUS, 328
- EFI_SEGMENT, 322
- LegacyInterrupt.h, 330
 - EFI_LEGACY_INTERRUPT_GET_LOCATION, 331
 - EFI_LEGACY_INTERRUPT_GET_NUMBER_PIRQS, 331
 - EFI_LEGACY_INTERRUPT_READ_PIRQ, 332
 - EFI_LEGACY_INTERRUPT_WRITE_PIRQ, 332
- LinkIsDowngraded
 - PcieInitLib.h, 349
- LocateAcpiTableByOemTableId
 - AslUpdateLib.h, 289
- LocateAcpiTableBySignature
 - AslUpdateLib.h, 290
- LockConfig
 - GPIO_CONFIG, 267
- LockPTMregs
 - FSP_M_TEST_CONFIG, 139
- LowMemChannel
 - FSP_M_RESTRICTED_CONFIG, 130
- LpddrDramOdt
 - FSP_M_CONFIG, 102
- LtrOverrideEnable
 - USB_CONFIG, 285
- ME_FVI_INDEX
 - SiFvi.h, 389
- MachineCheckEnable
 - FSP_S_TEST_CONFIG, 246
- ManageabilityMode
 - FSP_S_CONFIG, 174
- MarginLimitCheck
 - FSP_M_CONFIG, 102
- MaxRingRatioLimit
 - FSP_S_TEST_CONFIG, 247
- McPllVoltageOffset
 - FSP_M_CONFIG, 102
- McivRfiFrequencyAdjust
 - FSP_S_CONFIG, 174
- McivRfiFrequencyPrefix
 - FSP_S_CONFIG, 174

- McivSpreadSpectrum
 - FSP_S_CONFIG, 174
- MctpBroadcastCycle
 - FSP_S_TEST_CONFIG, 247
- MeUnconfigOnRtcClear
 - FSP_S_CONFIG, 175
- MediaPresent
 - BBS_STATUS_FLAGS, 48
- MemoryTrace
 - FSP_M_CONFIG, 103
- MemoryTypeInfoInformation.h, 332
- MinRingRatioLimit
 - FSP_S_TEST_CONFIG, 247
- MlcStreamerPrefetcher
 - FSP_S_TEST_CONFIG, 247
- MmPciBase
 - MmPciLib.h, 333
- MmPciLib.h, 333
 - MmPciBase, 333
- MmioSize
 - FSP_M_CONFIG, 103
- MonitorMwaitEnable
 - FSP_S_TEST_CONFIG, 247
- MpTablePtr
 - EFI_COMPATIBILITY16_TABLE, 59
- MsegSize
 - FSP_M_RESTRICTED_CONFIG, 130
- MtrrTransfer2DefaultWB
 - SiMtrrLib.h, 393
- NO_STRING_AVAILABLE
 - SiFvi.h, 389
 - SiFviLib.h, 391
- NhltAcpiTableDump
 - DxeHdaNhltLib.h, 298
- NhltEndpointDump
 - DxeHdaNhltLib.h, 298
- NhltFormatDump
 - DxeHdaNhltLib.h, 298
- NhltOedConfigDump
 - DxeHdaNhltLib.h, 299
- NumOfDevIntConfig
 - FSP_S_CONFIG, 175
- NumberBbsEntries
 - EFI_DISPATCH_OPROM_TABLE, 61
- NumberE820Entries
 - EFI_TO_COMPATIBILITY16_BOOT_TABLE, 65
- NumberOfEntries
 - FSP_S_TEST_CONFIG, 247
- OcLock
 - FSP_M_CONFIG, 103
- OemIdStringPointer
 - EFI_COMPATIBILITY16_TABLE, 59
- OemRevision
 - EFI_COMPATIBILITY16_TABLE, 59
- OemT12DelayOverride
 - FSP_M_TEST_CONFIG, 139
- OneCoreRatioLimit
 - FSP_S_TEST_CONFIG, 248
- OsMemoryAbove1Mb
 - EFI_TO_COMPATIBILITY16_BOOT_TABLE, 65
- OutputState
 - GPIO_CONFIG, 267
- OverCurrentEnable
 - USB_CONFIG, 285
- OverCurrentPin
 - USB20_PORT_CONFIG, 282
 - USB30_PORT_CONFIG, 283
- PCIE_CLEAR_ERROR_COUNT
 - PciInitLib.h, 337
- PCIE_CLOSE_MONITOR
 - PciInitLib.h, 338
- PCIE_DATA_LINK_LAYER_LINK_ACTIVE
 - PciInitLib.h, 338
- PCIE_DETECT_ENDPOINT_PRESENCE
 - PciInitLib.h, 338
- PCIE_ENSURE_LINK_IS_HEALTHY
 - PciInitLib.h, 339
- PCIE_EXISTS
 - PciInitLib.h, 339
- PCIE_GET_CURRENT_LINK_SPEED
 - PciInitLib.h, 340
- PCIE_GET_ERROR_COUNT
 - PciInitLib.h, 340
- PCIE_GET_NEGOTIATED_WIDTH
 - PciInitLib.h, 340
- PCIE_GET_PCIE_CAP_OFFSET
 - PciInitLib.h, 340
- PCIE_GET_ROOT_PORTS
 - PciInitLib.h, 341
- PCIE_GET_SLOT_PRESENCE_DETECT
 - PciInitLib.h, 341
- PCIE_GET_TARGET_LINK_SPEED
 - PciInitLib.h, 342
- PCIE_OPEN_MONITOR
 - PciInitLib.h, 342
- PCIE_POLLING_COMPLIANCE_MODE
 - PciInitLib.h, 342
- PCIE_PORT_EQS, 269
- PCIE_PORT_SWEQ_DATA, 270
- PCIE_PROGRAM_PORT_PHASE3_TXEQ
 - PciInitLib.h, 343
- PCIE_PROGRAM_STATIC_GEN3_EQ
 - PciInitLib.h, 343
- PCIE_PROGRAM_UNIFORM_PORT_PHASE3_TXEQ
 - PciInitLib.h, 343
- PCIE_RECOVER_LINK_WIDTH
 - PciInitLib.h, 344
- PCIE_REPORT_LINK_STATUS
 - PciInitLib.h, 344
- PCIE_RESET_ENDPOINT_PERST
 - PciInitLib.h, 344
- PCIE_RETRAIN_LINK
 - PciInitLib.h, 345
- PCIE_RUN_MARGIN_TEST
 - PciInitLib.h, 345

- PCIE_SET_GEN3_PHASE2_BYPASS
 - PciInitLib.h, [346](#)
- PCIE_SET_LINK_DISABLE
 - PciInitLib.h, [346](#)
- PCIE_SET_PCH_GPIO
 - PciInitLib.h, [346](#)
- PCIE_SET_PERST
 - PciInitLib.h, [347](#)
- PCIE_SET_TARGET_LINK_SPEED
 - PciInitLib.h, [347](#)
- PCIE_SWEQ_GPIO_CONFIG, [270](#)
- PCIE_SWEQ_PRESET_SCORE, [270](#)
- PCIE_WAIT_FOR_LO
 - PciInitLib.h, [348](#)
- PEI_SMM_ACTIVATE
 - SmmControl.h, [406](#)
- PEI_SMM_CAPABILITIES
 - SmmAccess.h, [404](#)
- PEI_SMM_CLOSE
 - SmmAccess.h, [404](#)
- PEI_SMM_DEACTIVATE
 - SmmControl.h, [407](#)
- PEI_SMM_LOCK
 - SmmAccess.h, [404](#)
- PEI_SMM_OPEN
 - SmmAccess.h, [405](#)
- PadMode
 - GPIO_CONFIG, [267](#)
- PanelPowerEnable
 - FSP_M_TEST_CONFIG, [139](#)
- PcdDebugInterfaceFlags
 - FSP_M_CONFIG, [103](#)
 - FSP_T_CONFIG, [258](#)
- PcdIlsaSerialUartBase
 - FSP_M_CONFIG, [103](#)
 - FSP_T_CONFIG, [258](#)
- PcdLpcUartDebugEnable
 - FSP_T_CONFIG, [259](#)
- PcdSerialDebugBaudRate
 - FSP_M_CONFIG, [104](#)
- PcdSerialDebugLevel
 - FSP_M_CONFIG, [104](#)
 - FSP_T_CONFIG, [259](#)
- PcdSerialIoUartAutoFlow
 - FSP_T_CONFIG, [259](#)
- PcdSerialIoUartDataBits
 - FSP_T_CONFIG, [259](#)
- PcdSerialIoUartDebugEnable
 - FSP_T_CONFIG, [259](#)
- PcdSerialIoUartNumber
 - FSP_T_CONFIG, [260](#)
- PcdSerialIoUartParity
 - FSP_T_CONFIG, [260](#)
- PcdSerialIoUartStopBits
 - FSP_T_CONFIG, [260](#)
- PchCrid
 - FSP_S_CONFIG, [175](#)
- PchDmiAspmCtrl
 - FSP_S_CONFIG, [175](#)
- PchDmiTestClientObffEn
 - FSP_S_RESTRICTED_CONFIG, [223](#)
- PchDmiTestDelayEnDmiAspm
 - FSP_S_RESTRICTED_CONFIG, [223](#)
- PchDmiTestDmiSecureRegLock
 - FSP_S_RESTRICTED_CONFIG, [223](#)
- PchDmiTestExternalObffEn
 - FSP_S_RESTRICTED_CONFIG, [223](#)
- PchDmiTestInternalObffEn
 - FSP_S_RESTRICTED_CONFIG, [223](#)
- PchDmiTestMemCloseStateEn
 - FSP_S_RESTRICTED_CONFIG, [224](#)
- PchDmiTestOpiPllPowerGating
 - FSP_S_RESTRICTED_CONFIG, [224](#)
- PchDmiTestPchTcLockDown
 - FSP_S_RESTRICTED_CONFIG, [224](#)
- PchDmiTsawEn
 - FSP_S_CONFIG, [175](#)
- PchEnableComplianceMode
 - FSP_S_CONFIG, [175](#)
- PchEnableDbcObs
 - FSP_S_CONFIG, [176](#)
- PchHdaAudioLinkDmic0
 - FSP_M_CONFIG, [104](#)
 - FSP_S_CONFIG, [176](#)
- PchHdaAudioLinkDmic1
 - FSP_M_CONFIG, [104](#)
 - FSP_S_CONFIG, [176](#)
- PchHdaAudioLinkHda
 - FSP_M_CONFIG, [104](#)
 - FSP_S_CONFIG, [176](#)
- PchHdaAudioLinkSndw1
 - FSP_M_CONFIG, [105](#)
 - FSP_S_CONFIG, [176](#)
- PchHdaAudioLinkSndw2
 - FSP_M_CONFIG, [105](#)
 - FSP_S_CONFIG, [177](#)
- PchHdaAudioLinkSndw3
 - FSP_M_CONFIG, [105](#)
 - FSP_S_CONFIG, [177](#)
- PchHdaAudioLinkSndw4
 - FSP_M_CONFIG, [105](#)
 - FSP_S_CONFIG, [177](#)
- PchHdaAudioLinkSsp0
 - FSP_M_CONFIG, [105](#)
 - FSP_S_CONFIG, [177](#)
- PchHdaAudioLinkSsp1
 - FSP_M_CONFIG, [105](#)
 - FSP_S_CONFIG, [177](#)
- PchHdaAudioLinkSsp2
 - FSP_M_CONFIG, [106](#)
 - FSP_S_CONFIG, [177](#)
- PchHdaDspEnable
 - FSP_M_CONFIG, [106](#)
 - FSP_S_CONFIG, [178](#)
- PchHdaDspUaaCompliance
 - FSP_M_CONFIG, [106](#)

- FSP_S_CONFIG, 178
- PchHdaDispCodecDisconnect
 - FSP_S_CONFIG, 178
- PchHdaDispLinkFrequency
 - FSP_S_CONFIG, 178
- PchHdaDispLinkTmode
 - FSP_S_CONFIG, 178
- PchHdaLinkFrequency
 - FSP_S_CONFIG, 179
- PchHdaPme
 - FSP_S_CONFIG, 179
- PchHdaResetWaitTimer
 - FSP_S_TEST_CONFIG, 248
- PchHdaSndwBufferRcomp
 - FSP_M_CONFIG, 106
 - FSP_S_CONFIG, 179
- PchHdaSndwLinkloControlEnabled
 - FSP_S_CONFIG, 179
- PchHdaTestConfigLockdown
 - FSP_S_RESTRICTED_CONFIG, 224
- PchHdaTestLowFreqLinkClkSrc
 - FSP_S_RESTRICTED_CONFIG, 224
- PchHdaTestPowerClockGating
 - FSP_M_RESTRICTED_CONFIG, 130
 - FSP_S_RESTRICTED_CONFIG, 225
- PchHdaVcType
 - FSP_M_CONFIG, 106
 - FSP_S_CONFIG, 179
- PchHotEnable
 - FSP_S_CONFIG, 180
- PchIoApicEntry24_119
 - FSP_S_CONFIG, 180
- PchIoApicId
 - FSP_S_CONFIG, 180
- PchIshGp0GpioAssign
 - FSP_S_CONFIG, 180
- PchIshGp1GpioAssign
 - FSP_S_CONFIG, 180
- PchIshGp2GpioAssign
 - FSP_S_CONFIG, 180
- PchIshGp3GpioAssign
 - FSP_S_CONFIG, 181
- PchIshGp4GpioAssign
 - FSP_S_CONFIG, 181
- PchIshGp5GpioAssign
 - FSP_S_CONFIG, 181
- PchIshGp6GpioAssign
 - FSP_S_CONFIG, 181
- PchIshGp7GpioAssign
 - FSP_S_CONFIG, 181
- PchIshI2c0GpioAssign
 - FSP_S_CONFIG, 182
- PchIshI2c1GpioAssign
 - FSP_S_CONFIG, 182
- PchIshI2c2GpioAssign
 - FSP_S_CONFIG, 182
- PchIshPdtUnlock
 - FSP_S_CONFIG, 182
- PchIshSpiGpioAssign
 - FSP_S_CONFIG, 182
- PchIshUart0GpioAssign
 - FSP_S_CONFIG, 182
- PchIshUart1GpioAssign
 - FSP_S_CONFIG, 183
- PchLanEnable
 - FSP_S_CONFIG, 183
- PchLanLtrEnable
 - FSP_S_CONFIG, 183
- PchLanTestPchWOLFastSupport
 - FSP_S_RESTRICTED_CONFIG, 225
- PchLegacyIoLowLatency
 - FSP_S_CONFIG, 183
- PchLockDownBiosInterface
 - FSP_S_TEST_CONFIG, 248
- PchLockDownBiosLock
 - FSP_S_CONFIG, 183
- PchLockDownGlobalSmi
 - FSP_S_TEST_CONFIG, 248
- PchLockDownRtcMemoryLock
 - FSP_S_CONFIG, 184
- PchLockDownTestSmiUnlock
 - FSP_S_RESTRICTED_CONFIG, 225
- PchLpcEnhancePort8xhDecoding
 - FSP_M_CONFIG, 107
- PchMemoryThrottlingEnable
 - FSP_S_CONFIG, 184
- PchNumRsvdSmbusAddresses
 - FSP_M_CONFIG, 107
- PchPcieDeviceOverrideTablePtr
 - FSP_S_CONFIG, 184
- PchPmDeepSxPol
 - FSP_S_CONFIG, 184
- PchPmDisableDsxAcPresentPulldown
 - FSP_S_CONFIG, 184
- PchPmDisableEnergyReport
 - FSP_S_TEST_CONFIG, 248
- PchPmDisableNativePowerButton
 - FSP_S_CONFIG, 185
- PchPmLanWakeFromDeepSx
 - FSP_S_CONFIG, 185
- PchPmLpcClockRun
 - FSP_S_CONFIG, 185
- PchPmMeWakeSts
 - FSP_S_CONFIG, 185
- PchPmPciePIIScc
 - FSP_S_CONFIG, 185
- PchPmPcieWakeFromDeepSx
 - FSP_S_CONFIG, 186
- PchPmPmeB0S5Dis
 - FSP_S_CONFIG, 186
- PchPmPwrBtnOverridePeriod
 - FSP_S_CONFIG, 186
- PchPmPwrCycDur
 - FSP_S_CONFIG, 186
- PchPmSlpAMinAssert
 - FSP_S_CONFIG, 186

- PchPmSlpLanLowDc
 - FSP_S_CONFIG, 186
- PchPmSlpS0Enable
 - FSP_S_CONFIG, 187
- PchPmSlpS0Vm070VSupport
 - FSP_S_CONFIG, 187
- PchPmSlpS0Vm075VSupport
 - FSP_S_CONFIG, 187
- PchPmSlpS0VmRuntimeControl
 - FSP_S_CONFIG, 187
- PchPmSlpS3MinAssert
 - FSP_S_CONFIG, 187
- PchPmSlpS4MinAssert
 - FSP_S_CONFIG, 188
- PchPmSlpStrchSusUp
 - FSP_S_CONFIG, 188
- PchPmSlpSusMinAssert
 - FSP_S_CONFIG, 188
- PchPmTestPchClearPowerSts
 - FSP_S_RESTRICTED_CONFIG, 225
- PchPmVrAlert
 - FSP_S_CONFIG, 188
- PchPmWoWlanDeepSxEnable
 - FSP_S_CONFIG, 189
- PchPmWoWlanEnable
 - FSP_S_CONFIG, 189
- PchPmWolEnableOverride
 - FSP_S_CONFIG, 188
- PchPmWolOvrWkSts
 - FSP_S_CONFIG, 189
- PchPort80Route
 - FSP_M_CONFIG, 107
- PchPwrOptEnable
 - FSP_S_CONFIG, 189
- PchSbAccessUnlock
 - FSP_S_TEST_CONFIG, 249
- PchScsEmmcHs400TuningRequired
 - FSP_S_CONFIG, 189
- PchSerialIoI2cPadsTermination
 - FSP_S_CONFIG, 189
- PchSirqEnable
 - FSP_S_CONFIG, 190
- PchSirqMode
 - FSP_S_CONFIG, 190
- PchSmbAlertEnable
 - FSP_M_CONFIG, 107
- PchStartFramePulse
 - FSP_S_CONFIG, 190
- PchTTEnable
 - FSP_S_CONFIG, 190
- PchTTLock
 - FSP_S_CONFIG, 191
- PchTTState13Enable
 - FSP_S_CONFIG, 191
- PchTestClkGatingXhci
 - FSP_S_RESTRICTED_CONFIG, 225
- PchTestDmiMeUmaRootSpaceCheck
 - FSP_M_RESTRICTED_CONFIG, 130
- PchTestPhlcLock
 - FSP_S_RESTRICTED_CONFIG, 226
- PchTestTscLock
 - FSP_S_RESTRICTED_CONFIG, 226
- PchTestTselLock
 - FSP_S_RESTRICTED_CONFIG, 226
- PchTestUnlockUsbForSvNoa
 - FSP_S_RESTRICTED_CONFIG, 226
- PchTraceHubMemReg0Size
 - FSP_M_CONFIG, 107
- PchTraceHubMemReg1Size
 - FSP_M_CONFIG, 108
- PchTraceHubMode
 - FSP_M_CONFIG, 108
- PchTsmicLock
 - FSP_S_CONFIG, 190
- PchUnlockGpioPads
 - FSP_S_TEST_CONFIG, 249
- PchUsbHsioFilterSel
 - FSP_S_CONFIG, 191
- PchUsbHsioRxTuningEnable
 - FSP_S_CONFIG, 191
- PchXhciOcLock
 - FSP_S_TEST_CONFIG, 249
- PciExpressBase
 - EFI_COMPATIBILITY16_TABLE, 59
- PcieComplianceTestMode
 - FSP_S_CONFIG, 191
- PcieDisableRootPortClockGating
 - FSP_S_CONFIG, 192
- PcieEnablePeerMemoryWrite
 - FSP_S_CONFIG, 192
- PcieEnablePort8xhDecode
 - FSP_S_TEST_CONFIG, 249
- PcieEqPh3LaneParamCm
 - FSP_S_CONFIG, 192
- PcieEqPh3LaneParamCp
 - FSP_S_CONFIG, 192
- PcieGen3SoftwareEqualization
 - PciInitLib.h, 349
- PciImrSize
 - FSP_M_CONFIG, 108
- PciInitLib.h, 334
 - GetCoefficientsFromPreset, 348
 - GetGenericPcieLowLevelFunctionCalls, 349
 - LinkIsDowngraded, 349
 - PCIE_CLEAR_ERROR_COUNT, 337
 - PCIE_CLOSE_MONITOR, 338
 - PCIE_DATA_LINK_LAYER_LINK_ACTIVE, 338
 - PCIE_DETECT_ENDPOINT_PRESENCE, 338
 - PCIE_ENSURE_LINK_IS_HEALTHY, 339
 - PCIE_EXISTS, 339
 - PCIE_GET_CURRENT_LINK_SPEED, 340
 - PCIE_GET_ERROR_COUNT, 340
 - PCIE_GET_NEGOTIATED_WIDTH, 340
 - PCIE_GET_PCIE_CAP_OFFSET, 340
 - PCIE_GET_ROOT_PORTS, 341
 - PCIE_GET_SLOT_PRESENCE_DETECT, 341

- PCIE_GET_TARGET_LINK_SPEED, 342
- PCIE_OPEN_MONITOR, 342
- PCIE_POLLING_COMPLIANCE_MODE, 342
- PCIE_PROGRAM_PORT_PHASE3_TXEQ, 343
- PCIE_PROGRAM_STATIC_GEN3_EQ, 343
- PCIE_PROGRAM_UNIFORM_PORT_PHASE3←
_TXEQ, 343
- PCIE_RECOVER_LINK_WIDTH, 344
- PCIE_REPORT_LINK_STATUS, 344
- PCIE_RESET_ENDPOINT_PERST, 344
- PCIE_RETRAIN_LINK, 345
- PCIE_RUN_MARGIN_TEST, 345
- PCIE_SET_GEN3_PHASE2_BYPASS, 346
- PCIE_SET_LINK_DISABLE, 346
- PCIE_SET_PCH_GPIO, 346
- PCIE_SET_PERST, 347
- PCIE_SET_TARGET_LINK_SPEED, 347
- PCIE_WAIT_FOR_L0, 348
- PcieGen3SoftwareEqualization, 349
- PcieLibFindCapId, 350
- WaitForDataLinkLayerLinkActive, 350
- WaitForDataLinkLayerLinkActiveOnAllPorts, 351
- PcieLibFindCapId
 - PcieInitLib.h, 350
- PcieRegs.h, 351
- PcieRpAspm
 - FSP_S_CONFIG, 192
- PcieRpCompletionTimeout
 - FSP_S_CONFIG, 193
- PcieRpDpcExtensionsMask
 - FSP_S_CONFIG, 193
- PcieRpDpcMask
 - FSP_S_CONFIG, 193
- PcieRpDptp
 - FSP_S_TEST_CONFIG, 249
- PcieRpEnableMask
 - FSP_M_CONFIG, 108
- PcieRpFunctionSwap
 - FSP_S_CONFIG, 193
- PcieRpGen3EqPh3Method
 - FSP_S_CONFIG, 193
- PcieRpImrEnabled
 - FSP_S_CONFIG, 194
- PcieRpL1Substates
 - FSP_S_CONFIG, 194
- PcieRpPcieSpeed
 - FSP_S_CONFIG, 194
- PcieRpPhysicalSlotNumber
 - FSP_S_CONFIG, 194
- PcieRpPtmMask
 - FSP_S_CONFIG, 194
- PcieRpSlotPowerLimitScale
 - FSP_S_TEST_CONFIG, 250
- PcieRpSlotPowerLimitValue
 - FSP_S_TEST_CONFIG, 250
- PcieRpUptp
 - FSP_S_TEST_CONFIG, 250
- PcieSwEqCoeffListCm
 - FSP_S_CONFIG, 194
- PcieSwEqCoeffListCp
 - FSP_S_CONFIG, 195
- PdoProgramming
 - USB_CONFIG, 285
- PeciC10Reset
 - FSP_M_CONFIG, 108
- PeciSxReset
 - FSP_M_CONFIG, 109
- Peg0Gen3EqPh2Enable
 - FSP_M_TEST_CONFIG, 139
- Peg0Gen3EqPh3Method
 - FSP_M_TEST_CONFIG, 139
- Peg1Gen3EqPh2Enable
 - FSP_M_TEST_CONFIG, 140
- Peg1Gen3EqPh3Method
 - FSP_M_TEST_CONFIG, 140
- Peg2Gen3EqPh2Enable
 - FSP_M_TEST_CONFIG, 140
- Peg2Gen3EqPh3Method
 - FSP_M_TEST_CONFIG, 140
- Peg3Gen3EqPh2Enable
 - FSP_M_TEST_CONFIG, 140
- Peg3Gen3EqPh3Method
 - FSP_M_TEST_CONFIG, 141
- PegDataPtr
 - FSP_M_CONFIG, 109
- PegDisableSpreadSpectrumClocking
 - FSP_M_CONFIG, 109
- PegGen3EndPointHint
 - FSP_M_TEST_CONFIG, 141
- PegGen3EndPointPreset
 - FSP_M_TEST_CONFIG, 141
- PegGen3ProgramStaticEq
 - FSP_M_TEST_CONFIG, 141
- PegGen3RootPortPreset
 - FSP_M_TEST_CONFIG, 141
- PegGenerateBdatMarginTable
 - FSP_M_TEST_CONFIG, 142
- PegRxCemLoopbackLane
 - FSP_M_TEST_CONFIG, 142
- PegRxCemNonProtocolAwareness
 - FSP_M_TEST_CONFIG, 142
- PeiCpuAndPchTraceHubLib.h, 359
 - ConfigureMscForCpuAndPchTraceHub, 359
 - ConfigureMscForTraceHub, 360
 - GetTraceHubMtbBar, 360
 - GetTraceHubPciBase, 360
 - IsDebuggerInUse, 361
- PeiPreMemSiDefaultPolicy.h, 361
- PeiSiDefaultPolicy.h, 362
- PeiSiPolicyUpdateLib.h, 363
 - UpdatePeiAmtPolicy, 364
 - UpdatePeiCpuPolicy, 364
 - UpdatePeiMePolicy, 365
 - UpdatePeiMePolicyPreMem, 365
 - UpdatePeiPchPolicy, 366
 - UpdatePeiPchPolicyPreMem, 366

- UpdatePeiSaPolicy, 366
- UpdatePeiSaPolicyPreMem, 367
- UpdatePeiSiPolicy, 367
- PerCoreHtDisable
 - FSP_M_CONFIG, 109
- PkgCStateDemotion
 - FSP_S_TEST_CONFIG, 250
- PkgCStateLimit
 - FSP_S_TEST_CONFIG, 250
- PkgCStateUnDemotion
 - FSP_S_TEST_CONFIG, 251
- PlatformDebugConsent
 - FSP_M_CONFIG, 109
- PlatformSpecificResetHandler.h, 367, 368
- PlatformSpecificResetNotification.h, 369
- PmcCpuC10GatePinEnable
 - FSP_S_CONFIG, 195
- PmcDbgMsgEn
 - FSP_S_CONFIG, 195
- PmcModPhySusPgEnable
 - FSP_S_CONFIG, 195
- PmcPowerButtonDebounce
 - FSP_S_CONFIG, 195
- PmgCstCfgCtrlLock
 - FSP_S_TEST_CONFIG, 251
- PortGranularity
 - SMM_ATTRIBUTES, 273
- PortUsb20Enable
 - FSP_S_CONFIG, 196
- PortUsb30Enable
 - FSP_S_CONFIG, 196
- PowerConfig
 - GPIO_CONFIG, 267
- PowerLimit1
 - FSP_S_TEST_CONFIG, 251
- PowerLimit1Time
 - FSP_S_TEST_CONFIG, 251
- PowerLimit2
 - FSP_S_TEST_CONFIG, 251
- PowerLimit2Power
 - FSP_S_TEST_CONFIG, 252
- PowerLimit3
 - FSP_S_TEST_CONFIG, 252
- PowerLimit4
 - FSP_S_TEST_CONFIG, 252
- PpvBtrEnable
 - FSP_M_RESTRICTED_CONFIG, 131
- PreWake
 - FSP_S_CONFIG, 196
- PrepareToBootEfi
 - _EFI_LEGACY_BIOS_PROTOCOL, 42
- ProbelessTrace
 - FSP_M_CONFIG, 110
- ProcHotResponse
 - FSP_S_TEST_CONFIG, 253
- ProcessorTraceAllocateMemory
 - ProcessorTraceMemoryAllocationLib.h, 371
- ProcessorTraceEnable
 - FSP_S_TEST_CONFIG, 252
- ProcessorTraceMemBase
 - FSP_S_TEST_CONFIG, 252
- ProcessorTraceMemLength
 - FSP_S_TEST_CONFIG, 252
- ProcessorTraceMemoryAllocationLib.h, 369
 - ProcessorTraceAllocateMemory, 371
- ProcessorTraceOutputScheme
 - FSP_S_TEST_CONFIG, 253
- PsOnEnable
 - FSP_S_CONFIG, 197
- Psi1Threshold
 - FSP_S_CONFIG, 196
- Psi2Threshold
 - FSP_S_CONFIG, 196
- Psi3Enable
 - FSP_S_CONFIG, 197
- Psi3Threshold
 - FSP_S_CONFIG, 197
- PsysOffset
 - FSP_S_CONFIG, 197
- PsysPmax
 - FSP_S_TEST_CONFIG, 253
- PsysPowerLimit1
 - FSP_S_TEST_CONFIG, 253
- PsysPowerLimit1Power
 - FSP_S_TEST_CONFIG, 253
- PsysPowerLimit1Time
 - FSP_S_TEST_CONFIG, 254
- PsysPowerLimit2
 - FSP_S_TEST_CONFIG, 254
- PsysPowerLimit2Power
 - FSP_S_TEST_CONFIG, 254
- PsysSlope
 - FSP_S_CONFIG, 197
- PttPTPInstanceGuid.h, 371
- PwdnIdleCounter
 - FSP_M_CONFIG, 110
- PxRcConfig
 - FSP_S_CONFIG, 198
- RC_VERSION, 271
- RMTLoopCount
 - FSP_M_CONFIG, 113
- RMT
 - FSP_M_CONFIG, 113
- RaceToHalt
 - FSP_S_TEST_CONFIG, 254
- RankInterleave
 - FSP_M_CONFIG, 110
- Ratio
 - FSP_M_CONFIG, 110
- RcompResistor
 - FSP_M_CONFIG, 110
- RcompTarget
 - FSP_M_CONFIG, 111
- RealtimeMemoryTiming
 - FSP_M_CONFIG, 111
- RefClk

- FSP_M_CONFIG, 111
- RegsUsb.h, 372
- RemoteAssistance
 - FSP_S_CONFIG, 198
- Reserved
 - UDC_ATTRIBUTES, 280
- ResetCold
 - ResetSystemLib.h, 380
- ResetPlatformSpecific
 - ResetSystemLib.h, 380
- ResetShutdown
 - ResetSystemLib.h, 381
- ResetSystemLib.h, 379
 - EnterS3WithImmediateWake, 380
 - ResetCold, 380
 - ResetPlatformSpecific, 380
 - ResetShutdown, 381
 - ResetWarm, 381
- ResetWarm
 - ResetSystemLib.h, 381
- Revision
 - DXE_SI_POLICY_PROTOCOL, 55
- RhSolution
 - FSP_M_CONFIG, 111
- RingDownBin
 - FSP_M_CONFIG, 111
- RingMaxOcRatio
 - FSP_M_CONFIG, 112
- RingPIIVoltageOffset
 - FSP_M_CONFIG, 112
- RingVoltageAdaptive
 - FSP_M_CONFIG, 112
- RingVoltageMode
 - FSP_M_CONFIG, 112
- RingVoltageOffset
 - FSP_M_CONFIG, 112
- RingVoltageOverride
 - FSP_M_CONFIG, 112
- RmtPerTask
 - FSP_M_CONFIG, 113
- RuntimeSegment
 - EFI_DISPATCH_OPROM_TABLE, 61
- SI_CONFIG, 271
 - SkipPostBootSai, 271
 - TraceHubMemBase, 272
- SI_PCH_DEVICE_INTERRUPT_CONFIG, 272
- SI_PCH_INT_PIN
 - FspUpd.h, 307
- SI_POLICY_REVISION
 - SiPolicyStruct.h, 402
- SI_PREMEM_POLICY_REVISION
 - SiPolicyStruct.h, 402
- SMM_ATTRIBUTES, 273
 - DataGranularity, 273
 - PortGranularity, 273
 - Type, 273
- SMM_ENTRY, 274
 - SmmAttributes, 274
 - SmmFunction, 275
- SMM_FUNCTION, 275
- SMM_TABLE, 275
- SOCKET_LGA_775_SMM_CPU_STATE32, 277
- SOCKET_LGA_775_SMM_CPU_STATE64, 277
- SOCKET_LGA_775_SMM_CPU_STATE, 276
- SVID_SID_VALUE, 278
- SaGv
 - FSP_M_CONFIG, 113
- SaPIIVoltageOffset
 - FSP_M_CONFIG, 114
- SafeMode
 - FSP_M_CONFIG, 113
- SataEnable
 - FSP_S_CONFIG, 198
- SataLedEnable
 - FSP_S_CONFIG, 198
- SataMode
 - FSP_S_CONFIG, 198
- SataP0TDispFinit
 - FSP_S_CONFIG, 199
- SataP1TDispFinit
 - FSP_S_CONFIG, 199
- SataPortsDevSlp
 - FSP_S_CONFIG, 199
- SataPortsDevSlpResetConfig
 - FSP_S_CONFIG, 199
- SataPortsDmVal
 - FSP_S_CONFIG, 199
- SataPortsEnable
 - FSP_S_CONFIG, 200
- SataPwrOptEnable
 - FSP_S_CONFIG, 200
- SataRstHddUnlock
 - FSP_S_CONFIG, 200
- SataRstInterrupt
 - FSP_S_CONFIG, 200
- SataRstIrrt
 - FSP_S_CONFIG, 200
- SataRstIrrtOnly
 - FSP_S_CONFIG, 200
- SataRstLedLocate
 - FSP_S_CONFIG, 201
- SataRstOromUiBanner
 - FSP_S_CONFIG, 201
- SataRstPcieDeviceResetDelay
 - FSP_S_CONFIG, 201
- SataRstRaid0
 - FSP_S_CONFIG, 201
- SataRstRaid1
 - FSP_S_CONFIG, 201
- SataRstRaid10
 - FSP_S_CONFIG, 202
- SataRstRaid5
 - FSP_S_CONFIG, 202
- SataRstRaidDeviceId
 - FSP_S_CONFIG, 202
- SataRstSmartStorage

- FSP_S_CONFIG, 202
- SataSalpSupport
 - FSP_S_CONFIG, 202
- SataTestMode
 - FSP_S_TEST_CONFIG, 254
- SataTestRstPcieStorageDeviceInterface
 - FSP_S_RESTRICTED_CONFIG, 226
- SataThermalSuggestedSetting
 - FSP_S_CONFIG, 202
- ScanExtGfxForLegacyOpRom
 - FSP_M_TEST_CONFIG, 142
- ScilrqSelect
 - FSP_S_CONFIG, 203
- ScramblerSupport
 - FSP_M_CONFIG, 114
- ScsEmmcEnabled
 - FSP_S_CONFIG, 203
- ScsEmmcHs400Enabled
 - FSP_S_CONFIG, 203
- ScsSdCardEnabled
 - FSP_S_CONFIG, 203
- ScsSdCardWpPinEnabled
 - FSP_S_CONFIG, 203
- ScsUfsEnabled
 - FSP_S_CONFIG, 204
- SecGetFspApiParameter
 - GetFspApiParameter.h, 311
- SecGetPerformance
 - SecPlatformLib.h, 382
- SecPlatformInformation
 - SecPlatformLib.h, 383
- SecPlatformLib.h, 381
 - SecGetPerformance, 382
 - SecPlatformInformation, 383
 - SecPlatformMain, 383
- SecPlatformMain
 - SecPlatformLib.h, 383
- SendEcCmd
 - FSP_S_CONFIG, 204
- SendFspErrorInfo
 - FspErrorInfoLib.h, 301
- SendFspErrorInfoStatusCode
 - FspErrorInfoLib.h, 302
- SendVrMbxCmd
 - FSP_S_CONFIG, 204
- SerialDebugMrcLevel
 - FSP_M_CONFIG, 114
- SerialloDebugUartNumber
 - FSP_S_CONFIG, 204
- SerialloI2cMode
 - FSP_S_CONFIG, 204
- SerialloSpi0CsEnable
 - FSP_S_CONFIG, 205
- SerialloSpi0CsPolarity
 - FSP_S_CONFIG, 205
- SerialloSpi1CsEnable
 - FSP_S_CONFIG, 205
- SerialloSpi1CsPolarity
 - FSP_S_CONFIG, 205
- SerialloSpi2CsEnable
 - FSP_S_CONFIG, 205
- SerialloSpi2CsPolarity
 - FSP_S_CONFIG, 206
- SerialloSpiDefaultCsOutput
 - FSP_S_CONFIG, 206
- SerialloSpiMode
 - FSP_S_CONFIG, 206
- SerialloUartDataBits
 - FSP_S_CONFIG, 206
- SerialloUartDebugAutoFlow
 - FSP_M_CONFIG, 114
- SerialloUartDebugBaudRate
 - FSP_M_CONFIG, 114
- SerialloUartDebugControllerNumber
 - FSP_M_CONFIG, 115
- SerialloUartDebugDataBits
 - FSP_M_CONFIG, 115
- SerialloUartDebugParity
 - FSP_M_CONFIG, 115
- SerialloUartDebugStopBits
 - FSP_M_CONFIG, 115
- SerialloUartDmaEnable
 - FSP_S_CONFIG, 206
- SerialloUartMode
 - FSP_S_CONFIG, 206
- SerialloUartParity
 - FSP_S_CONFIG, 207
- SerialloUartPowerGating
 - FSP_S_CONFIG, 207
- SerialloUartStopBits
 - FSP_S_CONFIG, 207
- SevenCoreRatioLimit
 - FSP_S_TEST_CONFIG, 255
- ShowSpiController
 - FSP_S_CONFIG, 207
- SiConfig.h, 384
- SiConfigBlockLib.h, 385
 - AddComponentConfigBlocks, 386
 - GetComponentConfigBlockTotalSize, 386
- SiConfigHob.h, 386
- SiCreateConfigBlocks
 - SiPolicyLib.h, 396
- SiCreatePreMemConfigBlocks
 - SiPolicyLib.h, 397
- SiCsmFlag
 - FSP_S_CONFIG, 207
- SiFvi.h, 387
 - BuildFviInfoHob, 390
 - DEFAULT_FVI_DATA, 389
 - ME_FVI_INDEX, 389
 - NO_STRING_AVAILABLE, 389
 - UpdateFviInfo, 390
- SiFviLib.h, 390
 - AddFviEntry, 392
 - NO_STRING_AVAILABLE, 391
- SiInstallPolicyPpi

- SiPolicyLib.h, 397
- SiInstallPolicyReadyPpi
 - SiPolicyLib.h, 397
- SiMtrrLib.h, 392
 - MtrrTransfer2DefaultWB, 393
- SiNumberOfSsidTableEntry
 - FSP_S_CONFIG, 208
- SiPolicy.h, 393
- SiPolicyLib.h, 395
 - DumpSiPolicy, 396
 - SiCreateConfigBlocks, 396
 - SiCreatePreMemConfigBlocks, 397
 - SiInstallPolicyPpi, 397
 - SiInstallPolicyReadyPpi, 397
 - SiPreMemInstallPolicyPpi, 398
 - SiPreMemInstallPolicyReadyPpi, 398
 - SiPreMemPrintPolicyPpi, 398
 - SiPrintPolicyPpi, 399
 - TraceHubCalculateTotalBufferSize, 399
- SiPolicyProtocol.h, 399
- SiPolicyStruct.h, 400
 - SI_POLICY_REVISION, 402
 - SI_PREMEM_POLICY_REVISION, 402
- SiPreMemInstallPolicyPpi
 - SiPolicyLib.h, 398
- SiPreMemInstallPolicyReadyPpi
 - SiPolicyLib.h, 398
- SiPreMemPrintPolicyPpi
 - SiPolicyLib.h, 398
- SiPrintPolicyPpi
 - SiPolicyLib.h, 399
- SiSsidTablePtr
 - FSP_S_CONFIG, 208
- SiSvPolicyEnable
 - FSP_S_RESTRICTED_CONFIG, 226
- Signature
 - EFI_COMPATIBILITY16_TABLE, 60
- SinitMemorySize
 - FSP_M_CONFIG, 115
- SixCoreRatioLimit
 - FSP_S_TEST_CONFIG, 255
- SkipMbpHob
 - FSP_M_TEST_CONFIG, 142
- SkipMpInit
 - FSP_M_CONFIG, 116
- SkipMpInitDeprecated
 - FSP_S_CONFIG, 208
- SkipPostBootSai
 - SI_CONFIG, 271
- SlowSlewRateForFivr
 - FSP_S_CONFIG, 208
- SlowSlewRateForGt
 - FSP_S_CONFIG, 208
- SlowSlewRateForIa
 - FSP_S_CONFIG, 209
- SlowSlewRateForSa
 - FSP_S_CONFIG, 209
- SlpS0DisQForDebug
 - FSP_S_CONFIG, 209
- SlpS0Override
 - FSP_S_CONFIG, 209
- SlpS0WithGbeSupport
 - FSP_S_CONFIG, 209
- SmbiosOemTypeFirmwareVersionInfo
 - DXE_SI_POLICY_PROTOCOL, 55
- SmbusArpEnable
 - FSP_M_CONFIG, 116
- SmbusDynamicPowerGating
 - FSP_M_TEST_CONFIG, 143
- SmbusEnable
 - FSP_M_CONFIG, 116
- SmbusSpdWriteDisable
 - FSP_M_TEST_CONFIG, 143
- SmmAccess.h, 403
 - PEI_SMM_CAPABILITIES, 404
 - PEI_SMM_CLOSE, 404
 - PEI_SMM_LOCK, 404
 - PEI_SMM_OPEN, 405
- SmmAttributes
 - SMM_ENTRY, 274
- SmmControl.h, 406
 - PEI_SMM_ACTIVATE, 406
 - PEI_SMM_DEACTIVATE, 407
- SmmFunction
 - SMM_ENTRY, 275
- SmmVariable.h, 407
- SocketLga775Lib.h, 408
- SpdAddressTable
 - FSP_M_CONFIG, 116
- SpdProfileSelected
 - FSP_M_CONFIG, 116
- SpiFlashCfgLockDown
 - FSP_S_CONFIG, 210
- SrefCfIdleTmr
 - FSP_M_RESTRICTED_CONFIG, 131
- StallPpiLib.h, 409
 - InstallStallPpi, 409
- StateRatio
 - FSP_S_TEST_CONFIG, 255
- StateRatioMax16
 - FSP_S_TEST_CONFIG, 255
- Status
 - HDD_INFO, 269
- StatusFlags
 - BBS_TABLE, 51
- StrongWkLeaker
 - FSP_M_RESTRICTED_CONFIG, 131
- TRACE_HUB_ENABLE_MODE
 - TraceHubCommonConfig.h, 412
- tRRD_L
 - FSP_M_TEST_CONFIG, 145
- tRRD_S
 - FSP_M_TEST_CONFIG, 145
- tRTP
 - FSP_M_CONFIG, 117
- tRd2RdDD

- FSP_M_TEST_CONFIG, 143
- tRd2RdDG
 - FSP_M_TEST_CONFIG, 143
- tRd2RdDR
 - FSP_M_TEST_CONFIG, 144
- tRd2RdSG
 - FSP_M_TEST_CONFIG, 144
- tRd2WrDD
 - FSP_M_TEST_CONFIG, 144
- tRd2WrDG
 - FSP_M_TEST_CONFIG, 144
- tRd2WrDR
 - FSP_M_TEST_CONFIG, 144
- tRd2WrSG
 - FSP_M_TEST_CONFIG, 144
- TStates
 - FSP_S_TEST_CONFIG, 257
- TTSuggestedSetting
 - FSP_S_CONFIG, 211
- tWTR_L
 - FSP_M_TEST_CONFIG, 146
- tWTR_S
 - FSP_M_TEST_CONFIG, 147
- tWr2RdDD
 - FSP_M_TEST_CONFIG, 145
- tWr2RdDG
 - FSP_M_TEST_CONFIG, 145
- tWr2RdDR
 - FSP_M_TEST_CONFIG, 145
- tWr2RdSG
 - FSP_M_TEST_CONFIG, 146
- tWr2WrDD
 - FSP_M_TEST_CONFIG, 146
- tWr2WrDG
 - FSP_M_TEST_CONFIG, 146
- tWr2WrDR
 - FSP_M_TEST_CONFIG, 146
- tWr2WrSG
 - FSP_M_TEST_CONFIG, 146
- TccActivationOffset
 - FSP_S_TEST_CONFIG, 255
- TccOffsetClamp
 - FSP_S_TEST_CONFIG, 256
- TccOffsetLock
 - FSP_S_TEST_CONFIG, 256
- TccOffsetTimeWindowForRatl
 - FSP_S_TEST_CONFIG, 256
- TcolrqSelect
 - FSP_S_CONFIG, 210
- TdcPowerLimit
 - FSP_S_CONFIG, 210
- TdcTimeWindow
 - FSP_S_CONFIG, 210
- TempRamExitPpi.h, 410
- TestCnviLteCoex
 - FSP_S_RESTRICTED_CONFIG, 227
- TestCnviSharedXtalClocking
 - FSP_S_RESTRICTED_CONFIG, 227
- TestCnviWifiLtrEn
 - FSP_S_RESTRICTED_CONFIG, 227
- TestMenuDprLock
 - FSP_M_RESTRICTED_CONFIG, 131
- TestPchPmErDebugMode
 - FSP_S_RESTRICTED_CONFIG, 227
- TestPchPmLatchEventsC10Exit
 - FSP_S_RESTRICTED_CONFIG, 227
- TestPcieMpcSecureRegisterLock
 - FSP_S_RESTRICTED_CONFIG, 228
- TestSkipPostBootSai
 - FSP_S_RESTRICTED_CONFIG, 228
- TetonGlacierCR
 - FSP_S_CONFIG, 210
- TetonGlacierMode
 - FSP_S_CONFIG, 211
- TgaSize
 - FSP_M_CONFIG, 117
- ThreeCoreRatioLimit
 - FSP_S_TEST_CONFIG, 256
- ThreeStrikeCounterDisable
 - FSP_S_TEST_CONFIG, 256
- ThrtCkeMinTmr
 - FSP_M_CONFIG, 117
- ThrtCkeMinTmrLpddr
 - FSP_M_CONFIG, 117
- ThunkStart
 - EFI_TO_COMPATIBILITY16_INIT_TABLE, 67
- TimedMwait
 - FSP_S_TEST_CONFIG, 257
- TjMaxOffset
 - FSP_M_CONFIG, 117
- TotalFlashSize
 - FSP_M_TEST_CONFIG, 143
- TpmInitialized.h, 411
- TraceHubCalculateTotalBufferSize
 - SiPolicyLib.h, 399
- TraceHubCommonConfig.h, 411
 - TRACE_HUB_ENABLE_MODE, 412
- TraceHubMemBase
 - SI_CONFIG, 272
- TrainTrace
 - FSP_M_CONFIG, 117
- TsegSize
 - FSP_M_CONFIG, 118
- TsodAlarmwindowLockBit
 - FSP_M_CONFIG, 118
- TsodCriticalEventOnly
 - FSP_M_CONFIG, 118
- TsodCriticaltripLockBit
 - FSP_M_CONFIG, 118
- TsodEventMode
 - FSP_M_CONFIG, 118
- TsodEventOutputControl
 - FSP_M_CONFIG, 119
- TsodEventPolarity
 - FSP_M_CONFIG, 119
- TsodManualEnable

- FSP_M_CONFIG, 119
- TsodShutdownMode
 - FSP_M_CONFIG, 119
- TsodTcritMax
 - FSP_M_CONFIG, 119
- TurboMode
 - FSP_S_CONFIG, 211
- TvbRatioClipping
 - FSP_M_CONFIG, 120
- TvbVoltageOptimization
 - FSP_M_CONFIG, 120
- TwoCoreRatioLimit
 - FSP_S_TEST_CONFIG, 257
- Txt
 - FSP_M_CONFIG, 120
- TxtAcheckRequest
 - FSP_M_TEST_CONFIG, 147
- TxtDprMemoryBase
 - FSP_M_CONFIG, 120
- TxtDprMemorySize
 - FSP_M_CONFIG, 120
- TxtEnable
 - FSP_S_CONFIG, 211
- TxtHeapMemorySize
 - FSP_M_CONFIG, 121
- TxtImplemented
 - FSP_M_CONFIG, 121
- TxtLcpPdBase
 - FSP_M_CONFIG, 121
- TxtLcpPdSize
 - FSP_M_CONFIG, 121
- Type
 - SMM_ATTRIBUTES, 273
- UD_TABLE, 278
 - Attributes, 279
 - BbsTableEntryNumberForParentDevice, 279
 - DeviceNumber, 279
- UDC_ATTRIBUTES, 280
 - Reserved, 280
- USB20_AFE, 280
- USB20_PORT_CONFIG, 281
 - Afe, 282
 - OverCurrentPin, 282
- USB30_PORT_CONFIG, 282
 - OverCurrentPin, 283
- USB_CONFIG, 283
 - EnableComplianceMode, 284
 - LtrOverrideEnable, 285
 - OverCurrentEnable, 285
 - PdoProgramming, 285
 - Usb2PhySusPgEnable, 285
 - XhciOcLock, 285
- UmaAddress
 - EFI_COMPATIBILITY16_TABLE, 60
- UmaSize
 - EFI_COMPATIBILITY16_TABLE, 60
- UnconventionalDeviceTable
 - EFI_TO_COMPATIBILITY16_BOOT_TABLE, 66
- UpdateFvInfo
 - SiFvi.h, 390
- UpdateMethodAslCode
 - AslUpdateLib.h, 290
- UpdateNameAslCode
 - AslUpdateLib.h, 291
- UpdatePeiAmtPolicy
 - PeiSiPolicyUpdateLib.h, 364
- UpdatePeiCpuPolicy
 - PeiSiPolicyUpdateLib.h, 364
- UpdatePeiMePolicy
 - PeiSiPolicyUpdateLib.h, 365
- UpdatePeiMePolicyPreMem
 - PeiSiPolicyUpdateLib.h, 365
- UpdatePeiPchPolicy
 - PeiSiPolicyUpdateLib.h, 366
- UpdatePeiPchPolicyPreMem
 - PeiSiPolicyUpdateLib.h, 366
- UpdatePeiSaPolicy
 - PeiSiPolicyUpdateLib.h, 366
- UpdatePeiSaPolicyPreMem
 - PeiSiPolicyUpdateLib.h, 367
- UpdatePeiSiPolicy
 - PeiSiPolicyUpdateLib.h, 367
- Usb2AfePehalfbit
 - FSP_S_CONFIG, 211
- Usb2AfePetxiset
 - FSP_S_CONFIG, 212
- Usb2AfePredeemp
 - FSP_S_CONFIG, 212
- Usb2AfeProgramming
 - UsbInitLib.h, 415
- Usb2AfeTxiset
 - FSP_S_CONFIG, 212
- Usb2PhySusPgEnable
 - USB_CONFIG, 285
- Usb3HsioTxDeEmph
 - FSP_S_CONFIG, 212
- Usb3HsioTxDeEmphEnable
 - FSP_S_CONFIG, 212
- Usb3HsioTxDownscaleAmp
 - FSP_S_CONFIG, 213
- Usb3HsioTxDownscaleAmpEnable
 - FSP_S_CONFIG, 213
- Usb3HsioTxRate0UniqTran
 - FSP_S_CONFIG, 213
- Usb3HsioTxRate0UniqTranEnable
 - FSP_S_CONFIG, 213
- Usb3HsioTxRate1UniqTran
 - FSP_S_CONFIG, 213
- Usb3HsioTxRate1UniqTranEnable
 - FSP_S_CONFIG, 214
- Usb3HsioTxRate2UniqTran
 - FSP_S_CONFIG, 214
- Usb3HsioTxRate2UniqTranEnable
 - FSP_S_CONFIG, 214
- Usb3HsioTxRate3UniqTran
 - FSP_S_CONFIG, 214

- Usb3HsioTxRate3UniqTranEnable
 - FSP_S_CONFIG, 214
 - UsbConfig.h, 412
 - UsbInitLib.h, 414
 - Usb2AfeProgramming, 415
 - XdcConfigure, 415
 - XhciConfigure, 415
 - XhciConfigureAfterInit, 416
 - XhciLockConfiguration, 416
 - UsbLib.h, 416
 - UsbPdoProgramming
 - FSP_S_CONFIG, 215
 - UserBudgetEnable
 - FSP_M_CONFIG, 121
 - UserThresholdEnable
 - FSP_M_CONFIG, 122

 - VddVoltage
 - FSP_M_CONFIG, 122
 - VmxEnable
 - FSP_M_CONFIG, 122
 - VrPowerDeliveryDesign
 - FSP_S_CONFIG, 215
 - VrVoltageLimit
 - FSP_S_CONFIG, 215

 - WaitForDataLinkLayerLinkActive
 - PcieInitLib.h, 350
 - WaitForDataLinkLayerLinkActiveOnAllPorts
 - PcieInitLib.h, 351
 - WarmThresholdCh0Dimm0
 - FSP_M_CONFIG, 122
 - WarmThresholdCh0Dimm1
 - FSP_M_CONFIG, 122
 - WarmThresholdCh1Dimm0
 - FSP_M_CONFIG, 123
 - WarmThresholdCh1Dimm1
 - FSP_M_CONFIG, 123
 - WatchDogEnabled
 - FSP_S_CONFIG, 215
 - WatchDogTimerBios
 - FSP_S_CONFIG, 215
 - WatchDogTimerOs
 - FSP_S_CONFIG, 215
 - WdtDisableAndLock
 - FSP_M_TEST_CONFIG, 147

 - XDCI_CONFIG, 286
 - Enable, 286
 - XdcConfigure
 - UsbInitLib.h, 415
 - XdcEnable
 - FSP_S_CONFIG, 216
 - XhciConfigure
 - UsbInitLib.h, 415
 - XhciConfigureAfterInit
 - UsbInitLib.h, 416
 - XhciLockConfiguration
 - UsbInitLib.h, 416

 - XhciOcLock
 - USB_CONFIG, 285
-